

Alpha™ 100 and TT™ 10 Quick Reference

WARNING

See the *Important Safety and Product Information* guide in the product box for product warnings and other important information.

Adding a Dog to the Handheld Using MURS

One Alpha 100 handheld can track up to twenty devices (TT 10 dog device collars and Alpha 100 handhelds).

- 1 If necessary, turn off the collar by holding the **Power** key until the status LED turns red, about 3 seconds, and release.
- 2 Hold the **Power** key until the collar emits two series of beeps, about 2 seconds, and release.
The status LED begins blinking rapidly. The collar is now ready to be linked, or paired, with a handheld device.
- 3 On the handheld, select **Dog List > Add Dog**.
- 4 Bring the collar near the handheld, and select **Yes**.
- 5 Enter the name of the dog, and select  > **OK**.

The dog is added and an ID number is randomly assigned. If the number interferes with another collar in the area, you can change the dog ID.

Adding a Hunter to Your Handheld

- 1 On your handheld, select  > **Contacts > Add**.
- 2 Bring the handhelds near each other, and select **Yes** on your handheld device.
- 3 On the other hunter's handheld, select  > **Contacts > Pair**.
- 4 On your handheld, enter the name of the hunter, and select  > **OK**.
- 5 If you would like to be added to the hunter's handheld device, repeat this procedure using the hunter's handheld device.

Finding Contact and Dog IDs and Codes

You may need to share the track and train codes for your dog or your IDs for your dog or handheld.

- 1 Select an option:
 - To view the dog codes and ID, select **Dog List**, and select the dog.
 - To view the contact ID, select  > **Contacts**, and select the contact.
- 2 Select **Show Info**.

If you share a dog's track code, the other hunter can view your dog's location with the map and dog tracking compass. If you share a dog's train code, the other hunter can track your dog and train your dog using stimulation.

Setting Up the Training Keys

You can customize the training keys to suit your training scenario and dogs.

- 1 Select **Setup > Training > Training Buttons**.
- 2 If necessary, select **Change Mode** to program each key to a specific dog and stimulation level.
- 3 Select the top of the screen directly under the key you are customizing.
- 4 If necessary, select a dog.
- 5 Select **+** and **-** to select the intensity level.
- 6 Select **M** for momentary, **C** for continuous, or **T** for Tone.
- 7 Repeat for all necessary keys.
- 8 If you need to train with more than three keys, select **Insert Page**, and program the additional keys.
- 9 Select .

Changing the Length of the Dogs' Track


You can adjust the length of the tracks that are shown on the map. This can help reduce the clutter on the map.

- 1 Select **Setup > Dogs > Dog Track on Map**.
- 2 Select an option to show more or less of the tracks on the map.

Changing the Color of the Dog's Track

You can change the color of the track on the map to match the collar strap.

- 1 Select **Dog List**.
- 2 Select a dog.
- 3 Select **Show Info**.
- 4 Select the colored square next to the dog's name.
- 5 Select a color.

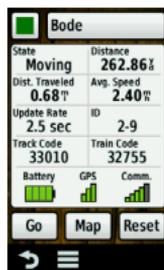

Changing the Collar Update Rate

You can select a longer duration for the update rate to conserve battery power.

- 1 Select **Dog List**.
- 2 Select a dog.
- 3 Select **Show Info > ≡ > Change Update Rate**.
- 4 Select a new update rate.

Turning On Rescue Mode

- 1 Select **Dog List**.
- 2 Select a dog.
- 3 Select **Show Info > ≡ > Rescue Mode > On**.

When the collar battery life reaches below 25%, the collar update rate is automatically changed to once every 2 minutes.



Garmin® and the Garmin logo are trademarks of Garmin Ltd. or its subsidiaries, registered in the USA and other countries. Alpha™ and TT™ are trademarks of Garmin Ltd. or its subsidiaries. These trademarks may not be used without the express permission of Garmin.