

garmin  asus

# nüvifone™ G60

## owner's manual



© 2009 Garmin Ltd. or its subsidiaries and ASUSTeK Computer, Inc.

Garmin International, Inc. 1200 East 151st Street, Olathe, Kansas 66062, USA Tel. (913) 397.8200 or (800) 800.1020 Fax (913) 397.8282	Garmin (Europe) Ltd. Liberty House Hounslow Business Park, Southampton, Hampshire SO40 9LR UK Tel. +44 (0) 870.8501241 (outside the UK) 0808 2380000 (within the UK) Fax +44 (0) 870.8501251	Garmin Corporation No. 68 Jangshu 2nd Road, Shijr, Taipei County Taiwan Tel. 886/2.2642.9199 Fax 886/2.2642.9099	ASUSTeK Computer Inc. 15 Li-Te Road Peitou, Taipei Taiwan 11259 Tel. 886/2.2894.3447 Fax 886/2.2890.7698
---	---	--	--

All rights reserved. Except as expressly provided herein, no part of this manual may be reproduced, copied, transmitted, disseminated, downloaded or stored in any storage medium, for any purpose without the express prior written consent of Garmin and ASUS. Garmin and ASUS hereby grants permission to download a single copy of this manual onto a hard drive or other electronic storage medium to be viewed and to print one copy of this manual or of any revision hereto, provided that such electronic or printed copy of this manual must contain the complete text of this copyright notice and provided further that any unauthorized commercial distribution of this manual or any revision hereto is strictly prohibited.

Information in this document is subject to change without notice. Garmin and ASUS reserve the right to change or improve its products and to make changes in the content without obligation to notify any person or organization of such changes or improvements. Visit [www.garminasus.com](http://www.garminasus.com) for current updates and supplemental information concerning the use and operation of this and other Garmin-Asus products.

The combined Garmin-Asus logo is a trademark of Garmin Ltd. and ASUSTeK Computer, Inc.

Garmin® is a trademark of Garmin Ltd. or its subsidiaries, registered in the USA and other countries. Ciao!™, nüMaps Guarantee™, and nüvifone™ are trademarks of Garmin Ltd. or its subsidiaries. These trademarks may not be used without the express permission of Garmin.

The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc., and any use of such marks by Garmin is under license. Microsoft®, Windows®, and Outlook® are registered trademarks of Microsoft Corporation in the United States and/or other countries. Mac® is a registered trademark of Apple Computer, Inc., registered in the U.S. and other countries. microSD™ is a trademark of SanDisk or its subsidiaries. Wi-Fi is a registered mark of the Wi-Fi Alliance.

CE0682!

## Table of Contents

<b>Set Up Your nüvifone .....</b>	<b>1</b>	<b>Use Your Phone .....</b>	<b>12</b>
Look at Your nüvifone .....	1	Dial a Number.....	12
Understand the Home Screen		Call a Contact.....	12
Icons .....	2	Set Up Voice Mail .....	12
Understand the Scrolling Screen		Call Voice Mail .....	12
Icons .....	3	Use Call History.....	13
Understand the Status		Do a Reverse Lookup.....	14
Bar Icons.....	4	Receive a Call .....	14
Install the SIM Card and the		Use In-Call Options .....	14
Battery.....	6	End a Call .....	15
Charge the Battery .....	7	Redial a Number.....	15
Install the microSD Card.....	8	Set Your Ringtones.....	15
Remove the microSD Card.....	8	Forward a Call .....	16
Orient the Screen .....	9	Use Call Waiting .....	17
Scroll the Screen .....	9	Make a Conference Call.....	17
Lock the Screen.....	9		
Mount Your nüvifone.....	10		
Acquire Satellites.....	11		

<b>Search for Locations</b> .....	<b>18</b>	the Map.....	<b>25</b>
Find an Address.....	18	Plan and Save a Route.....	26
Use the Location Page.....	19	<b>Follow Your Route</b> .....	<b>27</b>
Find a Point of Interest.....	19	View the Next Turn Page.....	28
Call a Location.....	19	View the Turn List Page.....	28
Navigate to a Contact.....	20	View the Trip Computer Page..	29
Set a Home Location.....	20	Use the Compass.....	30
Go Home.....	20	Take a Detour.....	30
Find Locations with Local Search.....	21	Add a Stop.....	30
Save Favorite Locations.....	21	About Usage Modes.....	31
Find Favorite Locations.....	21	<b>View Traffic</b> .....	<b>32</b>
Find Recently Found Locations.....	22	About Traffic.....	32
Search the White Pages.....	22	Understand Traffic on Your Route.....	32
Find Movie Times.....	23	Use the Traffic Menu.....	33
Find Upcoming Events.....	23		
Find Cities.....	24		
Navigate with Photos.....	24		
Find Gas Prices.....	25		
Enter Coordinates.....	25		
Find a Location Using			

<b>Work with Contacts .....</b>	<b>34</b>	<b>Use the Camera .....</b>	<b>38</b>
Add a Contact.....	34	Take a Picture.....	38
Edit a Contact.....	34	Add Location Information to a Picture.....	38
Assign a Picture to a Contact ..	34	View a Picture.....	38
Assign a Location to an Existing Contact.....	35	View a Slideshow .....	38
Work with the SIM Phone		Set Your Wallpaper.....	39
Book.....	35	Share a Picture.....	39
Delete a Contact.....	35	Navigate to a Picture .....	39
<b>Use SMS/Text Messaging</b>	<b>36</b>	<b>Use the Music Player.....</b>	<b>40</b>
Send a Text Message .....	36	Play a Song .....	40
Read a Text Message.....	36	Create a Playlist .....	40
Send a Location Message .....	36	Play a Playlist .....	40
Use Text Messaging Options...	37	Save the Current Playlist.....	41
Delete Text Messages .....	37	Edit a Playlist.....	41

<b>Browse the Web.....</b>	<b>42</b>
Enter a URL.....	42
Use the Browser.....	42
Set Your Browser Home Page.....	43
Save Bookmarks .....	43
Clear Your History.....	43
<b>Use E-Mail .....</b>	<b>44</b>
Set Up E-Mail .....	44
Send an E-Mail Message .....	44
Check E-Mail Messages.....	45
Delete E-Mail Messages.....	46
Use E-Mail Options.....	46

<b>Use Ciao!™ .....</b>	<b>49</b>
Register with Ciao! .....	49
Join Ciao!.....	49
Invite a Friend.....	50
Accept an Invitation .....	50
Remove a Friend .....	51
Hide/Show Your Location .....	51
View My Details .....	52
View Ciao! Networks .....	52
Disable Ciao! .....	52

## **View the Weather**

<b>Forecast.....</b>	<b>53</b>
View a Weather Forecast for Another Location.....	53
Update Weather Manually .....	53

<b>Use the Calendar .....</b>	<b>54</b>
View the Calendar .....	54
Schedule an Appointment.....	54
View an Appointment.....	55
Delete an Appointment .....	55

**Connect to Other****Devices ..... 56**

About Bluetooth Technology .... 56

Synchronize Your nüvifone ..... 58

Transfer Files..... 58

Set Up a Wi-Fi Connection ..... 59

**Use the Tools ..... 61**

Use Where Am I? ..... 61

Use the Calculator ..... 61

Use the Clock ..... 61

Check Flight Status ..... 63

Use the Converter ..... 64

Use Notes ..... 65

Work with Checklists ..... 65

**Customize Your****nüvifone..... 67**

Change General Settings ..... 67

Change Security Settings ..... 67

Change SIM Card Security

Settings ..... 68

Change Language Settings ..... 68

Change Date/Time Settings .... 69

Change Audio Settings ..... 69

Change Phone Settings..... 71

Change Navigation Settings .... 71

Change Application Settings... 73

Change Browser Settings..... 74

Change the Main Menu Order . 74

Change Display Settings ..... 75

Restore Settings ..... 76

Clear All User Data ..... 76

<b>Appendix .....</b>	<b>77</b>
Get Support .....	77
Register Your Product.....	77
View Software Information.....	77
nüMaps Guarantee™ .....	77
Additional Maps .....	77
Update the Software.....	78
Reset the nüvifone.....	78
About GPS Satellite Signals ....	78
About the Battery.....	78
Replace the Battery .....	79
Change the Fuse in the Vehicle	
Power Cable .....	79
Mount on Your Dashboard.....	80
Remove the SIM Card .....	80
Declaration of Conformity .....	80
Troubleshooting .....	81
Specifications .....	83
<b>Index .....</b>	<b>85</b>

## Set Up Your nüvifone

### Look at Your nüvifone

*Power key: Press and hold to turn on/off; press and release to lock and unlock the screen.*



See the Important Safety and Product Information section in the quick start manual in the product box for product warnings and other important information.

## Understand the Home Screen Icons



The nüvifone Home screen has scrollable icons. Touch and drag to view all the icons. For more information, see [pages 3–4](#).

Main Icons	
Icon	Description
	Touch to make a phone call.
	Touch to search for locations, including restaurants, hotels, and auto services.
	Touch to view the map.

Call Icons	
	 —Missed call icon showing the number of missed calls.
	 —Voice mail icon showing the number of new voice mails.

## Understand the Scrolling Screen Icons

Scrolling Icons			
Icons	Application	Icons	Application
	Browse the web.		Use the camera.
	Access text messages.		Access the tools, such as checklists and the alarm clock.
	Access your e-mail account(s).		Open Ciao!.
	Access your calendar.		Open the music player.
	View weather information for your area.		Access the settings for your phone.
	Access your contacts.		

### Tips and Shortcuts

- Touch  to return to the previous screen.
- To quickly return to the Home screen, touch and hold  from any screen.
- Touch  and  to see more choices. Quickly tap these buttons to scroll faster.

## Understand the Status Bar Icons

Icon	Description
	Mobile signal strength. The more colored bars that appear, the stronger the signal. A red "X" indicates no mobile signal strength.
	Network connectivity. This icon appears when the nüvifone is connected for Internet access. If the icon is white, the connection is in use. If the icon is gray, your nüvifone is trying to establish the data connection with the network. The connection type appears next to the icon: G—GPRS (2.5), E—Edge (2.75), 3G—3G (3.0).
	Wi-Fi® connectivity. This icon appears in place of the network connectivity icon when the nüvifone is using Wi-Fi.

Icon	Description
	Current time. The time is based on the location of the device or the selected time zone.
	An alarm is set.
	The nüvifone is connected to a device using Bluetooth® wireless technology.
	Bluetooth wireless technology is enabled. The nüvifone is not connected to a device.
	Satellite connectivity. The more colored bars that appear, the stronger the satellite signal. If there is no satellite signal or the nüvifone is in simulator mode, a red "X" appears.
	Teletypewriter (TTY) mode is activated.
	Battery charge. See <a href="#">page 7</a> for more information.

## Install the SIM Card and the Battery

1. Press down firmly on the battery cover and slide it off the back of your nüvifone.

*Battery cover*



2. Insert the SIM card in the slot at the top of the battery compartment. Insert the notched corner of the SIM card first with the gold contacts facing up. The SIM card clicks into place.



3. Locate the lithium-ion battery that came in the product box.
4. Locate the metal contacts on the end of the lithium-ion battery.
5. Insert the battery so that the metal contacts on the battery match up with the metal contacts inside the battery compartment.



6. Slide the battery cover onto the back of your nüvifone.

## Charge the Battery

1. Insert the appropriate plug adapter into the AC adapter.
2. Connect the small end of the USB cable to the mini-USB connector on the side of your nüvifone.
3. Connect the large end of the USB cable to the AC adapter.
4. Plug the AC adapter into a power outlet.

## Alternate Charging Methods

- Insert your nüvifone into the cradle, and connect the vehicle power cable to the cradle.
- Connect the vehicle power cable to your nüvifone.
- Connect your nüvifone to a computer using the USB cable included in the box.
- Insert the battery into the battery charger (accessory). For more information about accessories, go to [www.garminasus.com](http://www.garminasus.com).

Battery Icons	Meaning
	Battery life. The more colored bars that appear, the greater the remaining battery charge.
	Battery is charging.
	External power is connected, and the battery is fully charged.

**WARNING:** This product contains a lithium-ion battery. To prevent damage, remove the device from the vehicle when exiting or store it out of direct sunlight.

## Install the microSD Card

The use of a microSD card is optional.

1. On the side of your nüvifone, flip up the rectangular plastic cap and slide it over to reveal the microSD card slot.
2. Insert the microSD card with the contacts facing the nüvifone screen. The microSD card will lock into place.



3. Push the plastic cap back into place.

## Remove the microSD Card

1. On the side of your nüvifone, flip up the rectangular plastic cap and slide it over to reveal the microSD card slot.
2. Push the microSD card in until it clicks.
3. Pull out the microSD card.

## Orient the Screen


- Rotate your nüvifone to the left or the right to view in horizontal (landscape) mode.
- From horizontal mode, rotate your nüvifone to the left or the right to view in vertical (portrait) mode.

## Scroll the Screen

- Touch and slide your finger to slowly scroll the menu.
- Touch, quickly slide, and lift your finger to continue scrolling the menu after removing your finger.
- Touch the screen to stop scrolling, or wait for the image to slow to a stop.

## Lock the Screen

- With your nüvifone turned on, quickly press the **Power** key.
- To unlock the touchscreen, quickly press the **Power** key and double-tap the  unlock icon.

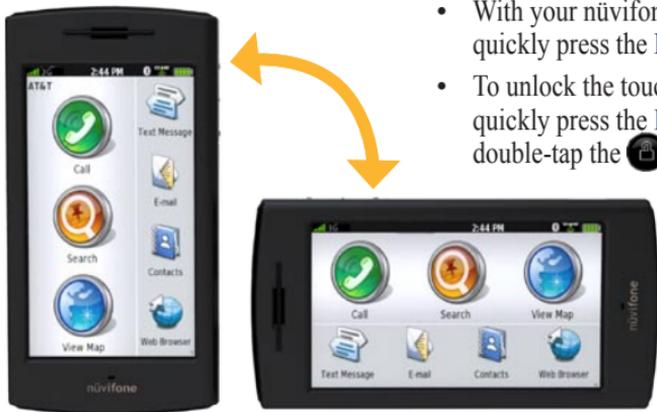

## Mount Your nüvifone

Before mounting the nüvifone, see the Important Safety and Product Information section in the *Quick Start Manual* for information about laws pertaining to windshield mounting.

1. Plug the vehicle power cable into the power connector on the back of the cradle.



2. Remove the clear plastic from the suction cup. Clean and dry your windshield and the suction cup with a lint-free cloth.
3. Place the suction cup on the windshield.
4. Flip the lever back, toward the windshield.
5. Snap the cradle onto the suction cup arm.



6. Fit the gold contacts on the left side of your nüvifone into the cradle.
7. Tilt the nüvifone back until it snaps into the cradle.



8. Plug the other end of the vehicle power cable into a power outlet in your vehicle.

## Acquire Satellites

1. Go outdoors to an open area, away from tall buildings and trees.
2. Turn on your nūvifone.

Acquiring satellite signals can take a few minutes. The  satellite icon indicates satellite strength. When at least one of the lines is green, your nūvifone has acquired satellite signals.

## Use Your Phone

### Dial a Number

The first time you touch the  call icon, the nūvifone opens the Dial page.

1. From the Home screen, touch **Call** (> **Dial**).
2. Enter the phone number using the touch keypad.
3. Touch  to dial the phone number.

### Call a Contact

1. From the Home screen, touch **Call** > **Contacts**.
2. Select a contact, and touch **Call**.

For more information about adding and editing contacts, see [page 35](#).

## Set Up Voice Mail

1. From the Home screen, touch **Settings** > **Phone** > **Voice Mail Number**, and verify that your voice mail number is correct.
2. Touch **Call** > **Contacts** > **Voice Mail**, and follow the prompts.

## Call Voice Mail

The voice mail icon appears on the Home screen when you have new voice mail.

Select one of following methods to call your voice mail:

- Touch **Call** > **Contacts** > **Voice Mail**.
- Touch **Call** > **Dial**, and touch and hold “1.”
- Touch **Contacts** > **Voice Mail**.

## Use Call History

1. From the Home screen, touch **Call > Call History**. Calls are organized into four categories:



—Dialed call



—Received call



—Missed call



—Voice mail

2. Select a call.
3. Select an option:
  - **Call**—call the number.
  - **Text**—send a text message.
  - **Go!**—navigate to the location assigned to the number, if available.

## Delete All Calls

1. From the Home screen, touch **Call > Call History**.
2. Touch  > **Clear All History**.

## Delete a Call

1. From the Home screen, touch **Call > Call History**.
2. Select a call.
3. Touch  > **Delete from Call History**.
4. Touch **Yes**.

## View Related Calls

Related calls are calls made to or received from the same number.

1. From the Home screen, touch **Call > Call History**.
2. Select a call.
3. Touch  > **View Related Calls**.

A list of related calls appears displaying the length of each call or a status message.

## Do a Reverse Lookup

This service is available as a paid subscription. Reverse lookup is not available in all areas.

A reverse lookup allows you to search for the address of a phone number that called you.

1. From the Home screen, touch **Call > Call History**.
2. Select a call.
3. Touch  > **Reverse Lookup**.

## Receive a Call

Touch **Answer** to answer the call.

Touch **Ignore** to ignore a call.

**NOTE:** With some mobile phone plans, touching **Ignore** will send the call to your voice mail.

To answer a call when the screen is locked, double-tap .

To ignore a call when the screen is locked, press the **Power** key.

To silence a call, touch the **Volume** down key.

## Use In-Call Options

When you are on a call, you can perform other tasks. The following options are available on the In-Call page:

- **Speaker**—activate the speakerphone.
- **Mute**—silence the audio input to the microphone. The other caller will not be able to hear you speak.
- **Add**—select a number to add to the current call when placing a conference call.
- **Hold**—place the current call on hold.
- **End Call**—end the current call.

- —open a numeric keypad for automated systems that require numeric entries.

To return to the In-Call page, touch **Call** on the Home screen or touch  (when available).

## End a Call

During a call, your nūvifone dims and goes into sleep mode to prevent accidental taps.

1. If the screen is dimmed, double-tap the  unlock icon.  
If the screen is black, press and release the **Power** key.
2. Touch **End Call**.

## Redial a Number

1. From the Home screen, touch **Call > Dial**.
2. Touch . The last-dialed call appears in the white bar.
3. Touch  again to call the number.

## Set Your Ringtones

You can set a default ringtone and assign different ringtones to contacts.

If you have loaded music onto your nūvifone, the songs are also available as ringtones. For more information on transferring music files to your nūvifone, see [page 59](#).

## Set a Default Ringtone

1. From the Home screen, touch **Settings > Audio > Sounds**.
2. Touch the button under **Phone**.
3. Touch **Ringtones**.
4. Select a ringtone, and touch **OK**.

## Set a Ringtone for a Contact

1. From the Home screen, touch **Call > Contacts**.
2. Select a contact.
2. Touch  **> Edit Contact**.
3. Scroll down to the Personal category, and touch **Ringtone**.
4. Select a ringtone, and touch **OK**.

## Forward a Call

You can forward incoming calls to another number.

1. From the Home screen, touch **Settings > Phone**.
2. Touch the button under **Call Forward**.
3. Touch the button under **Forwarding**.
4. Touch **On > OK**.
5. Select an option:
  - **History**—select a number from your call history.
  - **Contacts**—select a number from your contacts.
  - **Enter Number**—enter a number.

## Use Call Waiting

1. From the Home screen, touch **Settings > Phone**.
2. Touch the button under **Call Waiting**.
3. Touch **On > OK**.

## Make a Conference Call

1. Dial the first phone number.
2. Touch **Add**.
3. Select an option to dial the second phone number.
4. Touch **Join**.

The Conference Call page appears.

## Speak Privately During a Conference Call

1. From the Conference Call page, touch . A list appears with the participating callers.
2. Touch **Private** next to the caller you want to speak privately with. Other members of the conference call can continue to speak to each other.

## Disconnect a Participating Call

1. From the Conference Call page, touch . A list appears with the participating callers.
2. Touch **Drop** next to the caller you want to disconnect.

## Search for Locations

Use the Search menu to find addresses, Points of Interest (restaurants, hotels, attractions), and other items included in the built-in map data.

### Find an Address

**NOTE:** Depending on the version of the built-in map data on your device, the button names and the order of steps could be different than the steps below.


1. From the Home screen, touch **Search > Address**.
2. Change the state, country, or province, if necessary.

3. Touch **Spell City**, enter the city/postal code, and touch **Done**. Select the city/postal code in the list. (Not all map data provides postal code searching.) If you are unsure of the city, touch **Search All**.
4. Enter the number of the address, and touch **Done**.
5. Enter the street name, and touch **Done**.
6. Select the correct street in the list, if necessary.
7. Touch the address, if necessary.
8. Touch **Go!**, or touch **View Map** to view the location on the map.

Touch  to save the location or to send a location message.

## Use the Location Page

When you select a location, the Location page appears.

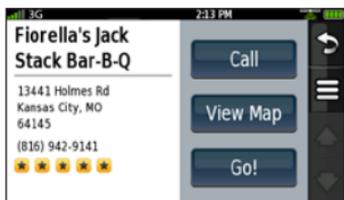

- **Call**—touch to call the location.
- **View Map**—touch to view the location on the map.
- **Go!**—touch to create a route to the location.
- **☰**—touch to save the location or to send the location in a location message.

## Find a Point of Interest

The detailed maps loaded in your nūvifone contain millions of points of interest, such as restaurants, hotels, and auto services.

1. From the Home screen, touch **Search > Points of Interest**.
2. Select a category and a subcategory, if necessary.
3. Select a destination.

## Call a Location

Phone numbers are not included for all locations.

1. From the Home screen, touch **Search**.
2. Touch a category and a subcategory, if necessary.
3. Select a location.
4. Touch **Call**.

## Navigate to a Contact

If you have entered address information for a contact, you can create a route to the contact's address.

1. From the Home screen, touch **Search > Contacts**.
2. Select a contact from the list.
3. Touch **Go!**.

## Set a Home Location

Set your home location for the place you return to most often.

1. From the Home screen, touch **Search > Home**.
2. Select an option:
  - **Enter My Address**
  - **Use My Current Location**
  - **Choose from Recently Found**

## Go Home

To navigate home after you have set your home location, touch **Search > Home > Go!**. Your home location is also stored in your Favorites. See [page 21](#) for more information.

## Edit Your Home Location

1. From the Home screen, touch **Search > Home**.
2. Touch  **> Edit**.
3. Select an option:
  - **Change Name**
  - **Attach Picture** or **Change Picture**
  - **Change Map Symbol**
  - **Change Phone Number**
  - **Change Categories**

## Delete Your Home Location

1. From the Home screen, touch **Search > Home**.
2. Touch  > **Edit**.
3. Touch  > **Delete**.
4. Touch **Yes**.

**TIP:** To enter a new home location, touch **Search >  > Set Home Location**. Select an option.

## Find Locations with Local Search

A data connection is required to use this service. Businesses listed with Local Search include ratings based on user reviews.

1. From the Home screen, touch **Search > Local Search**.
2. Select a category, or touch **Spell Name**.
3. Select a location.

**NOTE:** Local Search is not available in all areas.

## Save Favorite Locations

You can save locations in your Favorites so you can quickly find them and create routes to them. Your nüvifone can store about 3,000 favorite locations.

1. After you select a location, touch  > **Save** to save the location to your Favorites.
2. Touch **OK**.

## Find Favorite Locations

1. From the Home screen, touch **Search > Favorites**. Your saved locations are listed by category.
2. Touch **All Categories** to search all your saved locations.

## Find a Favorite Location by Spelling the Name

1. From the Home screen, touch **Search > Favorites**.
2. Select a category, if necessary.
3. Touch **Spell**.
4. Enter the name of the location, and touch **Done**.

## Find Recently Found Locations

Your nüvifone stores the last 50 locations you have found.

1. From the Home screen, touch **Search > Recently Found**.
2. Select a location.

## Clear the Recently Found List

1. From the Home screen, touch **Search > Recently Found**.
2. Touch  > **Clear**.
3. Touch **Yes**.

This process clears the list of recently found locations. These locations will not be deleted from your nüvifone.

## Search the White Pages

This service is available as a paid subscription. White Pages are not available in all areas. A data connection is required for this feature.

## Search by Name in White Pages

1. From the Home screen, touch **Search > White Pages > By Name**.
2. Enter the last name, and touch **Next**.
3. Enter the first name, if necessary, and touch **Done**.

To re-enter the name, touch **Retry**.

## Search by Phone Number in White Pages

1. From the Home screen, touch **Search > White Pages > By Phone Number**.
2. Enter the area code and phone number, and touch **OK**.

## Find Movie Times

This service is available as a paid subscription. Movie times are not available in all areas. A data connection is required for this feature.

1. From the Home screen, touch **Search > Movie Times**.
2. Touch the date to select a new date, if necessary.
3. Touch **Find by Movie Title** or **Find by Theater Name**.
4. Select a movie title and a theatre. A list of showtimes appears.

## Add a Movie Time to Your Calendar

1. Find a movie.
2. From the Location page, touch  > **Add to Calendar**.
3. Select a movie time, and touch **OK**.

## Find Upcoming Events

This service is available as a paid subscription. Upcoming events are not available in all areas. A data connection is required for this feature.

You can search for upcoming events, including art shows, musical performances, and sporting events.

1. From the Home screen, touch **Search > Upcoming Events**.
2. Select a category.
3. Touch the arrows at the top of the screen to select a different date, if necessary.

4. Select an event to view more information.
  - Touch **View Map** to view the location of the event on the map.
  - Touch **Remind Me** to add the event to your calendar and to receive a reminder.

## Find Cities

1. From the Home screen, touch **Search > Cities**. Nearby cities are listed by distance with the nearest cities listed first.
2. Touch **Spell** to find a city by spelling the name.

## Navigate with Photos

A data connection is required to use this service. This service is not available in all areas.

Your nūvifone provides photos that include location information. You can use this information to navigate to the places and landmarks shown in the photos.

1. From the Home screen, touch **Search > Photos**. A list of photos from nearby locations appears.
2. Touch a photo from the list. The detail page for the photo appears.

**NOTE:** Photo navigation is not available in all areas.

## Find Gas Prices

This service is available as a paid subscription. Fuel prices are not available in all areas. A data connection is required for this feature.

1. From the Home screen, touch **Search > Gas Prices**. A list of gas stations near your current location appears.
2. To display prices for a specific fuel type, touch , and select a fuel type.

## Enter Coordinates

If you know the geographic coordinates of your destination, you can navigate to your destination using the latitude and longitude coordinates. This can be especially helpful when geocaching.

1. From the Home screen, touch **Search > Coordinates**.

2. Touch **Format** to change the type of coordinates.
3. Touch a box to enter part of a coordinate.
4. Enter the coordinates, and touch **Next**.

## Find a Location Using the Map

1. From the Home screen, touch **Search > Browse Map**.
2. Touch and drag the map to view different parts of the map.
3. Touch anywhere on the map. An arrow appears pointing at the location you selected.

## Tips for Browsing the Map

- Touch  and  to zoom in and zoom out.
- Touch  to view the two-dimensional (2D) map.
- Touch  to view the three-dimensional (3D) map.
- Touch  to rotate the map around your current location.
- Touch  > **Go!** to navigate to the location.
- Touch  > **Save** to save the location.
- Touch  > **Send Location** to send the coordinates of the selected location in a location message. See [page 37](#) for more information.

## Plan and Save a Route

You can plan and save custom routes that include multiple via points.

1. From the Home screen, touch **Search > Routes > New Route**.
2. Touch **OK** to search for a starting location.
3. Find a location, and touch **Select**.
4. Touch **OK** to search for a destination location.
5. Find a location, and touch **Select**. The nüvifone calculates the route.
6. Touch  for the following options:
  - **Remove Points**—select the points to remove, and touch Remove Points.
  - **Optimally Reorder Points**—allow the nüvifone to reorder the points.
7. Touch . The route is saved.

To add additional points to the route, touch **Add Via Points**.

To change the order of the points in your route, touch **Reorder**.

## Follow Your Route

After you have selected a location, your nüvifone creates a route to the location. Your route is marked with a magenta line. As you travel, your nüvifone guides you to your destination with voice prompts, arrows on the map, and directions at the top of the map. A checkered flag marks your destination. If you depart from the original route, your nüvifone recalculates the route and provides new directions.

A speed limit icon could appear as you travel on major roadways. This icon displays the current speed limit of the roadway.

Touch anywhere on the Map page to browse the map.




- 1 Touch to view the Next Turn page.
- 2 Touch to view the Turn List page.
- 3 Touch to return to the Home screen.
- 4 Touch to view the Trip Computer page.
- 5 Touch to view the Where Am I? page.
- 6 Touch to view the Trip Computer page.
- 7 Touch to zoom in and zoom out.

## View the Next Turn Page

When you are navigating a route, the Next Turn page shows the turn on the map and the distance and time left before you reach the turn.

From the map, touch the turn indicator in the top left corner. The Next Turn page appears.

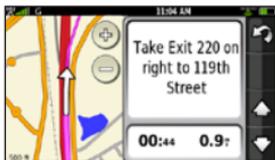

**NOTE:** You can also view the Next Turn page by touching any turn from the Turn List page.

## View the Turn List Page

When you are navigating a route, the Turn List page displays turn-by-turn instructions for your entire route and the distance between turns.

From the map, touch the text bar on the top of the screen. The Turn List page appears.



## View the Entire Route on the Map

1. From the map, touch the text bar on the top of the screen.
2. Touch **Show Map**. The map appears with your route marked in a magenta line.

## View the Trip Computer Page

The trip computer displays your current speed and provides helpful statistics about your trip.

From the map, touch the **Arrival** or **Speed** field.



## Reset the Trip Computer

Reset the trip computer before beginning a trip.

1. From the map, touch the **Arrival** or **Speed** field.
2. Touch **Reset Trip** to reset the information on the trip computer.
3. Touch **Reset Max Speed** to reset the maximum speed.

## Use the Compass

Your nüvifone contains a multi-axis compass that can be used while driving or walking, in portrait or landscape mode. The compass appears on the Trip Computer page. As you travel, the compass rotates to indicate your direction of travel. The bug indicator, which appears as an inverted triangle at the top of the compass, indicates your current heading. The green arrow indicates the bearing to your destination. When the green arrow points at the bug indicator, you are traveling directly to the destination.

1. From the Home screen, touch **View Map**.
2. Touch **Speed** or **Arrival**.

## Calibrate the Compass

1. From the Home screen, touch **View Map**.
2. Touch **Speed** or **Arrival**.
3. Touch  > **Calibrate Compass**.
4. Follow the on-screen steps.

## Take a Detour

1. While navigating a route, touch .
2. Touch **Detour**.

## Add a Stop

1. While navigating a route, touch  > **Search**.
2. Search for the extra stop.
3. Touch **Go!**.
4. Touch **Add As a Via Point** to add this stop before your final destination.

## About Usage Modes

There are two usage modes: Automobile and Pedestrian. In Automobile mode, your nüvifone calculates routes for automobiles. These routes obey traffic laws, such as one-way streets. Your nüvifone uses typical automobile speeds when estimating your arrival time.

In Pedestrian mode, your nüvifone calculates routes for walking. These routes avoid highways in favor of smaller streets. Your nüvifone uses typical walking speeds when estimating your arrival time.

Your nüvifone automatically changes between Automobile mode and Pedestrian mode based on the following criteria:

- If you are not navigating a route, and the nüvifone is in the cradle, it is in Automobile mode.
- If you are not navigating a route, and the nüvifone is not in the cradle, it is in Pedestrian mode.
- If you are navigating a route, the nüvifone remains in the mode in which the route was created.
- If you create a route that is longer than 5 miles, the nüvifone uses Automobile mode.

There are separate route preferences for each usage mode. For more information, see [page 71](#).

## View Traffic

### About Traffic

This service is available as a paid subscription. A data connection is required for this feature.

When you are receiving traffic information, the  traffic icon appears in the upper-left corner of the Map page. The icon changes color to indicate the severity of traffic conditions on your route or on the road you are currently traveling.

- —traffic is flowing freely.
- —moderate traffic congestion.
- —very slow or stop-and-go traffic.

**NOTE:** Traffic information and delay times are not available in all areas. For more information,

go to [www.garmin.com/nulink/trafficcoverage](http://www.garmin.com/nulink/trafficcoverage).

### Understand Traffic on Your Route

When calculating your route, the nüvifone examines the current traffic and automatically optimizes the route for the shortest time. If a severe traffic delay occurs on your route while you are navigating, the nüvifone automatically recalculates the route. You might still be routed through traffic if no better alternative routes exist.

If a non-severe traffic delay occurs on your route, the  traffic icon shows how much time the delay has added to your route. This time is already included in your estimated arrival time.

## Use the Traffic Menu

1. From the map, touch  to view the Traffic menu.
2. Select an option:
  - **Show Traffic Map**—view the traffic map, which displays color-coded traffic on nearby roads. To return to the normal map from the traffic map, touch the traffic icon, and touch **Show Normal Map**. When driving into traffic, the normal map will automatically change to the traffic map.
  - **Traffic Search**—view a list of traffic delays. To view details, touch an item in the list.
  - **Traffic On Route**—view the traffic delays on your route, including the estimated time of each delay and the distance to each delay. If there are multiple traffic delays on your route, touch the arrows to view other traffic delays.

## Avoid Traffic Manually

1. From the map, touch the traffic icon.
2. Touch **Traffic On Route**.
3. Touch the arrows to select a traffic delay, if necessary.
4. Touch  > **Avoid** to avoid the selected traffic delay.

You might still be routed through traffic if no better alternative routes exist.

## Change Traffic Avoidance Settings

1. From the Home screen, touch **Settings > Navigation**.
2. Touch **Automobile**.
3. Touch the button under **Avoidances**.
4. Clear the Traffic check box, and touch **OK**.

## Work with Contacts

### Add a Contact

Your nüvifone can store up to 5,000 contacts.

1. From the Home screen, touch **Contacts**.
2. Touch .
3. Select a category, and enter the information.
4. Touch  to save the contact.

### Edit a Contact

1. From the Home screen, touch **Contacts**.
2. Select a contact.
3. Touch  > **Edit Contact**.
4. Select a category to edit information.

### Assign a Picture to a Contact

1. From the Home screen, touch **Contacts**.
2. Select a contact.
3. Touch  > **Edit Contact**.
4. Touch the picture of the contact.
5. Select a picture.
6. Touch and drag to move the picture.
7. Touch  and  to adjust the zoom level.
8. Touch **Select**.

## Assign a Location to an Existing Contact

1. From the Home screen, touch **Contacts**.
2. Select a contact.
3. Touch **Go!**.
4. Select an address type.
5. Search for the location you want to assign to the contact.
6. Touch **Select**.

## Work with the SIM Phone Book

You can export and import contact information to and from the SIM card.

1. From the Home screen, touch **Contacts**.
2. Touch  > **SIM Phone Book**.
3. Select an option.

## Delete a Contact

1. From the Home screen, touch **Contacts**.
2. Select the contact you want to delete.
3. Touch  > **Delete**.
3. Touch **Delete** > **Yes**.

## Delete Multiple Contacts

1. From the Home screen, touch **Contacts**.
2. Touch  > **Delete Contacts**.
3. Check the box next to the contacts you want to delete.
4. Touch **Delete** > **Yes**.

## Delete All Contacts

1. From the Home screen, touch **Contacts**.
2. Touch  > **Delete Contacts**.
3. Touch  > **Select All**.
4. Touch **Delete** > **Yes**.

## Use SMS/Text Messaging

### Send a Text Message

1. From the Home screen, touch **Text Message > New Message**.
2. Touch anywhere in the **To:** box to enter recipient information.
3. Touch **Use Dial Pad** to enter the phone number of the recipient, or touch **Add Contact** to select a contact as the recipient.
4. Touch anywhere in the **Message:** box to enter a message.
5. Enter a message, and touch **Done**.
6. Touch **Send**.

### Read a Text Message

When you receive a text message, a number icon appears next to the Text Message icon on the Home screen. The number in the icon indicates the

number of unread text messages.

1. From the Home screen, touch **Text Message**.
2. Touch the conversation to read the text message.
3. Touch **Reply** to compose a reply to the message.

### Send a Location Message

Location messages contain text and GPS information that other nūvifone users can view. Non-nūvifone users receive a plain text message with location information.

**NOTE:** Use caution when sharing your location information with others.

1. From the Home screen, touch **Text Message > New Message**.
2. Touch  > **Insert Location**.
3. Select a location.

4. Select a recipient.
5. Enter a message, if necessary.
6. Touch **Send**.

## Use Text Messaging Options

### Call the Sender

1. Select a conversation.
2. Touch  > **Call**.

### Add the Sender to Contacts

1. Select a conversation.
2. Touch  > **Add to Contact**.
3. Select whether to add the sender as a new contact or to add to existing contact information.

### Forward a Text Message

1. Select a conversation.
2. Select an individual message.
3. Touch **Forward Message**.
4. Enter a recipient.
5. Touch **Send**.

## Delete Text Messages

You can delete individual text messages, entire conversations, or all messages and conversations in your inbox.

### Delete a Text Message

1. Select a conversation.
2. Select a message marker.
3. Touch **Delete Message**.

The individual message is deleted from the conversation.

### Delete a Conversation

1. Select a conversation.
2. Touch  > **Delete Conversation**.
3. Touch **Yes**.

### Delete All Text Messages

1. Touch **Text Message** >  > **Delete All**.
2. Touch **Yes**.

## Use the Camera

### Take a Picture

1. Press the **Camera** key.
2. Press the **Camera** key halfway to focus on the object. A green box appears on the screen. Your nüvifone focuses on the object inside of the box.
3. Press and hold the **Camera** key until you hear the camera click. The picture is saved.

### Add Location Information to a Picture

If your nüvifone is receiving GPS signals when you take a picture, the current GPS location can be assigned to the picture. When you view the picture, you can also navigate to the location, display the location on the map, or save the location as a Favorite.

1. Press the **Camera** key.
2. Touch  > **Accept**, if necessary.
3. Follow the steps to take a picture.

When you view the picture, touch  to navigate to the location, to view the location on the map, or to save the location as a favorite.

### View a Picture

1. Press the **Camera** key.
2. Touch .
3. Select a picture.

Touch the arrows to view additional pictures.

### View a Slideshow

1. Press the **Camera** key.
2. Touch .
3. Touch  > **Slideshow**, or touch a picture, and then touch  > **Slideshow**.

## Set Your Wallpaper

1. Press the **Camera** key.
2. Touch .
3. Select a picture.
4. Touch  > **Set as Wallpaper**.
5. Select from the options below to edit the picture.
  - Touch and drag to move the picture.
  - Touch  and  to adjust the zoom level.
  - Touch  to rotate the picture.
6. Touch **Set Portrait**.
7. Repeat the steps to set up the wallpaper for Landscape mode, and touch **Set Landscape**.

The wallpaper image appears when the nūvifone is locked.

## Share a Picture

1. Press the **Camera** key.
2. Touch .
3. Select a picture.
4. Touch **Share**.

Your nūvifone creates an e-mail message with the picture included as an attachment.

## Navigate to a Picture

1. Press the **Camera** key.
2. Touch .
3. Select a picture.
4. Touch .
5. Touch  > **Go!**

## Use the Music Player

The music player supports MP3 files. For more information on transferring music to your nüvifone, see [page 59](#).

### Play a Song

1. From the Home screen, touch **Music Player**.
2. Touch .
3. Select a category.
4. Select an option:
  - Select a song or playlist. The selected song or playlist begins playing.
  - Touch  > **All Songs**. All the songs in the selected category are added to the current playlist.

### Create a Playlist

1. From the Home screen, touch **Music Player**.
2. Touch .
3. Touch **Playlists > New Playlist**.
4. Select a category.
5. Select songs to add to the playlist, or touch  > **Select All Songs** to add all songs.
6. Touch **OK**. The playlist is saved with a generic name (for example, "Playlist 1").

Playlists are saved as .m3u files on the nüvifone.

### Play a Playlist

1. From the Home screen, touch **Music Player**.
2. Touch .
3. Touch **Playlists**.
4. Select a playlist.
5. Select a play mode, if necessary:

- —play the songs in the playlist in random order (shuffle).
  - —repeat the playlist after all the songs have played.
6. Select a song to begin playing the playlist.

## Save the Current Playlist

1. From the Music Player, touch the playlist display.

*Playlist display*



2. Touch  > **Save**.
3. Enter a name, and touch **Done**.

## Edit a Playlist

1. From the Home screen, touch **Music Player**.
2. Touch .
3. Touch **Playlists**, and select a playlist.
4. Touch .
5. Select an option:
  - **Rename**
  - **Remove Playlist**
  - **Add Songs**
  - **Remove Songs**

## Browse the Web

### Enter a URL

1. From the Home screen, touch **Web Browser**.
2. Touch .
3. Enter a URL, and touch **Done**.

### Use the Browser

Use the following icons when browsing the Internet.

—zoom in on the center of the screen.

—zoom out from the center of the screen.

—return to the Home screen.

—refresh the current Web page.

—stop loading the Web page.

—enter a URL.

—return to the previous Web page in your history.

### Tips for Browsing the Web

- Touch and drag the screen to scroll a Web page.
- Touch links, text-entry boxes, and other interactive items to activate them.
- Touch  to view the following options:
  - **Bookmarks**—display a list of bookmarks.
  - **E-mail To**—send the URL to an e-mail recipient.
  - **History**—display a list of Web sites you have visited.
  - **Forward**—advance to the next Web page in your History.

## Set Your Browser Home Page

1. From the Home screen, touch **Settings > Applications > Browser**.
2. Touch the button under **Home Page**.
3. Enter a URL, and touch **Done**

## Save Bookmarks

1. Navigate to the Web page you want to save.
2. Touch  > **Bookmarks > Add Current Page**.

## Clear Your History

1. From the Home screen, touch **Settings > Applications > Browser**.
2. Touch the button under **History**.
3. Touch **Yes**.

## Use E-Mail

Your nüvifone can automatically configure account information for some e-mail accounts.

If additional information is required, your nüvifone prompts you to enter the required information. Account information is available from your e-mail account provider.

### Set Up E-Mail

1. From the Home screen, touch **E-mail**.
2. Touch **Add Account**.
3. Enter the e-mail address, and touch **Done**.
4. Enter the e-mail username (if necessary), and touch **Done**.
5. Enter the e-mail password, and touch **Done**.

6. If prompted, follow the prompts to enter e-mail account information from your e-mail account provider.
7. If necessary, touch **Mail Settings** or **SMTP Settings**, and enter the e-mail account information.
8. Touch **Test Settings** to test the account settings.
9. Touch **Save** to save the account settings.

### Send an E-Mail Message

1. From the Home screen, touch **E-mail**.
2. Touch **Compose**.
3. If necessary, touch **From:** to select the e-mail account from which you want to send the e-mail message. If you do not select an e-mail account, the e-mail message will be sent from the default e-mail account.
4. Touch **To:** to enter recipient information.

To enter additional recipients, including carbon (cc) and blind carbon (bcc) copies, select one or more of the following options:

- Touch **To:** > **Add To:** to enter another recipient.
  - Touch **To:** > **Add Cc:** to enter carbon copy recipients.
  - Touch **To:** >  > **Add Bcc:** to enter blind carbon copy recipients.
5. Touch the corresponding boxes to enter a subject and to add an attachment.
  6. Touch **Message** to enter message text, and touch **Done**.
  7. To include your current location information in the message, touch the icon in the lower-right corner.
    - —Location information will be included.
    - —Location information will not be included.
  8. Touch **Send**.

## Check E-Mail Messages

When you receive a new e-mail message, a number indicating the number of unread messages appears next to the e-mail icon on the Home screen.

1. From the Home screen, touch **E-mail**.
2. Touch  > **Check E-mail**.
3. Select an e-mail message to view it.
4. Touch **Reply** or **Reply All** to write a response. Touch **Forward** to send the e-mail message to another recipient.

## Set an Interval to Check E-Mail Messages

You can have your nūvifone automatically check for new e-mail messages at intervals.

1. From the Home screen, touch **Settings**.
2. Touch **Applications > E-mail**.
3. Select an e-mail account.
4. Touch **Edit Account Settings**.
5. Touch **Mail Settings**.
6. Touch the button below **Check Interval**.
7. Select an interval, and touch **OK**.

## Delete E-Mail Messages

1. From the Home screen, touch **E-mail**.
2. Touch  > **Delete Messages**.
3. Select the e-mail message you want to delete, or touch  > **Select All**.
4. Touch **Delete > Yes**.

## Use E-Mail Options

### Assign Options to Composed Messages

From the e-mail composition page, touch  for the following options:

- **Set Importance**—assign an importance of Low, Normal, or High to the e-mail message.
- **Save to Drafts**—save the current message to your Drafts folder without sending it.

- **Send Later**—keep the message in the Outbox until the next time the nūvifone is scheduled to check for e-mail.

### Change E-Mail Accounts

1. From the Home screen, touch **E-mail**.
2. Touch  > **Change Folder**.
3. Touch **Change Account**.
4. Select an account, or touch **Add Account** to add an e-mail account.

### Access Your Drafts Folder

1. From the Home screen, touch **E-mail**.
2. Touch  > **Change Folder**.
3. Touch **Drafts**.

### Access Other Folders Within an E-Mail Account

1. From the Home screen, touch **E-mail**.
2. Touch  > **Change Folder**.
3. Select a folder to view the contents.

### Search for an E-Mail Message

1. From the Home screen, touch **E-mail**.
2. Touch  > **Search Current Folder**.
3. Enter the subject or sender of the e-mail message for which you are searching.
4. Touch **Done**.

## Set Your Default E-Mail Account

1. From the Home screen, touch **Settings > Applications > E-mail**.
2. Touch  > **Default Account**.
3. Select an e-mail account.
4. Touch **OK**.

## Edit E-Mail Account Settings

1. From the Home screen, touch **Settings > Applications > E-mail**.
2. Select an e-mail account.
3. Touch **Edit Account Settings**.
4. Touch **Mail Settings** or **SMTP Settings** to change e-mail account details.

## Delete an E-Mail Account

1. From the Home screen, touch **Settings > Applications > E-mail**.
2. Select an e-mail account.
3. Touch  > **Delete Account**.
4. Touch **Yes**.

## Use Ciao!™

A data connection is required for this feature.

Ciao! periodically sends your location to our partner networks and downloads the most recent location of your friends. This application only submits your location when you tell it to, unless you enable automatic updates. Ciao! is not available in all areas.

**NOTE:** Use caution when sharing your location information with others.

### Register with Ciao!

Before you join Ciao! for the first time, you must register your device.

1. From the Home screen, touch **Ciao!**.
2. Read and accept the on-screen messages.

3. Touch **Register**. The Web browser launches.
4. Follow the steps to register your nūvifone. After registering, you receive an SMS/text message for verification.
5. Open the SMS/text message, and click the link to complete the verification process.

### Join Ciao!

After you register your device, you can join Ciao!.

1. From the Home screen, touch **Ciao!**.
2. Read and accept the registration information.
3. Select a location update, **Manual** or **Automatic**.
4. Enter a display name, and touch **Done**.
5. Touch **Complete**. Your location is updated and sent to your friends.

## Invite a Friend

1. From the Home screen, touch **Ciao!** > **Invite**.
2. Select an option to enter a phone number.
3. Touch the button under **Friend's Country**, and select a country.
4. Touch **Send Invitation**.
5. Select the network your friend is using. If your friend is using Ciao!, you can select any network in the list. Touch **OK**.

## Accept an Invitation

When you receive an invitation, a message appears on the screen.

1. Touch **OK** or **Yes**.
2. Select the invitation in your list of friends.
3. Touch **Accept**.
4. Touch **Yes** to allow the sender to view your location. The sender's location information appears.

5. Touch **Go!** to create a route to the sender's location, or touch **Map** to view the sender's location on the map.

After you accept an invitation from a friend, you become a “trusted” friend on your friend's list, and you can view location information for each other.

## View Trusted Friends

If your list of friends shows the distance to the friend, that friend is “trusted.” The friend has accepted an invitation from you, or you have accepted an invitation from the friend.

1. From the Home screen, touch **Ciao!**.
2. Touch a friend in the list. The location information for the friend appears, including the amount of time since the last location information update.

3. Touch **Go!** to create a route to the friend, or touch **Map** to view the friend's location on the map.

### View Invited Friends

If your friend is “invited,” you have invited the friend, but he or she has not accepted or declined the invitation.

1. From the Home screen, touch **Ciao!**.
2. Select an Invited friend in the list.
3. To remove the invitation, touch **Remove Invitation**.

### View Pending Friends

If your friend is “pending,” the friend has invited you, but you have not accepted or declined the invitation.

1. From the Home screen, touch **Ciao!**.
2. Select a Pending friend in the list.
3. Touch **Accept** or **Decline**.

## Remove a Friend

You can only remove trusted friends or invited friends.

1. From the Home screen, touch **Ciao!** >  > **Remove**.
2. Select the friends you want to remove, or touch  > **Select All**.
3. Touch **Remove**.
4. Touch **Yes**.

## Hide/Show Your Location

1. From the Home screen, touch **Ciao!** >  > **Hide**. Your current location is hidden from your friends.
2. To stop hiding, touch **Ciao!** >  > **Stop Hiding**.

## View My Details

1. From the Home screen, touch **Ciao!** > **My Details**.
2. To update your current location information, touch **Send Update**.
3. To change your status message, touch **Change Status**, and enter a new status message.
4. Touch  for the following options:
  - **Change Name**—change your display name.
  - **Change Updates**—touch **Auto** to update your location information automatically at regular intervals. Touch **Manual** to update your position only when you touch **Send Update**.

## View Ciao! Networks

1. From the Home screen, touch **Ciao!** >  > **Privacy**.
2. Touch  > **Networks**.
3. Touch a hyperlink to view a network Web site in the Web browser.

## Disable Ciao!

1. From the Home screen, touch **Ciao!** >  > **Privacy**.
2. Touch  > **Disable Ciao!**. All the Ciao! information stored on your device is removed. You no longer send any position updates.

To enable Ciao!, you must join Ciao! again. If you join Ciao! again, you do not need to register your device again. For more information, see [page 49](#).

## View the Weather Forecast

This service is available as a paid subscription. A data connection is required for this feature.

Your nūvifone provides current local weather conditions and a six-day forecast.

Weather information is automatically updated periodically.

1. From the Home screen, touch **Weather**.
2. To view a detailed forecast, select a day.



**NOTE:** Weather information is not available in all areas.

## View a Weather Forecast for Another Location

1. From the Home screen, touch **Weather**.
2. Touch  > **Weather Near**.
3. Select an option.

## Update Weather Manually

1. From the Home screen, touch **Weather**.
2. Touch  > **Update Weather**.

## Use the Calendar

Use the calendar to schedule appointments, meetings, and other events. You can also reminders for your appointments. If you use Outlook® personal information manager on your computer, you can synchronize appointments between your nūvifone and your computer.

### View the Calendar

1. From the Home screen, touch **Calendar**. The current month appears, with the current date circled in red.
2. Touch  or  to change the month.
3. Touch **Today** to return to the current day.
4. Touch **Agenda** to view your upcoming appointments.
5. Touch **Month** to return to the calendar view.

### Schedule an Appointment

1. From the Home screen, touch **Calendar**.
2. Touch  or  to change the month.
3. Select the date on the calendar, and touch **New**.
4. Touch **Subject**, and enter a subject.
5. Touch **Location**, and select an option.
6. Select a start time and an end time.
7. Touch **Reminder**, and select a time.
8. Select how often you want the appointment to recur:

- Touch **Repeat**, and select an option.
  - Touch **Repeat End**, and select the date on which you want the appointment to stop recurring.
9. Touch **Notes**, and enter a note.
  10. Touch **Save**.

## View an Appointment

1. From the Home screen, touch **Calendar**.
2. Touch  or  to change the month.
3. Select the date on the calendar, and touch **Agenda**.
4. Select an appointment to view details.
5. Touch the weather icon to view the weather forecast for the date of the appointment, if available.

6. If the appointment includes location information, touch  > **Go!** to create a route to the appointment.

## View Free Time

1. From the Home screen, touch **Calendar**.
2. Select the date on the calendar, and touch **Agenda**.
3. Touch  > **Show Free Time**.

## Delete an Appointment

1. From the Home screen, touch **Calendar**.
2. Select a date on the calendar, and touch **Agenda**.
3. Select an appointment.
4. Touch  > **Delete**.

## Connect to Other Devices

### About Bluetooth Technology

Bluetooth wireless technology establishes a wireless connection between devices, such as another phone with Bluetooth technology and the nüvifone. To pair and connect, both devices must be turned on and be within 10 meters of each other.

### Activate Bluetooth Technology

1. From the Home screen, touch **Settings > System > Bluetooth**.
2. Touch **Bluetooth Off**.
3. Touch **On > OK**.

### Make Your nüvifone Discoverable

1. From the Home screen, touch **Settings > System > Bluetooth**.
2. Touch  **> Discoverable**.
3. Touch **On > OK**.

### Pair with a Device

The first time you use two devices together, you must “pair” them by establishing a relationship using a PIN/passkey.

1. Verify that the device you want to pair with is in pairing mode.
2. On the nüvifone Home screen, touch **Settings > System > Bluetooth**.
3. Touch **Add Device**. An hourglass icon appears, indicating that the nüvifone is scanning for devices. If you do not see an hourglass icon, touch **Scan** to scan.
4. Select the device you want to add, and touch **Yes**.

5. Enter the passkey of the device, and touch **OK**.

**NOTE:** The passkey for the nūvifone is **1234**.

After the initial pairing, the two devices can connect automatically each time you turn them on.

### Connect to a Paired Device

You must pair with a device before you are able to connect to it.

1. From the Home screen, touch **Settings > System > Bluetooth**.
2. Select a paired device, and touch **Connect Device**.

### Remove a Paired Device

1. From the Home screen, touch **Settings > System > Bluetooth**.
2. Select a paired device, and touch **Remove Pairing**.

### Change Your Friendly Name

A friendly name identifies your nūvifone on devices with Bluetooth technology.

1. From the Home screen, touch **Settings > System > Bluetooth**.
2. Touch  > **Friendly Name**.
3. Enter a friendly name, and touch **Done**.

### Deactivate Bluetooth Technology

1. From the Home screen, touch **Settings > System > Bluetooth**.
2. Touch **Bluetooth On**.
3. Touch **Off > OK**.

## Synchronize Your nüvifone

By synchronizing your nüvifone with your computer, you can transfer your Microsoft® Outlook® contacts and calendar events to your nüvifone contact list and calendar.

You must download and install nüvifone Sync Agent on your computer before synchronizing with your computer.

### Download and Install nüvifone Sync Agent

Go to [www.garminasus.com/support](http://www.garminasus.com/support) to learn how to download nüvifone Sync Agent.

## Synchronize With Your Computer

1. Verify that you have downloaded and installed nüvifone Sync Agent software on your computer.
2. Connect the nüvifone to your computer using a mini-USB cable.
3. Touch **No** when asked if you want to enter mass storage mode.
4. Touch **Tools** > **Synchronize**.

## Transfer Files

You can transfer files, such as MP3s and JPEGs, to your nüvifone.

1. If necessary, insert a microSD card in the memory card slot on the side of the nüvifone.
2. Connect the nüvifone (not the cradle) to your computer using a mini-USB cable.
3. Touch **Yes** to change to mass storage mode.

Two additional drives (volumes) appear in the list of drives on your computer. One is the available storage in the internal memory of the nüvifone. The other is the memory card inserted into the nüvifone.

4. Double-click the My Computer icon (Windows® computers) or the mounted-volume icon (Mac® computers) on your computer.
5. Copy and paste the files you want to transfer.

## Set Up a Wi-Fi Connection

### Turn On Wi-Fi

1. From the Home screen, touch **Settings > System > Wi-Fi**.
2. Touch **Wi-Fi Off**.
3. Touch **On > OK**.

### Connect to a Network

1. From the Home screen, touch **Settings > System > Wi-Fi**.
2. Select a network.  indicates networks that require an encryption key.
3. Enter an encryption key, if necessary, and touch **Done**.

## Add a Network

If the network you want to connect to is not listed, you can manually add it to your list.

1. From the Home screen, touch **Settings > System > Wi-Fi**.
2. Touch  > **Add**.
3. Touch the button under **Network Name**, enter a name or SSID, and touch **Done**.
4. Touch the button under **Security**, select a security type, and touch **OK**.
5. Enter a password and select a WEP Key Type, if necessary.
6. Touch **OK**.

## Ignore a Network

1. From the Home screen, touch **Settings > System > Wi-Fi**.
2. Select a network.
3. Touch  > **Forget this network**.
4. Touch **Yes**. The network is removed from the list of Known Networks.

## Turn Off Wi-Fi

1. From the Home screen, touch **Settings > System > Wi-Fi**.
2. Touch **Wi-Fi On**.
3. Touch **Off > OK**.

## Use the Tools

### Use Where Am I?

The Where Am I? page contains information about your current location, including the nearest hospitals, police stations, and fuel.

1. From the Home screen, touch **Tools > Where Am I?**
2. Touch an icon to view the nearest locations in that category.
3. Touch  > **Satellite Info** to view GPS signal information.
4. Touch  > **Save Location** to save your current location.

### Use the Calculator

From the Home screen, touch **Tools > Calculator** to use the calculator.

## Use the Clock

### View Different Time Zones

The nüvifone automatically detects your time zone. However, you can view the current time in a different time zone, if needed.

**NOTE:** Viewing the time zone of a different city does not change the time displayed on your nüvifone.

1. From the Home screen, touch **Tools > Clock**.
2. Touch a city.
3. Enter all or part of a city name, and touch **Done**.
4. Select the city from the list, and touch **Select**.

To change the time zone displayed on your nüvifone, see [page 69](#).

## Set an Alarm

1. From the Home screen, touch **Tools > Clock > Alarm**.
2. Touch **Add Alarm**.
3. Touch **Alarm Time**, and select an alarm time.
4. Touch **Ringer**, and select a ringer, if necessary.
5. Touch **Repeat**, and select how often you want the alarm to repeat. To set the alarm for one time only, touch **Never**.
6. Touch **Repeat End**, and select an end date, if necessary.
7. Touch **Save**.
8. When the alarm sounds, touch **Snooze** to hear the alarm again in five minutes, or touch **Dismiss**.

## Disable an Alarm

Touch an alarm in the list, and touch **Disabled**.

## Delete an Alarm

Touch an alarm in the list, and touch  > **Delete > Yes**.

## View the World Map

The map displays areas of daylight and night across the world.

From the Home screen, touch **Tools > Clock > World Map**.

## Use the Stop Watch

1. From the Home screen, touch **Tools > Clock**.
2. Touch **Stop Watch**.
3. Touch **Start** to start the timer.
4. Touch **Lap/Split** to record the lap time and the split time.
5. Touch **Stop** to stop the timer.
6. Touch the Lap and Split times to view details.
7. Touch **Reset** to reset the lap time and the split time.

## Check Flight Status

A data connection is required for this feature.

1. From the Home screen, touch **Tools > Flight Status**. A list of airports near your current location appears. Major airports are listed first, and all other airports are sorted by distance.
2. To view flight information from an airport near another city, touch  **> New City**, enter all or part of the city name, and select a city.
3. Select an airport.
4. Select an option:
  - —touch **View Map** to view the airport on the map, **Save** to save it as a favorite, **Send Location** to send the location, or **Go!** to create a route to the airport.
  - **Check Flight Number**—enter a flight number, and touch **OK**. Select a flight.
  - **Search Arrivals**—select an airline, and select a flight.
  - **Search Departures**—touch **By Destination City**, **By Airport Code**, or **All Departures**. Enter the appropriate data, and select a flight.

5. If your flight has multiple connections, touch  > **Next Leg**, and select the next flight.

**NOTE:** Flight Status is not available in all areas.

## Use the Converter

### Convert Units

1. From the Home screen, touch **Tools** > **Converter**.
2. Touch the button next to **Convert**. Select the type of items to be converted, and touch **OK**.
3. Touch a unit of measurement, select the unit type, and touch **OK**.
4. Touch a number, enter the number of units to be converted, and touch **OK**.
5. To clear the number of units, touch  > **Clear**.

### Automatically Update the Currency Rates

This service is available as a paid subscription. A data connection is required for this feature.

1. From the Home screen, touch **Tools** > **Converter**.
2. Touch the button next to **Convert**.
3. Touch **Currency** > **OK**.
4. Touch **Update**. The nūvifone downloads the current conversion rates.

**NOTE:** Automatic currency rate updates are not available in all areas.

### Manually Update Conversion Rates

1. From the Home screen, touch **Tools** > **Converter**.
2. Touch the button next to **Convert**.
3. Touch **Currency** > **OK**.
4. Touch  > **Custom**.

5. Touch the currency button at the top of the screen, select a currency, and touch **OK**.
6. Touch a conversion rate.
7. Enter a new conversion rate, and touch **OK**.
8. Touch **Save**.

## Use Notes

### Write a Note

1. From the Home screen, touch **Tools > Notes > New**.
2. Enter the note text, and touch **Done**.

### Send a Note

1. From the Home screen, touch **Tools > Notes**.
2. Select a note in the list.
3. Touch  > **Send**.
4. Touch **SMS** or **E-mail**.
5. Enter the required information, and touch **Send**.

## Work with Checklists

### Create a Checklist

1. From the Home screen, touch **Tools > Checklist > New Checklist**.
2. Enter a new checklist name, touch **Done**.

### Edit a Checklist

1. From the Home screen, touch **Tools > Checklist**.
2. Select a checklist.
3. Touch **Add/Remove Items**.
4. Edit the checklist:
  - Touch an item to check or uncheck it.
  - Touch **New Item**, enter the new item, and touch **Done**.

### Use a Checklist

1. From the Home screen, touch **Tools > Checklist**.
2. Select a checklist.
3. Select items in the checklist.
4. Touch .

### Remove Items from a Checklist

1. From the Home screen, touch **Tools > Checklist**.
2. Select a checklist.
3. Touch **Add/Remove Items**.
4. Touch  > **Delete Items**.
5. Select the items you want to remove.
6. Touch **Delete > Yes**.

### Add Items From a Different Checklist

1. From the Home screen, touch **Tools > Checklist**.
2. Select a checklist.
3. Touch  > **Copy List Items**.
4. Select the list you want to copy from.
5. Select the items you want to copy.
6. Touch **Copy**.

# Customize Your nüvifone

## Change General Settings

1. From the Home screen, touch **Settings > System > General**.
2. Change the following settings:
  - **Airplane Mode**—touch **On** to deactivate the telephone, network, and Bluetooth technology features. You cannot send or receive new e-mail or SMS/text messages. You can continue using other features of the nüvifone, and you can manually activate Wi-Fi and Bluetooth technology, if needed.
  - **Distance Units**—touch **Miles** or **Kilometers**.
  - **Temperature Units**—touch **Fahrenheit (°F)** or **Celsius (°C)**.

- **Safe Mode**—touch **On** to activate safe mode, which prevents you from searching for locations when your vehicle is in motion.
- **GPS Simulator**—touch **On** to simulate GPS functions, including simulating routes, when you are not receiving GPS signals.
- **Connected Services Feedback**

## Change Security Settings

### Change Device Security Settings

Use these settings to require a PIN to unlock the nüvifone.

1. From the Home screen, touch **Settings > System > Security > Device**.
2. Change the following settings:

- **Locking**—prevent the nüvifone from being used unless you enter a PIN. Enter a PIN, and touch **OK**.
- **PIN**—touch **Change** to change your PIN.

If you forget your PIN, contact Product Support at [www.garminasus.com/support](http://www.garminasus.com/support).

## Change SIM Card Security Settings

Use these settings to require a PIN to enable all non-emergency features of the nüvifone. You can still use the nüvifone to contact emergency services without a PIN. You can remove the SIM card to use the non-telephone features of the nüvifone.

1. From the Home screen, touch **Settings > System > Security > SIM Card**.
2. Change the following settings:
  - **SIM PIN Protection**—activate SIM PIN protection.
  - **PIN2**—touch **Change** to change your PIN.

If you forget your SIM PIN, contact your mobile service carrier to obtain a Personal Unblocking Key (PUK).

## Change Language Settings

1. From the Home screen, touch **Settings > System > Language**.
2. Change the following settings:
  - **Voice**—select a language to use for all voice prompts and messages. Touch **Preview** to hear a sample of the voice.

- **Text**—change all on-screen text to the selected language. Changing the text language does not change the language of map data, such as street names, or user-entered data.
- **Keyboard**—select a language for the default keyboard.

## Change Date/Time Settings

1. From the Home screen, touch **Settings > System > Date/Time**.
2. Change the following settings:
  - **Date Format**
  - **Time Format**
  - **Time Zone Selection**

## Change Audio Settings

### Turn On Vibrate

1. From the Home screen, touch **Settings > Audio > Vibrate**.
2. Select an option. Touch **When Muted** to set the nüvifone to only vibrate when the volume has been muted.
3. Touch **OK**.

If vibrate is on, the  vibrate icon appears when the nüvifone screen is locked.

### Change Sound Settings

1. From the Home screen, touch **Settings > Audio > Sounds**.
2. Touch a button to set a sound for a notification type.
3. Select a sound category.
4. Touch **Preview** to listen to the selected sound.
5. Touch **OK**.

## Change Your Ringtone

1. From the Home screen, touch **Settings > Audio > Sounds**.
2. Touch the button under **Phone**.
3. Touch **Ringtones**.
4. Select a ringtone.
5. Touch **Preview** to listen to the selected sound.
6. Touch **OK**.

## Change Mixer Settings

1. From the Home screen, touch **Settings > Audio > Mixer**.
2. Change the following settings:
  - **Navigation**—change the volume level of navigation prompts.
  - **Music**—change the volume of MP3 playback.

## Change Proximity Points Settings

Proximity points include custom POIs and safety camera databases.

1. From the Home screen, touch **Settings > Audio > Proximity Points**.
2. Change the following settings:
  - **Proximity Alerts**—select to hear an audio alert when you approach proximity points.
  - **TourGuide**—select to automatically play the audio when you approach a TourGuide point.

## Change Phone Settings

1. From the Home screen, touch **Settings > Phone**.
2. Change the following settings:
  - **Data Connection**—select a data connection activation preference. Enter this information as provided by your carrier.
  - **Call Forward**
  - **Call Barring**—touch to block calls.
  - **Call Waiting**
  - **Send My Caller ID**—select a preference for sending caller ID information when you make phone calls. Touch **Set by Network** to send caller ID information according to the settings of your network provider.
  - **Display Caller's ID**
  - **My Number**
  - **Voice Mail Number**

- **Network Selection**
- **TTY**—touch **On** to enable TTY (teletypewriter) mode.

## Change Navigation Settings

### Change Navigation Settings Based on Usage Mode

You can use different navigation settings for Automobile and Pedestrian usage mode.

1. From the Home screen, touch **Settings > Navigation**.
2. Touch **Automobile** or **Pedestrian**.
3. Change the following settings:

- **Route Preference**—select a preference for calculating routes.
- **Avoidances**—select the types of roads and maneuvers you want the nüvifone to attempt to avoid when creating routes. (Only available in Automobile settings.)
- **Map Detail**—select the level of detail you want the map to display. More detail may result in slower map drawing.
- **Map View**—select the perspective of the Map page. Track Up displays the map in two dimensions (2D) with your direction of travel at the top. North Up displays the map in 2D with North at the top. 3D displays the map in 3D, Track Up orientation (default).
- **Vehicle**—select a vehicle to represent your position on the map. Go to [www.garmingarage.com](http://www.garmingarage.com) for more vehicles.
- **Trip Log**—touch **Show** to display the trip log on the map.

### Download Safety Cameras

This service is available as a paid subscription. A data connection is required for this feature. Data is not available for all areas.

1. From the Home screen, touch **Settings > Navigation > Download Safety Cams**.
2. Select a set of safety cameras, and touch **Download**.

## Change Application Settings

### Change E-Mail Mail Settings

1. From the Home screen, touch **Settings > Applications > E-mail**.
2. Select an account.
3. To validate SSL certificates prior to sending or receiving e-mail, select the **Validate SSL Certificates** check box.
4. Touch **Edit Account Settings**.
5. Touch **Mail Settings**.
6. Change the following settings:
  - **User name**
  - **Password**
  - **Mail Server**
  - **Mail Port**
  - **Encryption**
  - **Mail Protocol**
  - **Check Interval**
  - **Base Folder**

### Change E-Mail SMTP Settings

1. From the Home screen, touch **Settings > Applications > E-mail**.
2. Select an account.
3. Touch **Edit Account Settings**.
4. Touch **SMTP Settings**.
5. Change the following settings:
  - **E-mail Address**—edit the e-mail address.
  - **Display Name**—enter a display name. This name does not have to match your e-mail address.
  - **SMTP Server, SMTP Port, SMTP Username, SMTP Password, SMTP Authentication, SMTP Encryption**—enter this information as provided by your e-mail account provider.

- **Reply To**—enter a name that will appear when a recipient receives an e-mail message from you.
- **Use Signature**—touch **Yes** to include a signature in messages sent from the selected e-mail account.
- **Signature**—enter an e-mail signature.

## Change Browser Settings

1. From the Home screen, touch **Settings > Applications > Browser**.
2. Change the following settings:
  - **Home Page**—enter a URL to set your home page.
  - **JavaScript**—touch **On** to allow JavaScript.
  - **Accept Cookies**—touch **Yes** to accept cookies.

- **Cookies**—touch **Clear** to clear cookies.
- **History**—touch **Clear** to clear the browser history.
- **Cache**—touch **Clear** to clear the browser cache.

## Change the Main Menu Order

You can customize the order of the scrolling icons on the Home screen.

1. From the Home screen, touch **Settings > Applications > Main Menu Order**.
2. Touch a menu item.
3. Touch the position in the list to which you want to move the item. The item is inserted before the selected item.
4. Touch  > **Restore** to restore the original main menu order.

## Change Display Settings

1. From the Home screen, touch **Settings > Display**.

2. Change the following settings:

- **Brightness**—change the brightness of the screen. Decreasing the brightness can save battery power.
- **Color Mode**—touch **Daytime** for a light background, **Nighttime** for a dark background, or **Auto** to automatically switch between the two based on the sunrise time and the sunset time for your current location.
- **Auto Lock**—select a time. The screen automatically locks if the nüvifone is inactive for the selected length of time.

- **Screen Shot**—activate to take a picture of the nüvifone screen. Touch the **Camera** key to take a photo of a screen. Screen shots are saved in the Garmin\ Screenshot directory on the nüvifone.

## Restore Settings

### Restore Individual Settings

1. From the Home screen, touch **Settings**.
2. Select the setting you want to restore.
3. Touch  > **Restore**.

### Restore All Settings

1. From the Home screen, touch **Settings**.
2. Touch  > **Restore**.

## Clear All User Data

---



**NOTICE:** This process restores all settings to factory defaults and removes all user data. Any items that you have saved on your nüvifone, such as Favorites, photos, and contacts, are erased. Map data is not erased. Deleted information cannot be recovered.

---

1. From the Home screen, touch **Settings**.
2. Touch  > **Master Clear**.

## Appendix

### Get Support

Go to [www.garminasus.com](http://www.garminasus.com) and click **Support** for in-country support information.

### Register Your Product

Register your product at [www.garminasus.com/support](http://www.garminasus.com/support) to help us better support you. Keep the original sales receipt, or a photocopy, in a safe place.

### View Software Information

1. From the Home screen, touch **Settings**.
2. Touch  > **About**.
3. Touch **Copyrights** to view a list of copyrights.

4. Touch a copyright to view more information.

### nüMaps Guarantee™

To receive one free map update (if available), register your nüvifone at [www.garminasus.com/support](http://www.garminasus.com/support) within 60 days of acquiring satellites and driving with your nüvifone. You are not eligible for the free map update if you register by phone or wait longer than 60 days after the first time you drive with your nüvifone.

### Additional Maps

You can purchase additional maps for your nüvifone. To see a list of maps that are compatible with your nüvifone, go to [www.garminasus.com/support](http://www.garminasus.com/support).

## Update the Software

Go to [www.garminasus.com/support](http://www.garminasus.com/support) to download the latest software update.

## Reset the nüvifone

If the nüvifone stops functioning, turn off the nüvifone, and then turn on the nüvifone.

## About GPS Satellite Signals

Your nüvifone must acquire GPS (Global Positioning System) satellite signals to navigate. The nüvifone automatically attempts to acquire satellite signals.

If you are indoors, near tall buildings or trees, or in a parking garage, your nüvifone might not acquire satellites. To acquire satellite signals more quickly, take your nüvifone outside,

to an area free from tall obstructions.

## About the Battery

The  battery icon in the status bar indicates the status of the internal battery. To increase the accuracy of the battery gauge, fully discharge the battery and then fully charge it; do not unplug the nüvifone until it is totally charged.

## Maximize the Battery Life

- Turn down the backlight from the Home screen at **Settings** > **Display**. Touch the button under **Brightness**.
- Lock your nüvifone if you are not using it. See [page 9](#) and [page 69](#) for more information.
- Do not leave your nüvifone in direct sunlight. Avoid prolonged exposure to excessive heat.

## Replace the Battery



**WARNING:** Only use the correct battery type. Using an incorrect battery may present a risk of explosion.

If you need to replace the battery in the nüvifone, use a lithium-ion battery. For more information on purchasing a replacement battery, go to [www.garminasus.com](http://www.garminasus.com).



**WARNING:** Do not use a sharp object to remove the battery. A sharp object may puncture the battery which may present a risk of fire, chemical burn, electrolyte leak, and/or injury.

Contact your local waste disposal department for information on properly disposing of the battery and device.


## Change the Fuse in the Vehicle Power Cable

**NOTE:** When replacing the fuse, do not lose any of the small pieces and make sure they are put back in the proper position.

If your device does not charge in your vehicle, you may need to replace the fuse located at the tip of the vehicle adapter.

1. Unscrew the end piece, and remove it.

2. Remove the fuse (glass and silver cylinder), and replace with a 1A fast blow fuse of the same size.
3. Ensure that the silver tip is located in the end piece. Screw on the end piece.

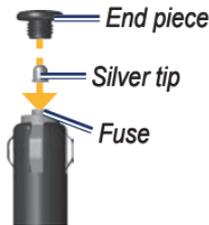

## Mount on Your Dashboard

Use the mounting disk to mount your device to the dashboard and comply with certain state and local regulations.

**NOTE:** The permanent mounting adhesive is extremely difficult to remove after it is installed.

1. Clean and dry the dashboard where you are placing the disk.
2. Remove the backing from the adhesive on the bottom of the disk.
3. Place the disk on the dashboard.
4. Remove the clear plastic cover from the top of the disk.
5. Place the suction cup mount on top of the disk. Flip the lever down (toward the disk).

## Remove the SIM Card

1. Press down firmly on the battery cover and slide it off the back of your nüvifone.
2. Remove the battery.
3. Gently push in the SIM card until it clicks.
4. Pull out the SIM card.

## Declaration of Conformity

Hereby, Garmin, declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. To view the full Declaration of Conformity, go to [www.garminasus.com/declaration-of-conformity](http://www.garminasus.com/declaration-of-conformity)

## Troubleshooting

Problem/Question	Solution/Answer
My nūvifone will not acquire satellites.	<ul style="list-style-type: none"> <li>• Ensure that the GPS simulator is turned off. From the Home screen, touch <b>Settings &gt; System &gt; General &gt; GPS Simulator &gt; Off</b>.</li> <li>• Ensure that you are receiving satellite signals. From the Home screen, touch <b>View Map</b>. Touch the vehicle icon. Touch  &gt; <b>Satellite Info</b>.</li> <li>• Verify that the GPS antenna is unobstructed. You must be outdoors or in a vehicle and have a clear view of the sky. Solid materials (except tinted glass), buildings, and dense trees can block satellite signals.</li> <li>• Ensure that the GPS has enough time to initialize. When the GPS is turned on for the first time, it may take a few minutes to initialize.</li> </ul>
My nūvifone will not turn on.	<ul style="list-style-type: none"> <li>• Charge the battery.</li> <li>• Replace the battery. See <a href="#">page 79</a> for more information.</li> </ul>

Problem/Question	Solution/Answer
I need to turn off the wireless features of my nūvifone (for example, for an airplane flight).	From the Home screen, touch <b>Settings &gt; System &gt; General &gt; Airplane Mode &gt; On</b> .
I am trying to charge my nūvifone, but I receive a message that battery charging was suspended.	The battery might have exceeded the maximum charging temperature. If the nūvifone is mounted, remove it from the mount and place it somewhere out of direct sunlight.

## Specifications

**Physical size (W × H × D):** 58.1 × 112 × 14.6 mm (2.29 × 4.41 × 0.57 in.)

**Weight:** 137 g (4.83 oz.)

**Display:** 3.5 in. diagonal, 272 × 480 pixels; WQVGA display with white backlight and touchscreen

**Case:** Not waterproof (IP51)

**Operating Temperature range:**  
from 5°F to 131°F (from -15°C to 55°C)

**Charging Temperature range:**  
from 32°F to 113°F (from 0°C to 45°C)

**Connector:** Mini-USB for power or computer, 2.5 mm audio for headphones

**Battery type:** User-replaceable 1200 mAh lithium-ion battery

**Battery life:** 4 hours talk time, 250 hours standby time, depending on usage and settings

**Charge time:** Approximately 3 hours

**Power input:** DC vehicle power using vehicle power cable, or DC input using mini-USB connector

**Usage:** 3 W max.

**GPS receiver:** High-sensitivity

**Acquisition times\*:**

Warm: <1 sec.

Cold: <38 sec.

Factory Reset: <45 sec.

\*Average acquisition times for a stationary receiver with a clear view of the sky.

**Frequency Band:** 3G  
850/1900/2100; 2G  
850/900/1800/1900

**Frequency Band for NA:** 3G

850/1900; 2G 850/1800/1900

**Other connectivity:** Wi-Fi,

Bluetooth 2.0+EDR; 802.11

b/g; mini USB 2.0

**Operating System:** Linux

**Camera/Photos:** 3.0 MP camera

**Data storage:** Internal memory; data stored indefinitely.

**Computer interface:** Plug-and-play  
USB mass storage

# Index

## Symbols

2D map view 72

3D map view 72

## A

accessories 7

acquire satellite signals  
11

additional maps 77

address 18

airplane mode 67

alarm clock

delete 62

disable 62

set 62

alerts

for proximity points  
70

anti-theft feature 68

appointment

delete 55

make 54

navigate to 55

save local event  
as 24

save movie time  
as 23

view 55

audio settings 69–70

avoid

edit custom

avoidances 72

road types 72

theft 68

traffic 33

## B

backlight

adjust to save battery  
78

brightness 75

battery

about 78

charge 7

install 6

maximize life 78

replace 79

status 7

Bluetooth technology  
56–57

brightness 75

browse the map 26, 27

browse the web 42–43

## C

calculator 61

calendar 54–55

call 12

a location 19

answering 14

barring 71

forwarding 71

muting 14

caller ID 71

call history 13

call options 14–15

call waiting 17, 71  
camera 38–39  
    screen shot 75  
Ciao! 49–53  
    accept invite 50  
    disable 52  
    hide location 51  
    invite 50  
    join 49  
    register 49  
    remove a friend 51  
    view invited friends  
        51  
    view networks 52  
    view pending friends  
        51  
    view trusted friends  
        50  
cities, find 23  
clock  
    change time zone 61  
    in status bar 5  
compass 30  
    calibrate 30

conference call 17  
    add a call 14, 17  
    disconnect a  
        participating  
        call 17  
    speak privately 17  
contacts  
    add 34  
    assign a location  
        to 35  
    assign a picture to 34  
    call 12  
    delete 35  
    edit 34  
    navigate to 20  
    set a ringtone for 16  
conversion tool 64  
    update currency  
        conversion rates  
        64  
coordinates 25  
cradle 10  
custom avoids 72  
custom POIs 70–71

**D**  
dashboard disk 80  
Declaration of  
    Conformity 80  
delete  
    alarm 62  
    all user data 76  
    appointment 55  
    call history 13  
    contact 35  
    e-mail 46  
    home location 21  
    items from checklist  
        66  
    recently-found 22  
    text message 37  
detour 30  
display settings 75

**E**

- e-mail 44–47
  - change mail settings 73
  - change SMTP settings 73–74
  - check new 45
  - delete 46
  - send 44–45
  - send blind carbon copy 45
  - send carbon copy 45
  - set importance 46
  - set interval to check 46
  - set up 44
- emergency assistance 68

**F**

- Favorites
  - locations 21
- files
  - transfer 58
- find locations. *See* search for locations

- flight status 63–64
- forward
  - calls 16
  - e-mail message 45
  - text message 37
- free map update 77
- fuse, change 79

**G**

- go home 20
- GPS
  - about GPS 78
  - acquire signal 78
  - simulate 67

**H**

- headphone jack 1
- hold a call 14
- home
  - phone number 20
  - set a location 20
- home location 20
  - edit 20

**Home screen 2**

- change menu order 74
- main icons 2
- scrolling icons 3

**I**

- import contacts 35
- incoming call 14
- Internet
  - browse 42
  - connection icon 4

**K**

- keyboard
  - language mode 69

**L**

- language settings 68
- lithium-ion battery
  - replace 79
- Local Search 21
- location messages 36
- Location page 19

lock

the nüvifone 9, 67

the screen 9

## M

make a phone call 12

map

2D 26

3D 26

additional 77

browse 26

rotate 26

settings 71–72

update 77

view 18

zoom in, zoom out

26

map detail 72

maximum speed, reset 29

microSD card

install 8

remove 8

mount

on dashboard 80

on windshield 10

movie times 23

add to calendar 23

mute

phone call 14

## N

navigation. *See* routes

settings 71–72

next turn page 28

notes 65

nüMaps Guarantee 77

## O

output, audio

headphone jack 1

## P

pair a mobile phone 56

pedestrian navigation

mode 31

phone 12–16

settings 71–72

photos 24–25

picture 38–39

PIN

Bluetooth 57

playlist 40–41

play music 40

Points of Interest (POIs)

view 19

proximity points 70–71

alerts 70

## R

recalculate route 27

recently found locations

22–23

register 77

reply

to an e-mail message

45

to text message 36

reset

maximum speed 29

nüvifone 78

trip computer 29

restore settings 76

ring settings 69

ringtone

set 15, 70

set for a contact 16

- rotate screen 8
- routes
  - add a stop 30
  - next turn 28
  - take a detour 30
  - turn list 28
  - view on map 28
- S**
- safe mode 67
- safety camera
  - download 72
- satellite signals 11
- save location to Favorites 21
- save your current location 61
- screen
  - brightness 75
  - color mode 75
  - Home 2
  - lock 9
  - orient 9
  - scroll 9
- screen shot 75
- scrolling icons 3
- search for locations
  - address 18
  - gas prices 25
  - navigate to a contact 20
  - photos 24–25
  - Point of Interest 19
  - recently found 22
  - spell name 22
- security settings 67–68
- settings 67–73
  - restore 76
- SIM card
  - import and export 35
  - install 6
  - remove 80
- slideshow 38
- software
  - update 78
  - view information 77
- sound settings 69
- speakerphone 14
- specifications 83
- speed limit 27
- status bar 4
- stop watch 63
- synchronize 58
- system settings 67
- T**
- text message 36–37
  - delete, all 37
  - delete, conversation 37
  - delete, single 37
- time settings 69
- time zone 69
- tools 61–65
- TourGuide 70
- traffic 32–33
- transfer files 58
- trip computer page 29
  - reset 29
  - reset maximum speed 29
  - reset trip 29
- troubleshooting 81–82
- turn list page 28

## U

upcoming events 23

update

map 77

update software 78

usage mode 31

user data, delete 76

## V

vibrate

turn on 69

voice mail 12

volume 1

## W

wallpaper 39

weather 53

web browser 42–43

save bookmarks 43

set the home page 43

settings 74

Where Am I? 61

White Pages listings 22

Wi-Fi

set up 59

world map 62

**For the latest free software updates (excluding map data)  
throughout the life of your nüvifone, visit [www.garminasus.com](http://www.garminasus.com).**

October 2009

Part Number 190-01118-00 Rev. B

Printed in China