
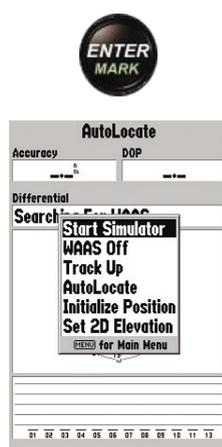
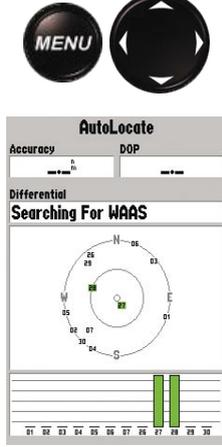


# GPSMAP 198C Quick Reference

## POWER ON SEQUENCE

## POWER OFF

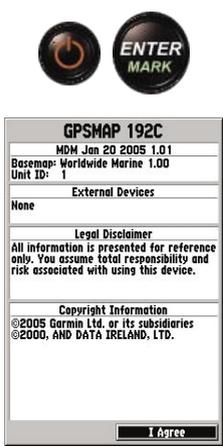


To Turn off the GPSMAP 198C:  
Press and hold the **POWER** key for approximately three seconds.


### To turn on the GPSMAP 198C:

1. Press and hold the **POWER** key.
2. Press **ENTER** to acknowledge the warning.
3. The **GPS Info** page displays while the GPSMAP 198C is acquiring satellite data.
4. You may start the **Simulator** by pressing **MENU** on the **GPS Info** page.

## PAGE SEQUENCE

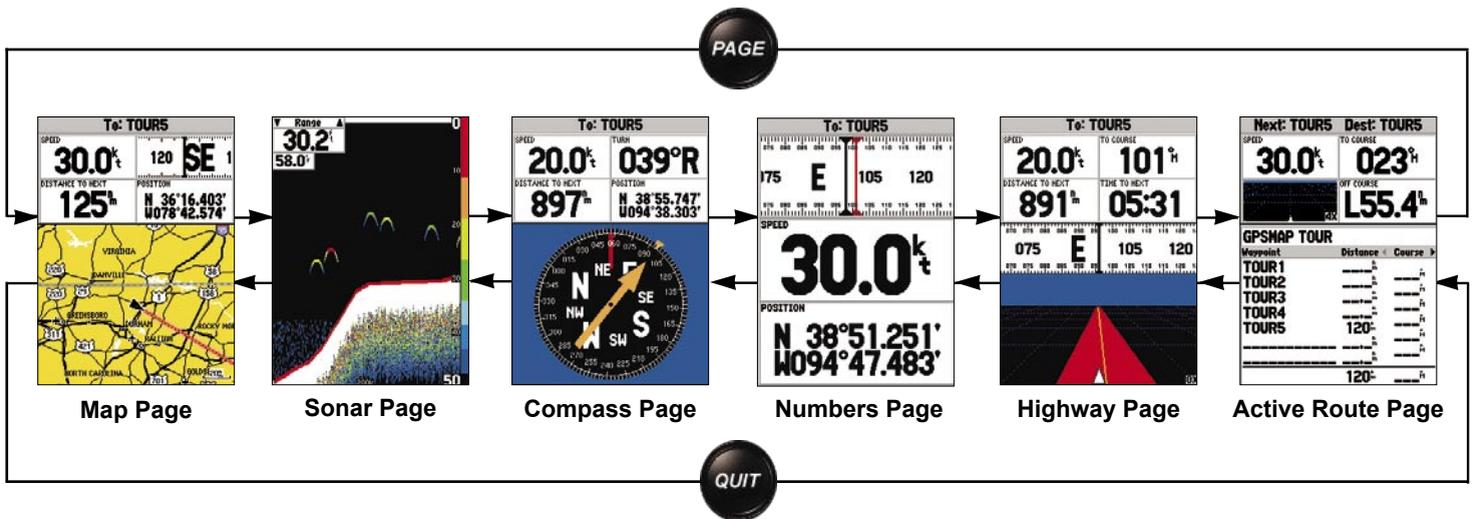


## PAGE OPTION MENUS

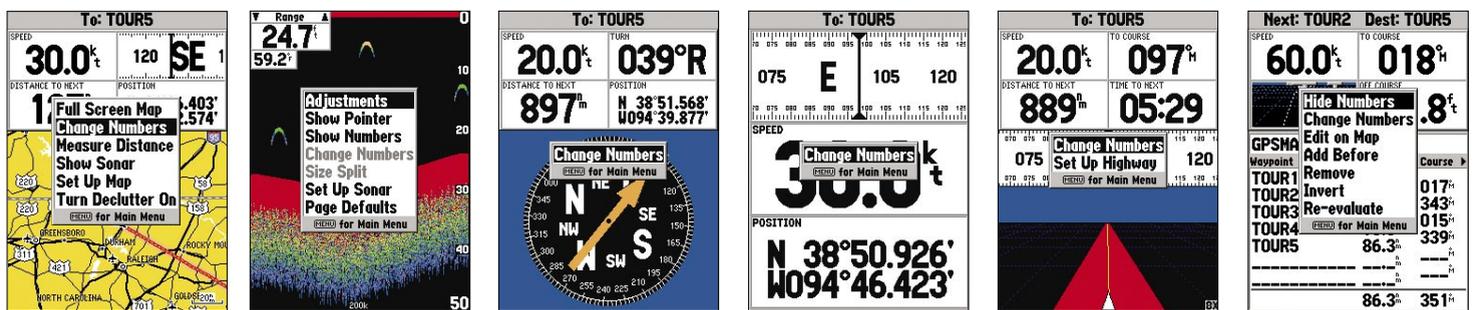

To display page options, press the **MENU** button once.


## PAGE DISPLAY SELECTION

## FIND FUNCTION

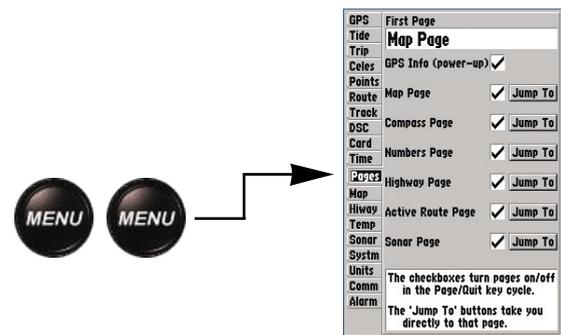

### To change the page display options:

1. Press **MENU** twice to display the Main Menu page, then highlight the **Pages** tab.
2. To activate/deactivate the Pages, highlight the check box and press **ENTER** to check or uncheck the box.
3. To go directly to a page, highlight the appropriate **Jump To**, and then press **ENTER**.

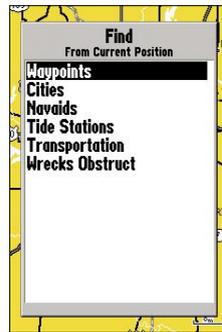


### To use the find options:

1. Press **FIND** to display the Find List.
2. Use the **ROCKER** to highlight the desired category, and then press **ENTER**.
3. Use the **ROCKER** to highlight an item, and then press **ENTER**.

## KEYPAD USAGE

	<b>POWER/BACKLIGHT</b> —turns the unit on and off and controls the screen backlighting.
	<b>PAGE</b> —scrolls the main pages in sequence and returns the display from a submenu page to a main page.
	<b>QUIT</b> —returns display to a previous page, restores a data field's previous value, and exits out of menus.
	<b>MENU</b> —displays available options for the current page. Press twice to display the Main Menu.
	<b>ENTER</b> —activates highlighted fields and confirms menu options and data entry. <b>MARK</b> —captures your present position and displays the Mark Position window when pressed and held for 2 seconds.
	<b>NAV</b> —activates the navigation options, allowing you to navigate using a waypoint, route, or track.
	<b>MOB (Man OverBoard)</b> —marks your present position and instantly sets a return course to that point.
	<b>OUT</b> —increases the zoom range of the moving Map and Highway pages.
	<b>IN</b> —decreases the zoom range of the moving Map and Highway pages.
	<b>ROCKER</b> —controls the movement of the cursor and is used to select options and positions, and to enter data.
	<b>FIND</b> —activates the Find options, allowing you to search for user points, map items, and any optional data card information.


## DATA ENTRY

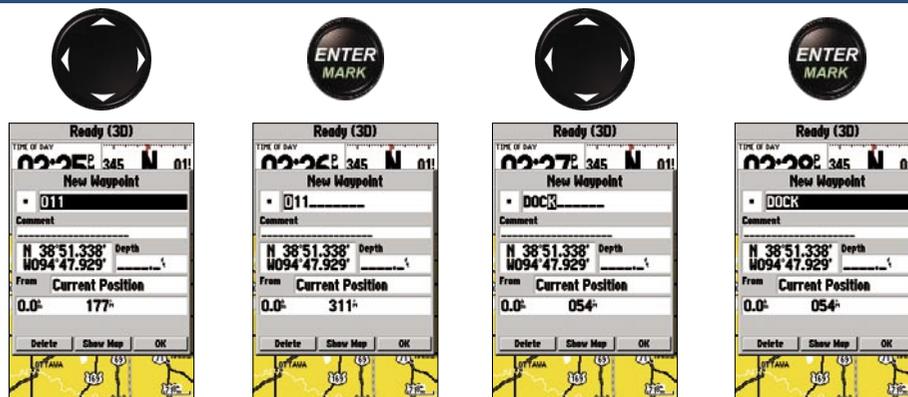

### To enter data:

1. Highlight the desired field using the **ROCKER**.
2. Press **ENTER** to access the field.
3. Use the **ROCKER** to select alphanumeric characters.
4. Press **ENTER** to confirm.
5. You may change data in fields such as symbol, name, coordinates, and depth when marking a waypoint.

## MARKING WAYPOINTS

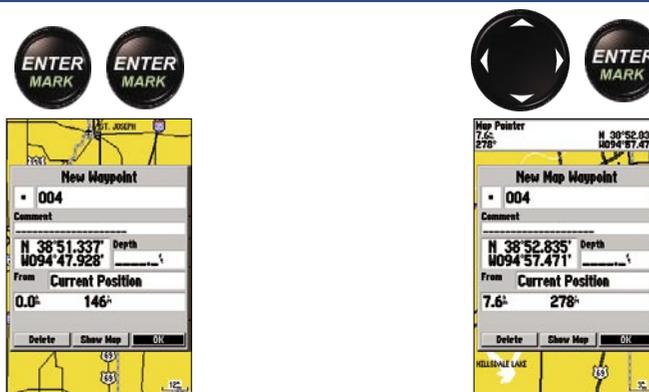


### To mark a waypoint:

1. To capture your present location, press and hold **ENTER/MARK** until the **New Waypoint** window displays.
2. Press **ENTER/MARK** to save the waypoint.

### To graphically mark a waypoint:

1. Move the pointer to the map position.
2. Briefly press **ENTER/MARK** to display the **New Map Waypoint** page.
3. Press **ENTER/MARK** to save the new waypoint.

## NAVIGATION

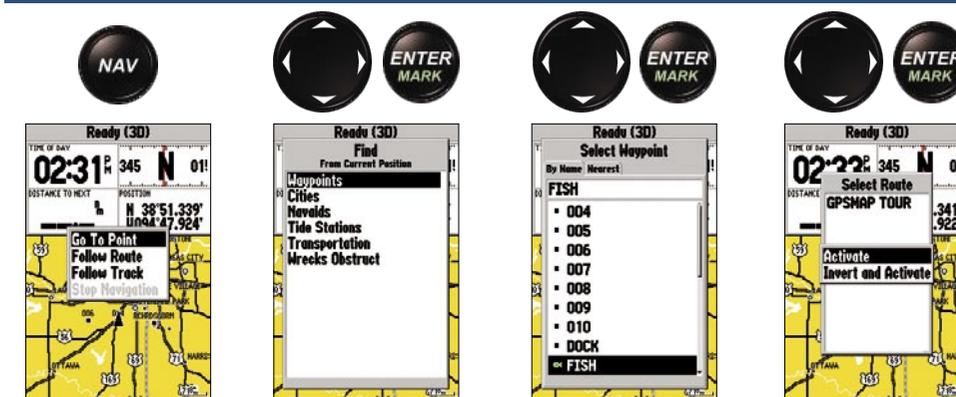

### To use the NAV key:

1. Press **NAV** to activate the navigation selections.
2. Using the **ROCKER**, select Go To Point, Follow Route, or Follow Track, and press **ENTER**.
3. Select the point, track, or route from the list, and then press **ENTER**.
4. If you selected a point, press **ENTER** again while **Go To** is highlighted. If you selected a route or saved track, choose from the activation selections, and press **ENTER** to begin navigation.


## BACKLIGHT



### To adjust the Backlight:

1. Briefly press the **POWER** key to activate the Backlight adjustment slider.
2. Press the **ROCKER** Up/Down to adjust the backlight level.
3. Press **ENTER** to confirm and return to the previous screen.

## MOB

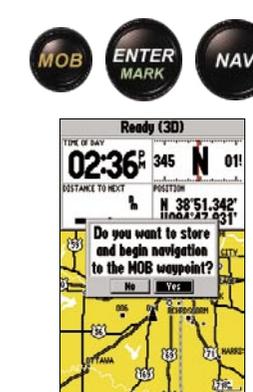

### To navigate to an MOB:

1. Press **MOB** to activate the MOB function.
2. To store the Man OverBoard waypoint and begin immediate navigation to that point, press **ENTER**.
3. To stop MOB navigation, press **NAV** and choose **Stop Navigation**.