

GARMINTM

StreetPilot[®] c330[®]

setup and go!



WARNING: See the product information sheet in the product box for product warnings and other important information.

Step 1: Mount Your c330

To ensure a tight grip, clean and dry the windshield before mounting the suction cup.



1. Plug the small end of the cable into the mount and the other end in a 12-Volt receptacle in your vehicle.
2. Place the suction cup on the windshield.
3. Flip the lever back, toward the windshield.
4. Fit the bottom of your c330 into the cradle of the suction cup mount.
5. Tilt your c330 back until it snaps in place.

If necessary, use the tension knob to improve your viewing angle.


WARNING: This product contains a **non-user-replaceable** lithium-ion battery. Do not remove or attempt to remove the battery. Doing so could result in risk of battery fire or damage and injury.

To prevent damage and risk of fire due to high temperatures, remove the unit from the vehicle or store it out of direct sunlight. For more information, see www.garmin.com/safety.

Check your state and local traffic laws before mounting. Currently, state laws in California and Minnesota prohibit drivers from using suction mounts on their windshields while operating motor vehicles. Other Garmin dashboard or friction mounting options should be used.


Garmin®, StreetPilot®, and c330® are trademarks of Garmin Ltd. or its subsidiaries, registered in the USA and other countries.

Step 2: Configure Your c330


Press and hold the  **Power** button on the side of the unit to turn it on. Follow the on-screen instructions to set up your c330; you only have to do this once.

Step 3: Find Your Destination

1 Touch **Where to**.

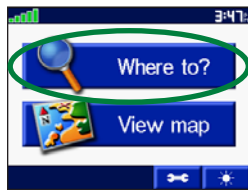

2 Select a category.

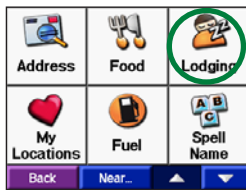

3 Select a destination.



4 Touch **Go**.



5 Enjoy the route!



Step 4: Follow Your Route

Follow the route to your destination using the Map page. As you travel, your c330 guides you to your destination with voice prompts, arrows on the map, and directions at the top of the Map page. If you depart from the original route, your c330 recalculates the route and provides new route instructions.



Your route is marked with a red line.




Follow the arrows as you take turns.



A checkered flag marks your destination.

You can add a stop to your route. The c330 gives you directions to the stop and then to your final destination.

1. With a route active, go to the Menu page, and touch  **Where to**.
2. Search for the extra stop.
3. Touch **Go**.
4. Touch **Yes** to add this stop before your destination. Or, touch **No** to make this your new final destination.

Note: You can add only one stop to your route.

Viewing the Map Page

From the Menu page, touch **View map** to open the Map page. The position icon ▲ shows your current location. Touch buttons on the Map page to see additional information.

The diagram illustrates the navigation app's interface and navigation flow:

- Directions Bar:** A vertical list of instructions: "Left on Ward Pky" (0.2 mi), "Keep left on Ward Pky" (2.1 mi), "Keep right on Ward Pky" (0.9 mi), and "Keep left on Roanoke Pky" (300 ft). It includes "Back", "Show Map", and arrow buttons.
- Main Map View:** Shows a street map with a red triangle indicating the current location. The top instruction is "Left on Ward Pky". A "Menu" button is at the bottom. Annotations include:
 - Touch **Left** to zoom out.
 - Touch **Right** to zoom in.
 - Touch the directions bar to open the Current Route page.
 - Touch **Turn In** to open the Next Turn page.
 - Touch **Menu** to open the Menu page.
- Trip Information Page:** A dashboard with a speedometer and various metrics:

Overall Avg	30 mi/h	Max Speed	6.5 mi/h
8.2%	34.3%	54.7%	000153.4
Total Time	18:44	Stopped	15:17
Moving Avg	03:27	Reset Max	

Buttons: Back, Reset Trip, Reset Max.
- Menu Page:** A screen with a magnifying glass icon and "Where to?" text, a map icon and "View map" text, and "Stop" and "Detour" buttons at the bottom.
- Next Turn Page:** A zoomed-in map view showing a turn instruction "Left on Ward Pky" and a timer "0.2 mi 00:26". It includes "Back" and arrow buttons.



Saving Places You Find

- 1 After you have found a place you want to save, touch **Save**.
- 2 Touch **OK**. The place is saved in **My Locations > Favorites**.




Finding Saved Places

- 1 From the Menu page, touch **Where to**.
- 2 Touch **My Locations > Favorites**.
- 3 Select a place.

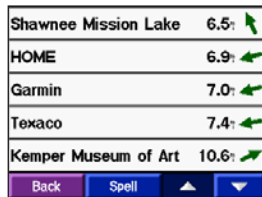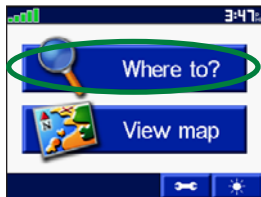


Saving Your Current Location

1 Touch **Where to**.

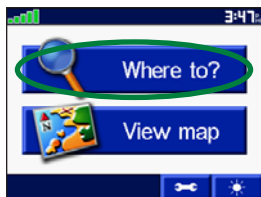

2 Touch **My Locations**.

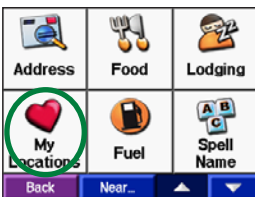


3 Touch **Save > Yes**.




Setting a Home Location

1 Touch **Where to > My Locations**.

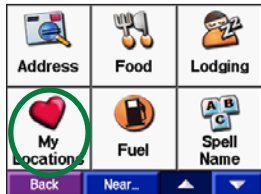

2 Touch **Set Home**.

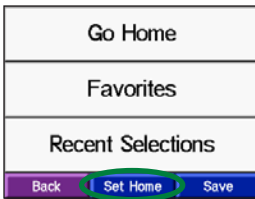

3 Select an option.



Going Home

After you have set your Home location, you can route to it at any time by touching **My Locations** and then **Go Home**.




Changing Your Home Location

Change your Home location by repeating the steps you took to set it.

Adjusting the Volume

To adjust the volume, turn the Volume knob, located above the **Power** button.

Adjusting the Backlight Brightness

1. From the Menu page, touch .
2. Touch  to decrease the backlight brightness. Or, touch  to increase the brightness.
3. Touch **OK**.

Resetting Your c330

If your c330 stops responding, turn it off and back on. If this does not help, reset the c330.

1. Unplug the power and USB cables to remove external power.
2. Place your thumbnail in the groove located under the Garmin logo on the faceplate and gently pull off the faceplate.
3. Press the **Reset** button for about 3 seconds.
4. Connect the c330 to a power source using the power cable. The c330 should automatically turn back on and operate normally.

More Information

For more information about your c330, refer to the owner's manual located at on Garmin's Web site at www.garmin.com/products/sp330. Click on the **Manuals** link and then select **Download**.

