



StreetPilot® c340®

quick reference guide



WARNING: See the product information sheet in the product box for product warnings and other important information.

Step 1: Mount Your c340

To ensure a tight grip, clean and dry the windshield before mounting the suction cup.



1. Plug the small end of the cable into the mount and the other end in a 12-Volt receptacle in your vehicle.
2. Place the suction cup on the windshield.
3. Flip the lever back, toward the windshield.
4. Fit the bottom of your c340 into the cradle of the suction cup mount.
5. Tilt your c340 back until it snaps in place.

If necessary, use the tension knob to improve your viewing angle.


WARNING: This product contains a **non-user-replaceable** lithium-ion battery. Do not remove or attempt to remove the battery. Doing so could result in risk of battery fire or damage and injury.

To prevent damage and risk of fire due to high temperatures, remove the unit from the vehicle or store it out of direct sunlight. For more information, see www.garmin.com/safety.

Check your state and local traffic laws before mounting. Currently, state laws in California and Minnesota prohibit drivers from using suction mounts on their windshields while operating motor vehicles. Other Garmin dashboard or friction mounting options should be used.


Garmin®, StreetPilot®, and c340® are trademarks of Garmin Ltd. or its subsidiaries, registered in the USA and other countries.

Step 2: Configure Your c340


Press and hold the  **Power** button on the side of the unit to turn it on. Follow the on-screen instructions to set up your c340; you only have to do this once.

Step 3: Find Your Destination

1 Touch **Where to**.

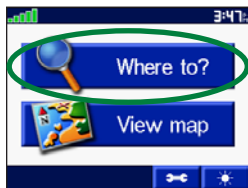


2 Select a category.

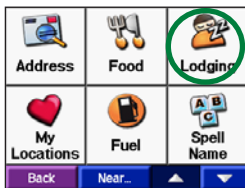

3 Select a destination.



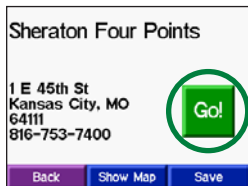

4 Touch **Go**.



5 Enjoy the route!



Tip: Touch  and  to see more choices.

Step 4: Follow Your Route

Follow the route to your destination using the Map page. As you travel, your c340 guides you to your destination with voice prompts, arrows on the map, and directions at the top of the Map page. If you depart from the original route, your c340 recalculates the route and provides new route instructions.



Your route is marked with a magenta line.




Follow the arrows as you take turns.



A checkered flag marks your destination.

You can add a stop to your route. The c340 gives you directions to the stop and then to your final destination.

1. With a route active, go to the Menu page, and touch  **Where to**.
2. Search for the extra stop.
3. Touch **Go**.
4. Touch **Yes** to add this stop before your destination. Or, touch **No** to make this your new final destination.

Note: You can add only one stop to your route.

Viewing the Map Page

From the Menu page, touch **View map** to open the Map page. The position icon ▲ shows your current location. Touch buttons on the Map page to see additional information.

The diagram illustrates the navigation app's interface and navigation flow. At the top, a vertical list of directions is shown: "Left on Ward Pky" (0.2 miles), "Keep left on Ward Pky" (2.1 miles), "Keep right on Ward Pky" (0.9 miles), and "Keep left on Roanoke Pky" (300 feet). Below this is a "Current Route page" showing a map with a pink route and a blue triangle icon for the current location. A "TERRACE" label is visible on the map. To the left of the map is a "Trip Information page" with a speedometer and various trip statistics. To the right is a "Next Turn page" showing a zoomed-in view of the upcoming turn. At the bottom is the "Menu page" with options like "Where to?", "View map", "Stop", and "Detour".

Touch the directions bar to open the Current Route page.

Touch **—** to zoom out.

Touch **+** to zoom in.

Touch **Arrival** or **Speed** to open the Trip Information page.

Touch **Turn In** to open the Next Turn page.

Touch **Menu** to open the Menu page.

Overall Avg	Moving Avg	Max Speed
8.2%	34.3%	54.7%
Total Time	Moving Time	Stopped
18:44	03:27	15:17

Left on Ward Pky
0.2
00:26

Where to?
View map
Stop
Detour



Saving Places You Find

- 1 After you have found a place you want to save, touch **Save**.
- 2 Touch **OK**. The place is saved in **My Locations > Favorites**.





Finding Saved Places

- 1 From the Menu page, touch **Where to**.
- 2 Touch **My Locations > Favorites**.
- 3 Select a place.

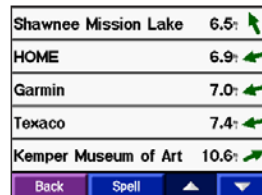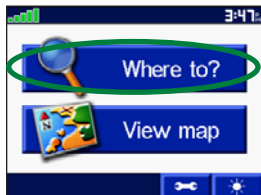


Saving Your Current Location

- 1 Touch **Where to**.
- 2 Touch **My Locations**.
- 3 Touch **Save > Yes**.

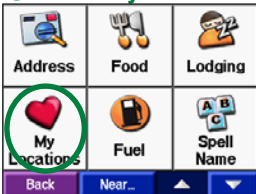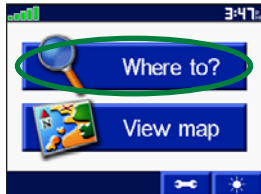


Setting a Home Location

- 1 Touch **Where to** >
My Locations.

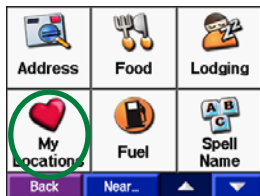

- 2 Touch **Set Home**.

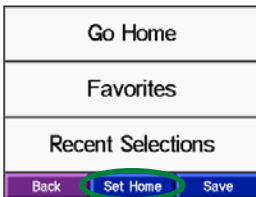

- 3 Select an option.



Going Home

After you have set your Home location, you can route to it at any time by touching **Where to** > **My Locations** > **Go Home**.



Traffic Information with an FM TMC Traffic Receiver






Using a Garmin FM TMC Traffic Receiver, your c340 can receive and use traffic information broadcast over the FM Radio Data System. For more information about Garmin FM traffic receivers, visit www.garmin.com/traffic.

Viewing Traffic Incidents

From the Menu page, touch  to display a list of traffic incidents. The traffic symbols appear on the Map as well.

Avoiding Traffic




The Map page displays  when there is a traffic incident on your current route or on the road on which you are traveling. To avoid a traffic incident, touch , select a traffic incident, and touch **Avoid**.

 MN-77 Southbound	0.0: N
 MN-77 Southbound	0.5: N
 I-35w Southbound	7.8: S
 MN-36 Eastbound	10.0: NE
 I-80 Eastbound	296: SW
Back	

Adjusting the Volume

To adjust the volume, turn the Volume knob, located above the **Power** button.

Adjusting the Backlight Brightness

1. From the Menu page, touch .
2. Touch  to decrease the backlight brightness. Or, touch  to increase the brightness.
3. Touch **OK**.



Resetting Your c340

If your c340 stops responding, turn it off and back on. If this does not help, reset the c340.

1. Unplug the power and USB cables to remove external power.
2. Place your thumbnail in the groove located under the Garmin logo on the faceplate and gently pull off the faceplate.
3. Press the **Reset** button for about 3 seconds.
4. Connect the c340 to a power source using the power cable. The c340 should automatically turn back on and operate normally.

More Information

For more information about your c340, refer to the owner's manual located at on Garmin's Web site at www.garmin.com/products/sp340. Click on the **Manuals** link and then select **Download**.

© Copyright 2005–2007 Garmin Ltd. or its subsidiaries