

Honda Portable Navigation System

personal travel assistant



quick reference guide

Register Your Honda Portable Navigation System

Go to <http://my.garmin.com> to register your Honda Portable Navigation System.

Placing the unit on the Mount

1. Flip up the GPS antenna.
2. Fit the bottom of your unit into the cradle on the vehicle mount.
3. Tilt the unit back until it snaps into place.

To remove your unit from the cradle, press the small tab on the bottom of the cradle up, rotate the unit, and remove it.



Turning the unit on and off

Press and hold the **Power** button on the top of the unit.


Charging the Honda Portable Navigation System

You can charge the unit using the vehicle mount, connecting the USB cable to the unit and your computer, or by connecting the AC adapter to the unit and a wall outlet.

Acquiring Satellites

Before the unit can find your current location and navigate a route, you must do the following:



1. Go outdoors to an open area, away from tall buildings and trees.
2. Flip up the GPS antenna on the back of the unit, so that it is parallel to the ground.
3. Turn on the Honda Portable Navigation System.

Acquiring satellite signals can take a few minutes. The  bars indicate satellite strength.


NOTE: The first time the Honda Portable Navigation System acquires satellites (or if the unit has moved hundreds of miles since last acquiring satellites) it may take several minutes. Afterward, acquisition times are quicker during normal use.

Tips and Quick Settings

Tips


- To quickly return to the Menu page, press and hold the **Back** button.
- Touch  and  to see more choices. Touch and hold an arrow to scroll faster.
- Touch the **Help** button to learn more about the Travel Kit features.
- To extend the battery life, close the GPS antenna when you do not need GPS signals. You can also decrease the brightness.

Quick Settings

Press and quickly release the **Power** button or touch  on the Menu page. Move the sliders to adjust the volume and brightness. Touch **Lock** to prevent accidental screen taps. To unlock the screen, press the **Power** button.

Loading Items to Your Honda Portable Navigation System

1. Connect the small end of the USB cable into the mini-USB port on your unit.
2. Connect the larger end of the cable to an available USB port on your computer.
3. **Windows® Computer:** Double-click the My Computer icon on your computer's desktop. Two new removable disk drives appear in your list of drives: "nuvi" and "nuvi sd."
Mac® Computer: The "nuvi" and "nuvi sd" drives mount onto your Mac desktop as two mounted volumes.
4. Double-click one of the unit drives/volumes to open it. Copy and paste files into the drive (Windows) or drag and drop files onto the volume icon (Mac).

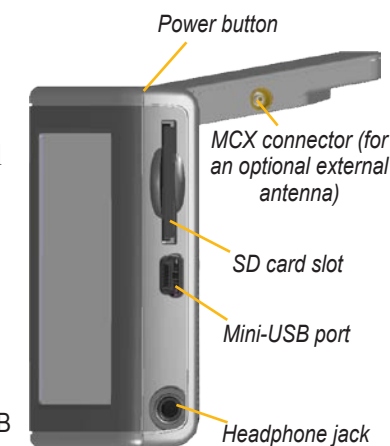

Important Information

This guide provides short instructions for various operations of your Honda Portable Navigation System. Fold and keep this guide in your glove box.

See the *Important Safety and Product Information* guide for product warnings and legal information.

CAUTION: This product contains a lithium-ion battery. See the *Important Safety and Product Information* guide in the product box for important battery safety information.

Notice: Check your state and local traffic laws before mounting. Currently, state laws in California and Minnesota prohibit drivers from using suction mounts on their windshields while operating motor vehicles. Other Garmin dashboard or friction mounting options can be used. See the *Important Safety and Product Information* guide that came with your Honda Portable Navigation System for more details.

Customer Support

For questions or problems with your Honda Portable Navigation System, contact Garmin Product Support by phone: 866/202.5098, Monday–Friday, 8 AM–5 PM Central Time; or go to www.garmin.com/support, and click **Product Support**.

More Information

Refer to the owner's manual located on your "nuvi" drive and on the Garmin Web site: www.garmin.com/hondaportablenavigation. Click the **Manuals** link and then select **Download**.

NOTE: For questions about accessories, contact Garmin Product Support.

© 2007 Garmin Ltd. or its subsidiaries

Garmin® is a registered trademark, and nüvi™, MyGarmin™, Garmin Travel Guide™, and Garmin Lock™ are trademarks of Garmin Ltd. or its subsidiaries and may not be used without the express permission of Garmin. Windows® is a registered trademark of Microsoft Corporation. Mac® is a registered trademark of Apple Computer, Inc.

For the latest free software updates (excluding map data) throughout the life of your Garmin products, visit the Garmin Web site at www.garmin.com.

Finding Your Destination

You can search for an exact address or browse the Find menu categories. Touch and to see more choices.



Touch **Where to?**

Touch a category.
TIP: Touch **Near** to narrow your search area.

Touch a sub category.



Touch your destination.
TIP: Touch **Spell** to narrow your search.

Touch **Go**.


Enjoy the route!

Following Your Route

Follow the route to your destination using the Map page. As you travel, the Honda Portable Navigation System guides you to your destination with voice prompts, arrows on the map, and directions at the top of the Map page. If you depart from the original route, the unit recalculates the route and provides new route instructions.

Viewing the Map Page


From the Menu page, touch **View Map** to open the Map page. The position icon shows your location. Touch and drag the icon to save your location. Touch and drag the map to view different areas.

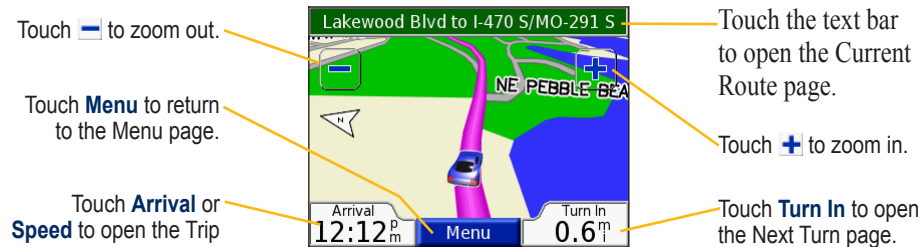

Map Page while Navigating a Route

Adding Stops to Your Route

You can add a stop (via point) to your route. The unit gives you directions to the via point and then to your final destination. With a route active, touch **Menu** > **Where to?**

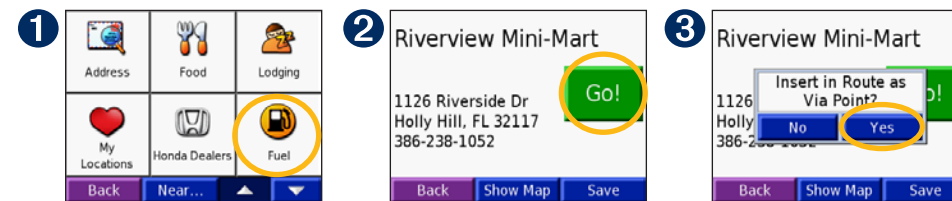


Search for the extra stop.

Touch **Go**.

Touch **Yes** to add this stop before your destination.

Setting a Home Location

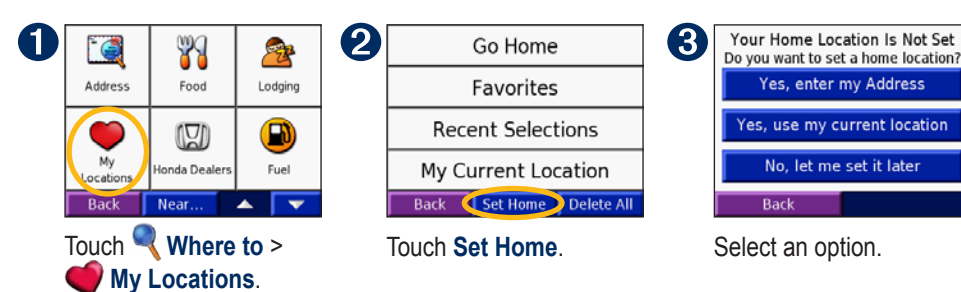

Touch **Where to?** > **My Locations**.

Touch **Set Home**.

Select an option.

Locking Your Honda Portable Navigation System

To help prevent theft of the unit, do the following:

1. Flip up the GPS antenna and acquire satellites.
2. On the Menu page, touch **Settings** > **System**.
3. Touch the button next to **Garmin Lock**. Touch **OK**.
4. Enter a four-digit PIN. Touch **Yes** to accept the PIN.
5. Touch **OK**. Drive to a security location, and touch **Set**.
6. Each time you turn on the unit, enter the four-digit PIN or drive to the security location (with the antenna up).

NOTE: If you forget your PIN and your security location, you must send your unit to Garmin to get it unlocked. You must also send a valid product registration or proof of purchase.

Resetting the Honda Portable Navigation System

If the screen stops functioning, turn the unit off and on again. If this does not help, do the following:

1. Disconnect the unit from external power.
2. Flip up the GPS antenna.
3. Press the **Reset** button.
4. Connect the unit to a power source. It should automatically turn back on and operate normally.

Using the Travel Kit

The Travel Kit includes several functions that are helpful when you are traveling (for example, MP3 Player, Audible Book Player, and Currency Converter). On the Menu page, touch **Travel Kit**. Touch the arrows to view more items. Touch **Help** to learn more about each feature.

