GARMIN nüvi® 680 quick reference guide

Keep this guide in the pocket of your nüvi carrying case.

For more information about your n\u00fcvi 680, such as mounting, activating MSN\u00a8 Direct, and other information, see the owner's manual included in the box.

WARNING: See the owner's manual in the product box for product warnings and other important information.

Garmin® and nüvi® are trademarks of Garmin Ltd. or its subsidiaries, registered in the USA and other countries. These trademarks may not be used without the express permission of Garmin. The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc., and any use of such name by Garmin is under license. Microsoft, DirectBand, MSN, and the MSN logo are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

February 2007 Printed in Taiwan 190-00775-01 Rev. B

Turning the nüvi On or Off

Press and hold the **OPower** button on the top of the nüvi.

Charging the nüvi

- Place the nüvi in the suction mount, connect the vehicle power cable to the cradle, and then connect the cable to a power outlet in your vehicle.
- Connect the USB cable to the nüvi and your computer.
- Connect the AC adapter to the nüvi and a wall outlet.

Acquiring Satellites

- 1. Go outdoors to an open area, away from tall buildings and trees.
- 2. Flip up the GPS antenna.
- 3. Turn on the nüvi. Acquiring satellite signals can take a few minutes.

The bars indicate satellite strength. When the bars are green, the nüvi has acquired satellite signals.

Menu Page



- A Touch to find a destination.
- **B** Touch to view the map.
- Touch to open the Travel Kit.
- **D** Touch to adjust the nüvi's settings.
- Touch to adjust the volume, screen brightness, audio output, and screen lock.
- Touch to make a call, when connected to a compatible mobile phone with Bluetooth wireless technology.
- © Touch to view MSN Direct content, when connected to the MSN Direct Receiver and when you are in a coverage area. To activate your MSN Direct service, go to http://garmin.msndirect.com/activate. See the owner's manual for more information.

Finding Your Destination

- 1. On the Menu page, touch **Where to**.
- 2. Touch your destination.
- 3. Touch Go.

Saving Your Current Location

- 1. On the Map page, touch <a>_.
- 2. Touch **Save**. The place is saved in **Favorites**.

Adding a Stop to Your Route

- 1. When navigating a route, touch

 Where to on the Menu page.
- 2. Touch your destination.
- 3. Touch Go.

Listening to the nüvi on Your Vehicle's FM Stereo

- On the Menu page, touch > Audio Output > FM Transmitter > OK.
- 2. Tune your stereo to an FM channel.
- Touch the button beneath Frequency Adjust. Select the same frequency to which your stereo is tuned.

Using MSN® Direct

The MSN Direct Receiver and nüvi must be in range of an MSN Direct coverage area. See http://garmin.msndirect.com/coverage.

To view MSN Direct content, from the Menu page, touch **1**. Touch a category to view information for it

When calculating your route, the nüvi examines the traffic delays and optimizes the route for the shortest time. You might be routed through traffic if it is the best route available. If a severe traffic delay occurs on while you are navigating, the nüvi recalculates the route to avoid the delay.

The Map page displays (15) when there is a minor traffic delay on your route. The number represents the number of minutes the traffic will delay your route. The delay time has been automatically calculated into the arrival time. To view the details of the delays, touch (15). If there is more than one delay, touch **Details**. Touch **Avoid** to avoid this delay.

Using Hands-Free Features

To use the hands-free calling features, your mobile phone with Bluetooth wireless technology must be connected (paired) to the niivi 680 See the owner's manual for more information about pairing.

- 1. On the Menu page, touch & > am Dial.
- 2. Enter the number, and touch Dial.
- 3. To end the call, touch [6], and then touch End Call.

If you need to enter information using a keypad during the call, touch | | > Call Options > Touch Tones. Enter the information. Touch Back twice, when finished.

Sending a Text Message

- 1. On the Menu page, touch (>) Text Message > Compose.
- 2. Select an option to select the text message recipient.
- 3. Enter the message, and touch **Done**.

Using the Travel Kit

The Travel Kit includes several functions that are helpful when you are traveling (for example, MP3 Player, Audible Book Player, and @ Currency Converter). On the Menu page, touch **Travel Kit**. Touch **Help** to learn more about each feature.

Resetting the nüvi

If the nüvi screen stops functioning, turn the nüvi off and on again. If this does not help, do the following:

- . Disconnect the nüvi from external power.
- 2. Flip up the antenna.
- 3. Press the Reset button.
- 4. Connect the nüvi to a power source. The nüvi should automatically turn back on and operate normally.

Tips and Shortcuts

- To quickly return to the Menu page, touch and hold **Back**
- Touch and to see more choices. Touch and hold to scroll faster.
- To extend the battery life, close the antenna when you do not need GPS signals.
- To adjust the audio or brightness, quickly press and release the **O** Power button. You can also touch **a** on the Menu page.
- To switch the audio output between the nüvi and an FM stereo, quickly press the O Power button twice.
- To learn more about the nüvi Bluetooth® wireless technology or Travel Kit features, touch **Help** on the appropriate screen.

More Information

For more information about the nüvi, refer to the nüvi 680 Owner's Manual in the box For information about accessories, go to http://shop.garmin.com or contact your Garmin dealer.