



nüvi® 1100 series quick start manual




WARNING

See the *Important Safety and Product Information* guide in the product box for product warnings and other important information.

Looking at Your nüvi

Power button:

Press to turn the nüvi on and off.

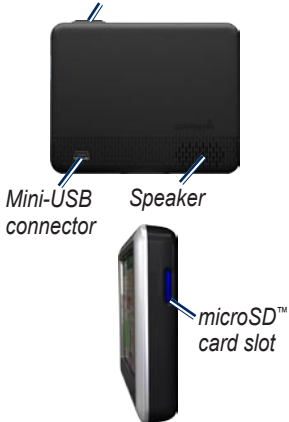

Using the Main Menu



- 1 GPS satellite strength.
- 2 Touch to select a usage mode.
- 3 Current time. Touch to change time settings.
- 4 Battery status.
- 5 Touch to find a destination.
- 6 Touch to view the map.
- 7 Touch to adjust the volume.
- 8 Touch to use the tools such as settings and Help.

Setting Up Your nüvi

WARNING

This product contains a lithium-ion battery. To prevent injury or damage to the device, remove the unit from the vehicle when exiting or store it out of direct sunlight.


NOTICE

Before mounting the nüvi, see the *Important Safety and Product Information* guide for information about laws pertaining to windshield mounting.

Mounting your nüvi


1. Remove the clear plastic from the suction cup. Place the suction cup on the windshield.
2. Flip the lever back toward the windshield.
3. Snap the cradle onto the suction cup arm.
4. Plug the vehicle power cable into the back of your nüvi.
5. Plug the other end of the vehicle power cable into a power outlet in your vehicle. Your unit should turn on automatically if it is plugged in and the vehicle is running. Follow the on-screen instructions.
6. Fit the bottom of your nüvi into the cradle.
7. Tilt your nüvi back until it snaps into place.

Suction cup mount

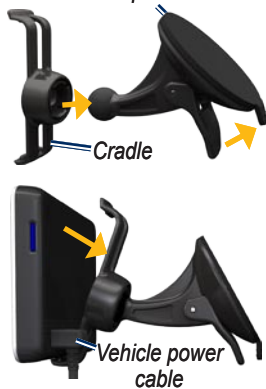

Acquiring Satellites

1. Go outdoors to an open area, away from tall buildings and trees.
2. Turn on your nüvi.

Acquiring satellite signals can take a few minutes. The  bars indicate satellite strength. When at least one of the bars is green, your nüvi has acquired satellite signals.



Charging Your nüvi

Charge your nüvi for at least 4 hours before using on battery power.

- Connect the vehicle power cable.
- Connect the USB cable.
- Connect an AC adapter (optional accessory).

Using the Power Button

Press and quickly release the **Power** button to view additional options:

- Touch  and  to adjust the screen brightness.
- Touch **Lock Screen** to prevent accidental screen touches.
- Touch **Turn Off** to turn off your nüvi. You can also turn off the nüvi by holding the **Power** button for 8 seconds.

Resetting Your nüvi

If your nüvi stops functioning, reset your nüvi by pressing and holding the **Power** button for 10 seconds.

Finding Points of Interest

1. Touch **Where To? > Points of Interest**.
2. Select a category and a subcategory.

3. Select a destination, and touch **Go!**.
4. If necessary, touch **Start** to navigate the route.

To enter letters contained in the name, touch **Where To?** > **Points of Interest** > **Spell Name**.



To search for a location in a different area, touch **Where To?** > **Near**.

Following Your Route


Your route is marked with a magenta line. As you travel, your nüvi guides you to your destination with voice prompts, arrows on the map, and directions at the top of the map. If you depart from the original route, your nüvi recalculates the route.

Touch and drag the map to view a different area of the map.




- 1 Touch to view the Next Turn page.
- 2 Touch to view the Turn List page.
- 3 Touch to view the Where Am I? page.
- 4 Touch  and  to zoom in and out.
- 5 Touch to return to the Main menu.
- 6 Touch to change data field.
- 7 Touch to view the Trip Computer.

Adding a Stop

1. While navigating a route, touch  > **Where To?**.
2. Search for the extra stop.
3. Touch **Go!**.
4. Touch **Add as Via Point** to add this stop before your final destination.

Taking a Detour

1. While navigating a route, touch .
2. Touch Detour.

Using FM TMC Traffic


NOTICE

Garmin is not responsible for the accuracy of the traffic information.

Heated (metallized) windows could degrade the performance of the traffic receiver.

The FM Traffic Message Channel (TMC) traffic receiver is optional.

The traffic receiver and the nüvi must be in data range of an FM station transmitting TMC data to receive traffic information. You do not need to activate the subscription included with your FM traffic receiver. The subscription activates automatically after your nüvi acquires satellite signals while receiving traffic signals from the pay service provider. Go to www.garmin.com/traffic or www.garmin.com for more information.

If a severe traffic delay occurs on your route while you are navigating, the nüvi automatically recalculates the route. The traffic icon  changes color to indicate the severity of traffic conditions on your route or on the road you are currently traveling.

Securing Your nüvi

NOTICE

If you forget your PIN and your security location, you must send your nüvi to Garmin to get it unlocked. You must also send a valid product registration or proof of purchase.

1. Ensure that you are at your security location and that your nüvi is receiving satellite signals.
2. Touch **Tools > Settings > Security.**
3. Touch the button below **Garmin Lock.**
4. Enter a four-digit PIN.
5. Touch **Set.**

nüMaps Guarantee™

To receive one free map update (if available), register your nüvi at <http://my.garmin.com> within 60 days of acquiring satellites and driving with your nüvi. You are not eligible for the free map update if you register by phone or wait longer than 60 days after the first time you drive with your nüvi.

More Information

For more information about your nüvi, select **Tools > Help.** Download the latest version of the owner's manual from www.garmin.com. For information on accessories, go to <http://buy.garmin.com> or contact your Garmin dealer.

Garmin®, the Garmin logo, and nüvi® are trademarks of Garmin Ltd. or its subsidiaries, registered in the USA and other countries. Garmin Lock™ and nüMaps Guarantee™ are trademarks of Garmin Ltd. or its subsidiaries. These trademarks may not be used without the express permission of Garmin. microSD™ is a trademark of SanDisk or its subsidiaries.



© 2009 Garmin Ltd. or its subsidiaries

Garmin International, Inc.
1200 East 151st Street, Olathe, Kansas 66062, USA

Garmin (Europe) Ltd.
Liberty House, Hounsdown Business Park, Southampton, Hampshire, SO40 9LR UK

Garmin Corporation
No. 68, Jangshu 2nd Road, Shijr, Taipei County, Taiwan

www.garmin.com

October 2009

190-01041-02 Rev. A

Printed in Taiwan