

nüvi[®] 2585TV quick start manual



January 2012 190-00784-01_0A Printed in Taiwan

Getting Started

↑ WARNING

See the *Important Safety and Product Information* guide in the product box for product warnings and other important information.

When using your device for the first time, complete these tasks.

- 1 Mount the device (page 2).
- 2 Register the device (page 3).
- 3 Check for updates.
 - Software updates (page 3).
 - Free map update (page 3).
- 4 Download the full owner's manual (page 3).

Mounting the Device

↑ WARNING

This product contains a lithium-ion battery. To prevent the possibility of personal injury or product damage caused by battery exposure to extreme heat, remove the device from the vehicle when exiting or store it out of direct sunlight.

NOTICE

Before mounting the device, see the *Important* Safety and Product Information guide for information about laws pertaining to windshield mounting.

Before you use your device on battery power, you should charge the device.

- 1 Plug the vehicle power cable 1 into the USB port on the mount 2.
- 2 Snap the mount onto the suction cup 3.



- 3 Press the suction cup to the windshield.
- 4 While pressing, flip the lever 4 back toward the windshield.
- **5** Fit the bottom of your device into the mount.
- 6 Tilt your device back until it snaps into place.
- 7 Plug the other end of the vehicle power cable into a power outlet in your vehicle.
- 8 If necessary, connect the external antenna to the traffic receiver and secure it to the windshield using the suction cups.

About myDashboard

You can use myDashboard to register your device, check for software and map updates, access product manuals and support, and more.

Setting Up myDashboard

1 Connect the mini-USB cable ① to the mini-USB port ② on the device.



- 2 Connect the mini-USB cable to the USB port on your computer.
- 3 Go to www.garmin.com/dashboard.
- 4 Follow the on-screen instructions.

Registering your Device

- 1 From myDashboard, click Register Now.
- **2** Follow the on-screen instructions.
- 3 Keep the original sales receipt, or a photocopy, in a safe place.

nüMaps Guarantee™

If you register the device at http://my.garmin.com within 90 days of acquiring satellites while driving, your device could be eligible for one free map update. Go to www.garmin.com/numaps for terms and conditions.

Using myDashboard Services

- 1 Open myDashboard (page 2).
- 2 Select an option:
 - To update the software, click Update Now under Software Updates.
 - To update the maps, click Update Now under Map Updates.

- To download the owner's manual, click Manuals, and click Download next to the manual you want.
- 3 Follow the on-screen instructions.

Turning Off the Device

1 Hold the Power key 1 for 3 seconds.



2 Select Power Off.

Finding a Location Using the Search Bar

You can use the search bar to search for locations by entering a category, brand name, address, or city name.

- 1 Select Where To?.
- 2 Select Enter Search in the search bar.
- 3 Enter all or part of the search term. Suggested search terms appear below the search bar.
- 4 Select an option:

- To search for a type of business, enter a category name (for example, "movie theaters").
- To search for a business by name, enter all or part of the name.
- To search for an address near you, enter the street number and street name.
- To search for an address in another city, enter the street number, street name, city, and country.
- To search for a city, enter the city and state.
- To search for coordinates, enter latitude and longitude coordinates.

5 Select an option:

- To search using a suggested search term, select the term.
- To search using the text you entered, select 9.
- 6 If necessary, select a location.

Searching Near Another Location

- 1 Select Where To?.
- 2 Select Searching Near.
- 3 Select an option.

Your Route on the Map

NOTICE

The speed limit icon feature is for information only and does not replace the driver's responsibility to abide by all posted speed limit signs and to use safe driving judgment at all times. Garmin will not be responsible for any traffic fines or citations that you may receive for failing to follow all applicable traffic laws and signs.

Your route is marked with a magenta line on the map. If you depart from the original route, your device recalculates the route. A speed limit icon could appear as you travel on major roadways.



- Select 1 to view the next turn.
- Select ② to view the turn list.
- Select 3 to stop the route you are currently navigating.
- Select 4 to view the Where Am I? page.

Adding a Stop

Before you can add a stop, you must be navigating a route.

- 1 From the map, select > Where To?.
- **2** Search for the extra stop.
- **3** Select the stop from the search results.
- 4 Select Go!
- 5 Select Add to Active Route.

Taking a Detour

While navigating an automobile route, you can use detours to avoid obstacles ahead of you, such as construction zones.

While navigating, select == > **Detour**.

About Traffic

NOTICE

Garmin is not responsible for the accuracy or timeliness of the traffic information.

Traffic information may not be available in all areas or countries.

A traffic receiver is included in some packages. It is built into the vehicle power cable. The traffic receiver and device must be in data range of a station transmitting traffic data to receive traffic information. You do not need to activate the subscription included with your traffic receiver.

When you are receiving traffic information, a traffic icon appears on the map page. The traffic icon changes color to indicate the severity of traffic conditions on your route or on the road you are currently traveling.

Go to www.garmin.com/traffic for more information.

Positioning the Traffic Receiver

You can position the traffic receiver power cable for optimal traffic reception.

1 Uncoil the cable.

2 Place the middle of the cable in a location with an unobstructed view of the sky, such as the dash.

NOTE: Do not rest the cable on the cable plug that connects to the vehicle power source.

Do not place the cable on the floor or underneath other objects.

Digital TV

You can stream digital TV on your device.

Before you can watch digital mobile TV, the device must be in a Digital Video Broadcasting for Terrestrial devices (DVB-T) coverage area. For more information, go to www.dvb.org.

Setting up the Antennas

NOTE: The external antennas are intended to improve the TV reception. They will not increase the number of channels available.

You may need to extend the internal antenna or attach external antennas to receive channels.

1 Pull out the TV antenna 1.



2 For the best reception, attach the external antennas included in the packaging to the mount and arrange them in a perpendicular angle to each other.

Watching TV

- 1 Select TV.
- 2 If necessary, select Agree.
- 3 If necessary, select = > Channel Scan.

Using the TV Menu

↑ WARNING

Do not attempt to view the TV function or other video input while driving. Failure to pay full attention to the operation of your vehicle could result in death, serious injury, or property damage.

NOTICE

Before using the TV feature in a vehicle, check the local laws and ordinances where you drive. Some laws prohibit drivers from watching TV while operating motor vehicles. Garmin does not assume any responsibility for any fines, penalties, or damages that may be incurred as a result of any law or ordinance relating to the use of your Garmin device.

Your device disables the TV function when you are traveling faster than 12 kph.

TV signal strength and system messages display in the status bar of the screen.

To toggle channels, select and .

- To select a channel from a list of available channels, select == > TV Guide.
- To view the TV program schedule for available channels, select > TV Guide > Schedule.
 - To adjust the volume, select and ...
 - To mute TV audio, select
- To view subtitles, select > TV Settings > Subtitle.
- To return to the TV menu, select

Searching for Specific Channels

You must be receiving channels to search for a specific channel.

- 1 From the TV menu, select ...
- 2 Enter a channel number.

Recording TV Footage

- 1 Select TV.
- 2 Select o start recording.
- 3 Select stop recording.

Playing Back Recorded TV Footage

- 1 From the TV menu, select > Video Playback.
- 2 Select the video you want to play back.

Returning to the Main Menu from the TV Menu

From the TV menu, select

- To return to the main menu while TV audio plays in the background.
- To turn off the TV, select Turn Off TV.

Driving Recorder

NOTICE

Before using the driver recorder feature in a vehicle, check the local laws and ordinances where you drive. Garmin does not assume any responsibility for any fines, penalties, or damages that may be incurred as a result of any law or ordinance relating to the use of your Garmin device.

You can record audio and video while driving using the Garmin GDR 20 camera. You can play recorded footage on the device or on a computer. For more information, go to www.garmin.com.

NOTE: To play recorded footage on a computer, you must install the GDR 20 camera software on the computer. See the *nüvi* 2585TV Owner's Manual for more information.

Viewing the Camera Feed

- 1 Insert the microSD™ card that came with the driving recorder kit into the slot found on the right side of the camera.
- While the device is mounted, connect the camera to the micro-USB port on the mount.
- 3 Snap the camera onto the second suction cup arm.
- 4 Press the suction cup arm to the windshield.
- 5 While pressing, flip the lever back toward the windshield.

Using Driving Recorder

- 1 From the main menu, select Apps > Driving Recorder.
- 2 Select REC .

 The camera starts recording.
- 3 Select to stop recording. The camera stops recording.

Playing a Recorded Video

- 1 From the main menu, select Apps > Driving Recorder.
- 2 Select 🔂
- 3 Select a video.

www.garmin.com/support



Garmin International, Inc. 1200 East 151st Street, Olathe, Kansas 66062, USA

Garmin (Europe) Ltd. Liberty House, Hounsdown Business Park Southampton, Hampshire, SO40 9LR UK

Garmin Corporation

No. 68, Zhangshu 2nd Road, Xizhi Dist. New Taipei City, 221, Taiwan (R.O.C.) Garmin®, the Garmin logo, and nüvi® are trademarks of Garmin Ltd. or its subsidiaries, registered in the USA and other countries. nüMaps Guarantee™ is a trademark of Garmin Ltd. or its subsidiaries. These trademarks may not be used without the express permission of Garmin.

microSD™ is a trademark of SD-3C, LLC.

