

garmin  asus



# nüvifone™ A50 owner's manual



© 2010 Garmin Ltd. or its subsidiaries and ASUSTeK Computer, Inc.

All rights reserved. Except as expressly provided herein, no part of this manual may be reproduced, copied, transmitted, disseminated, downloaded or stored in any storage medium, for any purpose without the express prior written consent of Garmin and ASUS. Garmin and ASUS hereby grant permission to download a single copy of this manual onto a hard drive or other electronic storage medium to be viewed and to print one copy of this manual or of any revision hereto, provided that such electronic or printed copy of this manual must contain the complete text of this copyright notice and provided further that any unauthorized commercial distribution of this manual or any revision hereto is strictly prohibited.

Information in this document is subject to change without notice. Garmin and ASUS reserve the right to change or improve their products and to make changes in the content without obligation to notify any person or organization of such changes or improvements. Go to [www.garminasus.com](http://www.garminasus.com) for current updates and supplemental information concerning the use and operation of this and other Garmin-Asus products.

The combined Garmin-Asus logo is a trademark of Garmin Ltd. and ASUSTeK Computer, Inc. Garmin® is a trademark of Garmin Ltd. or its subsidiaries, registered in the USA and other countries. cityXplorer™, Ciao!™, nüvifone™, and nüMaps Guarantee™ are trademarks of Garmin Ltd. or its subsidiaries. These trademarks may not be used without the express permission of Garmin.

The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Garmin or ASUS is under license. Wi-Fi is a registered mark of the Wi-Fi Alliance. Adobe is a registered trademark of Adobe Systems Incorporated. Mac is a trademark of Apple Inc., registered in the U.S. and other countries. Microsoft, Exchange ActiveSync, Excel, Outlook, and PowerPoint are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries. Google, Panoramio, and Android are trademarks of Google Inc. Other trademarks and trade names are those of their respective owners.

MPEG Layer-3 audio coding technology licensed from Fraunhofer® IIS and Thomson®.

## Introduction

The nüvifone™ A50 is a multi-media mobile phone with integrated navigation and services.

### Getting Support

Go to [www.garminasus.com](http://www.garminasus.com) for in-country support information.

### Registering Your Product

1. Go to [www.garminasus.com/support](http://www.garminasus.com/support).
2. Select your region, if necessary.
3. Under the A50, click **Product Registration**.
4. Follow the on-screen instructions.

After registering, click **Maps** to see if you are eligible for one or more map updates.

### Updating the Software

1. Go to [www.garminasus.com](http://www.garminasus.com).
2. Follow the on-screen instructions.

### nüMaps Guarantee™

To receive one free map update (if available), register your device at [www.garminasus.com](http://www.garminasus.com) within 60 days of acquiring satellites while driving with your device. You are not eligible for the free map update if you register by phone or wait longer than 60 days after the first time you acquire satellites while driving with your device.

### Buying Additional Maps

Go to [www.garminasus.com](http://www.garminasus.com).

€0700!

# Table of Contents

|   |           |  |           |
|---|-----------|--|-----------|
| <b>Introduction</b> .....               | <b>i</b>  | Using the Widgets .....                  | <b>10</b> |
| Getting Support .....                   | <b>i</b>  | Using the Scroll Arrows .....            | <b>11</b> |
| Registering Your Product.....           | <b>i</b>  | Using the On-screen Keyboard ...         | <b>11</b> |
| Updating the Software .....             | <b>i</b>  | Getting Help.....                        | <b>12</b> |
| nüMaps Guarantee™ .....                 | <b>i</b>  | About the Automatic Screen<br>Lock ..... | <b>12</b> |
| Buying Additional Maps .....            | <b>i</b>  | About the Headset.....                   | <b>13</b> |
| <b>Getting Started</b> .....            | <b>1</b>  | Status and Notification Icons .....      | <b>14</b> |
| Device Features .....                   | <b>1</b>  | <b>Using the Phone</b> .....             | <b>16</b> |
| Setting Up the Device.....              | <b>2</b>  | Dialing a Number.....                    | <b>16</b> |
| Turning On Your Device .....            | <b>4</b>  | Calling a Contact .....                  | <b>16</b> |
| Mounting Your Device.....               | <b>4</b>  | Calling a Found Location.....            | <b>16</b> |
| Completing the Setup.....               | <b>5</b>  | Using In-Call Options.....               | <b>17</b> |
| <b>Getting to Know Your Device</b> .... | <b>6</b>  | Ending a Call .....                      | <b>17</b> |
| Using the Home Screen .....             | <b>6</b>  | Receiving a Call.....                    | <b>18</b> |
| About the Keys .....                    | <b>7</b>  | Activating Call Waiting.....             | <b>18</b> |
| Rotating the Device .....               | <b>7</b>  | Using Call Waiting .....                 | <b>18</b> |
| Using the Touchscreen .....             | <b>8</b>  | Setting Up Voice Mail .....              | <b>19</b> |
| Viewing the Application Tray.....       | <b>8</b>  | Calling Voice Mail .....                 | <b>19</b> |
| Viewing Notifications .....             | <b>9</b>  | Using Call History .....                 | <b>19</b> |
| Changing the Volume .....               | <b>10</b> | Placing a Conference Call.....           | <b>21</b> |
|   |           | Setting the Default Ringtone.....        | <b>22</b> |

|                                     |           |   |           |
|-------------------------------------|-----------|---|-----------|
| Forwarding Calls.....               | 22        | Finding Local Businesses.....                 | 36        |
| Barring Calls.....                  | 22        | Finding Saved Locations.....                  | 36        |
| Checking Your Phone Usage.....      | 23        | Finding Recently Found<br>Locations.....      | 36        |
| Turning On Airplane Mode.....       | 23        | Finding Upcoming Events.....                  | 37        |
| <b>Managing Your Contacts.....</b>  | <b>24</b> | Finding Panoramio™ Photos.....                | 37        |
| Adding a Contact.....               | 24        | Finding Gas Prices.....                       | 38        |
| Calling a Contact.....              | 24        | Finding Cities.....                           | 38        |
| Searching for a Contact.....        | 24        | Using the White Pages Phone<br>Directory..... | 38        |
| Editing and Deleting Contacts.....  | 24        | Entering Coordinates.....                     | 39        |
| Starting a Route to a Contact.....  | 26        | Finding Intersections.....                    | 40        |
| Managing Your SIM Contacts.....     | 27        | About Extras.....                             | 40        |
| <b>Searching for Locations.....</b> | <b>29</b> | <b>Following Your Route.....</b>              | <b>41</b> |
| Acquiring Satellites.....           | 29        | About the Map.....                            | 41        |
| Finding a Point of Interest.....    | 29        | Using the Map.....                            | 41        |
| Working with Found Locations.....   | 30        | About Usage Modes.....                        | 42        |
| Changing the Search Area.....       | 31        | Navigating in Driving Mode.....               | 43        |
| Saving and Editing Locations.....   | 31        | About Traffic.....                            | 45        |
| Sharing Locations.....              | 33        | Navigating in Walking Mode.....               | 47        |
| Finding Your Parking Spot.....      | 34        | Taking a Detour.....                          | 49        |
| Finding Your Current Location.....  | 34        | Stopping the Route.....                       | 49        |
| Setting Your Home Location.....     | 35        |   |           |
| Finding an Address.....             | 35        |   |           |

|  |           |  |           |
|--|-----------|--|-----------|
| Working with Routes.....                           | 49        | Starting a Route to a Friend's<br>Location ..... | 63        |
| Viewing Your Trip Log.....                         | 51        | Removing an Invitation .....                     | 63        |
| <b>Sending and Receiving</b>                       |           | Removing a Friend .....                          | 63        |
| <b>Messages .....</b>                              | <b>52</b> | Hiding Your Location.....                        | 63        |
| Sending an Text Message .....                      | 52        | Viewing Ciao! Networks.....                      | 64        |
| About Multimedia Messages .....                    | 53        | Disabling Ciao! .....                            | 64        |
| Reading Messages.....                              | 54        | <b>Browsing the Web .....</b>                    | <b>65</b> |
| Using E-mail.....                                  | 56        | Using the Browser .....                          | 65        |
| <b>Using Ciao!™ .....</b>                          | <b>60</b> | Viewing Multiple Browser<br>Windows .....        | 66        |
| Registering Your Device and<br>Joining Ciao! ..... | 60        | Saving a Web Page to<br>Favorites .....          | 66        |
| Changing Your Display Name.....                    | 61        | Viewing Your History .....                       | 67        |
| Inviting a Friend .....                            | 61        | Sharing a URL.....                               | 67        |
| Accepting or Declining an<br>Invitation.....       | 61        | Opening a Web Site in a New<br>Window .....      | 67        |
| Sending a Location Update .....                    | 61        | Deleting a Web Site from a List... <b>68</b>     |           |
| Automatically Sending Location<br>Updates.....     | 61        | Setting Your Browser Home<br>Page.....           | 68        |
| Updating Your Status.....                          | 62        | Downloading Files .....                          | 68        |
| Viewing Friends .....                              | 62        |  |           |
| Adding a Friend to Contacts .....                  | 62        |  |           |
| Sending a Message to a Friend ..                   | 62        |  |           |

|                                    |           |                                    |           |
|------------------------------------|-----------|------------------------------------|-----------|
| <b>Playing Music</b> .....         | <b>70</b> | Sharing Pictures and Videos .....  | <b>77</b> |
| Music Player File Types.....       | <b>70</b> | Setting Your Wallpaper .....       | <b>77</b> |
| Playing a Song .....               | <b>70</b> | Editing Pictures and Videos.....   | <b>78</b> |
| Changing the Music Player          |           | Adding a Picture to a Contact..... | <b>78</b> |
| View .....                         | <b>71</b> | Starting a Route to a              |           |
| About Playlists .....              | <b>71</b> | Photograph .....                   | <b>78</b> |
| Saving a Song as a Ringtone .....  | <b>73</b> | <b>Organizing Your Life</b> .....  | <b>80</b> |
| Streaming Online Music .....       | <b>73</b> | Using the Calendar .....           | <b>80</b> |
| <b>Taking and Viewing Pictures</b> |           | Viewing a Document.....            | <b>82</b> |
| <b>and Videos</b> .....            | <b>74</b> | Checking the Weather Forecast..    | <b>83</b> |
| Taking a Picture .....             | <b>74</b> | Using the Clock .....              | <b>84</b> |
| Taking a Picture with GPS          |           | Using the Converter.....           | <b>86</b> |
| Information .....                  | <b>74</b> | Checking Flight Status.....        | <b>87</b> |
| Recording a Video .....            | <b>75</b> | Finding Movie Times.....           | <b>88</b> |
| Changing the Camera and Video      |           | <b>Connecting with Other</b>       |           |
| Settings .....                     | <b>75</b> | <b>Devices</b> .....               | <b>90</b> |
| About Picture and Video File       |           | Synchronizing Your Device with     |           |
| Types .....                        | <b>76</b> | Your Computer .....                | <b>90</b> |
| About the Gallery.....             | <b>76</b> | Synchronizing Your Device with     |           |
| Viewing Pictures .....             | <b>76</b> | an Exchange Server .....           | <b>91</b> |
| Viewing a Video .....              | <b>77</b> | Synchronizing with a Google™       |           |
| Viewing a Slideshow.....           | <b>77</b> | Account .....                      | <b>92</b> |

|                                      |           |   |            |
|--------------------------------------|-----------|---|------------|
| Using Bluetooth Technology .....     | 93        | <b>Appendix .....</b>                           | <b>112</b> |
| Transferring Files .....             | 95        | About Satellite Signals .....                   | 112        |
| About Wi-Fi .....                    | 95        | About Connected Services .....                  | 112        |
| <b>Customizing Your Device .....</b> | <b>98</b> | Battery Information .....                       | 113        |
| General Device Settings .....        | 98        | Mounting on Your Dashboard ....                 | 114        |
| Location Settings .....              | 98        | Removing the Device, Cradle,<br>and Mount ..... | 114        |
| Security Settings .....              | 99        | Resetting the Device .....                      | 115        |
| Changing the Text Language .....     | 100       | Caring for Your Device .....                    | 115        |
| Keyboard Settings .....              | 100       | Specifications .....                            | 116        |
| Date and Time Settings .....         | 101       | Troubleshooting .....                           | 118        |
| Changing the Storage Settings ..     | 101       | <b>Index .....</b>                              | <b>120</b> |
| Data Connection Settings .....       | 102       |   |            |
| Phone Settings .....                 | 102       |   |            |
| Audio Settings .....                 | 103       |   |            |
| Navigation Settings .....            | 104       |   |            |
| Application Settings .....           | 106       |   |            |
| Display Settings .....               | 110       |   |            |
| Viewing Software Information ....    | 111       |   |            |
| Restoring Settings .....             | 111       |   |            |
| Clearing All User Data .....         | 111       |   |            |



# Getting Started

## WARNING

See the *Important Safety and Product Information* document in the product box for product warnings and other important information.

Download the latest owner's manual at [www.garminasus.com](http://www.garminasus.com).

## Device Features



## Setting Up the Device

1. Remove the battery cover.
2. Install the SIM card.
3. Install the microSD card.
4. Install the battery (page 3).
5. Replace the battery cover (page 3).
6. Charge the battery (page 3).
7. Register the device and check eligibility for a free map update (page i).

 
## Removing the Battery Cover

Slide the battery cover off the back of the device.



## Installing the SIM Card

Insert the SIM card in the holder with the gold contacts facing down and the notched corner toward the center of the device.

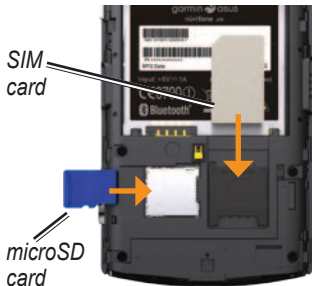

## Installing the microSD Card

Insert the microSD card in the microSD slot with the gold contacts facing down.

## Installing the Battery

1. Locate the battery that came in the product box.
2. Locate the metal contacts on the end of the battery and in the battery compartment.
3. Insert the battery with the Garmin-Asus logo facing up and the metal contacts on the battery aligned with the contacts in the battery compartment.



## Replacing the Battery Cover

Slide the battery cover onto the back of the device until it clicks.

## Charging the Battery

### NOTICE

Your device will not charge if the temperature has exceeded 140°F (60°C). If the device is mounted in the windshield, remove it from the mount and place it somewhere out of direct sunlight to allow the battery to charge.

Charge the battery for at least four hours before using the device for the first time.

1. Insert the plug into the AC power adapter, if necessary.
2. Plug the USB cable into the AC adapter.
3. Connect the mini-USB end of the USB cable to the connector on the bottom of the device.
4. Plug the AC adapter into a power outlet.

If you completely discharge the battery, recharge it for at least 20 minutes before turning on your device.

### Charging Methods

There are several ways to charge the device in addition to the method described on [page 3](#).

- (Preferred) Use the vehicle power cable connected to the cradle, with the device in the cradle.
- Use the vehicle power cable connected to the device (not the cradle).
- Use the USB cable to a computer and your device.
- Use the battery charger accessory. For more information about accessories, go to [www.garminasus.com](http://www.garminasus.com).

### Turning On Your Device

Press and hold the **Power** key.

## Mounting Your Device

### WARNING

 
This product contains a lithium-ion battery. To prevent the possibility of personal injury or product damage caused by battery exposure to extreme heat, remove the device from the vehicle when exiting or store it out of direct sunlight.

### NOTICE

Before mounting the device, see the *Important Safety and Product information* document in the product box for information about laws pertaining to windshield mounting.

1. Plug the vehicle power cable into the power connector on the back of the cradle.
2. Remove the clear plastic from the suction cup.

- Clean and dry your windshield and the suction cup with a lint-free cloth.
- Place the suction cup on the windshield.

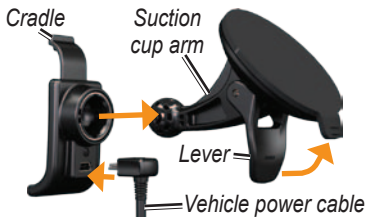

- Flip the lever back, toward the windshield.
- Snap the cradle onto the suction cup arm.
- Fit the gold contacts on the left side of your device into the cradle.
- Tilt the device back until it snaps into the cradle.

- Plug the other end of the vehicle power cable into a power outlet in your vehicle.



**TIP:** To learn how to remove the device from the mount, see [page 114](#).

## Completing the Setup

Complete the following optional tasks to finish setting up your device:

- Set up voice mail ([page 19](#)).
- Set up an e-mail account ([page 56](#)).
- Synchronize the device with your computer ([page 90](#)).
- Synchronize the device with a Microsoft® Exchange ActiveSync® account ([page 91](#)).





# Getting to Know Your Device

## Using the Home Screen



- ① Touch and drag the status bar down to view notifications (page 9). The status bar displays notification icons, status icons (page 14), and the current time.
- ② Touch a shortcut icon in the application tray to start an application (page 8). Touch and drag the bar to scroll through all of the shortcuts.
- ③ Touch to place a phone call and access contacts.
- ④ Touch to find and navigate to a location.
- ⑤ Touch to view the map.

## About the Keys

| Key   | Use   |
|---|---|
|  | Touch to open the phone.  |
|   | Touch to send a call.   |
|  | Touch to return to the Home screen.   |
|   | Touch and hold to open the widgets.   |
|  | Touch to go back to the previous screen or to exit the current application.   |
|  | Touch to view a menu of options for the current screen or application.        |
| Volume Up and Down  | Press to increase or decrease the audio level.                                |
| Direction pad   | Press up, down, left, or right to highlight items or to scroll through lists. |
|   | Press the center of the directional pad to select a highlighted item.         |
| Camera  | Press to open the camera.   |
|   | Press to take a screenshot, when enabled.                                     |

## Rotating the Device

**NOTE:** Some applications can only be viewed in one orientation. For example, the camera is only available in landscape mode.

- From vertical mode, rotate your device to the left or the right to view in horizontal (landscape) mode.
- From horizontal mode, rotate your device to the left or the right to view in vertical (portrait) mode.

## Using the Touchscreen

**NOTE:** The device has a capacitive touchscreen that requires direct contact with your skin. The device will not detect a touch if you touch the screen with your fingernail or with a glove.

- Touch and drag your finger to slowly scroll the screen.  
Scroll the screen both vertically and horizontally, when available.
- Touch, drag, and quickly remove your finger (flick the screen) to quickly scroll the screen.  
Touch the screen to stop scrolling.
- In some applications, use the touchscreen to zoom in and out:

- Touch two points near the center of the page, and drag your fingers apart to zoom in.
- Touch two points near opposite edges of the page, and drag your fingers toward the center of the

page to zoom out.

## Viewing the Application Tray

The application tray contains shortcuts for the applications on the device. The first row or column of shortcuts is always visible on the Home screen.



*Application tray*



- Scroll the application tray up and down to view more shortcuts.
- Touch and drag the application tray toward the opposite side of the screen.

The application tray expands, and a second section of shortcuts appears.

### Arranging Shortcuts

You can change the order of shortcuts, and you can move shortcuts into or out of the first section of the application tray.

1. Expand the application tray.
2. Touch and hold the shortcut until the device vibrates.
3. Drag the shortcut to a new location.

### Viewing Notifications

When a notification icon appears in the status bar, open the notification window to view more information.

1. Touch and drag the status bar toward the bottom of the screen.  
The notification window expands to fill the screen.
2. Touch an item to view more details or to go to the application.

### Hiding the Notification Window



Touch and drag the bottom of the notification window to the top of the screen.

### Setting the Notification Tone

1. From the application tray, touch **Settings > Audio > Notifications**.
2. Touch a tone.
3. Touch **Done**.

## Changing the Volume


You can change the volume for certain features, such as the ringer, navigation, and media.


1. Open the application.
2. Adjust the volume:
  - Press the **Volume Up** or **Volume Down** key to adjust the volume.
  - Press the **Volume Down** key until  appears, to set your device to vibrate mode, when available.
  - Press the **Volume Down** key until  appears, to set your device to silent mode, when available.

**TIP:** You can also access the volume settings from the application tray, touch **Settings > Audio**.





## Using the Widgets

Widgets provide quick access to frequently used tasks and information.







1. Touch and hold .
2. Touch and drag the screen to the left or to the right to view additional widgets.

Three panels of widgets are available.  indicates which panel you are currently viewing.

## Customizing the Widgets






1. Touch and hold .
2. Customize the widgets panel:
  - To add widgets, touch , and touch an item.
  - To move a widget, touch and hold the widget until the device vibrates, and drag the widget to a new location.
  - To remove a widget, touch  > .



## Using the Scroll Arrows

- Touch  or , or touch and drag the screen, to scroll.
- Quickly touch  or  to scroll faster.
- Touch and hold  or  to slowly scroll.

## Using the On-screen Keyboard

A keyboard appears when you need to enter text.

- Touch a key to enter text.
- Touch  to backspace.
- Touch  to shift.
- Touch and hold  to turn on caps lock.
- Touch  to close the keyboard.
- Touch  to display numbers and symbols.

- Touch  to display an alphabetic keyboard.
- Touch  to change the keyboard.
- To insert a cursor to edit text, touch the text or numbers on the screen.

## Using Text Completion

The device includes a text-completion feature that recognizes words you are typing.

**NOTE:** To adjust the text-completion settings, see [page 101](#).

1. Begin typing a word.  
A row of suggested auto-text words appears above the keyboard. The closest match is highlighted.
2. Continue typing.  
The text-completion words may change or disappear.
3. Touch a text-completion word to accept it.

**NOTE:** The underlined word is inserted automatically when you enter a space or a punctuation mark.

### Selecting an Input Method

The device includes multiple input methods, such as language-specific keyboards and handwriting recognition, when available.

**NOTE:** To enable additional input methods in the keyboard settings, see [page 100](#).

1. Touch and hold a text field.
2. Touch **Input Method**.
3. Select an option.

### Getting Help

1. From the application tray, touch **Help**.
2. Touch a topic.

### About the Automatic Screen Lock

The device automatically locks if you do not use it for a specified amount of time. You can still use the device to contact emergency services.


If the device is in the mount with external power, the screen will not automatically lock.

### Manually Locking the Device

Press the **Power** key.

### Unlocking the Device

**NOTE:** To adjust the unlock settings, see [page 99](#).

1. Quickly press the **Power** key, if necessary.
2. Double-tap .

## Adjusting the Screen Timeout Length

1. From the application tray, touch **Settings > Display > Screen Timeout**.
2. Touch a time.
3. Touch **OK**.

## About the Headset




You can use the wired headset (included in some packages) or a Bluetooth wireless headset to listen to audio and talk on the phone.

## Connecting the Headset

**NOTE:** To connect a Bluetooth headset, see [page 93](#).














1. Connect 3.5 mm headphones to the 3.5 mm adapter on the headset.
2. Connect the mini-USB connector on the headset to the device.













## Using the Headset

- Press  to answer a call.
- Press  to end a call.
- Speak into the adapter on the headset, which contains the microphone.
- Use the **Volume** knob to adjust the audio volume.
- Press  to pause and play music.

For information on using a Bluetooth headset, see the instructions that came with the headset.

## Status and Notification Icons

| Icon   | Description   |
|--|---|
|  | Current time. The time is based on the location of the device or on the selected time zone.   |
|  | Battery life.   |
|  | External power is connected, and the battery is charging.   |
|  | Mobile signal strength. The more colored bars that appear, the stronger the signal. A red bar indicates there is no mobile signal.                    |
|   | Airplane mode.  |
|   | Wi-Fi® connectivity. This icon appears in place of the network connectivity icon when the device is using Wi-Fi.                                      |
|   | Bluetooth wireless technology is enabled, but the nūvifone is not connected to a device.  |
|   | The nūvifone is connected to a device using Bluetooth® wireless technology.   |
|   | Teletypewriter (TTY) mode is activated ( <a href="#">page 102</a> ).  |
|   | Network connectivity. This icon appears when the device is connected for Internet access. The connection types are as follows: G—GPRS, E—Edge, 3G—3G. |
|  | GPS satellite strength. The more colored bars that appear, the stronger the satellite signal. A red “X” indicates no satellite signals.               |
|  | Vibrate mode.   |
|  | Silent mode.  |


| Icon  | Description  |
|---|--|
|  | Speaker phone.   |
|  | In a phone call.   |
|  | Text or MMS message received.                            |
|  | E-mail message received.                                 |
|  | Appointment reminder.                                    |
|  | New voice mail message.                                  |
|  | Parking spot has been saved.                             |
|  | You are currently navigating a route.                    |
|  | An alarm is enabled.                                     |
|  | Connected to the computer using the USB cable.           |
|  | Synchronizing data with your computer.                   |
|  | There is an error synchronizing data with your computer. |

## Using the Phone

### Dialing a Number



1. Touch  > .

**TIP:** You can also open the phone application by touching **Call** From the Home screen.

2. Dial the number.
3. Touch .

### Calling a Contact

Before you can call a contact, you must add a contact ([page 24](#)).

1. Touch  > .
2. Touch a contact.
3. Touch **Call**.
4. If the contact has more than one phone number, touch the phone number to call.

### Calling a Found Location

You can call a location that you have found in the Where To? menu, if the location has a phone number associated with it.

1. From the Home screen, touch **Where To?**.
2. Search for a location (see [pages 29–40](#)).
3. Touch **Call**.




## Using In-Call Options



While you are in a call, use the following options:


- Touch **Speakerphone** to activate the speakerphone.
- Touch **Audio** to select audio output, when a wireless hands-free device is connected ([page 93](#)).
- Touch **Mute** to mute the audio input.

- Touch **Add Call** to place a new call.
- The first call is placed on hold:
- Touch **Switch** to change between the current call and the call on hold, if you are on call waiting.
  - Touch **Merge** to create a conference call.
- Touch **Hold** to place the current call on hold.
  - Touch  to display a numeric keypad for automated systems that require numeric entries.

## Ending a Call

Touch **End Call**.

## Receiving a Call

- Touch **Answer** to answer the call, or touch **Ignore** to ignore the call.
- To answer a call when the screen is locked, double-tap .
- To ignore a call when the screen is locked, press the **Power** key.

## Activating Call Waiting




From the application tray, touch **Settings > Phone > Call Waiting > On > OK**.

## Using Call Waiting


If call waiting is activated, use the following call waiting options when you receive an incoming call:




- Touch **Answer + Hold** to answer the new call and place the original call on hold:
  - Touch **Merge** to create a conference call with the original call and the new call.
  - Touch **Switch** to switch between the original call and the new call.
- Touch **Answer + End** to answer the new call and end the original call.
- Touch **Ignore** to send the new call to your voice mail.

## Setting Up Voice Mail

1. From the application tray, touch **Settings > Phone > Voice Mail Number**.
2. Verify that your voice mail number is correct.
3. Touch  >  > .
4. Follow the voice prompts.

## Calling Voice Mail




When you have new voice mail,  appears in the status bar.

1. Touch and drag the status bar toward the bottom of the screen.  
**TIP:** You can also touch  >  >  to call your voice mail.
2. Touch **New Voice Mail**.

## Using Call History


1. Touch  > .

Calls are organized into three categories:




| Icon  | Description   |
|---|---------------|
|  | Dialed call   |
|  | Received call |
|  | Missed call   |

2. Touch a call.
3. Select an option.

## Deleting a Call from the Call History

1. Touch  > .
2. Touch a call.
3. Touch  > **Delete from Call History > OK**.

## Saving a Number to Contacts

1. Touch  > .
2. Touch a call.
3. Touch  > **Add to Contacts** > **Create new contact**.
4. Touch a phone type.
5. Touch **Name**.
6. Enter a name, and touch **Done**.
7. Touch **Save**.

## Viewing Related Calls

Related calls are calls made to or received from the same number.

1. Touch  > .
2. Touch a call.
3. Touch  > **View Related Calls**.

A list of related calls appears displaying the length of each call or a status message.

## Using Reverse Lookup

This service is not available in all areas. This service may be available as a paid subscription. A data connection is required for this feature. Your regular data usage charges apply.

A reverse lookup allows you to search for the address of a phone number that called you.

1. Touch  > .
2. Touch a call.
3. Touch  > **Reverse Lookup**.


## Deleting All Calls from the Call History

Touch  >  >  > **Clear Call Log**.

## Placing a Conference Call



You can host a conference call with two other callers.

**TIP:** If you receive a call while you are already on another call, you can start a conference call by touching **Merge**.

1. Place a call to the first phone number.
2. Touch **Add Call**.
3. Place a call to the second phone number.
4. Touch **Merge**.
5. Touch  to view the other members of the conference call (optional).

## Speaking Privately During a Conference Call

You can speak privately with another member of the conference call.

1. During the conference call, touch .
2. Touch  next to the contact with whom you would like to speak with privately.


The other members of the conference call can continue to speak to each other.

To end the private conversation, touch **Merge**.

## Setting the Default Ringtone

1. From the application tray, touch **Settings > Audio > Ringtone**.
2. Touch a ringtone.
3. Touch **Done**.

## Forwarding Calls

1. From the application tray, touch **Settings > Phone > Call Forwarding**.
2. Touch a call type.
3. Select an option:
  - Enter a number to forward calls.
  - Touch  to select a contact to forward calls to.
  - Touch **Disable** to disable call forwarding for that call type.

## Barring Calls

You can block incoming calls and outgoing calls.




**NOTE:** You must obtain the call barring password from your service provider.

1. From the application tray, touch **Settings > Phone > Call Barring**.
2. Touch a call type.
3. Select an option.
4. Touch **OK**.
5. Enter the call barring password, and touch **OK**.

## Checking Your Phone Usage

You can check the amount of call minutes and data that you have used.

**TIP:** To track your approximate monthly usage, reset the call time and the data usage at the beginning of each billing cycle.

1. From the application tray, touch **Settings** >  > **About** > **Phone**.
2. Select an option:
  - Touch **Total Time, This Session**, or **Total Data** to see usage details.
  - Touch  > **Reset Call Time** to reset the Call Time values.
  - Touch  > **Reset Data Usage** to reset the Data Usage values.

## Turning On Airplane Mode


Airplane mode turns off the phone and data connections for situations such as an airplane flight.

From the application tray, touch **Settings** > **Wireless Manager** > **Airplane Mode**.

When Airplane mode is on, the telephone, the network, and Bluetooth features are deactivated. You cannot send or receive calls, e-mail messages, or SMS/MMS messages.

## Managing Your Contacts


### Adding a Contact

1. From the application tray, touch **Contacts** > .
2. Touch an item.
3. Enter the information
4. Touch **Done** > **Save**.

### Calling a Contact



1. From the application tray, touch **Contacts**.
2. Touch a contact.
3. Touch **Call**.

### Searching for a Contact

1. From the application tray, touch **Contacts** > .
2. Enter part of the contact name.
3. Touch the contact.


### Editing and Deleting Contacts

#### Editing a Contact




1. From the application tray, touch **Contacts**.
2. Touch a contact.
3. Touch  > **Edit**.
4. Edit the contact:
  - Touch an item to edit the information.
  - Touch  to delete the information.
5. Touch **Save**.




## Adding a Picture for a Contact

1. From the application tray, touch **Contacts**.
2. Touch a contact.
3. Touch  > **Edit**.
4. Touch the picture of the contact.
5. Select an option:
  - Touch **Take Picture** to take a picture using the device camera.
  - Touch **Select Picture** to select a saved picture.
6. Touch and drag the square to crop the picture.
7. Touch **Save** > **Save**.

## Assigning a Location to a Contact

1. From the application tray, touch **Contacts**.
2. Touch a contact.
3. Touch  > **Edit**.
4. Touch  next to **Add Address**.
5. Touch **Add Location**.
6. Select the location:
  - Touch the location on the map.
  - Touch , and search for the location.
7. Touch **Select this Location** > **Done** > **Save**.

## Setting a Ringtone for a Contact

1. From the application tray, touch **Contacts**.
2. Touch a contact.
3. Touch  > **Edit** > **Ringtone**.
4. Touch a ringtone.
5. Touch **Done** > **Save**.

## Deleting a Contact


1. From the application tray, touch **Contacts**.
2. Touch a contact.
3. Touch  > **Delete** > **OK**.

## Starting a Route to a Contact

1. From the application tray, touch **Contacts**.
2. Touch a contact.
3. Touch **Go!**.
4. If necessary, select an option to enter a location:
  - Enter the full address or location name, and touch **Done**.
  - Touch **Add Location**, find a location, and touch **Select this Location**.
5. Touch **Done**.

## Managing Your SIM Contacts

### Exporting Contacts to Your SIM Card


1. From the application tray, touch **Contacts**.
2. Touch  > **SIM Phone Book** > **Export Contacts to SIM**.
3. Touch a method to export contacts:
  - Touch **Export All Contacts**.
  - Select the check box for the contact.
4. Touch **Export**.

### Importing Contacts from Your SIM Card


1. From the application tray, touch **Contacts**.
2. Touch  > **SIM Phone Book** > **Import Contacts from SIM**.

3. Touch a method to import contacts:
  - Touch **Import All Contacts**.
  - Select the check box for the contact.
4. Touch **Import**.



### Creating a New SIM Contact

1. From the application tray, touch **Contacts**.
2. Touch  > **SIM Phone Book** > **View SIM Contacts** > **Create New SIM Contact**.
3. Touch **Name**.
4. Touch the field, enter the name, and touch **Done**.
5. Touch **Primary Number**.
6. Touch the field, enter the phone number, and touch **Done** > **Done** > **Save**.



## Call or Send a Message to a SIM Contact

1. From the application tray, touch **Contacts**.
2. Touch  > **SIM Phone Book** > **View SIM Contacts**.
3. Touch a contact.
4. Touch **Call** or **Send Message**.

## Editing Contacts on Your SIM Card

1. From the application tray, touch **Contacts** >  > **SIM Phone Book** > **View SIM Contacts**.
2. Touch a contact.
3. Touch  > **Edit**.
4. Edit the name and phone number, and touch **Done** > **Save**.

## Deleting Contacts on Your SIM Card

1. From the application tray, touch **Contacts** >  > **SIM Phone Book** > **View SIM Contacts**.
2. Touch a contact.
3. Touch  > **Delete** > **OK**.

## Searching for Locations

The Where To? menu provides several different categories you can use to search for locations and destinations.

### Acquiring Satellites

Before you can navigate with your device, you must acquire satellites.

1. Turn on your device.
2. If necessary, go outdoors to an open area, away from tall buildings and trees.

Acquiring satellite signals can take a few minutes.

### Finding a Point of Interest

The detailed maps loaded in your device contain points of interest, such as restaurants, hotels, and auto services.

### Finding by Category

1. From the Home screen, touch **Where To? > Points of Interest**.

2. Touch a category.

3. Touch a subcategory, if necessary.

**TIP:** To narrow the search, touch the data entry field along the top of the screen, enter the text, and touch **Done**.

A list of items near your current location appears.

4. Touch an item.

### Finding by Spelling the Name

1. From the Home screen, touch **Where To? > Points of Interest > Spell Name**.

2. Enter all or part of the name.

3. Touch an item.

## Working with Found Locations

After you find a location, the location appears on the map. An information balloon displays the name of the location.



- 1 Touch to view the other locations on the map.
- 2 Touch to view additional details, such as the address and the phone number, if known.
- 3 Touch to create a route to the location.
- 4 Touch to dial the phone number of the location, if available.


## Starting a Route to a Location

1. Find a location.
2. Touch **Go!**.
3. Touch a navigation mode, if necessary.

## Calling a Location

1. Find a location.
2. Touch **Call**.

## Finding a Nearby Location


1. Find a location.
2. Touch  > **Search Near**.
3. Select an option.

## Viewing the Location in Street View

You can view the location on a photograph of the street surrounding the location.



1. Find a location.
2. Touch  > **Street View**.

## Adding a Location to Contacts

1. Find a location.
2. Touch the information balloon.
3. Touch  > **Add to Contacts**.
4. Select an option:
  - Touch **Create New Contact**.
  - Touch an existing contact to add the information to it, and touch **Save**.

## Changing the Search Area

By default, your device finds locations near your current location.

1. From the Home screen, touch **Where To?**.
2. Touch  > **Change Location**.
3. Select the location:
  - Touch the location on the map.
  - Touch , and search for the location.
4. Touch **Select this Location**.

## Saving and Editing Locations

### Saving a Found Location

1. Find a location.
2. Touch the information balloon.
3. Touch **Save**.

### **Saving Your Current Location**

1. From the Home screen, touch **View Map**.
2. Touch the vehicle icon.
3. Touch **Save**.
4. If necessary, enter a name, and touch **Done**.

### **Editing Saved Locations**

1. From the Home screen, touch **Where To? > Saved Locations**.
2. Touch and hold a location.
3. Touch **Edit**.
4. Touch an item to edit it.
5. Touch **Save**.

### **Deleting a Saved Location**

1. From the Home screen, touch **Where To? > Saved Locations**.
2. Touch and hold a location.
3. Touch **Delete > Confirm**.

### **Creating Categories**

When you save a location, it is automatically assigned to a category. You can create your own categories to help organize your saved locations.

1. From the Home screen, touch **Where To? > Saved Locations**.
2. Touch and hold a location.
3. Touch **Edit > Categories > Enter New Category**.
4. Enter a name for the category, and touch **Done > Done > Save**.



## Assigning Saved Locations to Categories

1. From the Home screen, touch **Where To? > Saved Locations**.
2. Touch and hold a location.
3. Touch **Edit > Categories**.
4. Touch the categories to assign to this location.
5. Touch **Done > Save**.

## Sharing Locations

### Sharing a Found Location

1. Find a location.
2. Touch the information balloon.
3. Touch **Share**.
4. Select an option to send the location.
5. Touch **To**.
6. Add a recipient, and touch **Done**.
7. Touch **Message**.

8. Enter a message.
9. Touch **Done > Send**.

### Sharing Your Current Location

1. From the application tray screen, touch **Where Am I?**
2. Touch **Share**.
3. Select an option to send the location.
4. Touch **To**.
5. Add a recipient, and touch **Done**.
6. Touch **Message**.
7. Enter a message.
8. Touch **Done > Send**.

## Finding Your Parking Spot

### About the Parking Spot Feature

When the My Parking Spot feature is enabled, the location of your parking spot is saved automatically if you are receiving satellite signals when you remove the device from the cradle.

When your parking spot is saved, **P** appears in the status bar.

### Starting a Route to Your Parking Spot

1. Touch and drag the status bar toward the bottom of the screen.

**TIP:** You can also access your Parking Spot by touching **Where To?** > **Saved Locations**.

2. Touch **Saved Parking Spot** > **Go!**

## Finding Your Current Location

Use the Where Am I? page to view information about your current location. This is a helpful feature if you need to tell emergency personnel your location.

1. From the application tray, touch **Where Am I?**
2. Touch the information balloon to open the Where Am I? page to view your location coordinates and nearby items, such as fuel stations.

**TIP:** You can also open the Where Am I? page by touching the vehicle icon on the map.

## Setting Your Home Location

You can save a home location and quickly generate a route to it.

1. From the Home screen, touch **Where To? > Home**.
2. Select an option.

### Starting a Route to Your Home

Before you can create a route to your home location, you must set your home location ([page 35](#)).

Touch **Where To? > Home > Go!**

## Finding an Address

 
**NOTE:** Depending on the version of the built-in map data on your device, the button names and the order of steps could be different than the steps below.

1. From the Home screen, touch **Where To? > Address**.  
**TIP:** To change the search area, touch **Change State/Country**, and touch a state, a province, or a country.
2. Touch **Enter House Number**.
3. Enter the house number, and touch **Next**.
4. Enter all or part of the street name or number, and touch **Done**.
5. Touch the street.
6. Enter and touch the correct city, if necessary.
7. Touch the correct address, if necessary.

## Finding Local Businesses

Local search enables you to search for local businesses. In addition to searching by spelling the name of a location, you can also spell the names of categories, like “salon” or “coffee.”

This service is not available in all areas. A data connection is required for this feature. Your regular data usage charges apply.

1. From the Home screen, touch **Where To? > Local Search**.
2. Enter your search term, and touch .
3. Touch an item.

## Finding Saved Locations

To learn how to save a location, see [page 31](#).

1. From the Home screen, touch **Where To? > Saved Locations**.

2. Touch the arrows to search different categories, if necessary.
3. Touch an item.

## Finding Recently Found Locations

Your device stores the last 50 locations you have found.

1. From the Home screen, touch **Where To? > Recently Found**.
2. Touch a location.

## Clearing the Recently Found List

Touch **Where To? > Recently Found >  > Clear > OK**.

The list of recently found locations is cleared. These locations are not deleted from the map data.

## Finding Upcoming Events

Search for upcoming events, such as art shows and sporting events.

This service is not available in all areas. This service may be available as a paid subscription. A data connection is required for this feature. Your regular data usage charges apply.

1. From the Home screen, touch **Where To? > Upcoming Events**.
2. Touch a category.
3. Touch the arrows or the date to select a different date, if necessary.
4. Touch an event to view more information.
5. Select an option:
  - If the event begins within two hours, touch **Go!** to navigate to the event.

- If the event begins in more than two hours, touch **Remind Me!** to add the event as an appointment on your calendar.

## Finding Panoramio™ Photos

Panoramio photographs contain information about the location where the photograph was taken. You can use this information to navigate to locations and landmarks shown in Panoramio photographs.

This service is not available in all areas. A data connection is required for this feature.

1. From the Home screen, touch **Where To? > Panoramio**.
2. A list of photographs from nearby locations appears.
3. Touch a photograph.


## Finding Gas Prices

This service is not available in all areas. This service may be available as a paid subscription. A data connection is required for this feature. Your regular data usage charges apply.


From the Home screen, touch **Where To? > Gas Prices**.

A list of fuel prices near your current location appears.

## Changing the Fuel Type

1. From the Home screen, touch **Where To? > Gas Prices**.
2. Touch .
3. Touch a fuel type.

## Finding Cities

1. From the Home screen, touch **Where To? > Cities**.
2. Enter the name, and touch **Done**.  
**TIP:** To view a list of nearby cities, touch  **> Nearby Cities**.
3. Touch a city.

## Using the White Pages Phone Directory

This service is not available in all areas. This service may be available as a paid subscription. A data connection is required for this feature. Your regular data usage charges apply.

## Finding by Name

1. From the Home screen, touch **Where To? > White Pages > By Name**.
2. Enter all or part of the last name, and touch **Next**.

3. Enter all or part of the first name (optional), and touch **Next**.
4. Touch **Search**.
5. Enter the postal code, if necessary.

### Finding by Phone Number

This service may not be available for all phone numbers.


1. From the Home screen, touch **Where To? > White Pages > By Phone Number**.
2. Enter the area code and phone number, and touch **Search**.

### Entering Coordinates

If you know the geographic coordinates of your destination, you can use your device to navigate there. This can be especially helpful when geocaching.

1. From the Home screen, touch **Where To? > Coordinates**.
2. Touch a cardinal direction button to change the direction.
3. Touch a field to enter the latitude and longitude data.
4. Touch **View Map**.

### Changing the Map Coordinate Format

1. From the Home screen, touch **Where To? > Coordinates >  > Coordinate Format**.
2. Touch a format.

## Finding Intersections

1. From the Home screen, touch **Where To? > Intersections**.
2. If necessary, touch **Change State/Country** to change the state, the province, or the country.
3. Touch **Enter Street 1**.
4. Enter all or part of the street name, and touch the correct street.
5. Repeat for the second street.
6. Touch the correct intersection, if necessary.

## About Extras

You can download additional content, such as custom POIs, from [www.garminasus.com](http://www.garminasus.com).

Custom POIs are customized points on the map. They can contain alerts that let you know if you are near a designated point or if you are traveling faster than a specified speed.

You can create or download custom POI lists and install them on your device using POI Loader software available at [www.garminasus.com](http://www.garminasus.com). See the POI Loader Help file for more information.

## Finding Extras

1. From the Home screen, touch **Where To? > Extras**.
2. Touch a category.



## Following Your Route

Before you can navigate with your device, you must acquire satellites ([page 29](#)).

### About the Map

From the Home screen, touch **View Map** to display a default 3-D view of your current location. You can change this view by changing the settings for the current usage mode.

You can view your trip log, which is the path you have traveled. The trip log appears as a colored line on the map. See [page 51](#) for more information.

The vehicle icon displays your position on the map.






A speed-limit icon may appear as you travel on major roadways.

## Using the Map

1. Touch **View Map**.
2. Touch anywhere on the map.



- Touch and drag to view different parts of the map.
- Touch  $\oplus$  and  $\ominus$  to zoom in and out.
  - As you zoom out, the map changes to a digital elevation map showing the contours of the area.

- Zoom far out to view a globe. Touch and drag to spin the globe.
- Touch  to rotate the map.
- Touch  to view the map in two-dimensions (2-D).
- Touch  to view the map in three-dimensions (3-D).
- Touch  to center the map on your location.
- Touch anywhere on the map. An arrow points to the location.
- Touch  for more options.

**NOTE:** You can only see detailed map information for areas for which you have maps loaded on your device.

## About Usage Modes

You can navigate to a destination in Driving mode or in Walking mode. The navigation tools vary slightly based on your usage mode.

In Driving mode, your device calculates routes for automobiles. These routes obey traffic rules, such as for one-way streets. Your device uses typical automobile speeds when estimating your arrival time.

In Walking mode, your device calculates routes for walking. These routes avoid highways in favor of smaller streets. Your device uses typical walking speeds when estimating your arrival time. If you have cityXplorer™ maps installed, your device may include public transit systems in walking routes.

## Navigating in Driving Mode

### Starting a Route in Driving Mode

1. Find a location.
2. Touch **Go!** > **Driving**.

**NOTE:** When the device is in the mount, **Driving** is automatically selected.

The device creates a route to the location and opens the map.

### Using the Map to Navigate in Driving Mode

Your route is marked with a magenta line.

As you travel, your device guides you to your destination with voice prompts, arrows on the map, and directions at the top of the map.

If you deviate from the original route,

your device recalculates the route and provides new directions.



- ① Touch to view the next turn.
- ② Touch to view the route details.
- ③ Touch to view the Traffic menu, when available. Traffic services require an additional subscription and data plan charges.
- ④ Touch to open the Where Am I? page.
- ⑤ Touch to view the trip computer.

### Viewing the Route Details

When you are navigating in Driving mode, you can view all of the turns for your entire route and the distance between turns.

1. While navigating to a destination, touch the text bar on the top of the map.



2. Touch a turn on the list to view details for the turn.

### Viewing the Entire Route on the Map

 
1. From the map, touch the text bar on the top of the screen.
2. Touch **View Map**.

The map appears with your route marked with a magenta line.

### Viewing the Next Turn

When you are navigating in Driving mode, you can view the turn on the map and the distance and time left before you reach the turn.

1. While navigating to a destination, touch the turn indicator on the map.

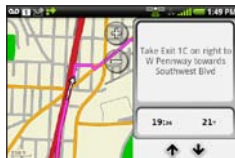

2. Touch the arrows to see more turns in the route.

### Viewing the Trip Computer in Driving Mode


The trip computer displays a compass, your current speed, and other helpful statistics about your trip.

While you are navigating in Driving mode, from the map, touch **Speed** or **Arrival**.



## Resetting the Trip Computer in Driving Mode

Reset the trip computer before beginning a trip.

1. When you are navigating in Driving mode, from the map, touch **Speed** or **Arrival** > .
2. Touch an item to reset.

## Avoiding Road Features

1. From the application tray, touch **Settings** > **Navigation** > **Automobile** > **Avoidances**.
2. Select the check boxes to mark the road features to avoid.

## About Traffic

This service is not available in all areas. This service may be available as a paid subscription. A data connection is required for this feature. Your regular data usage charges apply.

**NOTE:** Garmin and ASUS are not responsible for the accuracy of the traffic information.

## About the Traffic Icon

The traffic icon on the map changes color to indicate the severity of traffic conditions.

| Icon   | Definition  |
|--------|---|
| Gray   | Traffic information is not available.   |
| Green  | Traffic is flowing freely.  |
| Yellow | Traffic is moving but there is a delay. There is moderate traffic congestion. |

| Icon | Definition  |
|------|---|
| Red  | Traffic is not moving or moving very slowly. There is a severe delay. |

### Traffic on Your Route


When calculating your route, the device examines the current traffic and automatically optimizes the route for the shortest time. If a severe traffic delay occurs on your route while you are navigating, the device automatically recalculates the route. You might still be routed through traffic if no better alternative routes exist.

If a non-severe traffic delay occurs on your route, the traffic icon displays how much time the delay has added to your route. This time is already included in your estimated arrival time.

### Changing Traffic Avoidance Settings

1. From the application tray, touch **Settings > Navigation > Automobile > Avoidances**.
2. Select or clear the **Traffic** check box.

### Manually Avoiding Traffic on Your Route

1. On the Map page, touch the traffic icon.
2. Touch **Traffic On Route**.
3. Touch the arrows to select a traffic delay, if necessary.
4. Touch  > **Avoid** to avoid the selected traffic delay.

You might still be routed through traffic if no better alternative routes exist.

## Viewing the Traffic Map

The traffic map displays color-coded traffic flow and delays on nearby roads.

1. On the Map page, touch the traffic icon.
2. Touch **Show Traffic Map**.

To return to the normal map, touch the traffic icon, and touch **Show Normal Map**.

## Viewing Traffic Delays

1. On the Map page, touch the traffic icon.
2. Touch **Traffic Search** to view a list of traffic delays.
3. Touch an item to view the delay on a map and details about the delay.
4. If there is more than one delay, touch the arrows to view the additional delays.

## Navigating in Walking Mode

### Starting a Route in Walking Mode

1. Find a location.
2. Touch **Go! > Walking**.

**NOTE:** The device must be out of the mount to be able to select **Walking**.

The device creates a route to the location and opens the map.


### Using the Map to Navigate in Walking Mode

Your route is marked with a magenta line.




- 1 Touch to view the next or previous turn.
- 2 Touch to view the itinerary page.
- 3 Touch to view the Where Am I? page.

### Viewing the Itinerary Page



While navigating a route in Walking mode, touch  > **View Itinerary**.

### Using the Compass to Navigate

1. From the Map page, touch  > **Trip Computer**.  
As you travel, the compass rotates to indicate your direction of travel.
2. Move in a circle until the arrow points at the bug indicator.  
The bug indicator is the inverted triangle at the top of the compass, which indicates your current heading.
3. Continue traveling in this direction, toward your destination.





## Calibrating the Compass

1. From the Home screen, touch **View Map** >  > **Trip Computer** >  > **Calibrate Compass**.
2. Follow the on-screen instructions.


## Resetting the Trip Computer in Walking Mode

Reset the trip computer before beginning a trip.

1. From the Home screen, touch **View Map** >  > **Trip Computer** > .
2. Touch an item to reset.

## Taking a Detour

While navigating a route, you can use detours to avoid obstacles ahead of you, such as construction zones.

1. While navigating a route, touch .
2. Select an option:
  - From the application tray, touch **Detour** when in Driving mode.

- From the application tray, touch **Recalculate** when in Walking mode.


If the route you are currently taking is the only reasonable option, the device might not calculate a detour.

## Stopping the Route


1. While navigating a route, touch .
2. From the application tray, touch **Stop**.

## Working with Routes


### Adding Points to the Active Route

1. While navigating a route, touch .
2. From the Home screen, touch **Where To?**.
3. Select an option for the search area.
4. Touch the intermediate location.
5. Touch **Go!** > **Insert Via Point**.




## Saving the Active Route

1. While navigating a route, touch .
2. From the application tray, touch **Routes > Current Route > Edit > Save.**


## Planning a Route

1. From the application tray, touch **Routes > Create New Route > Add Location.**
2. Select the location:
  - Touch the location on the map.
  - Touch , and search for the location.
3. Touch **Select this Location > Add Location.**
4. Repeat steps 2 and 3.
5. Touch **Save.**


## Editing a Saved Route

1. From the application tray, touch **Routes.**
2. Touch a route.
3. Touch **Edit.**
4. Edit the route:
  - Touch **Add Location** to add more locations.
  - Touch and drag  or  to move the location down or up in the route.
  - Touch  to delete a location.

## Optimizing and Reversing a Saved Route

1. From the application tray, touch **Routes.**
2. Touch a route.
3. Touch **Edit >  > Optimize Route or Reverse Route.**
4. Touch **Save.**

## Deleting a Saved Route

1. From the application tray, touch **Routes**.
2. Touch a route.
3. Touch **Edit** >  > **Delete Route** > **OK**.

## Starting Navigation of a Saved Route


1. From the application tray, touch **Routes**.
2. Touch a route.
3. Touch **Go!**.

## Viewing Your Trip Log

You can record the path you travel (called a trip log) and display it as a dotted line on the map.

1. From the application tray, touch **Settings** > **Navigation**.
  2. Select **Automobile** or **Pedestrian**.
  3. Select the **Trip Log** check box.
- The trip log appears on the map.

## Clearing the Trip Log

From the application tray, touch **Settings** > **Navigation** >  > **Clear Trip Log**.


## Sending and Receiving Messages

Your regular messaging fees apply when sending and receiving messages.

### Sending an Text Message


You can send Short Message Service (SMS) text messages.

1. From the application tray, touch **Messaging > New Text Message**.
2. Touch **To** to enter a recipient:
  - Enter a phone number or a contact name, and touch **Done**.
  - Touch **Add from Contacts**, and touch a contact from your Contacts list.
3. Touch **Message**.
4. Enter the text message.

5. Touch  for additional options:
  - Touch **Attach** to add attachments such as media, contacts, or events.
  - Touch **Add Subject** to add a subject line.
  - Touch **Add CC** to add carbon-copy recipients.
  - Touch **Call** to place a phone call.
  - Touch **Add to Contacts** to add the number to your contacts list.
  - Touch **View Contact** to view the contact information for the recipient, if available.
  - Touch **Discard** to discard the text message without saving it.
  - Touch **Delete Thread** to delete the entire text thread.
6. Touch **Send**.

## About Multimedia Messages

A multimedia (MMS) message is similar to a text message, but it includes an attachment, such as a photo, a video, a contact, or a calendar event.


While creating a text message, touch  > **Attach** to add a multimedia attachment.

The following multimedia attachments are available:

- **Photo/Video**—a saved photo or a saved video.
- **Camera**—a new photo or a new video.
- **Slideshow**—a series of photographs or videos.
- **Audio**—a saved audio recording.
- **Record Audio**—a new audio recording.

- **Contact**—a contact you have saved in Contacts.
- **Calendar Event**—an event you have scheduled in the Calendar.

## Sending an MMS

1. From the application tray, touch **Messaging > New Text Message**.
2. Touch **To**.
3. Enter a recipient.
4. Touch  > **Attach**.
5. Touch a media type.
6. Touch the file to attach.
7. Touch **Message**.
8. Enter the text message.
9. Touch **Send**.



## Sending a Location Message

### CAUTION

Use caution when sharing your location information with others.


---

Location messages allow you to send your current location information to other people.

1. From the application tray, touch **Messaging > New Text Message**.
2. Touch a recipient.
3. Touch  > **Attach > Location**.
4. Select the location:
  - Touch the location on the map.
  - Touch , and search for the location.
5. Touch **Select this Location**.
6. Touch **Message**.
7. Enter the text message.
8. Touch **Send**.

## Reading Messages

A number on the Messaging icon displays the number of unread messages in your inbox.

1. From the Home screen, touch **Messaging**.  
The inbox opens, containing SMS and MMS messages received from other devices.  
Unread messages are displayed in bold.
2. Touch a message to read it.  
**TIP:** Touch and hold a message to view more options.
3. Touch  for more options.

### Replying to a Message

1. From the Home screen, touch **Messaging**.
2. Touch a message.
3. Touch the data entry field.
4. Enter a message, and touch **Send**.


### Forwarding a Message

1. From the Home screen, touch **Messaging**.
2. Touch a message.
3. Touch and hold a message in the thread.
4. Touch **Forward Message**.
5. Touch **To**.
6. Touch a recipient.
7. Touch **Message** to edit the message, if necessary.
8. Touch **Send**.

### Deleting a Message

1. From the Home screen, touch **Messaging**.
2. Touch a message.
3. Touch and hold a message in the thread.
4. Touch **Delete Message**.

### Deleting a Thread

1. From the Home screen, touch **Messaging**.
2. Touch a message.
3. Touch  > **Delete Thread**.

## Using E-mail

### Adding an Exchange ActiveSync E-mail Account

To set up an Exchange ActiveSync account, see [page 91](#).


### Adding an E-mail Account

The device can automatically configure account information for some e-mail accounts. These accounts only require you to enter minimal account information, such as your e-mail address and password.

If additional information is required, the device prompts you to enter the required information. Contact your e-mail account provider for configuration information.




1. From the application tray, touch **E-mail > Other (POP3/IMAP4)**.
2. Enter the e-mail address and the e-mail password, and touch **Done > Save**.
3. If necessary, enter account-configuration information from your service provider.
4. Touch **Next > Save**.



### Sending an E-mail Message

1. From the application tray, touch **E-mail > Compose**.
2. Touch the fields on the screen to enter recipients, to enter a subject, and to add attachments.
3. Touch **Message**.
4. Enter the text message.
5. Touch  for more options (optional).
6. Touch **Send**.



## Viewing an E-mail Message

1. From the application tray, touch **E-mail**.
2. Touch  to check for new e-mail messages, if necessary.
3. Touch an e-mail message.
4. Select an option:
  - Touch  to view the location information, if available.
  - Touch  to open the attachment, if available.
  - Touch **Reply** to compose a reply to the sender.
  - Touch **Reply All** to compose a reply to the sender and all other recipients.


- Touch **Forward** to send the e-mail to another recipient.
- Touch  to delete the e-mail.
- Touch  > **Mark as unread** to display the e-mail as unread in your inbox.

## Deleting E-mail Messages

1. From the application tray, touch **E-mail** > .
2. Touch the messages to delete.
3. Touch **Delete** > **OK**.

The message is deleted from the online e-mail account.


## Changing Folders


1. From the application tray, touch **E-mail**.
2. Touch  > **View Folders**.
3. Touch a folder.

## Searching a Folder

**NOTE:** This only searches the headers of the messages, not the message text.

1. From the application tray, touch **E-mail**.

**TIP:** To search a different folder, touch  > **View Folders**, and touch a folder, if necessary.



2. Touch  > **Search Current Folder**.
3. Enter the search text, and touch **Done**.

## Setting an E-mail Signature


You can set an e-mail signature for each e-mail account you have added.

1. From the application tray, touch **Settings > Applications > E-mail**.
2. Touch an account.
3. Touch **Advanced Settings**.
4. Select the **Use Signature** check box.
5. Touch **Signature**.
6. Enter a signature, and touch **OK**.
7. Touch **Done**.

## Changing E-mail Accounts

1. From the application tray, touch **E-mail**.
2. Touch  and .

## Setting the Default E-mail Account

1. From the application tray, touch **Settings > Applications > E-mail >  > Set Default Account**.
2. Touch an account.
3. Touch **Done**.

## Using Ciao!™

Ciao! periodically sends your location to our partner networks and downloads the most-recent location of your friends. This application only submits your location when you tell it to, unless you enable automatic updates.

This service is not available in all areas. A data connection is required for this feature. Your regular data usage charges apply.

### CAUTION

Use caution when sharing your location information with others.

---

## Registering Your Device and Joining Ciao!


1. From the application tray, touch **Ciao!**.
2. Read and accept the on-screen messages.
3. Follow the steps to register your device.

After registering, you will receive an SMS message for verification.

4. Open the SMS message received from myGarmin.
5. Touch the link to complete the verification process.
6. Touch **OK**.  
The Ciao! registration page opens.
7. Select the check box to verify that you are of legal age to use Ciao!.
8. Touch **Next**.
9. Enter a display name, and touch **Done**.

10. Touch a type of location update:  
**Manual** or **Automatic**.
11. Touch the link to read the terms of service for the displayed network or networks.
12. Touch **Accept**.  
Your location is updated and becomes available to your friends.

## Changing Your Display Name

1. From the application tray, touch **Ciao!** > **My Details** >  > **Change Name**.
2. Enter a new name, and touch **Done**.

## Inviting a Friend

1. From the application tray, touch **Ciao!** > **Invite**.
2. Select an option to find a friend.
3. Touch **Done**.  
Your invited friend must accept the

invitation before you can receive location updates from that friend.

## Accepting or Declining an Invitation

1. From the application tray, touch **Ciao!**.
2. Touch the friend that sent you the invitation.
3. Touch **Accept** or **Decline**.

## Sending a Location Update


From the application tray, touch **Ciao!** > **My Details** > **Send Update**.

## Automatically Sending Location Updates

### **CAUTION**

Use caution when sharing your location information with others.

By default, your location is only sent when you manually send it.

1. From the application tray, touch **Ciao!** > **My Details**.
2. Touch  > **Change Location Updates** > **Automatic** > **Done**.

### Updating Your Status

1. From the application tray, touch **Ciao!** > **My Details** > **Change Status**.
2. Enter a new status message, and touch **Done**.

### Viewing Friends

Your list of friends displays the status of, the distance to, and the direction to your friends.


1. From the application tray, touch **Ciao!**.
2. Touch a friend.

The location for the friend appears on a map.

### Viewing All Friends on the Map

From the application tray, touch **Ciao!** > **View Map**.

### Adding a Friend to Contacts

1. From the application tray, touch **Ciao!**.
2. Touch a friend.
3. Touch  > **Add to Contacts**.

### Sending a Message to a Friend

1. From the application tray, touch **Ciao!**.
2. Touch a friend.
3. Touch **Message**.


## Starting a Route to a Friend's Location

1. From the application tray, touch **Ciao!**.
2. Touch a friend.
3. Touch **Go!**.



## Removing an Invitation

1. From the application tray, touch **Ciao!**.
2. Touch an invited friend.
3. Touch **Uninvite**.



## Removing a Friend

1. From the application tray, touch **Ciao!**.
2. Touch a friend.
3. Touch the information balloon.
4. Touch  > **Remove Friend** > **Yes**.



## Hiding Your Location

- From the application tray, touch **Ciao!** >  > **Hide** > **Hide**.  
Your current location is hidden from your friends.
- To stop hiding, touch **Ciao!** >  > **Stop Hiding** > **Stop Hiding**.

## Viewing Ciao! Networks

1. From the application tray, touch **Ciao!**.
2. Touch  > **Privacy** >  > **Networks**.

## Disabling Ciao!

1. From the application tray, touch **Ciao!**.
2. Touch  > **Privacy** >  > **Disable Ciao!** > **OK**.

All the Ciao! information stored on your device is removed. You no longer send any position updates.












To enable Ciao!, you must join Ciao! again.




## Browsing the Web

1. From the application tray, touch **Browser**.
2. Touch the URL bar.
3. Enter a search term or a URL, and touch **Go**.



## Using the Browser

- Touch  to refresh the current Web page.
- Touch  to stop loading the Web page.
- Touch and drag the screen to scroll the Web page.
- Touch two points near the center of the page, and drag your fingers apart to zoom in.
- Touch two points near opposite edges of the page, and drag your fingers toward the center of the page to zoom out.
- Touch links, text-entry boxes, and other interactive items to activate them.
- Touch and hold interactive items to view a menu of additional options.
- Touch  to return to the previous Web page in your history.
- Touch  to go to the next Web page in your history.
- Touch  to add this Web page to your favorites, if it is not already added.
- Touch  to remove this Web page from your favorites, if it is already added.
- Touch  to view a list of recently viewed Web sites () , favorite Web sites () , and most viewed Web sites () .
- Touch  to view other active browser windows.

- Touch  to use the following options:
  - Touch **Share** to send the URL in a text message or an e-mail.
  - Touch **Find on Page** to find text in the current Web page.
  - Touch **Select Text** to copy text from the current Web page to the system clipboard. Touch and drag across the text to copy. When you lift your finger, the selected text is copied to the clipboard.
  - Touch **View Downloads** to view your Download History.

## Viewing Multiple Browser Windows

You can view another Web page without closing the current page by launching another browser window.

1. From the application tray, touch **Browser** >  > **New Page**.
2. Touch the URL bar to enter a web address, and open the new Web page.
3. Touch .
4. Touch an active browser window.

## Saving a Web Page to Favorites


1. Open to the Web page to save.
2. Touch .

When you view one of your favorite Web pages,  appears gold.



## Removing a Web Site from Favorites

1. Open to the Web page to remove.
2. Touch .

## Opening a Favorite Web Page

1. From the application tray, touch **Browser** >  > .
2. Touch a Web page to view in the browser.


## Viewing Your History

1. From the application tray, touch **Browser** >  > .
2. Touch a Web page to view in the browser.


## Clearing Your Web Page History

From the application tray, touch **Settings** > **Applications** > **Browser** > **Clear History** > **Yes**.




## Sharing a URL

1. From the application tray, touch **Browser** > .
2. Touch a category.
3. Touch and hold a Web page.
4. Touch **Share**.
5. Select an option to send the URL.

## Opening a Web Site in a New Window

1. From the application tray, touch **Browser** > .
2. Touch a category.
3. Touch and hold a Web page.
4. Touch **Open in New Window**.


## Deleting a Web Site from a List

1. From the application tray, touch **Browser** > .
2. Touch a category.
3. Touch .
4. Touch  next to the Web site to remove from the list.
5. Touch again to delete.
6. Touch **Done**.

## Setting Your Browser Home Page

1. From the application tray, touch **Settings** > **Applications** > **Browser** > **Set Home Page**.
2. Enter a URL, and touch **OK**.

## Downloading Files

1. From the application tray, touch **Browser**.
2. Open a Web page that contains a download link.
3. Touch the download link.  
The download history page appears, and a progress bar indicates the status of the download.
4. Touch  to use the following options:
  - Touch **Clear All** to clear the download history. This option does not remove downloaded files from the device.
  - Touch **Pause All** to pause all in-progress downloads.
  - Touch **Resume All** to resume all paused downloads.

- Touch **Cancel All** to cancel all in-progress downloads. This option does not remove downloads that have already completed.
5. When the progress bar is full, touch the file name to view the downloaded file.

### View Download History

From the application tray, touch **Browser** >  > **View Downloads**.

## Playing Music

### Music Player File Types


The music player supports the following file types:

- MP3
- MPEG4
- WMA
- AAC/AAC+/eAAC+
- WAV
- MIDI

All supported music files on your device are displayed in the Music Player.


## Playing a Song

You must transfer music files to your device before playing songs or creating playlists. For more information on transferring files, see [page 95](#).

1. From the application tray, touch **Music**.
2. Select an option:
  - Touch **All Songs**.
  - Touch a category and a subcategory, if necessary.All the songs in the selected category are added to the current playlist.
3. Select an option:
  - Touch a song.
  - Touch .




The music player plays the song and the following songs.

## Searching for a Song

1. From the application tray, touch **Music**.
2. Touch .
3. Enter all or part of the song, the album, or the artist.
4. Touch **Done**.

## Changing the Music Player View


While playing a song, touch the following icons to change the music player view:


- Touch  to view the current playlist.
- Touch  to view the current track, the cover art, and a progress slider.
- When using the playlist view, touch  > **Browse Music Library** to browse the music library without stopping the music.

## About Playlists


A playlist is a list of songs that can be saved. The current playlist appears on the playlist screen of the music player. You can also create and save playlists for future playback.

## Creating a Playlist





1. From the application tray, touch **Music > Playlists > +**.
2. Enter a new name, and touch **Save**.
3. Touch the new playlist.
4. Touch .
5. Touch a category and subcategories, if necessary.
6. Select the check box next to each song to add to the playlist, and touch **Add to Playlist**.
7. Repeat steps 5–6 to add additional songs.
8. Touch **Done > Save**.

- To change the order of the playlist, touch  and drag the song to a new position in the list.
- Touch **Save**.

### Playing a Playlist

- From the application tray, touch **Music > Playlists**.
- Touch a playlist.
- Select an option:
  - Touch .
  - Touch a song to begin playing the playlist.

### Editing a Playlist

- From the application tray, touch **Music > Playlists**.
- Touch a playlist.
- Touch  > **Edit Playlist**.
- Select an option to edit the playlist:
  - Touch  to add songs to the playlist.
  - Touch  to remove a song from the playlist.
  - Touch and hold , and drag the song to a new position in the playlist.
- Touch **Save**.



## Saving a Song as a Ringtone

1. From the music player playlist view, touch and hold the song.
2. Touch **Use as phone ringtone**.

### Thomson MPEG Layer-3 Information


Supply of this product does not convey a license nor imply any right to distribute content created with this product in revenue-generating broadcast systems (terrestrial, satellite, cable and/or other distribution channels), streaming applications (via internet, intranets and/or other networks), other content distribution systems (pay-audio or audio-on-demand applications and the like) or on physical media (compact discs, digital versatile discs, semiconductor chips, hard drives, memory cards and the like). An independent license for such use is required. For details, please visit

<http://mp3licensing.com>.

## Streaming Online Music

You can stream supported music files without saving them on the device.

1. From the application tray, touch **Browser**.
2. Select an option:
  - Enter a URL.
  - Navigate to a page with a link to a supported music file.
3. Touch the music file link.

The music player launches and plays the song. The URL for the song appears.
4. If possible, touch  > **Save** to save the song.

## Taking and Viewing Pictures and Videos

**NOTE:** If it is not already removed, remove the plastic film from the camera lens before using the camera.




### Taking a Picture

1. Press the **Camera** key on the side of the device.
2. Use the screen as a viewfinder, and point the camera lens at the subject to photograph.
3. Lightly press the **Camera** key.

A flashing gray box appears on the screen. The device focuses on the object inside of the box. When the camera is in focus, the box turns green and stops flashing.


4. Press and hold the **Camera** key, and hold the camera still.

When you hear the camera click, the photo is taken and displayed for review for 3 seconds..

5. Select an option:
  - Touch  for more options, such as to set the image as the wallpaper or a contact icon.
  - Touch  to share the image.
  - Touch  to erase the image.
  - Wait for the image to clear to take a new image.


 

### Taking a Picture with GPS Information

If you are receiving GPS signals, the device can assign a GPS location to the photo.


1. Press the **Camera** key on the side of the device.
2. Touch  > **Yes**.

- Use the screen as a viewfinder, and point the camera lens at the subject to photograph.
- Press and hold the **Camera** key, and hold the camera still.  
When you hear the camera click, the photo is saved.

## Recording a Video

- Press the **Camera** key on the side of the device.
- Use the screen as a viewfinder, and point the camera lens at the subject to photograph.
- Touch  to begin recording.
- Touch  to stop recording.  
The video is saved automatically.  
**TIP:** Touch  to find and view the video.

## Changing the Camera and Video Settings

- Press the **Camera** key on the side of the device.
- Touch  > **Options**.
- Select an option to change the setting:
  - Touch **Lighting Adjustment** to select a lighting condition, or select **Automatic**.
  - Touch **Picture Resolution** to select the resolution at which to capture photos. Higher settings use more storage memory to provide better-quality photos.
  - Touch **Shutter Sound** to turn the shutter sound on or off.
  - Touch **Auto Review** to turn the review page on or off. The review page displays the photo briefly after you take it.

- Touch **Video Quality** to select the resolution at which to record video.

**NOTE:** **Video Quality** can only be adjusted when MP4 is selected as the **Video Format**.

- Touch **Video Format** to select the video format to use when saving videos.

## About Picture and Video File Types

Your device supports the following file types:

- Picture: JPEG, PNG, BMP
- Video: 3GP, WMV, MP4

For more information on copying files from your computer to your device, see [page 95](#).

## About the Gallery

You can view and edit pictures and videos using the Gallery.



Opening the Gallery from the application tray allows you to view all pictures and videos stored on the device.

Opening the Gallery from the Camera allows you to view only pictures and videos that you have taken with the device camera.

## Viewing Pictures

1. From the Application tray, touch **Gallery**.
2. Touch a picture.
3. Touch the arrows to view additional photos.


## Viewing a Video

1. From the Application tray, touch **Gallery**.
2. Touch a video.  
Videos are indicated by .
3. Touch  to play the video.
4. Touch the screen to view the playback controls.


## Viewing a Slideshow

1. From the Application tray, touch **Gallery**.
2. Touch .

## Adjusting the Slideshow Interval


1. From the Application tray, touch **Gallery** >  > **Slideshow Interval**.
2. Touch an interval, and touch **OK**.

## Sharing Pictures and Videos


1. From the Application tray, touch **Gallery**.
2. Touch the picture or video.
3. Touch .
4. Select an option to send the image.

## Setting Your Wallpaper


You can select and prepare a photo to serve as wallpaper when the device screen is locked.

1. From the Application tray, touch **Gallery**.
2. Touch a picture.
3. Touch  > **Set As** > **Wallpaper**.
4. Touch and drag the edges of the rectangle to crop the photo.
5. Touch **Save**.

## Editing Pictures and Videos


1. From the Application tray, touch **Gallery**.
2. Touch a picture or a video.
3. Touch , and select an option:
  - Touch **Set As** to set the photo as the wallpaper or a contact icon.
  - Touch **Rotate** to turn the photo left or right.
  - Touch **Crop**, touch and drag the edges of the rectangle to crop the photo, and touch **Save**.
  - Touch **Rename**, enter a new name for the photo or the video, and touch **Save**.

## Adding a Picture to a Contact

1. From the Application tray, touch **Gallery**.
2. Touch a picture.
3. Touch  > **Set As** > **Contact icon**.
4. Touch a contact.
5. Touch and drag the edges of the square to crop the photo.
6. Touch **Save**.

## Starting a Route to a Photograph

You can route to photographs that have GPS location information (see [page 74](#)).

1. From the Application tray, touch **Gallery**.
2. Touch a picture.
3. Touch  > **Go!**.

## **MPEG-4 EULA**

This product is licensed under the MPEG-4 Visual Patent Portfolio License for the personal and non-commercial use of a consumer for (i) encoding video in compliance with the MPEG-4 visual standard (“MPEG-4 Video”) and/or (ii) decoding MPEG-4 video that was encoded by a consumer engaged in a personal and non-commercial activity and/or was obtained from a video provider licensed by MPEG LA to provide MPEG-4 video. No license is granted or shall be implied for any other use. Additional information including that relating to promotional, internal, and commercial uses and licensing may be obtained from MPEG LA, LLC. See [www.MPEGLA.com](http://www.MPEGLA.com).





## **AVC EULA**




This product is licensed under the AVC Patent Portfolio License for the personal and non-commercial use of a consumer to (i) encode video in compliance with the AVC standard (“AVC Video”) and/or (ii) decode AVC video that was encoded by a consumer engaged in a personal and non-commercial activity and/or was obtained from a video provider licensed to provide AVC video. No license is granted or shall be implied for any other use. Additional information may be obtained from MPEG LA, LLC. See [www.MPEGLA.com](http://www.MPEGLA.com).

## Organizing Your Life


You can synchronize your phone with your computer or Exchange account to keep your in-box and calendar up-to-date in both locations (pages 90–91).

### Using the Calendar

1. From the application tray, touch **Calendar**.
2. Use any of the following options:
  - Touch  or  to change the day or the month.
  - Touch  to add an appointment.
  - Touch  to view the current day. The number in the circle is the current day of the month.

- Touch  to view your upcoming appointments.
- Touch  to view the daily calendar.
- Touch  to view the monthly calendar. The current day is circled in red.






### Creating an Appointment

1. From the application tray, touch **Calendar**.
2. Touch .
3. Touch **Subject**.
4. Enter a subject, and touch **Done**.
5. Touch **Location**.
6. Select an option to enter a location:
  - Enter the full address or location name, and touch **Done**.
  - Touch **Add Location**, find a location, and touch **Select this Location > Done**.




7. Select the duration of the appointment:
  - Select a start time and an end time.
  - Select the **All Day** check box to create an all-day appointment.
8. Touch **Repeat**, select how often the appointment recurs, and touch **Save**, if necessary.
9. Touch **Calendar** to select a calendar, if you have more than one calendar on the device.
10. Touch **Invites** to invite people to the appointment, if necessary.
11. Touch **Save**.

## Viewing an Appointment

1. From the application tray, touch **Calendar**.
2. Select an option, if necessary:
  - Touch  or  to change the day or the month.
  - Touch  to view an agenda of upcoming appointments.
  - Touch  to view appointments for today.
  - Touch  to select a date on the monthly calendar.
3. Touch an appointment to view details.

## Starting a Route to an Appointment

If the appointment has location information, you can start a route to the location.

1. From the application tray, touch **Calendar**.
2. Touch the appointment.
3. Touch  > **Go!**.

## Viewing a Document



You can view the following document types using the document viewer: Microsoft® Word, Excel®, PowerPoint®, Adobe® PDF, HTML, and plain text files. For more information on transferring files, see [page 95](#).




1. From the application tray, touch **Document Viewer**.

**TIP:** To display files of a certain type, touch  > **Show By File Type**, and touch a file type.






2. Touch the document.

**NOTE:** You can also open a document attached to an e-mail or linked on a Web page.

3. Use any of the following options:
  - Touch  or  to move backward or forward one page.
  - Touch **Page**, and enter a page number.
  - Touch two points near the center of the page, and drag your fingers apart to zoom in.
  - Touch two points near opposite edges of the page, and drag your fingers toward the center of the page to zoom out.

- Touch  > **Search** to search the document.
- Touch  > **Rotate** to rotate the document 90° clockwise.
- Touch  > **Share** to e-mail the document.

### Searching a Document

1. Open the document in the Document Viewer (see [page 82](#)).
2. Touch  > **Search**.
3. Enter a search term, and touch .
4. Touch  or  to find the next occurrence or the previous occurrence of the search term.
5. Touch  to close the search bar.

### Checking the Weather Forecast

This service is not available in all areas. A data connection is required for this feature. Your regular data usage charges apply.




**TIP:** To change the units of measure, see [page 98](#).

1. From the application tray, touch **Weather**.

The current local weather conditions and a six-day forecast are displayed.

2. Touch a day to view a detailed forecast for that day.


## Viewing the Forecast in Other Cities

1. From the application tray, touch **Weather** >  > **Edit Favorite Cities** > **Add City**.
2. Enter the city name, and touch **Done**.
3. Touch the city.
4. Touch **Done**.
5. Touch  or  to view the forecast in your favorite cities.


## Using the Clock

For information on manually changing the time or the time zone, see [page 101](#).


## Adding Cities to the Time List

1. From the application tray, touch **Clock** >  > **+**.
2. Enter all or part of a city name, and touch **Done**.
3. Touch the city.


## Setting an Alarm

1. From the application tray, touch **Clock** >  > **Add New Alarm**.
2. Touch **Alarm Message**.
3. Enter a message for the alarm, and touch **OK**.
4. Touch **Start**.
5. Select an alarm time, and touch **Done**.
6. Touch **Repeat**.
7. Select how often the alarm should repeat, and touch **OK**.
8. Touch **Ringer**.
9. Touch a ringer, and touch **Done** (optional).
10. Touch **Save**.


## Managing Alarms

- Select or clear the check box next to an alarm to enable or disable the alarm.
- To delete an alarm, touch an alarm, and touch  > **Delete Alarm**.
- When the alarm sounds, touch **Snooze** to hear the alarm again in 10 minutes, or touch **Dismiss**.

## Using the Stop Watch

1. From the application tray, touch **Clock** > .
2. Touch **Start** to start the timer.
3. Touch **Lap** to record the lap time and the split time (optional).
4. Touch **Stop** to stop the timer.
5. Touch the **Split** and **Lap** times to view details (optional).
6. Touch **Reset** to reset timer (optional).


## Viewing the World Map

1. From the application tray, touch **Clock** > .  
The globe displays areas of daylight and night across the world.
2. Use any of the following options:
  - Touch and drag the globe to change the speed or the direction of rotation.
  - Touch the globe to stop the rotation.
    - When the globe is stopped, touch again to view a flat map view.
    - Touch the map to switch back to the globe view.

## Using the Converter

### Converting Units

1. From the application tray, touch **Converter**.
2. Touch the button next to **Convert**.
3. Touch the type of items to be converted, and touch **Done**.
4. Touch a unit of measurement.
5. Touch the unit type, and touch **Done**.
6. Touch a number.
7. Enter the number of units to be converted.
8. Touch **Done**.

**TIP:** To clear the number of units, touch  > **Clear**.

### Converting Currency

1. From the application tray, touch **Converter**.
2. Touch the button next to **Convert**.
3. Touch **Currency > Done**.
4. Touch a currency button.  
**TIP:** Touch and drag the tab to quickly scroll through the currencies.
5. Touch a currency, and touch **Done**.
6. Touch the amount below the currency to convert.
7. Enter the amount, and touch **Done**.


## Updating the Currency Rates

A data connection is required for this feature.

1. From the application tray, touch **Converter**.
2. Touch the button next to **Convert**.
3. Touch **Currency > Done > Update**.

## Setting Conversion Rates Manually

1. From the application tray, touch **Converter**.
2. Touch the button next to **Convert**.
3. Touch **Currency > Done**.
4. Touch a currency button.
5. Touch the currency for which you want to set the conversion rate, and touch **Done**.

6. Repeat step 5 to set the other currency, if necessary.
7. Touch  > **Custom**.
8. Touch a conversion tab to change how the currencies are converted.
9. Touch a conversion rate.
10. Enter a new conversion rate, and touch **Done**.

## Checking Flight Status

A data connection is required for this feature. Your regular data usage charges apply.

1. From the application tray, touch **Flight Status**.
2. Touch a search option:
  - Touch **Current Location** to search for flights in airports near your current location.

- Touch **Another City** to search for flights in airports near the city you select.

A list of airports appears. Major airports are listed first, and all other airports are sorted by distance.

3. Touch an airport.

**TIP:** Touch  to view the airport on the map.

4. Select an option.
5. Touch a flight.

### Finding Movie Times

This service is not available in all areas. A data connection is required for this feature. Your regular data usage charges apply.

### Finding a Movie by the Title

1. From the application tray, touch **Movie Times > Movies**.
2. Touch the arrows or the date to select a different date, if necessary.
3. Touch a movie.
4. Touch **Theatres**.
5. Touch a theatre.
6. Select an option.

### Finding a Movie by Theatre

1. From the application tray, touch **Movie Times > Theatres**.
2. Touch a theatre.
3. Touch the arrows or the date to select a different date, if necessary.
4. Touch a movie.
5. Select an option.



## Starting a Route to a Movie Theatre

After you select a movie and a theatre, you can create a route to the theatre.

Touch **Go!**.

## Setting an Appointment for a Movie

After you select a movie and a theatre, you can set an appointment for the movie time.

1. Touch  > **Remind Me**.
2. Touch a movie time.

## Connecting with Other Devices

### Synchronizing Your Device with Your Computer

Synchronize your device with your computer to transfer your contacts and calendar events to your device.

#### Downloading and Installing Garmin-Asus PC Sync

**NOTE:** Garmin-Asus PC Sync software is not compatible with Mac® computers.

1. Go to [www.garminasus.com/pcsync](http://www.garminasus.com/pcsync).
2. Follow the on-screen instructions to download and install Garmin-Asus PC Sync software.

### Synchronizing With Your Computer

1. Verify that you have downloaded and installed Garmin-Asus PC Sync software on your computer.
2. Connect the mini-USB cable to the connector on the bottom of the device.
3. Connect the mini-USB cable to a USB port on your computer.
4. Touch **Sync**.

Your Microsoft Outlook® contacts, calendar events, and tasks are synchronized with your device contact list and calendar.

## Synchronizing Your Device with an Exchange Server

Synchronize your contacts, calendar, and e-mail with an Exchange ActiveSync account. You must have a data connection to use this feature.

### Setting Up your Exchange ActiveSync Account

Contact your network administrator to obtain the necessary information for your network.

1. From the application tray, touch **E-mail > Exchange ActiveSync**.
2. Enter your e-mail address and your e-mail password, and touch **Next**.
3. Enter the necessary information.
4. Select the **Use SSL Encryption** check box, if necessary
5. Touch **Next**.

The device verifies the account settings.


### About Exchange ActiveSync

The device will not synchronize with your Exchange ActiveSync account until the account is verified. You can edit your account settings to update or verify your account.

You can select which types of data to synchronize in the sync settings.

### Editing your Exchange ActiveSync Account

Contact your network administrator to obtain the necessary information for your network.

1. From the application tray, touch **Settings > Sync > Exchange ActiveSync > Account Info**.
2. Edit the fields as necessary.
3. Touch .
4. Select an option:

- Touch **Yes** to verify your account.
- Touch **No** to save the changes without verifying.

## Synchronizing with a Google™ Account

You can synchronize your Google account data with the calendar, contacts, and Google Mobile wireless services.

1. From the application tray, touch **Settings > Sync > Google > Next**.
2. Select an option:
  - Touch **Sign In** to sign into an existing Google account. Enter your user name and password, and touch **Sign In**.
  - Touch **Create** to create a new Google account. Follow the on-screen instructions.

**NOTE:** After you associate your device with a Google account, you cannot associate it with a different Google account unless you clear all user data.

3. Select the types of data you want to synchronize.

Data in your Google account synchronizes automatically with the applications on your device.

## Adjusting the Google Sync Settings

After you have set up the Google synchronization, you can change how your device synchronizes data in the sync settings.

From the application tray, touch **Settings > Sync > Google > Account Info**.

## Using Bluetooth Technology

Use Bluetooth wireless technology to connect with other devices wirelessly.

### Turning On Bluetooth


1. From the application tray, touch **Settings > Wireless Manager > Bluetooth**.
2. Select the **Bluetooth** check box.

### Making Your Device Discoverable

1. From the application tray, touch **Settings > Wireless Manager > Bluetooth**.
2. Select the **Bluetooth** check box.
3. Select the **Discoverable** check box.

### Pairing with a Device

You can wirelessly connect to a device with Bluetooth technology.

1. Place the device to pair with in discoverable/pairing mode.
2. From the application tray, touch **Settings > Wireless Manager > Bluetooth**.
3. Select the **Bluetooth** check box.
4. Touch  > **Scan for Devices**.

**NOTE:** You might have to wait a moment for the names of the devices to appear.

5. Select the device to pair with in the list.
6. Enter the passkey of the device, and touch **OK**.

## Connecting to a Paired Device

Before you can connect to another device, you must pair it with your device.

1. From the application tray, touch **Settings > Wireless Manager > Bluetooth**.
2. Touch a paired device.
3. Touch **Connect**.

## Changing Your Device Name

You can change the name that identifies your device on other Bluetooth devices.

1. From the application tray, touch **Settings > Wireless Manager > Bluetooth**.
2. Select the **Bluetooth** check box.
3. Touch **Device name**.
4. Enter a name, and touch **OK**.

## Disconnecting a Device

1. From the application tray, touch **Settings > Wireless Manager > Bluetooth**.
2. Touch the device.
3. Touch **Disconnect**.

The device is disconnected, but it remains paired with your device.

## Removing a Paired Device

1. From the application tray, touch **Settings > Wireless Manager > Bluetooth**.
2. Touch the device.
3. Touch **Unpair**.

## Deactivating Bluetooth

1. From the application tray, touch **Settings > Wireless Manager > Bluetooth**.
2. Clear the **Bluetooth** check box.

## Transferring Files

You can transfer files, such as MP3s and JPEGs, to your device.

1. Insert the microSD card (page 2).
2. Connect the mini-USB cable to the connector on the bottom of the device (not the cradle).
3. Connect the cable to your computer. The USB Connected page opens.

4. Touch **File Transfer**.

**NOTE:** If the USB Connected page does not open, open the Notification bar, and touch **USB Connected**.

Two additional drives (volumes) appear in the list of drives on your computer. One is the internal memory of the device. The other is the memory card.

5. Copy and paste the files to be transferred into the appropriate folders in the new drives.

## About File Transfer Mode

### NOTICE


If you are not sure about the purpose of a file, do not delete the file. Your device memory contains important system files that should not be deleted. Be especially cautious of files located in folders entitled “Garmin.”

File transfer mode is also referred to as USB mass storage mode. Use file transfer mode to add files to the device. The computer does not need Garmin-Asus PC Sync installed to use file transfer mode.

## About Wi-Fi



Connect to the Internet using a Wi-Fi connection. You must be in a Wi-Fi coverage area (Wi-Fi hotspot) to use Wi-Fi.

## Connecting to a Wi-Fi Network

1. From the application tray, touch **Settings** > **Wireless Manager** > **Wi-Fi**.
2. Select the **Wi-Fi** check box.  
The device searches for Wi-Fi networks.
3. If necessary, touch  > **Scan**.
4. Touch a network.
5. Enter the network encryption key, if necessary.
6. Touch **Connect**.

## Adding a Network

You can add non-broadcasting networks or other networks that your device does not automatically detect.

1. From the application tray, touch **Settings** > **Wireless Manager** > **Wi-Fi**.
2. Select the **Wi-Fi** check box.
3. Touch  next to **Add Wi-Fi network**.
4. Touch the field below **Network SSID**.
5. Enter the network SSID, and touch **Done**.
6. Touch  below **Security**.
7. Touch a security type.
8. Enter a password, and touch **Done**.
9. Touch **Save**.



## Removing a Remembered Network

After you have connected to a Wi-Fi network, the device remembers the network for future use. Remembered networks appear in the network list even when they are out of range.

1. From the application tray, touch **Settings > Wireless Manager > Wi-Fi**.
2. Touch the network, and touch **Forget**.

## Turning Off Wi-Fi

1. From the application tray, touch **Settings > Wireless Manager > Wi-Fi**.
2. Clear the **Wi-Fi** check box.

# Customizing Your Device

## General Device Settings

From the application tray, touch **Settings > System > General**.

- **Distance**—units of measure for distance.
- **Temperature**—units of measure for temperature.
- **Coordinates**—units of measure for the coordinates format.
- **Safe Mode**—prevents you from entering data when your vehicle is in motion.
- **Saved Parking Spot**—saves your parking spot when you remove the device from the mount while power is applied to it.

- **Share Feedback**—allows Garmin-Asus to collect your speed, your direction, and your location information and share it with strategic partners and service providers.

**NOTE:** This service requires the use of your data plan, and any associated charges would apply.

## Location Settings

From the application tray, touch **Settings > System > Security & Location**.

- **Use wireless networks**—determines your location using Wi-Fi and mobile networks.
- **Enable GPS satellites**—determines your location using GPS satellites.

- **Share with Google**—allows Google applications to use location information.

**NOTE:** This service requires the use of your data plan, and any associated charges would apply.

## Security Settings

### Using a Pattern to Unlock the Screen

When the screen-unlock pattern is turned on, the user must enter a pattern to unlock the device. You can still use the device to contact emergency services without using the screen-unlock pattern.

1. From the application tray, touch **Settings > System > Security & Location > Set unlock pattern**.
2. Follow the on-screen instructions to create an unlock pattern.

If you forget your pattern, contact Product Support at [www.garminasus.com](http://www.garminasus.com). Your device can be unlocked, but all personal information is erased in the process. See [page 111](#) for more information.

### Locking the SIM Card

Use these settings to require a PIN to enable all non-emergency features of the device. You can still use the device to contact emergency services without a PIN. You can remove the SIM card to use the non-telephone features of the device.

1. From the application tray, touch **Settings > System > Security & Location > Lock SIM card**.
2. Enter a PIN, and touch **OK**.

If you forget your SIM PIN, contact your mobile service carrier to obtain a Personal Unblocking Key (PUK).

## Viewing Passwords as you Type Them

1. From the application tray, touch **Settings > System > Security & Location**.
2. Select the **Visible passwords** check box.

## Setting a Credential Storage Password

You can store security credentials, such as passwords and certificates, for quick access.

1. From the application tray, touch **Settings > System > Security & Location > Use secure credentials**.
2. Enter a password, and touch **OK**.

## Changing the Text Language

**NOTE:** Changing the text language does not change the language of map data, such as street names or user-entered data.

1. From the application tray, touch **Settings > System > Language > Text**.
2. Touch a language for all on-screen text.

## Keyboard Settings

From the application tray, touch **Settings > System > Keyboard**.

- **Vibrate on Key Press**
- **Portrait Keyboard**—sets the keyboard mode used when the device is in portrait view: **Phone Pad** or **QWERTY**.

- **Auto Capitalization**—automatically capitalizes the first word in a field.
- **Text Completion**—displays suggested words as you enter text.
- **Enable Keyboards**—enables keyboards for different languages.
- **Date Format**—sets the date format.
- **Time Format**—sets the time format to **12-Hour**, **24-Hour**, or **UTC**.

## Date and Time Settings

From the application tray, touch **Settings > System > Date/Time**.

- **Automatic**—uses the network settings for the date and time.
- **Set Date**—allows you to set the date manually.
- **Set Time**—allows you to set the time manually.
- **Set Time Zone**—allows you to select a time zone manually.

## Changing the Storage Settings

1. From the application tray, touch **Settings > System > Storage**.
2. Scroll to view the total space and the available space for each storage type.
3. Touch **Change default storage**.
4. Select **Internal storage** or **SD card**.
5. Touch **OK**.

## Data Connection Settings

From the application tray, touch **Settings > Wireless Manager > Data**.

- **Data Connection**—turns on the data connection.  
**NOTE:** Data charges apply when the data connection is **On**.
- **Data roaming**—turns on the data connection when roaming.  
**NOTE:** There may be additional charges from your service provider to use the data connection while roaming.
- **Access Point Names**—displays connected data service access points.

## Phone Settings

From the application tray, touch **Settings > Phone**.

- **Call Forwarding**—see [page 22](#).
- **Call Barring**—see [page 22](#).
- **Call Waiting**—see [page 18](#).
- **Send My Caller ID**—sets a preference for sending caller ID information when you make phone calls.
- **Voice Mail Number**—sets the number to access voice mail, usually the same as your phone number.
- **TTY**—enables TTY (teletypewriter) mode. This requires the use of a TTY adapter (part number 010-11371-04), available at [www.garminasus.com/a50/tty\\_adapter](http://www.garminasus.com/a50/tty_adapter).

- **Hearing Aid Mode**—optimizes the phone speaker for use with hearing aids.
  - **Fixed Dialing Numbers**—enables you to set up your device so that it can only dial certain phone numbers ([page 103](#)).
  - **Network operators**—searches for local networks.
4. Enter a name and phone number, and touch **Save**.
  5. Enter the FDN PIN to add the contact to the FDN phone number list.


**NOTE:** You must enter the FDN PIN to disable FDN.

## Audio Settings

From the application tray, touch **Settings > Audio**.

### Enabling and Adding Fixed Dialing Numbers

To change Fixed Dialing Numbers (FDN) settings, you must acquire the FDN PIN for your SIM card from your service provider.

1. From the application tray, touch **Settings > Phone > Fixed Dialing Numbers > Enable FDN**.
  2. Enter the FDN PIN, and touch **OK**.
  3. Touch **Manage FDN List >  > Add contact**.
- **Ringer Mode**—sets the ringer mode ([page 10](#)).
  - **Ringtone**—sets the ringtone for a phone call.
  - **Notifications**—sets the ringtone for notifications, such as text messages.
  - **Touchtones**—plays a tone when you touch the screen.
  - **Ringer, Navigation, or Media**—allows you to adjust the volume levels of each output.

## Navigation Settings

You can use different navigation settings for Automobile (Driving) and Pedestrian (Walking) usage modes.

### Automobile and Pedestrian Navigation Settings

From the application tray, touch **Settings > Navigation > Automobile or Pedestrian**.

- **Route Preference**—sets the preference for calculating routes.
- **Notification Type**—sets the method with which you are notified of maneuvers in the route, available for Pedestrian (Walking) mode only.
- **Map Detail**—sets the level of detail on the map. More detail may result in slower map drawing.
- **Map View**—sets the perspective of the Map page.
  - Track Up displays the map in two dimensions (2-D) with your direction of travel at the top.
  - North Up displays the map in 2-D with North at the top.
  - 3-D displays the map in three dimensions, with Track Up orientation (default).
- **Avoidances**—types of roads and maneuvers the device should attempt to avoid when creating routes, available for Automobile (Driving) mode only available in usage mode.
- **Vehicle or Avatar**—changes the icon that represents your position on the map.
- **Trip Log**—displays the path of your travels on the map.
- **Voice**—sets the language used for all voice prompts and messages. **Preview** plays a sample of the voice.



## Changing Public Transportation Navigation Settings

1. From the application tray, touch **Settings > Navigation > Public Transportation**.
2. Select **Bus, Train, Metrorail, or Long Walks**.


## Changing the Navigation Voice

1. From the application tray, touch **Settings > Navigation > Voice**.
2. Select a language.

**TIP:** Touch **Preview** to play a sample of the voice.

3. Touch **OK**.

## Viewing Map Information

From the application tray, touch **Settings > Navigation >  > Map Info**.

A list of installed maps appears.

**NOTE:** Select or clear the check box next to a map to enable or disable the map.

## Downloading Safety Cameras

### CAUTION

Garmin and ASUS are not responsible for the accuracy of, or the consequences of using, a custom point of interest (POI) or a safety camera database.

This service may be available as a paid subscription. This service is not available in all areas. A data connection is required for this feature.

1. From the application tray, touch **Settings > Navigation > Safety Cameras**.
2. Touch a region or regions, and touch **Done**.

## Application Settings

### Calendar Settings

From the application tray, touch **Settings > Applications > Calendar**.

- **Set Alerts & Notifications**—sets how the device notifies you of an upcoming appointment.
- **Select Ringtone**—sets the ringtone that notifies you of an upcoming appointment.
- **Vibrate**—sets whether the device vibrates to notify you of an upcoming appointment.
- **Set Default Reminder**—sets the default number of minutes before an appointment that the device should notify you of the appointment.
- **Set Snooze Time**—sets the amount of time to snooze when you touch **Snooze** on a calendar notification.

### E-mail Account Settings

From the application tray, touch **Settings > Applications > E-mail**, and touch an account.

- **Your Name**
- **E-mail Address**
- **Password**
- **Account Name**—displays the name for this e-mail account.
- **E-mail Notifications**—sets how you are notified when you receive an e-mail.
- **Select Ringtone**
- **Vibrate**
- **Protocol**
- **Incoming Settings**
- **Outgoing Settings**

- **Advanced Settings:**
  - **Check Interval**—sets the interval to wait before checking for new e-mail.
  - **From Address**
  - **Reply To Address**
  - **Use Signature**
  - **Signature**
- **Auto-retrieve**—retrieves MMS messages automatically when you are not roaming.
- **Roaming auto-retrieve**—retrieves MMS messages automatically when you are roaming.
- **Notifications**—displays a notification in the status bar when you receive a message.

## Messaging Settings

From the application tray, touch **Settings > Applications > Messaging**.

- **Delivery Reports**—requests a delivery report for each SMS and MMS message you send.
- **Manage SIM card messages**—allows you to copy or delete SMS messages stored on your SIM card.
- **Read Reports**—requests a read report for each MMS message you send.

- **Select ringtone**—sets a ringtone to play when you receive a message.
- **Vibrate**—sets how the device vibrates when you receive a message.

## General Browser Settings

From the application tray, touch **Settings > Applications > Browser**.

- **Set Home Page**—sets the browser home page.
- **Block Pop-ups**—blocks pop-up windows while browsing.

- **Auto-fit Web Pages**—resizes Web pages to fit the screen.
- **Load Web Page Images**—allows you to view images on Web pages.
- **Set Text Size**—sets the size of text that the Browser uses to display Web pages.
- **Enable JavaScript**—allows JavaScript.
- **Map URL Handling**—adjusts how map URLs are opened:
  - **Enable Support**—allows map URLs to be opened in Garmin maps.
  - **Set as Default**—opens map URLs in Garmin maps by default.

### **Browser Privacy Settings**

From the application tray, touch **Settings > Applications > Browser**.

- **Accept Cookies**
- **Remember Form Data**
- **Clear Cache**
- **Clear History**
- **Clear Cookies**
- **Clear Form Data**

### **Browser Security Settings**

From the application tray, touch **Settings > Applications > Browser**.

- **Remember Passwords**—saves user names and passwords for Web sites.
- **Show Security Warning**—displays a warning when the browser detects a problem with the security of a Web site.

- **Clear Passwords**—clears saved password information.

### Advanced Browser Settings

From the application tray, touch **Settings > Applications > Browser**.

- **Enable Gears**—enables Gears for browser applications. Gears applications add functionality to the browser.
- **Gears Settings**—changes settings for installed Gears applications.

### Quick Search Settings

From the application tray, touch **Settings > Applications > Quick Search**.

- **Searchable items**—sets what is searched when using the Search widget.
- **Clear search shortcuts**—clears the shortcuts to recently selected search results.

- **Google search settings**—changes the search settings for Google Mobile Services.


### Sorting the Contacts

1. From the application tray, touch **Settings > Applications > Contacts**.
2. Touch **Sort by** to select whether to sort your contacts by first name or by last name.

### Managing Applications

#### NOTICE

Cleared data cannot be restored.

1. From the application tray, touch **Settings > Applications > Manage applications**.  
A list of applications appears, showing the amount of memory used for each application.
2. Touch  to sort or filter the list (optional).

3. Touch an application to view details, including storage size, cache size, defaults, and permissions.
4. Select one or more options:
  - Touch **Clear data** to clear stored data associated with the application.
  - Touch **Clear cache** to clear cached data for the application.
  - Touch **Clear defaults** to clear application defaults.

### Allowing the Installation of Applications

You can allow the installation of applications from outside the Android™ Market.

1. From the application tray, touch **Settings > Applications**.
2. Select the **Unknown Sources** check box.

### Display Settings

From the application tray, touch **Settings > Display**.

- **Brightness**—changes the brightness of the screen. Decreasing the brightness can save battery power. **Auto Brightness** sets the brightness based on the ambient lighting.
- **Color Mode**—sets a light background (**Daytime**), a dark background (**Nighttime**), or automatically switches between the two based on the sunrise time and the sunset time for your current location (**Auto**).
- **Screen Timeout**—sets how the screen automatically shuts off if the device is inactive for the selected length of time.


- **Orientation**—allows the phone to rotate the screen display as you rotate the device.
- **Screen Shot**—allows you to take a picture of the device screen.

### Taking a Screen Shot

1. From the application tray, touch **Settings > Display > Screenshot**.
2. Touch the **Camera** key to take a picture of a screen.

Screen shots are saved in the Screenshot directory on the device.

### Viewing Software Information

1. From the application tray, touch **Settings >  > About**.
2. Touch an item.

### Restoring Settings

From the application tray, touch **Settings >  > Restore**.

### Clearing All User Data

#### **NOTICE**

This process restores all settings to factory defaults and removes all user data.

Any items that you have saved on your device, such as Saved Locations, photos, and contacts, are erased.

Any applications you have purchased and downloaded are removed. You should be able to download and install the applications again.


Map data is not erased.


Deleted information cannot be recovered.

From the application tray, touch **Settings >  > Master Clear**.

## Appendix


### About Satellite Signals

The GPS Status Icons  appears in the upper-right corner of the status bar to indicate the GPS signal strength. When at least one of the lines is green, your device has acquired satellite signals.

The more green lines, the stronger the GPS signal. If the device is not receiving GPS signals,  appears.

For troubleshooting information about acquiring satellites, see [page 118](#).

### Viewing Detailed GPS Signal Information

1. From the application tray, touch **Where Am I?**
2. Touch the information balloon.
3. Touch  > **Satellite Info**.

### About Connected Services


Use connected services to search for location-relevant information such as traffic, weather data, and flight status.

These services are not available in all areas. A data connection is required for these services. Your regular data usage charges apply.

Additional services may be available with a subscription. For more information, go to [www.garminasus.com](http://www.garminasus.com).



## Battery Information

The  icon in the status bar indicates the status of the internal battery. To increase the accuracy of the battery gauge, fully discharge the battery and then fully charge it. Do not unplug the device until it is totally charged.

### Maximizing the Battery Life

- From the application tray, touch **Settings > Display > Brightness** to turn down the backlight.
- From the application tray, touch **Settings > Display > Screen Timeout** to reduce the timeout length.
- Do not leave your device in direct sunlight.
- Avoid prolonged exposure to excessive heat.

## Replacing the Battery

### CAUTION

Do not use a sharp object to remove the battery. A sharp object may puncture the battery, which may present a risk of fire, chemical burn, electrolyte leak, and/or injury.

Only use the correct battery type. Using an incorrect battery may present a risk of explosion.

### NOTICE

To avoid losing your customized settings, replace the battery within five minutes of removing it from your device.

Contact your local waste disposal department for information on properly disposing of the battery and the device.

If you need to replace the battery in the device, use an SBP-20 lithium-ion battery. For more information on purchasing a replacement battery, go to [www.garminasus.com](http://www.garminasus.com).

## Mounting on Your Dashboard

### NOTICE

The **permanent** mounting adhesive is extremely difficult to remove after it is installed.

A mounting disk is included in some device packages. Use the mounting disk to mount your device on the dashboard and comply with certain state and local regulations.

1. Clean and dry the dashboard where you are placing the disk.
2. Remove the backing from the adhesive on the bottom of the disk.
3. Place the disk on the dashboard.

4. Remove the clear plastic cover from the top of the disk.
5. Place the suction cup mount on top of the disk.
6. Flip the lever down (toward the disk).

## Removing the Device, Cradle, and Mount

### Removing the device from the Cradle

1. Press up on the tab on the top of the cradle.
2. Tilt the device forward.

### Removing the Cradle from the Mount

1. Turn the cradle to the right or left.
2. Apply pressure until the socket on the cradle releases the ball on the mount.

## Removing the Suction Cup Mount from the Windshield

1. Flip the lever on the suction cup mount toward you.
2. Pull the tab on the suction cup toward you.

## Resetting the Device

### CAUTION

Do not use a sharp object to remove the battery. A sharp object may puncture the battery, which may present a risk of fire, chemical burn, electrolyte leak, and/or injury.

If the device stops functioning, you may need to reset the device.

1. Turn off the device, and then turn on the device.
2. If necessary, remove and replace the battery (see [page 113](#)).

The device should restart and operate normally.

## Caring for Your Device

- Avoid dropping your device and operating it in high-shock and high-vibration environments.
- Do not expose the device to water. Contact with water can cause this device to malfunction.
- Do not store the device where prolonged exposure to extreme temperatures can occur, because it can cause permanent damage.
- Never use a hard or sharp object to operate the touchscreen, or damage may result.
- To help avoid theft, remove the device and mount from sight when not in use.
- Remove the residue on the windshield left by the suction cup.

## Specifications

**Physical size (W × H × D):**

2.45 × 4.57 × 0.50 in.  
(62.30 × 116 × 12.75 mm)

**Weight:** 5.29 oz. (150 g)

**Display:** 3.5 in. diagonal, 320 × 480 pixels; HVGA display with white backlight and touchscreen

**Case:** IP51 (Not waterproof)

**Operating temperature range:** from 5°F to 104°F (from -15°C to 40°C)

**Storing temperature Range:** from -4°F to 158°F (from -20°C to 70°C)

**Battery charging temperature range:** from 32°F to 140°F (from 0°C to 60°C)

**Connector:** Mini-USB for power, computer, or audio headphones

**Battery type:** User-replaceable 1150 mAh lithium-ion battery

**Battery life:** 4 hours talk time, 250 hours standby time, depending on usage and settings

**Charge time:** Approximately 3 hours

**Power input:** AC input using mini-USB connector and AC charger, or DC input using vehicle power cable

**Usage:** 3 W max.

**GPS receiver:** High-sensitivity

**Acquisition times\*:**

Warm: <1 sec.

Cold: <38 sec.

Factory Reset: <45 sec.

\*Average acquisition times for a stationary receiver with a clear view of the sky.

**Frequency band:** 3G Bands I and IV;  
2G (GSM) 850/900/1800/1900

**Other connectivity:** Bluetooth  
2.0+EDR; 802.11 b/g (Wi-Fi);  
mini-USB 2.0

**Platform:** Android™ mobile  
technology platform

**Camera:** 3.0 MP camera

**Computer interface:** Plug-and-play  
USB mass storage

**Data storage:** Internal memory and  
optional removable microSD  
card. Data stored indefinitely.

## Troubleshooting

| Issue/Question                       | Solution   |
|--------------------------------------|--|
| How can I acquire satellite signals? | From the application tray, touch <b>Settings &gt; System &gt; Security &amp; Location</b> . Select the <b>Enable GPS Satellites</b> check box.   |
|                                      | Ensure that the GPS has enough time to initialize. When the GPS is turned on for the first time, it may take a few minutes to initialize.  |
| The device will not turn on.         | Charge the battery (page 3 and page 4).  |
|                                      | Replace the battery (page 113).  |
| The device will not charge.          | Replace the fuse in the vehicle power cable.   |
|                                      | As a safety precaution in high-temperature environments, the device will suspend charging and use battery power.<br>If the device is mounted in a vehicle, remove the device from the mount and place it out of direct sunlight. |
| I cannot place a phone call.         | The call function may have been suspended because of low-battery power. In low battery situations, you might be prompted to turn off the call functions. You can still navigate in these situations.                             |
|                                      | From the application tray, touch <b>Settings &gt; Wireless Manager</b> . Clear the <b>Airplane Mode</b> check box.   |
| Do not delete necessary files.       | In mass-storage mode, do not delete or format the original directories, such as Garmin and Documents. Do not delete files for which you do not know the purpose.   |

|                                    |   |
|------------------------------------|---|
| How can I improve the cell signal? | Step outside your vehicle.                      |
|                                    | Use a hands-free headset.                       |
|                                    | Move the device outside, to an open area.       |
|                                    | Walk to a window to improve indoor reception.   |
|                                    | Avoid windows with reflective metal film.       |
|                                    | Move to a higher elevation.                     |
|                                    | Move the device away from electronic equipment. |

# Index

## Symbols

12-hour time format 101

2-D map view 104

3-D map view 104

3GP 76

## A

additional maps i

address, finding 35

alarm, setting 84

applications

managing 109

settings 106

appointment

adding 80

routing to 82

saving local event

as 37, 89

setting movie time

as 89

settings 106

audio

notifications 9

record 53

ringtone 22

send audio 53

settings 103

volume 7

avoiding

road closures 49

road features 45, 104

traffic 46

## B

backlight

brightness 110

battery

charging 3

information 113

removing 113

Bluetooth technology 93–

94

BMP 76

brightness 110

browsing the map 41

browsing the Web 65–69

home page 68

settings 107–108

bus 105

## C

calendar 80–82

settings 106

call 16

ending 17

forwarding 102

history 19

options 17

waiting 18, 102

caller ID 102

calls

barring 22

forwarding 22

camera 74

screen shot 111

care information 115

Ciao! 60–64

accepting invite 61

hiding location 63

inviting 61

joining 60

registering 60

removing a friend 63



- status 62
- viewing friends 62
- clock 84–85, 101
  - setting 101
- compass 48
  - calibrating 49
- computer
  - connecting to 90
  - synchronizing with 90
- conference call 21
- contacts 24–28
  - adding 24
  - assigning location 25
  - calling 16
  - deleting 24
  - editing 24
  - managing SIM 27–28
  - navigating to 26
  - ringtone 26
  - saving 20
  - setting picture for 25, 74, 78
- converting
  - currency 86
  - units 86
- coordinates 39
- cradle 4, 5
- D**
- data usage 23
- date, setting 101
- deleting
  - all user data 111
  - call history 20
  - recently found
    - locations 36
- detour 49
- digital elevation map 41
- display settings 110
- document
  - searching 83
  - transferring 95
  - viewing 82–83
- driving route 42, 43–45, 49
  - settings 104–105
- E**
- e-mail 56, 56–59
- emergency assistance 34
- emergency mode 99
- entering data 11
- Exchange ActiveSync Server
  - sync with 91–92
- F**
- files, transferring 95
- file types
  - media gallery 76
  - music 70
- finding locations.
  - See searching for locations
- Fixed Dialing Numbers 103
- flight mode 23
- flight status 87
- forwarding a message 55
- G**
- gallery 76–79
- geocache 39
- globe view 42
- go home 35
- Google account
  - sync with 92
- Google search settings 109

**H**

- headset 13
- hearing aid 103
- Help file 12
- holding a phone call 17
- home location 35
- Home screen 6

**I**

- Internet
  - connection icon 14

**J**

- JPEG 76

**K**

- keyboard 11, 100

**L**

- language
  - keyboard 101–111
  - text 100–111
- lithium-ion battery 113
- local events 37
- local search 36
- location information 30
  - changing update

method 62

- location messages 54
- locking the device 12
  - settings 99

**M**

- making a phone call 16
- map
  - additional i
  - browse 41
  - moving 41
  - settings 104–105
  - update i
  - zoom 41
- map contours 41
- map detail 104
- MapSource i
- maximum speed,
  - resetting 45, 49
- media gallery 76–79
- messages (SMS/MMS)
  - new 52
  - read 54
- messaging
  - forward 55

metrorail 105

- mini-USB 1
- MMS 53
- money exchange rates 87
- mounting
  - on windshield 4
  - removing from
    - mount 114
- movie times 88
- MP4 76
- mute 17

**N**

- navigation. *See* route
  - settings 104–105
  - voice 104
  - volume 103
- nüMaps Guarantee i

**O**

- odometer 45, 49
- on-screen keyboard 11

**P**

- Panoramio photos 37
- parking spot 34

phone 16–23

phone usage 23

picture

file types 76

take 74

view 76

playing music 70

PNG 76

Power key 1

public transportation 105

## R

receiving a call 18

recently found locations 36

registering i, 60

removing the mount 114

resetting 115

device 115

maximum speed 45, 49

odometer 45, 49

trip computer 45, 49

restoring settings 111

restrict dialing 103

reverse lookup 20

ringer mode 103

ringtone

for a contact 26

for appointments 106

for calls 22, 103

for e-mail 106

for messages 107

for notifications 103

save song as 73

rotating screen 4, 7

route

add points to 49

add stops 49

all turns in 44

details 44

edit 49, 50

home 35

navigate saved

route 51

next turn 44

plan 50–51

save 50

saved route 51

starting driving

route 43

starting walking

route 47

stop 49

take saved route 51

to a Ciao friend's

location 63

to a contact 26

to a found location 30

to a friend's

location 63

to a location 30

to a movie 89

to an appointment 82

to an upcoming

event 37, 89

to a photograph 78

to a photograph

location 78

to your home 35

to your parking spot 34

turn list 44

view on map 44

## S

safe mode 98

safety cameras 105–111

- saved locations 36
  - save location to
    - Favorites 31
  - save your current location 32
  - screen
    - brightness 110
    - color mode 110
    - Home 6
    - lock 12
    - orient 7
    - rotate 7
    - use the touchscreen 8
  - screen shot 111
  - scroll 11
  - searching for locations 29
    - address 35
    - by category 29
    - change the search area 31
    - favorites 36
    - item on the map 41
    - navigate to a contact 26
    - points of interest 29
    - recently found 36
    - spell name 29
  - security settings 99–100
  - sending
    - e-mail 56
    - found location 33
    - SMS 52
    - text 52
    - your location 54
  - setting picture as 78
    - contact icon 25, 78
    - wallpaper 77
  - settings 98–111
    - restore 111
  - sharing
    - documents 83
    - feedback 98
    - found location 33
    - picture 74
    - pictures and videos 77
    - URL 66, 67
    - your location 33
  - shortcuts 10
  - silent 10
  - SIM card
    - copy contacts 27
  - slideshow 77
  - SMS 52–59
  - software
    - update i
    - view information 111
  - speakerphone 17
  - specifications 116
  - spell the location 29
  - stop watch 85
  - storage
    - available 101
    - default 101
  - storing the device 115
  - synchronizing 90
    - with a Google account 92
    - with computer 90
    - with Exchange Server 91–92
  - system settings 98
- ## T
- teletypewriter 102
  - text completion 11, 101

text message 52–59  
theft, ways to avoid 115  
time, setting 101  
traffic 45–51  
    avoid 46–51  
    icon 45  
train 105  
transfer files 95  
trip computer 45, 49  
trip log 41–51, 51  
    clearing 51  
TTY 102  
turn off phone 4

## U

units of measure 98  
updating  
    maps i  
    software i  
USB cable 3  
user data, deleting 111

## V

vehicle routes. *See* driving route  
vibrate 10

for alarm 84  
for appointments 106  
for e-mail  
    messages 106  
for messages 107  
on keypress 100  
video  
    file types 76  
    recording 75, 75–79  
voice mail 19  
volume 10  
    keys 1  
    ringer 10

## W

walking routes  
    settings 104  
wallpaper 74, 77  
weather 83–84  
Where Am I? 34  
white pages 38–39  
Wi-Fi 95–97  
widgets 10  
WMV 76

## Z

zoom 8, 41, 65, 82







**For the latest free software updates (excluding map data)  
throughout the life of your device, go to  
[www.garminasus.com](http://www.garminasus.com).**

© 2010 Garmin Ltd. or its subsidiaries and ASUSTeK Computer, Inc.

For Model 0100084610

August 2010      Part Number 190-01213-00 Rev. B      Printed in China