



Printing a Mounting Template

NOTICE

These instructions for printing a mounting template must be followed precisely. Failure to do so may result in incorrect dimensions on the template and an incorrect cutout (too large or too small) on the mounting surface of your boat.

To print the attached mounting template, check the dimensions of the template and select the appropriate size of paper. Both the length and width measurements are indicated on the template.

The paper size must be larger than the dimensions of the template. Select the paper size using the **Properties** button in the Adobe Acrobat print dialog box.

Select **Auto-Rotate and Center** to ensure the template prints in the correct orientation.

IMPORTANT: When printing the flush mount template, set **Page Scaling** in the Adobe Acrobat print dialog box to **None**.

The screenshot shows the Adobe Acrobat Print dialog box with several annotations:

- Properties:** An arrow points to the **Properties** button in the top right corner of the dialog.
- Page Scaling:** An arrow points to the **Page Scaling** dropdown menu, which is set to **None** and circled in red.
- Auto-Rotate and Center:** An arrow points to the **Auto-Rotate and Center** checkbox, which is checked.
- Paper size (example):** An arrow points to the **Paper: 8.5 x 11.0 in** text in the bottom right of the dialog.

The **Print** dialog box includes the following sections:

- Printer:** Name: \\DLAWINPRINT\TECHPUBS8150-DUPL, Status: Ready, Type: HP LaserJet 8150 PS.
- Print Range:** All (selected), Current view, Current page, Pages from: 1 to: 1, Subset: All pages in range, Reverse pages.
- Page Handling:** Copies: 1, Collate (checked), Page Scaling: None (circled), Auto-Rotate and Center (checked), Choose Paper Source by PDF page size (unchecked).
- Print to file** (unchecked) and **Print color as black** (unchecked).
- Preview:** Shows a diagram of the mounting template with dimensions 11 (width) and 8.5 (height). Document size: 10.4 x 7.9 in. Paper size: 8.5 x 11.0 in. Page 1/1 (1).

NOTICE

After printing and before cutting the mounting surface, measure the printed template to ensure both the length and the width printed at the correct size and to ensure that the dimensions of the printed template match the actual size of your mount. Garmin is not responsible for any damages or expenses resulting from a miscut mounting surface arising from a failure to follow these instructions.

8 ³/₃₂ in. (206 mm)

GPSmap 5012

⁵/₃₂ in. (4 mm)

GARMIN® GPSMAP 5012/5212 Flush Mount Template

Unit Dimensions: 13 in. (330 mm) W × 9 ¹/₂ in. (240.5 mm) H
Dimensions de l'appareil : 330 mm × 240,5 mm (l x H)
Dimensioni unità: L 330 mm × A 240,5 mm
Geräteabmessungen: Breite 330 mm × Höhe 240,5 mm
Dimensiones de la unidad: 330 mm ancho × 240,5 mm alto
Enhetsmått: 330mm B × 240,5mm H
Enhedens mål: 330 mm B × 240,5 mm H
Mål på enheten: 330 mm B × 240,5 mm H

Recommended clearance for sun cover handle

Espace de sécurité recommandé pour manipuler le pare-soleil

Spazio libero consigliato per la maniglia della copertura di protezione dai raggi solari

Empfohlener Abstand für Griff des Sonnenschutzes

Se recomienda despejar el mango de la cubierta para el sol

Rekommenderat utrymme för solskyddshandtag

Anbefalet plads til soldækslets håndtag

Anbefalt klaring for håndtaket på soldekselet

¹/₂ in.
13 mm

9 in.
(229.11 mm)

Recommended clearance for SD card door

Débattement recommandé pour le cache de la carte SD

Spazio libero consigliato per lo sportello della scheda SD

Empfohlener Abstand für SD-Speicherkartenabdeckung


Se recomienda despejar la puerta de la tarjeta SD

Rekommenderat utrymme för SD-kortlucka

Anbefalet fri plads til SD-kortlåg

Anbefalt klaring for SD-kortdekselet

¹/₂ in.
13 mm

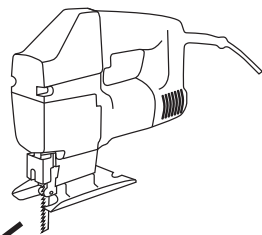

³/₈ in. (9.5 mm)

GARMIN

10 ³/₃₂ in. (256 mm)