



## Printing a Mounting Template

### NOTICE

These instructions for printing a mounting template must be followed precisely. Failure to do so may result in incorrect dimensions on the template and an incorrect cutout (too large or too small) on the mounting surface of your boat.

To print the attached mounting template, check the dimensions of the template and select the appropriate size of paper. Both the length and width measurements are indicated on the template.

The paper size must be larger than the dimensions of the template. Select the paper size using the **Properties** button in the Adobe Acrobat print dialog box.

Select **Auto-Rotate and Center** to ensure the template prints in the correct orientation.

**IMPORTANT:** When printing the flush mount template, set **Page Scaling** in the Adobe Acrobat print dialog box to **None**.

The screenshot shows the Adobe Acrobat Print dialog box with several annotations:

- Properties:** An arrow points to the **Properties** button, with the text: "Properties: Select the paper size."
- Page Scaling:** An arrow points to the **Page Scaling** dropdown menu, which is set to **None** and circled in red. The text says: "Page Scaling: Select None:"
- Auto-Rotate and Center:** An arrow points to the **Auto-Rotate and Center** checkbox, which is checked. The text says: "Auto-Rotate and Center: Select with a check mark for correct orientation"
- Paper size (example):** An arrow points to the **Paper: 8.5 x 11.0 in** text in the preview area. The text says: "Paper size (example): Use appropriate size paper."


The preview area shows a diagram of a mounting template with dimensions 11 inches wide and 8.5 inches high. Below the preview, it displays: "Document: 10.4 x 7.9 in", "Paper: 8.5 x 11.0 in", and "1/1 (1)".

### NOTICE

After printing and before cutting the mounting surface, measure the printed template to ensure both the length and the width printed at the correct size and to ensure that the dimensions of the printed template match the actual size of your mount. Garmin is not responsible for any damages or expenses resulting from a miscut mounting surface arising from a failure to follow these instructions.

# FLUSH MOUNT TEMPLATE

## GPSMAP 188C/198C & FISHFINDER 320C

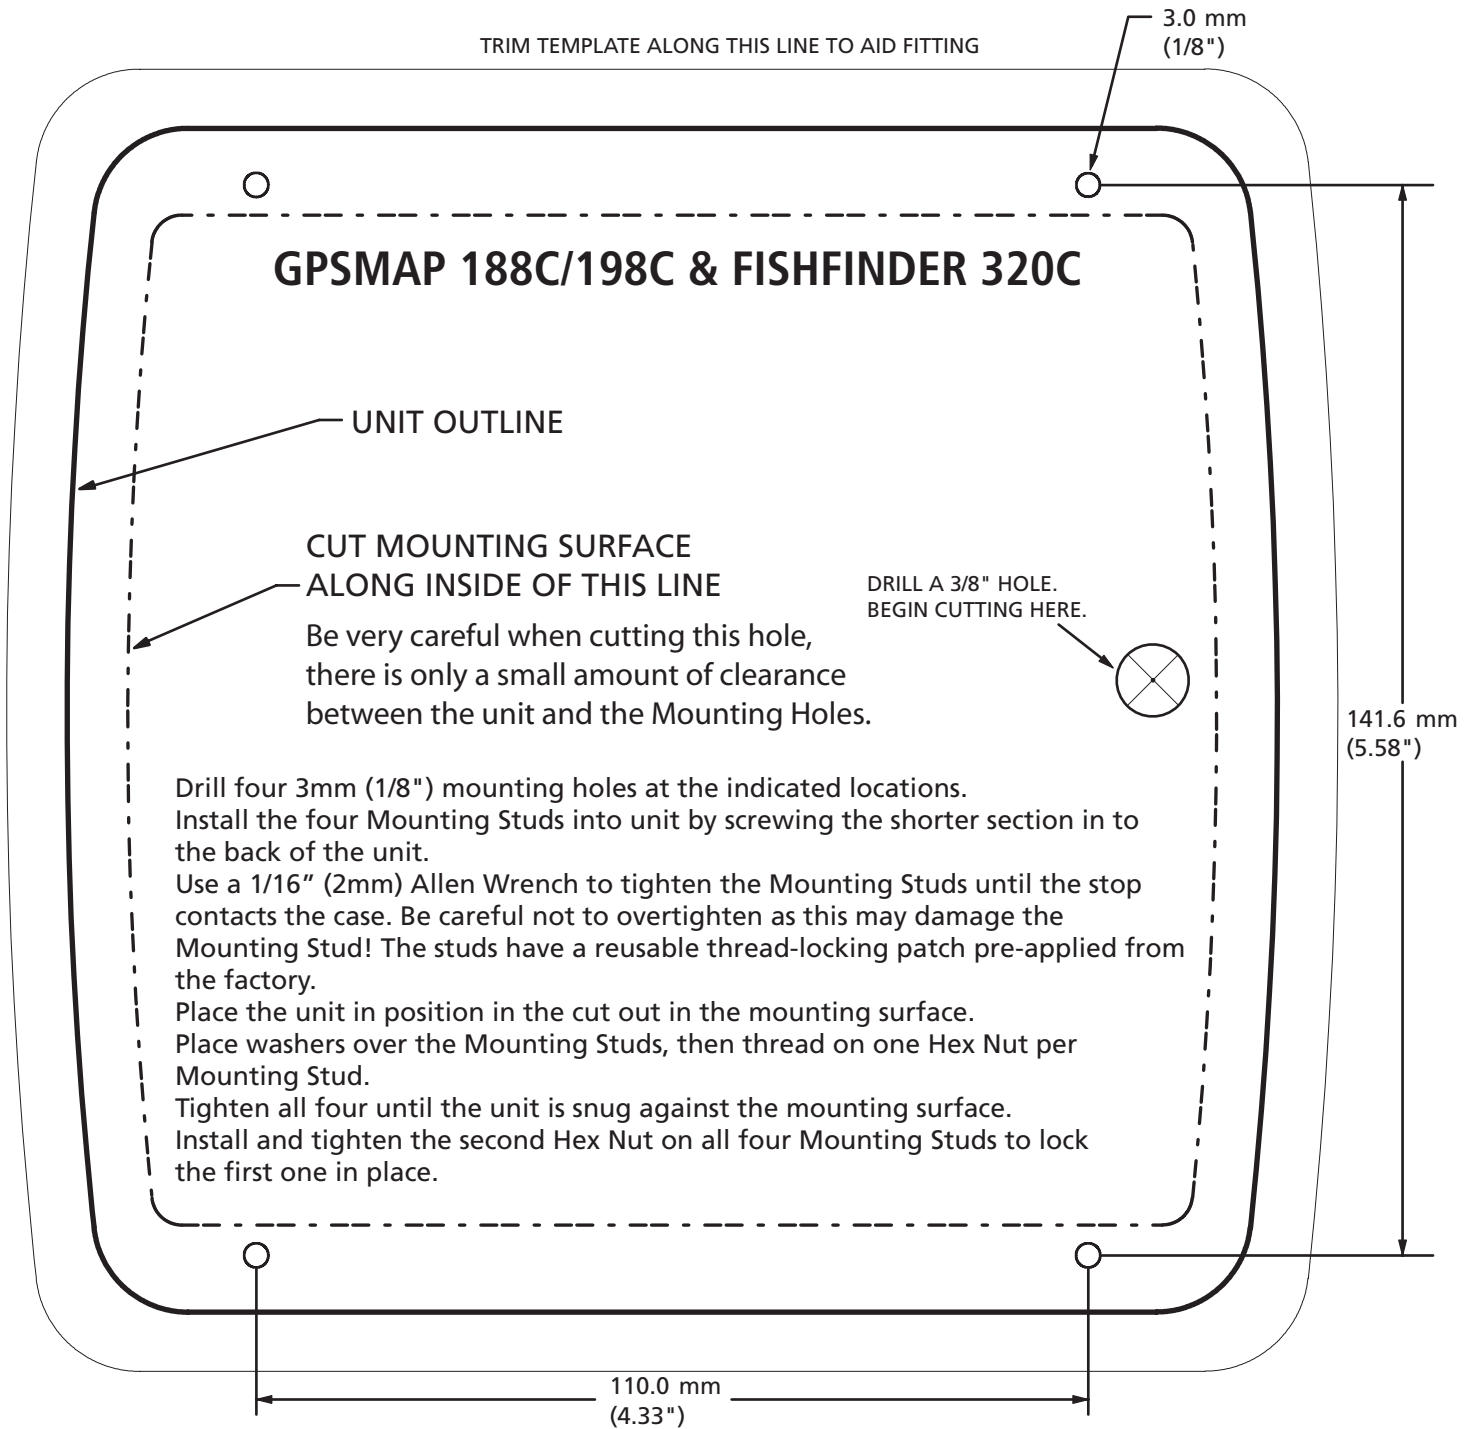

Drill four 3mm (1/8") mounting holes at the indicated locations. Install the four Mounting Studs into unit by screwing the shorter section in to the back of the unit. Use a 1/16" (2mm) Allen Wrench to tighten the Mounting Studs until the stop contacts the case. Be careful not to overtighten as this may damage the Mounting Stud! The studs have a reusable thread-locking patch pre-applied from the factory. Place the unit in position in the cut out in the mounting surface. Place washers over the Mounting Studs, then thread on one Hex Nut per Mounting Stud. Tighten all four until the unit is snug against the mounting surface. Install and tighten the second Hex Nut on all four Mounting Studs to lock the first one in place.