



# **G1000<sup>®</sup>**

## **Integrated Flight Deck Cockpit Reference Guide**



**Beechcraft  
A36/G36**



Copyright © 2005-2007 Garmin Ltd. or its subsidiaries. All rights reserved.

This manual reflects the operation of System Software version 0464.08 or later for the Beechcraft A36/G36. Some differences in operation may be observed when comparing the information in this manual to earlier or later software versions.

Garmin International, Inc., 1200 East 151st Street, Olathe, Kansas 66062, U.S.A.

Tel: 913/397.8200

Fax: 913/397.8282

Garmin AT, Inc., 2345 Turner Road SE, Salem, OR 97302, U.S.A.

Tel: 503/391.3411

Fax 503/364.2138

Garmin (Europe) Ltd, Liberty House, Bulls Copse Road, Hounsdown Business Park, Southampton, SO40 9RB, U.K.

Tel: 44/0870.8501241

Fax: 44/0870.8501251

Garmin Corporation, No. 68, Jangshu 2nd Road, Shijr, Taipei County, Taiwan

Tel: 886/02.2642.9199

Fax: 886/02.2642.9099

Web Site Address: [www.garmin.com](http://www.garmin.com)

Except as expressly provided herein, no part of this manual may be reproduced, copied, transmitted, disseminated, downloaded or stored in any storage medium, for any purpose without the express written permission of Garmin. Garmin hereby grants permission to download a single copy of this manual and of any revision to this manual onto a hard drive or other electronic storage medium to be viewed for personal use, provided that such electronic or printed copy of this manual or revision must contain the complete text of this copyright notice and provided further that any unauthorized commercial distribution of this manual or any revision hereto is strictly prohibited.

Garmin® and G1000® are registered trademarks of Garmin Ltd. or its subsidiaries. These trademarks may not be used without the express permission of Garmin.

NavData® is a registered trademark of Jeppesen, Inc.; Stormscope® and SkyWatch® are registered trademarks of L-3 Communications; and XM® is a registered trademark of XM Satellite Radio, Inc.;



**WARNING:** Navigation and terrain separation must NOT be predicated upon the use of the terrain function. The G1000 Terrain Proximity feature is NOT intended to be used as a primary reference for terrain avoidance and does not relieve the pilot from the responsibility of being aware of surroundings during flight. The Terrain Proximity feature is only to be used as an aid for terrain avoidance and is not certified for use in applications requiring a certified terrain awareness system. Terrain data is obtained from third party sources. Garmin is not able to independently verify the accuracy of the terrain data.



**WARNING:** The displayed minimum safe altitudes (MSAs) are only advisory in nature and should not be relied upon as the sole source of obstacle and terrain avoidance information. Always refer to current aeronautical charts for appropriate minimum clearance altitudes.



**WARNING:** The altitude calculated by G1000 GPS receivers is geometric height above Mean Sea Level and could vary significantly from the altitude displayed by pressure altimeters, such as the GDC 74A Air Data Computer, or other altimeters in aircraft. GPS altitude should never be used for vertical navigation. Always use pressure altitude displayed by the G1000 PFD or other pressure altimeters in aircraft.



**WARNING:** Do not use outdated database information. Databases used in the G1000 system must be updated regularly in order to ensure that the information remains current. Pilots using any outdated database do so entirely at their own risk.



**WARNING:** Do not use basemap (land and water data) information for primary navigation. Basemap data is intended only to supplement other approved navigation data sources and should be considered as an aid to enhance situational awareness.



**WARNING:** Traffic information shown on the G1000 Multi Function Display is provided as an aid in visually acquiring traffic. Pilots must maneuver the aircraft based only upon ATC guidance or positive visual acquisition of conflicting traffic.



**WARNING:** Use of the Stormscope is not intended for hazardous weather penetration (thunderstorm penetration). Stormscope information, as displayed on the G1000 MFD, is to be used only for weather avoidance, not penetration.



**WARNING:** GDL 69 Weather should not be used for hazardous weather penetration. Weather information provided by the GDL 69 is approved only for weather avoidance, not penetration.



**WARNING:** NEXRAD weather data is to be used for long-range planning purposes only. Due to inherent delays in data transmission and the relative age of the data, NEXRAD weather data should not be used for short-range weather avoidance.



**WARNING:** The Garmin G1000, as installed in the Beechcraft A36/G36 aircraft, has a very high degree of functional integrity. However, the pilot must recognize that providing monitoring and/or self-test capability for all conceivable system failures is not practical. Although unlikely, it may be possible for erroneous operation to occur without a fault indication shown by the G1000. It is thus the responsibility of the pilot to detect such an occurrence by means of cross-checking with all redundant or correlated information available in the cockpit.



**WARNING:** For safety reasons, G1000 operational procedures must be learned on the ground.



**WARNING:** The United States government operates the Global Positioning System and is solely responsible for its accuracy and maintenance. The GPS system is subject to changes which could affect the accuracy and performance of all GPS equipment. Portions of the Garmin G1000 utilize GPS as a precision electronic NAVigation AID (NAVAID). Therefore, as with all NAVAIDs, information presented by the G1000 can be misused or misinterpreted and, therefore, become unsafe.



**WARNING:** To reduce the risk of unsafe operation, carefully review and understand all aspects of the G1000 Pilot's Guide documentation and the Beechcraft A36/G36 Pilot's Operating Handbook. Thoroughly practice basic operation prior to actual use. During flight operations, carefully compare indications from the G1000 to all available navigation sources, including the information from other NAVAIDs, visual sightings, charts, etc. For safety purposes, always resolve any discrepancies before continuing navigation.



**WARNING:** The illustrations in this guide are only examples. Never use the G1000 to attempt to penetrate a thunderstorm. Both the FAA Advisory Circular, Subject: Thunderstorms, and the Airman's Information Manual (AIM) recommend avoiding "by at least 20 miles any thunderstorm identified as severe or giving an intense radar echo."



**CAUTION:** The GDU 1040 PFD and GDU 1043 MFD displays use a lens coated with a special anti-reflective coating that is very sensitive to skin oils, waxes, and abrasive cleaners. CLEANERS CONTAINING AMMONIA WILL HARM THE ANTI-REFLECTIVE COATING. It is very important to clean the lens using a clean, lint-free cloth and an eyeglass lens cleaner that is specified as safe for anti-reflective coatings.



---

**CAUTION:** The Garmin G1000 does not contain any user-serviceable parts. Repairs should only be made by an authorized Garmin service center. Unauthorized repairs or modifications could void both the warranty and the pilot's authority to operate this device under FAA/FCC regulations.

---



---

**NOTE:** When using Stormscope, there are several atmospheric phenomena in addition to nearby thunderstorms that can cause isolated discharge points in the strike display mode. However, clusters of two or more discharge points in the strike display mode do indicate thunderstorm activity if these points reappear after the screen has been cleared.

---



---

**NOTE:** All visual depictions contained within this document, including screen images of the G1000 panel and displays, are subject to change and may not reflect the most current G1000 system. Depictions of equipment may differ slightly from the actual equipment.

---



---

**NOTE:** This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

---



---

**NOTE:** This product, its packaging, and its components contain chemicals known to the State of California to cause cancer, birth defects, or reproductive harm. This notice is being provided in accordance with California's Proposition 65. If you have any questions or would like additional information, please refer to our web site at [www.garmin.com/prop65](http://www.garmin.com/prop65).

---

Part Number	Change Summary
190-00525-00	Initial release.
190-00525-01 Rev A	Added GDU software version 6.13 parameters. Added TAWS

Revision	Date of Revision	Affected Pages	Description
B	9/07	Copyright Page	Changed system software number to 0464.08.

Blank Page

<b>SECTION 1: SYSTEM OVERVIEW</b> .....	1-1	<b>4.6 Frequency Auto-tuning</b> .....	4-4
<b>1.1 PFD/MFD Controls</b> .....	1-2	Auto-tuning on the PFD .....	4-4
<b>1.2 PFD Softkeys</b> .....	1-4	Auto-tuning on the MFD .....	4-4
<b>1.3 MFD Softkeys</b> .....	1-7	<b>4.7 Transponder</b> .....	4-4
<b>1.4 MFD Page Groups</b> .....	1-8	Mode Selection .....	4-4
<b>1.5 Backlighting</b> .....	1-8	<i>Ground Mode (Automatic)</i> .....	4-4
<b>1.6 Database Updates</b> .....	1-9	<i>Reply Status</i> .....	4-4
Aviation Database Update .....	1-9	<i>Code Selection</i> .....	4-4
Terrain and Obstacle Database Updates .....	1-9	Flight ID Reporting .....	4-5
<b>SECTION 2: FLIGHT INSTRUMENTS</b> .....	2-1	<b>SECTION 5: AUDIO PANEL</b> .....	5-1
<b>2.1 Airspeed Indicator</b> .....	2-3	<b>5.1 COM Radio Selection</b> .....	5-2
Speed Indication .....	2-3	<b>5.2 Marker Beacon Receiver</b> .....	5-2
Speed Ranges .....	2-3	Marker Beacon Signal Sensitivity .....	5-2
Airspeed Trend Vector .....	2-3	<b>5.3 Nav Radio Audio Selection</b> .....	5-2
Vspeed References .....	2-3	<b>5.4 Intercom System (ICS) Isolation</b> .....	5-3
<b>2.2 Attitude Indicator</b> .....	2-3	<b>5.5 Intercom Squelch Control</b> .....	5-3
<b>2.3 Altimeter</b> .....	2-4	<b>5.6 Digital Clearance Recorder and Playback</b> .....	5-4
Altitude Select Bug .....	2-4	<b>SECTION 6: AUTOMATIC FLIGHT CONTROL</b> .....	6-1
Altitude Trend Vector .....	2-4	<b>6.1 Mode Annunciations</b> .....	6-1
Barometric Setting Box .....	2-4	<b>6.2 Overspeed Protection</b> .....	6-2
Altitude Alerting .....	2-4	<b>6.3 AP Engagement/Disengagement</b> .....	6-2
Barometric Minimum Descent Altitude .....	2-4	Automatic Disengagement .....	6-3
<b>2.4 Vertical Deviation/Glideslope Indicator</b> .....	2-5	Manual Disengagement .....	6-3
<b>2.5 Marker Beacon Annunciations</b> .....	2-5	Control Wheel Steering .....	6-3
<b>2.6 Vertical Speed Indicator</b> .....	2-5	Yaw Damper .....	6-3
<b>2.7 Horizontal Situation Indicator (HSI)</b> .....	2-6	<b>6.4 Loss of Data</b> .....	6-3
Course Pointer .....	2-6	<b>6.5 Pitch Axis Modes</b> .....	6-3
Course Deviation Indicator (CDI) .....	2-7	Pitch Hold Mode (PIT) .....	6-4
Bearing Pointers and Information Windows .....	2-7	Altitude Hold Mode (ALT) .....	6-5
DME (optional) .....	2-7	Vertical Speed Mode (VS) .....	6-6
Navigation Source .....	2-7	Flight Level Change Mode (FLC) .....	6-7
<b>SECTION 3: ENGINE INDICATION SYSTEM (EIS)</b> .....	3-1	Go-Around Mode (GA) .....	6-8
<b>3.1 Engine Display</b> .....	3-1	Glideslope (GS) .....	6-8
<b>3.2 Lean Engine Display</b> .....	3-1	<b>6.6 Roll Axis Modes</b> .....	6-9
<b>3.3 Engine System Display</b> .....	3-2	Roll Hold Mode (ROL) .....	6-9
<b>SECTION 4: NAV/COM AND TRANSPONDER</b> .....	4-1	Heading Select Mode (HDG) .....	6-10
<b>4.1 Radio Status Indications</b> .....	4-3	Navigation Mode (GPS, VOR, LOC, or BC) .....	6-11
<b>4.2 Volume</b> .....	4-3	<i>Navigation Mode Armed</i> .....	6-11
<b>4.3 Automatic Squelch</b> .....	4-3	Approach Mode (GPS, VAPP or LOC) .....	6-12
<b>4.4 Quickly Activating 121.500 MHz</b> .....	4-3	Go Around (GA) .....	6-12
<b>4.5 Optional NAV Radios</b> .....	4-3	<b>6.7 Example Procedures Using AFCS</b> .....	6-13
DME Radio (optional) .....	4-3	Departure .....	6-14
		Intercepting a VOR Radial .....	6-15

Flying a GPS Flight Plan.....	6-16
Flight Level Change (Descent).....	6-17
ILS Approach.....	6-18
Go-Around / Missed Approach.....	6-19

<b>SECTION 7: NAVIGATION</b> .....	7-1
<b>7.1 Navigation Map Page</b> .....	7-1
Select the MAP Page Group.....	7-1
<b>7.2 Direct-to Navigation</b> .....	7-1
Direct-to Navigation from the MFD.....	7-1
Direct-to Navigation from the PFD.....	7-2
<b>7.3 Airport Information</b> .....	7-3
Select the Airport Information Page.....	7-3
Enter a Waypoint Facility Name or City Location.....	7-3
Access Runway Information.....	7-3
Access Frequency Information.....	7-3
<b>7.4 Intersection Information</b> .....	7-4
Select the Intersection Information Page.....	7-4
Access Information on an Intersection.....	7-4
<b>7.5 NDB Information</b> .....	7-4
Select the NDB Information Page.....	7-4
View Information on a Specific NDB.....	7-4
<b>7.6 VOR Information</b> .....	7-5
Select the VOR Information Page.....	7-5
Access Information on a VOR.....	7-5
<b>7.7 User Waypoint Information Page</b> .....	7-5
<b>7.8 Nearest Airports</b> .....	7-5
Nearest Airport Information on the MFD.....	7-5
Nearest Airports Information on the PFD.....	7-6
<b>7.9 Nearest Intersections</b> .....	7-6
Select the Nearest Intersections Page.....	7-6
View Information on the Nearest Intersection.....	7-7
<b>7.10 Nearest NDB</b> .....	7-7
Select the Nearest NDB Page.....	7-7
Access Information on a Specific NDB.....	7-7
<b>7.11 Nearest VOR</b> .....	7-7
Select the Nearest VOR Page.....	7-7
View Information on the Nearest VOR.....	7-7
Select and Load a VOR Frequency.....	7-8
<b>7.12 Nearest User Waypoint</b> .....	7-8
Select the Nearest User Waypoint Page.....	7-8
Select a Nearest User Waypoint.....	7-8
<b>7.13 Nearest Frequencies</b> .....	7-8
Select the Nearest Frequencies Page.....	7-8

Select and Load the Nearest ARTCC, FSS, or Weather Frequency.....	7-9
<b>7.14 Nearest Airspaces</b> .....	7-9
Select the Nearest Airspaces Page.....	7-9
Airspace Alerts Box.....	7-9
View Additional Details for a Listed Airspace.....	7-9
View and Quickly Load the Frequency for a Controlling Agency.....	7-9

<b>SECTION 8: FLIGHT PLANNING</b> .....	8-1
<b>8.1 User Defined Waypoints</b> .....	8-1
Select the User WPT Information Page.....	8-1
Create a New User Waypoint.....	8-1
Create User Waypoints from the Navigation Map Page.....	8-1
Modify a User Waypoint.....	8-2
Delete a User Waypoint.....	8-2
<b>8.2 Viewing the Active Flight Plan</b> .....	8-2
<b>8.3 Activate a Stored Flight Plan</b> .....	8-2
<b>8.4 Activate a Flight Plan Leg</b> .....	8-3
<b>8.5 Stop Navigating a Flight Plan</b> .....	8-3
<b>8.6 Invert Active Flight Plan</b> .....	8-3
<b>8.7 Create a New Flight Plan</b> .....	8-3
<b>8.8 Load a Departure</b> .....	8-4
<b>8.9 Load an Arrival</b> .....	8-4
<b>8.10 Load an Approach</b> .....	8-5
<b>8.11 Remove a Departure, Arrival, or Approach         from a Flight Plan</b> .....	8-5
<b>8.12 Store a Flight Plan</b> .....	8-5
<b>8.13 Edit a Stored Flight Plan</b> .....	8-5
<b>8.14 Delete a Waypoint from the Flight Plan</b> .....	8-5
<b>8.15 Invert and Activate a Stored Flight Plan</b> .....	8-6
<b>8.16 Copy a Flight Plan</b> .....	8-6
<b>8.17 Delete a Flight Plan</b> .....	8-6
<b>8.18 Graphical Flight Plan Creation</b> .....	8-6
<b>8.19 Trip Planning</b> .....	8-7
<b>8.20 Vertical Navigation (VNAV) Page</b> .....	8-8
Create a Vertical Navigation Profile.....	8-8
VNAV Page Menu Options.....	8-9

<b>SECTION 9: PROCEDURES</b> .....	9-1
<b>9.1 Arrivals and Departures</b> .....	9-1
Load and Activate a Departure Procedure.....	9-1
Load and Activate An Arrival Procedure.....	9-1

<b>9.2 Approaches</b> .....	9-2	Excessive Descent Rate Alert (EDR) .....	10-13
Load and/or Activate an Approach Procedure .....	9-2	Negative Climb Rate After Takeoff Alert (NCR) .....	10-13
Activate An Approach in the Active Flight Plan .....	9-3	“Five-Hundred” Aural Alert.....	10-13
<b>SECTION 10: HAZARD AVOIDANCE</b> .....	10-1	Displaying Terrain and Obstacles on the	
<b>10.1 Customizing the Hazard Displays on the</b>		Navigation Map .....	10-14
<b>Navigation Map</b> .....	10-1	Pop-up Alerts .....	10-14
<b>10.2 Stormscope® (Optional)</b> .....	10-1	TAWS Alerts Summary .....	10-15
Displaying Stormscope Lightning Data on the		Alert Annunciations .....	10-16
Navigation Map Page .....	10-1	<b>SECTION 11: ABNORMAL OPERATION</b> .....	11-1
Stormscope Page .....	10-2	<b>11.1 Reversionary Mode</b> .....	11-1
<b>10.3 XM Weather (Optional)</b> .....	10-3	<b>11.2 Abnormal COM Operation</b> .....	11-2
Displaying METAR and TAF information on the		<b>11.3 Unusual Attitudes</b> .....	11-2
Airport Information Page .....	10-3	<b>11.4 Stormscope Operation with Loss of</b>	
Displaying Weather on the Weather Data Link Page ...	10-4	<b>Heading Input</b> .....	11-2
NEXRAD Limitations .....	10-4	<b>11.5 Hazard Displays with Loss of GPS Position</b> ....	11-2
Map Panning Information – Weather Data Link Page .	10-5	<b>SECTION 12: ANNUNCIATIONS &amp; ALERTS</b> .....	12-1
Weather Products and Symbols .....	10-5	<b>12.1 Alert Level Definitions</b> .....	12-2
Weather Product Age .....	10-6	<b>12.2 A36/G36 Aircraft Annunciations &amp; Alerts</b> .....	12-3
<b>10.4 Traffic Information Service (TIS)</b> .....	10-7	WARNING Annunciation .....	12-3
Displaying Traffic on the Traffic Map Page .....	10-7	CAUTION Annunciation .....	12-3
Displaying Traffic on the Navigation Map .....	10-7	ADVISORY Annunciation .....	12-3
TIS Audio Alert .....	10-7	Alert Message .....	12-3
<b>10.5 Skywatch Traffic Advisory System(TAS)</b>		<b>12.3 AFCS Alerts</b> .....	12-4
<b>(Optional)</b> .....	10-8	System Status Field .....	12-4
Displaying Traffic on the Traffic Map Page .....	10-8	<b>12.4 TAWS ALERTS</b> .....	12-5
Displaying Traffic on the Navigation Map .....	10-8	TAWS System Status Annunciations .....	12-6
<b>10.6 Terrain And Obstacle Proximity</b> .....	10-9	<b>12.5 Traffic Voice Alerts</b> .....	12-6
Displaying Terrain and Obstacles on the Terrain		<b>12.6 G1000 System Annunciations</b> .....	12-6
Proximity Page .....	10-9	<b>12.7 G1000 System Alert Messages</b> .....	12-9
Displaying Terrain and Obstacles on the Navigation		MFD & PFD Message Advisories .....	12-10
Map .....	10-9	Database Message Advisories .....	12-11
<b>10.7 Terrain Awareness &amp; Warning System (TAWS)</b>		GMA 1347 Message Advisories .....	12-12
<b>Display (Optional)</b> .....	10-10	GIA 63 Message Advisories .....	12-12
Displaying Terrain on the TAWS Page .....	10-10	GEA 71 Message Advisories .....	12-14
Enable/Disable Aviation Data .....	10-11	GTX 33 Message Advisories .....	12-15
TAWS Inhibit .....	10-11	GRS 77 Message Advisories .....	12-15
Manual System Test .....	10-12	GMU 44 Message Advisories .....	12-16
Forward Looking Terrain Avoidance (FLTA) .....	10-12	GDL 69 Message Advisories .....	12-16
<i>Reduced Required Terrain Clearance (RTC) and</i>		GDC 74A Message Advisories .....	12-16
<i>Reduced Required Obstacle Clearance (ROC) .....</i>	10-12	Miscellaneous Message Advisories .....	12-17
<i>Imminent Terrain Impact (ITI) and Imminent</i>		<b>Index</b> .....	Index-1
<i>Obstacle Impact (IOI) .....</i>	10-12		
Premature Descent Alert (PDA) .....	10-12		

Blank Page

## SECTION 1: SYSTEM OVERVIEW

The purpose of this Cockpit Reference Guide is to provide the pilot a resource with which to find operating instructions on the major features of the G1000 system more easily. **It is not intended to be a comprehensive operating guide.** Complete operating procedures for the complete system are found in the G1000 Pilot's Guide, part number 190-00595-00

This guide gives the pilot abbreviated operating instructions for the Primary Flight Display (PFD), Multi Function Display (MFD), and the GMA 1347 Audio Panel System.



---

**NOTE:** *The pilot should read and thoroughly understand the Beechcraft A36/G36 Pilot's Operating Handbook (POH) for limitations, procedures and operational information not contained in this Cockpit Reference Guide. The Beechcraft A36/G36 POH always takes precedence over the information found in this guide.*

---

1.1 PFD/MFD CONTROLS



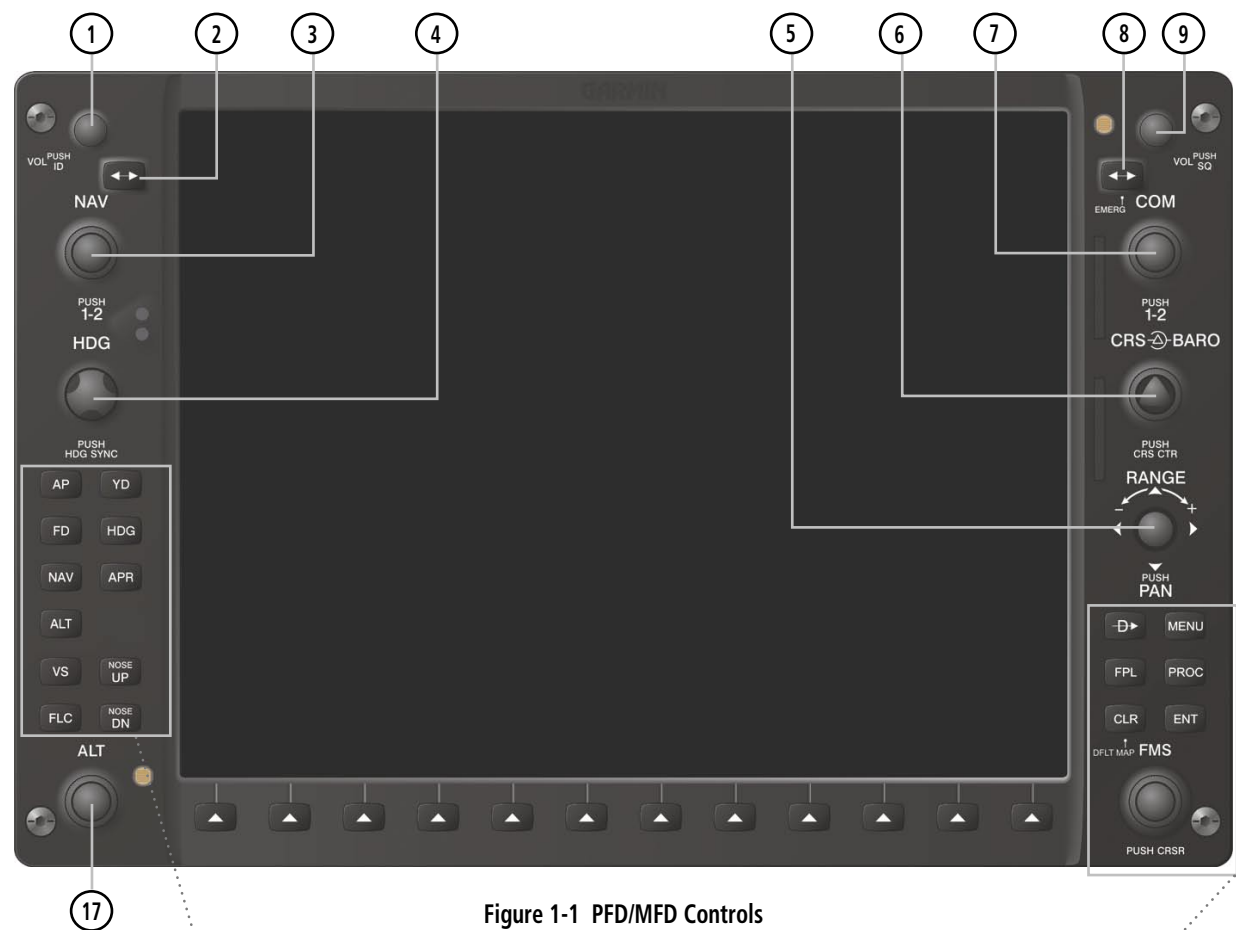


Figure 1-1 PFD/MFD Controls

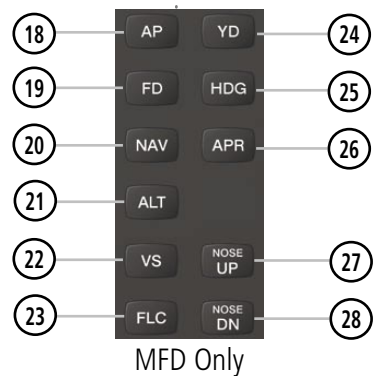

MFD Only

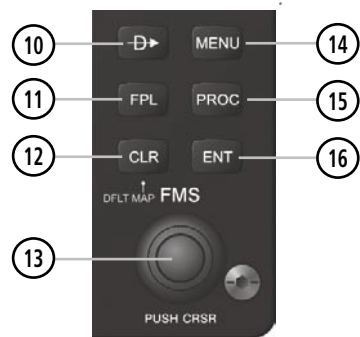

PFD and MFD controls function the same with the exception of the dedicated Automatic Flight Control System (AFCS) keys located only on the MFD bezel.

**(1) NAV VOL/ID Knob** – Controls the NAV audio level. Press to turn the Morse code identifier ON and OFF. Volume level is shown in the field as a percentage.

**(2) NAV Frequency Transfer Key** – Switches the standby and active NAV frequencies.

**(3) Dual NAV Knob** – Tunes the MHz (large knob) and kHz (small knob) standby frequencies for the NAV receiver. Press to switch the tuning cursor (light blue box) between the NAV1 and NAV2 fields.

**(4) Heading Knob** – Turn to manually select a heading on the HSI. When pressed, it synchronizes the heading bug with the compass lubber line. Selected Heading provides the heading reference to the Flight Director while operating in Heading Select mode.

**(5) Joystick** – Changes the map range (distance top to bottom of map display) when rotated. Activates the map pointer when pressed.

**(6) CRS/BARO Knob** – The large knob sets the altimeter barometric pressure and the small knob adjusts the course. The course is only adjustable when the HSI is in VOR1, VOR2, or OBS/SUSP mode. Pressing this knob centers the CDI on the currently selected VOR. Selected Course provides course reference to the Flight Director when operating in Navigation and Approach modes.

**(7) Dual COM Knob** – Tunes the MHz (large knob) and kHz (small knob) standby frequencies for the COM transceiver. Pressing this knob switches the tuning cursor (light blue box) between the COM1 and COM2 fields.

**(8) COM Frequency Transfer Key** – Switches the standby and active COM frequencies. Pressing and holding this key for two seconds automatically tunes the emergency frequency (121.5 MHz) in the active frequency field.

**(9) COM VOL/SQ Knob** – Controls COM audio level. Pressing this knob turns the COM automatic squelch ON and OFF. Audio volume level is shown in the field as a percentage.

**(10) Direct-to Key** – Allows the user to enter a destination waypoint and establish a direct course to the selected destination (specified by the identifier, chosen from the active route, or taken from the map cursor position).

**(11) FPL Key** – Displays the active Flight Plan Page for creating and editing the active flight plan, or for accessing stored flight plans.

**(12) CLR Key (DFLT MAP)** – Erases information, cancels an entry, or removes page menus. To display the Navigation Map Page immediately, press and hold **CLR** (MFD only).

**(13) Dual FMS Knob** – Used to select the page to be viewed (only on the MFD). The large knob selects a page group (MAP, WPT, AUX, NRST), while the small knob selects a specific page within the page group. Pressing the small knob turns the selection cursor ON and OFF. When the cursor is ON, data may be entered in the different windows using the small and large knobs. The large knob is used to move the cursor on the page, while the small knob is used to select individual characters for the highlighted cursor location. When the G1000 displays a list that is too long for the display screen, a scroll bar appears along the right side of the display, indicating the availability of additional items within the selected category. Press the **FMS/PUSH CRSR Knob** to activate the cursor and turn the large **FMS** Knob to scroll through the list.

**(14) MENU Key** – Displays a context-sensitive list of options. This list allows the user to access additional features, or to make setting changes that relate to certain pages.

**(15) PROC Key** – Selects approaches, departures and arrivals from the flight plan. If a flight plan is used, available procedures for the departure and/or arrival airport are automatically suggested. If a flight plan is not used, the desired airport and the desired procedure may be selected. This key selects IFR departure procedures (DPs), arrival procedures (STARs) and approaches (IAPs) from the database and loads them into the active flight plan.

**(16) ENT Key** – Accepts a menu selection or data entry. This key is used to approve an operation or complete data entry. It is also used to confirm selections and information entries.

**(17) Dual ALT Knob** – Sets the reference altitude in the box located above the Altimeter. The large knob selects the thousands, while the small knob selects the hundreds. Selected altitude provides an altitude setting for the Altitude Capture/Hold mode, in addition to the standard G1000 altitude alerter function.

**(18) AP Key** – Engages/disengages the Autopilot and Flight Director. Pressing the **AP** Key activates the Flight Director and engages the Autopilot in the default pitch axis and roll axis modes. Pressing the **AP** Key again disengages the autopilot and deactivates the Flight Director.

**(19) FD Key** – Activates/deactivates the Flight Director only. Pressing the **FD** Key turns on the Flight Director in the default pitch axis and roll axis modes. Pressing the **FD** Key again deactivates the Flight Director and removes the command bars, unless the Autopilot is engaged. If the Autopilot is engaged, the **FD** Key is disabled.

**(20) NAV Key** – Selects/deselects the Navigation mode.

**(21) ALT Key** – Selects/deselects the Altitude Hold mode.

**(22) VS Key** – Selects/deselects the Vertical Speed mode.

**(23) FLC Key** – Selects/deselects the Flight Level Change mode.

**(24) YD Key** – Engages/disengages the Yaw Damper.

**(25) HDG Key** – Selects/deselects the Heading Select mode.

**(26) APR Key** – Selects/deselects the Approach mode.

**(27, 28) NOSE UP/NOSE DN Keys** – Controls the active pitch reference for the Pitch Hold, Vertical Speed, and Flight Level Change modes.

## 1.2 PFD SOFTKEYS

TERRAIN

Softkey ON

TERRAIN

Softkey OFF

 


Figure 1-2 PFD Top Level Softkeys

**INSET** – Press to display the Inset Map in the lower left corner of the PFD.

**OFF** – Press to remove the Inset Map.

**DCLTR (3)** – Press momentarily to select the desired amount of map detail. The declutter level appears adjacent to the **DCLTR** Softkey.

- No declutter: All map features are visible
- Declutter – 1: Declutters land data
- Declutter – 2: Declutters land and SUA data
- Declutter – 3: Removes everything except the active flight plan

**TRAFFIC** – Press to display traffic on the inset map.

**TOPO** – Press to display topographical data (i.e., coastlines, terrain, rivers, lakes) and elevation scale on the inset map.

**TERRAIN** – Press to display terrain information on the inset map.

**STRMSCP (optional)** – Press to display the Stormscope lightning data on the inset map (within a 200 nm radius of the aircraft).

**NEXRAD (optional)** – Press to display NEXRAD precipitation data on the inset map.

**XMLTNG (optional)** – Press to display the XM Radio lightning data on the inset map.

**BACK** – Press to return to the previous level softkey configuration.

**ALERTS** – Press to display the Alerts window.

**PFD** – Press to display the additional softkeys for additional configuration of the PFD.

**METRIC** – Press to display the current and reference altitudes in meters, in addition to feet. Pressing the **METRIC** Softkey also changes the barometric setting to hectopascals.

**DFLT** – Press to reset default settings on the PFD.

**DME (optional)** – Press to display the DME information window.

*BRG1 (bearing)* – Press to cycle through the following information:

*NAV1* – Displays NAV1 waypoint frequency or identifier and DME information in the BRG1 information window.

*GPS* – Displays GPS waypoint identifier and GPS distance information in the BRG1 information window.

*OFF* – Removes the BRG1 information window.

*BRG2 (bearing)* – Press to cycle through the following information:

*NAV2* – Displays NAV2 waypoint frequency or identifier and DME information in the BRG2 information window.

*GPS* – Displays GPS waypoint identifier and GPS distance information in the BRG2 information window.

*OFF* – Removes the BRG2 information window.

*STD BARO* – Press to set the barometric pressure to 29.92 inches of mercury (1013 hPa by pressing the **METRIC** Softkey).

*BACK* – Press to return to the previous level softkeys.

*ALERTS* – Press to display the Alerts window.

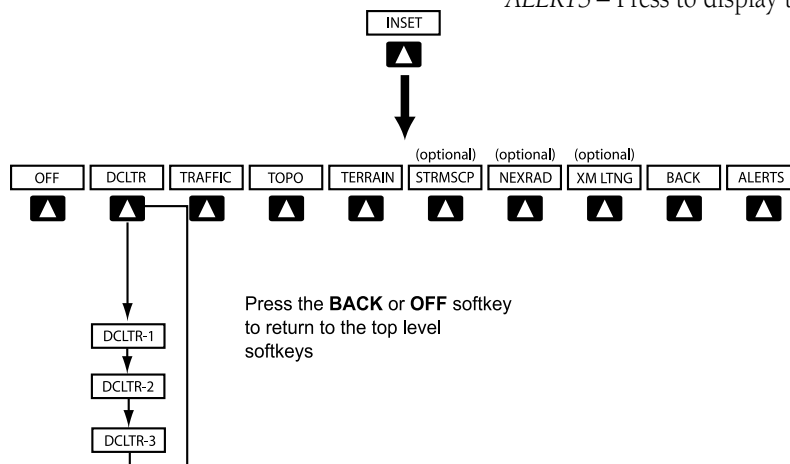


Figure 1-3 PFD Softkey Flow Chart – 1

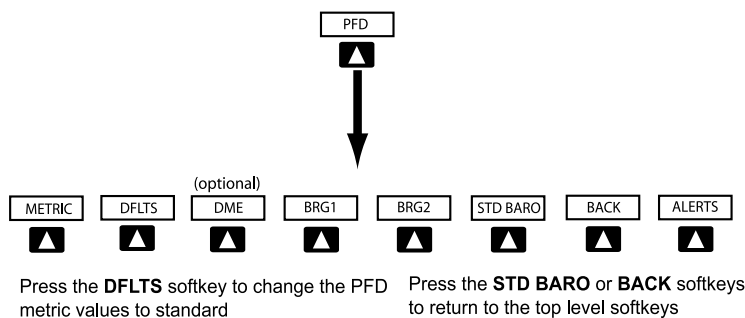


Figure 1-4 PFD Softkey Flow Chart – 2

## SECTION 1 SYSTEM OVERVIEW

**OBS** – Press to select OBS mode on the CDI when navigating by GPS (only available with active leg).

**CDI** – Press to change navigation mode on the CDI between GPS, VOR1, and VOR2.

**DME** (optional) – Press to display the DME Tuning window.

**XPDR** – Press to display the transponder mode selection softkeys.

**STBY** – Press to select standby mode.

**ON** – Press to select mode A.

**ALT** – Press to select altitude reporting mode.

**VFR** – Press to automatically squawk 1200 (only in the U.S.A., refer to ICAO standards for VFR codes in other countries).

**CODE** – Press to display transponder code selection softkeys 0-7.

**0 through 7** – Press numbers to enter code.

**IDENT** – Press to provide special aircraft position identification to Air Traffic Control (ATC).

**BKSP** – Press to remove numbers entered one at a time.

**BACK** – Press to return to the previous level softkeys.

**IDENT** – Press to provide special aircraft position identification to Air Traffic Control (ATC).

**BACK** – Press to return to the previous level softkeys.

**IDENT** – Press to provide special aircraft position identification to Air Traffic Control (ATC).

**TMR/REF** – Press to display the Timer/References window.

**NRST** – Press to display the Nearest Airports window.

**ALERTS** – Press to display the Alerts window.

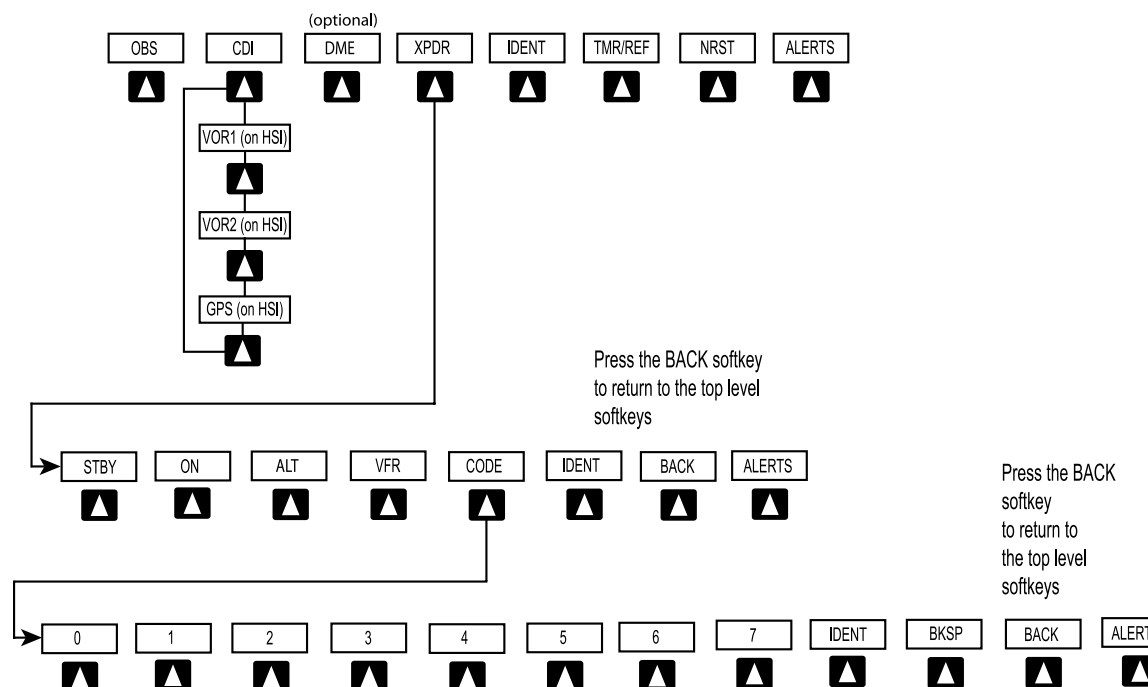


Figure 1-5 PFD Softkey Flow Chart – 3

### 1.3 MFD SOFTKEYS

**ENGINE** – Pressing this softkey makes available the **LEAN** and **SYSTEM** Softkeys which in turn access the Lean Page and the System Page, respectively.

**MAP** – Pressing this softkey enables the following softkeys:

**TRAFFIC** – Pressing this softkey displays/removes Traffic on the Navigation Map.

**TOPO** – Pressing this softkey displays or removes topographic information on the Navigation Map.

**TERRAIN** – Pressing this softkey displays/removes terrain and obstacle data on the Navigation Map.

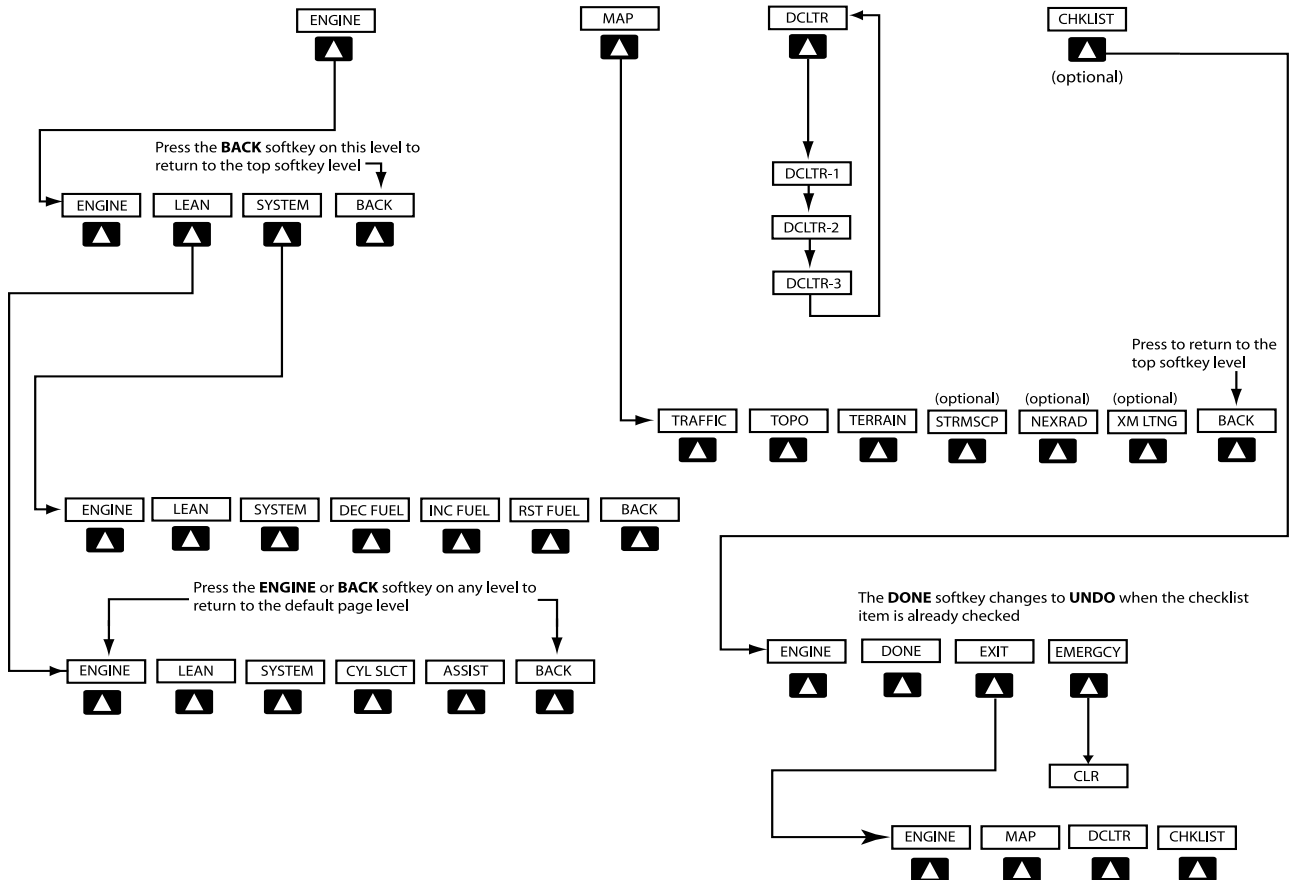
**STRMSCP** (optional) – Pressing this softkey displays/removes Stormscope lightning data on the Navigation Map.

**NEXRAD** (optional) – Pressing this softkey displays/removes precipitation data on the Navigation Map.

**XM LTNG** (optional) – Pressing this softkey displays/removes XM Radio lightning data on the Navigation Map.

**BACK** – Pressing this softkey displays the ENGINE and MAP top level softkeys.

**DCLTR (declutter)** – Pressing this softkey removes map information in three levels.



### Figure 1-6 MFD Softkeys

## 1.4 MFD PAGE GROUPS

- 1) Turn the large **FMS** Knob until the desired page group is selected.
- 2) Turn the small **FMS** Knob to select pages within the group. See Figure 1-7.

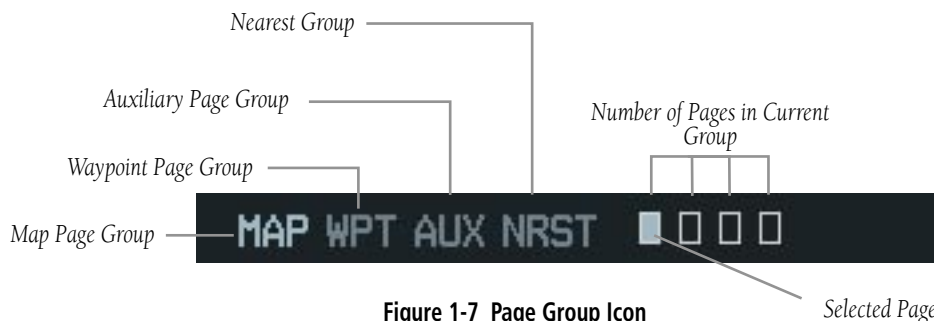


Figure 1-7 Page Group Icon

## 1.5 BACKLIGHTING

### Manually adjust the backlight for the PFD and MFD:

- 1) Press the **MENU** Key on the PFD to display the PFD Setup Menu window.
- 2) Press the small **FMS** Knob to activate the cursor. 'PFD DSPL > AUTO' is now highlighted.
- 3) Turn the small **FMS** Knob to display the selection window.
- 4) Turn the **FMS** Knob to select 'MANUAL', then press the **ENT** Key.
- 5) With the intensity value now highlighted, turn the small **FMS** Knob to select the desired backlighting.
- 6) Turn the large **FMS** Knob to highlight 'MFD DSPL > AUTO' and repeat steps 3 through 5.

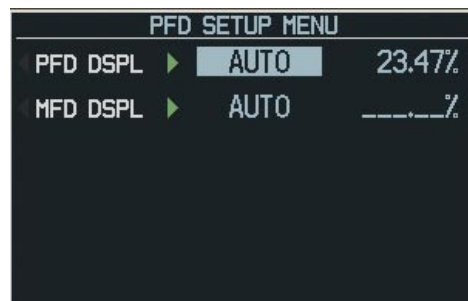


Figure 1-8 PFD Setup Menu Window

## 1.6 DATABASE UPDATES

### Aviation Database Update



**NOTE:** The display downloads the aviation database and stores it internally. The aviation database SD card is not required to remain in the display after the update.

- 1) With the G1000 System OFF, insert the aviation database update SD card into the top card slot of the PFD (Label of SD card facing left).
- 2) Turn the G1000 System ON. This prompt is displayed on the upper left corner of the PFD:

```
DO YOU WANT TO UPDATE THE AVIATION DATABASE?
PRESS CLR FOR NO AND ENT FOR YES
YOU HAVE 30 SECONDS BEFORE NO IS RETURNED
```

Figure 1-9 Database Update Prompt

- 3) Press the **ENT** Key to confirm the database updated. This prompt is displayed:

```
DO YOU WANT TO UPDATE THE AVIATION DATABASE?
PRESS CLR FOR NO AND ENT FOR YES
YOU HAVE 30 SECONDS BEFORE NO IS RETURNED
UPDATING AVIATION DATABASE
.
UPDATED 1 FILES SUCCESSFULLY!
```

Figure 1-10 Database Update Confirmation

- 4) After the update completes, the PFD starts in normal mode. Remove the aviation database update SD card from the PFD.
- 5) Turn the G1000 System OFF.
- 6) Repeat steps 1 through 4 for the MFD. The MFD and PFD aviation databases are now updated.

- 7) Verify that the correct update cycle is loaded during startup of the MFD.

### Terrain and Obstacle Database Updates



**NOTE:** The data contained in the terrain and obstacle databases comes from government agencies. Garmin accurately processes and cross-validates the data, but cannot guarantee the accuracy and completeness of the data.



**NOTE:** Obstacles 200' and higher are included in the obstacle database. It is very important to note that not all obstacles are necessarily charted and therefore may not be contained in the obstacle database.

These databases are not stored internally in the MFD or PFD. Supplemental Data Cards containing identical database versions must be kept in both displays to retain terrain and obstacle data. A Supplemental Data Card should be inserted into the bottom card slot of the PFD and MFD.



**NOTE:** If the Supplemental Data Card is removed from the display, the **TOPO** and **TERRAIN** softkeys are not functional and are grayed out on the MFD Map Page.

- 1) Insert one card in the bottom card slot of the MFD and one in the bottom card slot of the PFD.
- 2) Apply power to the G1000 System. View the MFD power-up splash screen. Check that the Terrain and Obstacle databases are initialized and displayed on the scrolling window of the splash screen.


- 3) Acknowledge the Power-up Page agreement by pressing the **ENT** Key or the right most softkey.
- 4) At the MAP – NAVIGATION MAP page, select the **MAP** Softkey and check to make sure that the **TOPO** and **TERRAIN** softkeys are functional (not grayed out).
- 5) Power down the G1000.



Figure 1-11 Power-Up Splash Screen Window

## SECTION 2: FLIGHT INSTRUMENTS

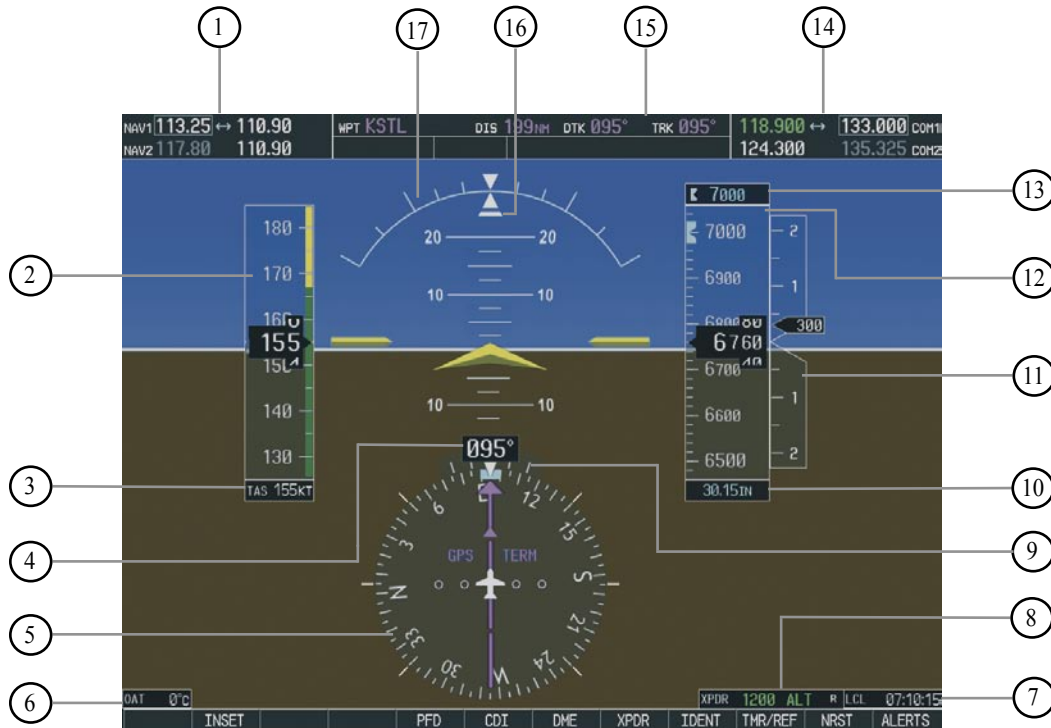The following discussions pertain to the Primary Flight Display, unless otherwise indicated.



- |                                  |                            |
|----------------------------------|----------------------------|
| ① NAV Frequency Window           | ⑨ Turn Rate Indicator      |
| ② Airspeed Indicator             | ⑩ Barometric Setting Box   |
| ③ True Airspeed Box              | ⑪ Vertical Speed Indicator |
| ④ Heading Box                    | ⑫ Altimeter                |
| ⑤ Horizontal Situation Indicator | ⑬ Altitude Reference Box   |
| ⑥ Outside Air Temperature Box    | ⑭ COM Frequency Window     |
| ⑦ System Time Box                | ⑮ Navigation Status Window |
| ⑧ Transponder Status Bar         | ⑯ Slip/Skid Indicator      |
|                                  | ⑰ Attitude Indicator       |

**Figure 2-1 Default PFD Information**



- ① Traffic Annunciation
- ② Selected Heading Box
- ③ Inset Map
- ④ BRG1 Information Window
- ⑤ DME Information Window
- ⑥ BRG2 Information Window
- ⑦ Alerts Window
- ⑧ Selected Course Box
- ⑨ Annunciation Window
- ⑩ Vertical Deviation/Glideslope Indicator
- ⑪ Marker Beacon Annunciation

Figure 2-2 Additional PFD Information



Figure 2-3 PFD Navigation Status Window

## 2.1 AIRSPEED INDICATOR

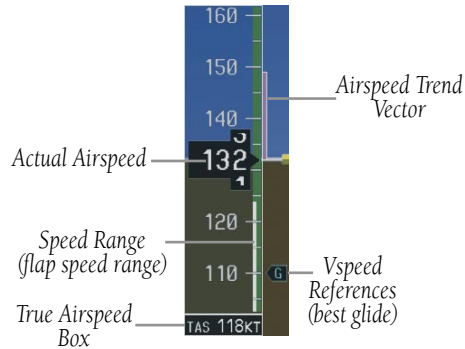


Figure 2-4 Airspeed Indicator

### Speed Indication

The indicated airspeed is displayed inside the black pointer. The pointer will become red upon reaching Vne.



Figure 2-5 Red Pointer at Vne

### Speed Ranges

The color coded speed range strip denotes flaps operating range, normal operating range, and never exceed speed (Vne). A red range is also present for low speed awareness. Refer to the Pilot's Operating Handbook (POH) for airspeed limitations and indicator markings.

### Airspeed Trend Vector

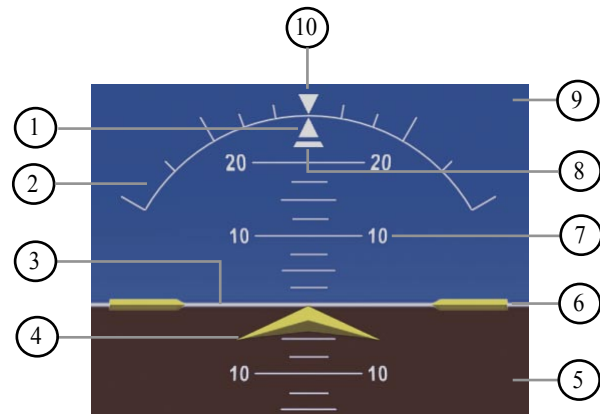
The end of the trend vector displays approximately what the airspeed will be in 6 seconds if the current rate of acceleration/deceleration is maintained.

## Vspeed References

Vspeed References are turned on or off in the Timer/References window. Press the **TMR/REF** Softkey to display the widow. When active (**ON**), the Vsps are displayed at their respective locations to the right of the airspeed scale. To activate the Vspeed References, display the Timer/Reference window and turn the large **FMS** Knob to place the cursor in the ON/OFF field. Turn the small **FMS** Knob to select **ON** or **OFF**.

## 2.2 ATTITUDE INDICATOR

The Slip/Skid Indicator is located under the roll pointer and moves laterally away from the pointer to indicate lateral acceleration. One Slip/Skid indicator displacement is equal to one ball displacement when compared to a traditional slip/skid indicator.



- |                       |                       |
|-----------------------|-----------------------|
| ① Roll Pointer        | ⑥ Aircraft Wing Tips  |
| ② Roll Scale          | ⑦ Pitch Scale         |
| ③ Horizon Line        | ⑧ Slip/Skid Indicator |
| ④ Aircraft Symbol     | ⑨ Sky Representation  |
| ⑤ Land Representation | ⑩ Roll Index Zero     |

Figure 2-6 Attitude Indicator

## 2.3 ALTIMETER

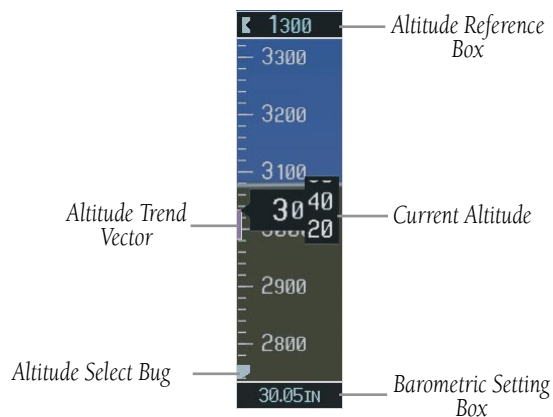


Figure 2-7 Altimeter

### Altitude Select Bug

The Altitude Select Bug is displayed at the selected altitude or, if the selected altitude is beyond the altitudes currently displayed, the bug is displayed at the top or bottom of the display (whichever is closest to the selected altitude).

#### Set the Selected Altitude Bug:

Turn the **ALT** Knobs to set the Altitude Select Bug. The small **ALT** Knob sets the hundreds and the large **ALT** Knob sets the thousands. This altitude also appears in the Selected Altitude Box above the Altimeter.

### Altitude Trend Vector

The end of the trend vector displays approximately what the altitude will be in 6 seconds if the current rate of vertical speed is maintained.

### Barometric Setting Box

To set barometric pressure, turn the **BARO** Knob to select the desired setting.

## Altitude Alerting



Figure 2-8 Altitude Alerting Visual Annunciations

Visual annunciations appear in the Selected Altitude Box. Whenever the Selected Altitude is changed, the Altitude Alerter is reset. The Altitude Alerter is independent of the Automatic Flight Control System.

An aural tone is heard when the aircraft is within 200 feet of acquiring the selected altitude or when deviating beyond 200 feet of the acquired selected altitude.

## Barometric Minimum Descent Altitude

The desired barometric minimum descent altitude (MDA, or Decision Height, DH) can be set in the Timer/References Window.

Visual annunciations alert the pilot when approaching the MDA:

- When the aircraft altitude descends to within 2500 feet of the MDA setting, the Barometric Minimum Box appears with the altitude in light blue text. The bug appears on the tape in light blue once in range.
- When the aircraft passes through 100 feet of the MDA, the bug and text turn white.
- Once the aircraft descends past the MDA, the bug and text turn yellow and the aural alert, "Minimums Minimums", is generated.

Alerting is inhibited while the aircraft is on the ground. If the aircraft climbs after having reached the MDA, once it reaches 50 feet above the MDA, alerting is disabled.

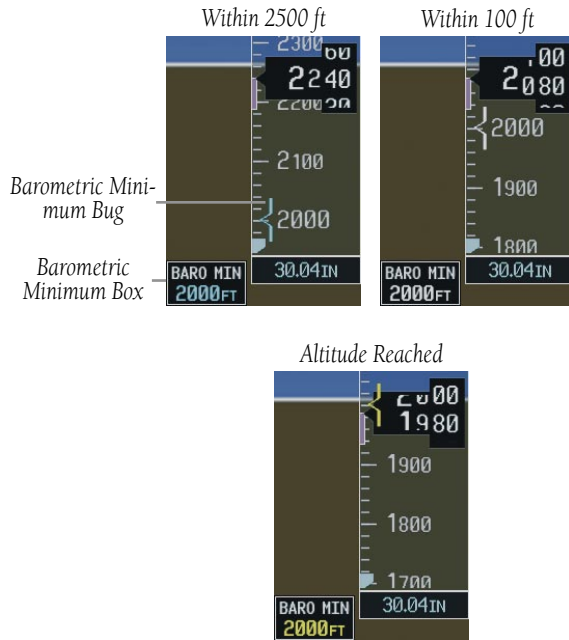


Figure 2-9 Barometric Minimum Descent Altitude Alerting Visual Annunciations

## 2.4 VERTICAL DEVIATION/GLIDESLOPE INDICATOR

The Vertical Deviation/Glideslope Indicator appears when an ILS is tuned in the active NAV field.

## 2.5 MARKER BEACON ANNUNCIATIONS

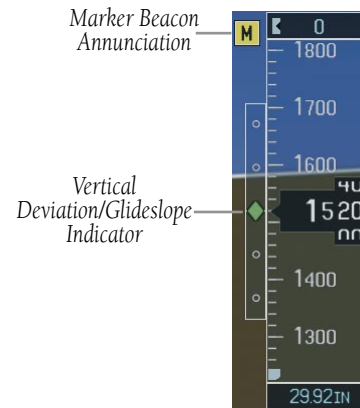


Figure 2-10 Marker Beacon and Vertical Deviation

## 2.6 VERTICAL SPEED INDICATOR


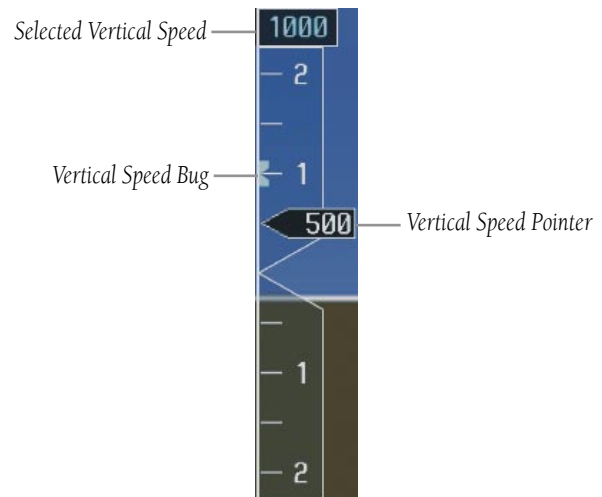


Figure 2-11 Vertical Speed Indicator

The actual vertical speed is displayed inside the pointer.

When the Flight Director is placed in Vertical Speed Mode (by pressing the **VS** Key) the Vertical Speed Bug is displayed. Press the **NOSE UP** or **NOSE DN** Key to adjust.

## 2.7 HORIZONTAL SITUATION INDICATOR (HSI)

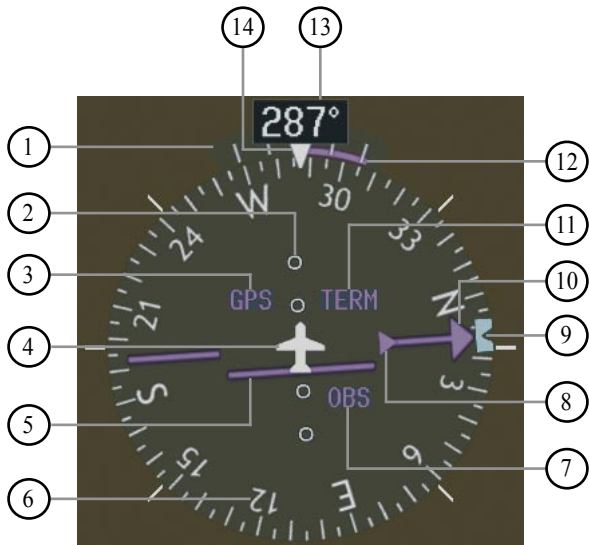


- ① Turn Rate Indicator
- ② Lateral Deviation Scale
- ③ Navigation Source
- ④ Aircraft Symbol
- ⑤ Course Deviation Indicator
- ⑥ Rotating Compass Rose
- ⑦ OBS Mode
- ⑧ TO/FROM Indicator
- ⑨ Heading Bug
- ⑩ Course Pointer
- ⑪ Flight Phase
- ⑫ Turn Rate and Heading Trend Vector
- ⑬ Heading
- ⑭ Lubber Line

### Figure 2-12 Horizontal Situation Indicator

### Turn Rate Indicator and Heading Trend Vector

Tick marks to the left and right of the lubber line denote half-standard and standard turn rates. A magenta turn rate trend vector shows the current turn rate. The end of the trend vector gives the heading predicted in six seconds, based on the present turn rate. At rates greater than 4 deg/sec, an arrowhead appears at the end of the magenta trend vector and the prediction is no longer valid.

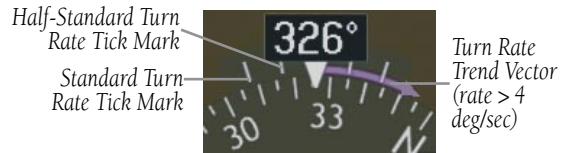

**Figure 2-13 Turn Rate Indicator and Trend Vector**



### Figure 2-14 Standard-Rate Turn Indication

## Course Pointer

The course pointer is a single line arrow (GPS, VOR1 and LOC1) or double line arrow (VOR2 and LOC2) which points in the direction of the set course.



**Figure 2-15 Course Pointer**

## Course Deviation Indicator (CDI)

The CDI scale automatically adjusts to the current phase of flight (enroute 5.0 nm, terminal area 1.0 nm, or approach 0.3 nm). Scaling may be selected manually from the MFD System Setup Page. See System Setup in the G1000 Pilot's Guide for more details.

## Bearing Pointers and Information Windows

Pressing the **PFD** Softkey provides access to the **BRG1** and **BRG2** Softkeys. The BRG1 pointer is a single line pointer. The BRG2 pointer is a double line pointer.

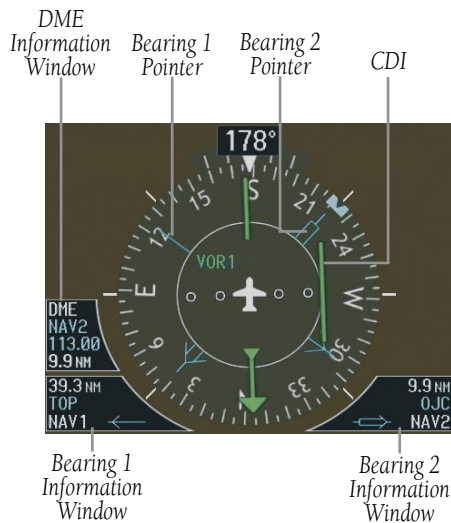


Figure 2-16 HSI with Bearing Information

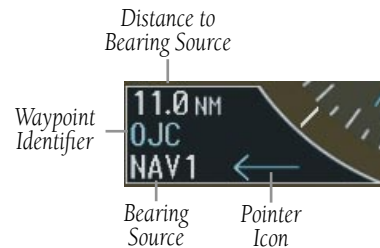


Figure 2-17 BRG1 Information Window

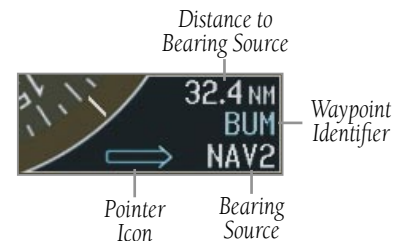


Figure 2-18 BRG2 Information Window

## DME (optional)

To display the DME Information Window, press the **PFD** Softkey followed by the **DME** Softkey.



Figure 2-19 DME Information Window

## Navigation Source

### Change navigation sources:

- 1) Press the **CDI** Softkey to change from GPS to VOR1/LOC1.
- 2) Press the **CDI** Softkey again to change from VOR1/LOC1 to VOR2/LOC2.
- 3) Press the **CDI** Softkey a third time to return to GPS.

When using GPS as the navigation source, the following may appear:

- INTEG – GPS information is either not present or is invalid for navigation use
- WARN – GPS detects a position error
- SUSP – Displayed when in OBS Mode indicating GPS waypoint sequencing is suspended.



Figure 2-20 GPS INTEG, GPS SUSP, LOC1 and VOR2

### Enable/disable OBS mode while navigating with GPS:

- 1) Press the **OBS** Softkey to select OBS Mode.
- 2) Turn the **CRS** Knob to select the desired course TO/FROM the waypoint.
- 3) Press the **OBS** Softkey again to return to normal operation.



**NOTE:** The **OBS** Softkey is only displayed when navigating an active leg using GPS.

## SECTION 3: ENGINE INDICATION SYSTEM (EIS)

### 3.1 ENGINE DISPLAY

In all cases green indicates normal operation, yellow indicates caution, and red indicates warning.

Pressing the **ENGINE** Softkey makes available the **LEAN** and **SYSTEM** Softkeys which in turn provide access to the Lean Page and the System Page, respectively.

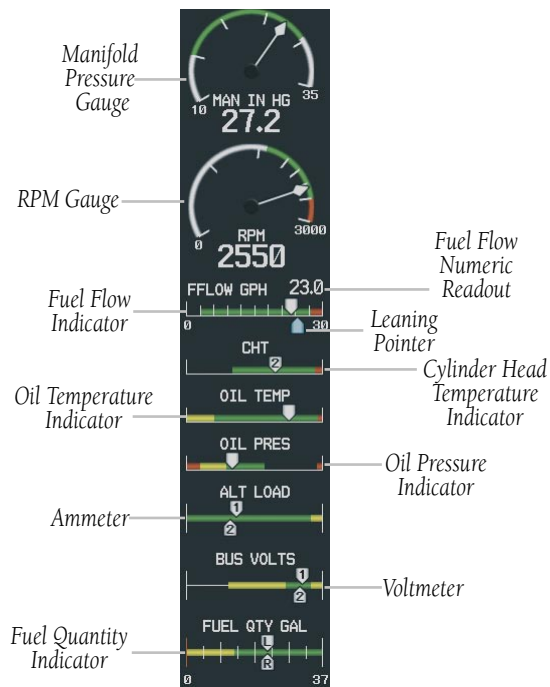


Figure 3-1 Default Engine Page

In a maximum power climb or cruise climb, engine leaning may be done using the Leaning Pointer as a reference when adjusting fuel mixture

### 3.2 LEAN ENGINE DISPLAY

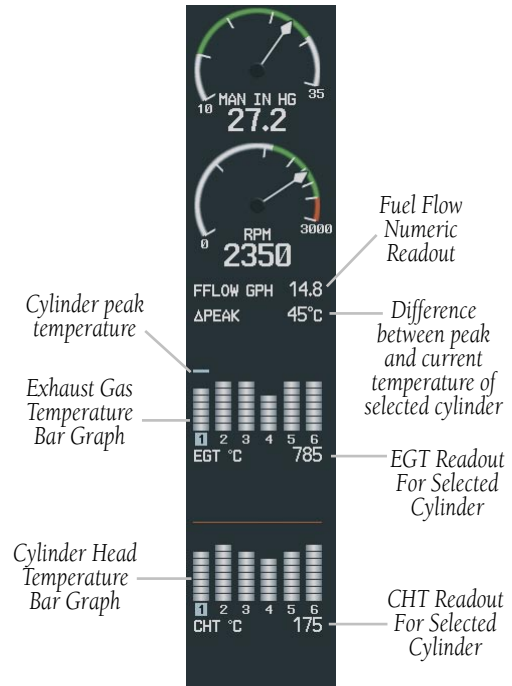


Figure 3-2 LEAN Engine Page

Press the **CYL SLCT** Softkey to select the desired cylinder for monitoring.

The **CYL SLCT** Softkey becomes disabled when the **ASSIST** Softkey is pressed.

Pressing the **ASSIST** Softkey causes the first cylinder that peaks to become highlighted and information for that cylinder to be displayed.



**NOTE:** The pilot should follow the engine manufacturer's recommended leaning procedures in the Pilot's Operating Handbook (POH).

Any exceedance of default Engine Page parameters, while viewing the Lean Engine Page, will cause the display to automatically switch back to the default Engine Page.

3.3 ENGINE SYSTEM DISPLAY

If desired, use the **DEC FUEL**, **INC FUEL** and **RST FUEL** Softkeys to adjust the amount of fuel remaining for totalizer calculations.



**NOTE:** Fuel calculations do not use the aircraft fuel quantity indicators, and are calculated from the last time the fuel was reset.

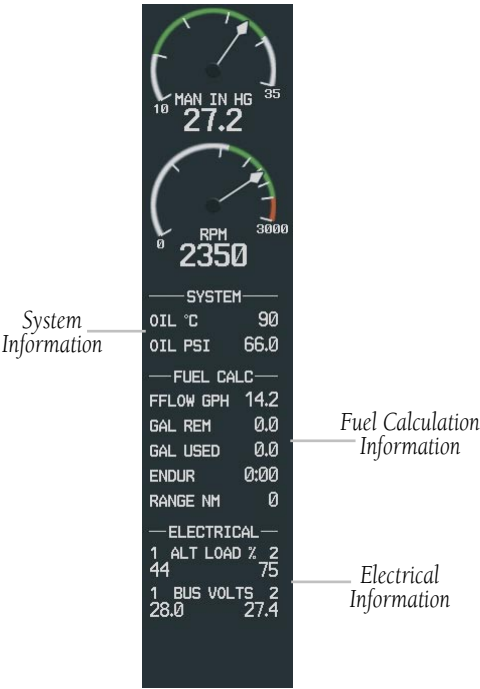


Figure 3-3 SYSTEM Engine Page

Any exceedance of default Engine Page parameters, while viewing the System Engine Page, will cause the display to automatically switch back to the default Engine Page.

## SECTION 4: NAV/COM AND TRANSPONDER

The Nav/Com controls and frequency windows are located on the Primary Flight Display and the Multi-Function Display in the same locations.



Figure 4-1 G1000 VHF NAV/COM Interface (PFD)

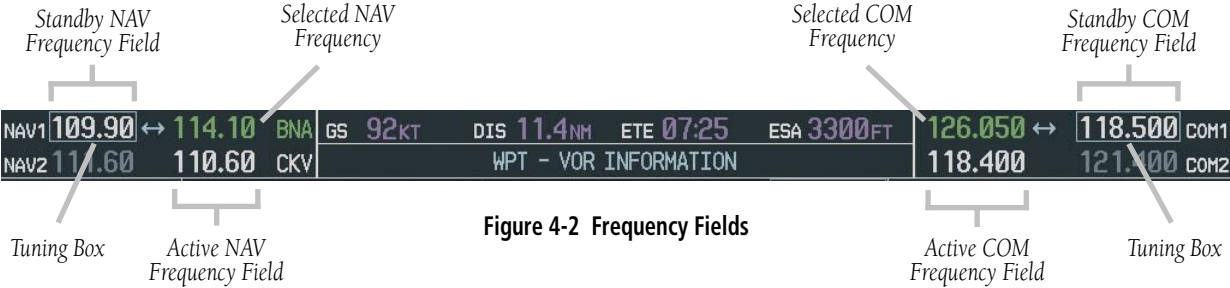


Figure 4-3 Frequency Transfer Arrow and Tuning Box

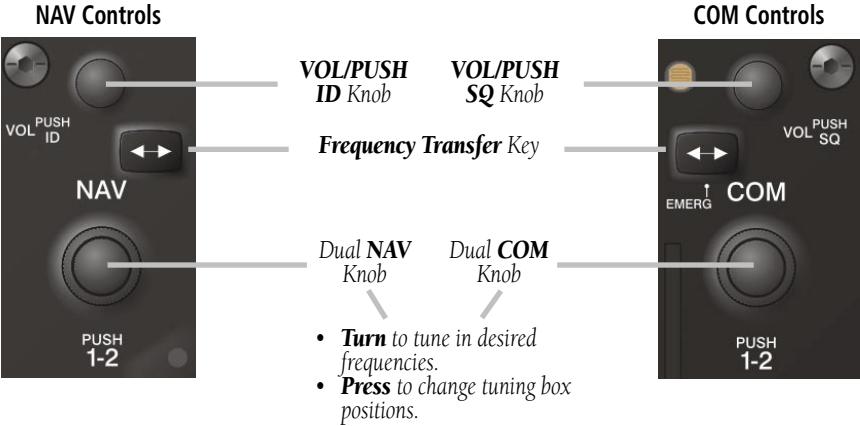


Figure 4-4 NAV/COM Controls

## 4.1 RADIO STATUS INDICATIONS

- RX – When a COM signal is received, a white 'RX' appears by the active COM frequency during signal reception.
- TX – When a COM radio is transmitting, a white 'TX' indication appears to the right of the corresponding COM frequency.
- ID – When the Morse code identifier is ON for a NAV radio, a white 'ID' indication appears to the left of the corresponding active NAV frequency. The Morse code identifier can be heard if the corresponding NAV radio is selected on the audio panel.



Figure 4-5 Radio Status Indications

## 4.2 VOLUME

'VOLUME' is displayed in place of the associated radio name (i.e., 'COM1' or 'NAV2') for two seconds after the volume level is last changed. The percentage of maximum volume is displayed in place of the standby frequency selected by the tuning box.



Figure 4-6 COM Volume Level

## 4.3 AUTOMATIC SQUELCH

Automatic squelch can be disabled for a COM radio by pressing the **COM** Knob to place the tuning box on the desired COM's standby frequency, then by pressing the **VOL/PUSH SQ** Knob.

## 4.4 QUICKLY ACTIVATING 121.500 MHZ

Pressing and holding the **COM Frequency Transfer** Key for approximately two (2) seconds automatically tunes the selected COM radio to the emergency frequency.

## 4.5 OPTIONAL NAV RADIOS

### DME Radio (optional)

The Tuning window is displayed by pressing the **DME** Softkey.

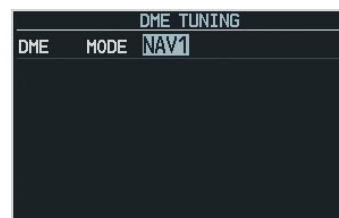


Figure 4-7 Radio Tuning Window

### Change the DME tuning source:

- 1) From the Tuning window, turn the large **FMS** Knob to highlight the DME source field.
- 2) Turn the small **FMS** Knob to display the selection window. Turn the **FMS** Knob to select the desired mode and press the **ENT** Key.



Figure 4-8 DME Selection Window

## 4.6 FREQUENCY AUTO-TUNING

### Auto-tuning on the PFD



Figure 4-9 Nearest Airports Window (PFD)

- 1) Press the **NRST** Softkey to display the Nearest Airports Window.
- 2) Turn either **FMS** Knob to highlight the desired frequency.
- 3) Press the **ENT** Key to place the frequency in the standby field of the active COM.
- 4) Press the **Frequency Transfer** Key to place the frequency in the active field.

NAV frequencies are entered automatically in the NAV window upon approach loading or approach activation.

### Auto-tuning on the MFD

Auto-tuning on the MFD is done in much the same way as on the PFD. Use the **FMS** Knobs to select the desired frequency on any of the information pages. Pressing the **ENT** Key then loads the selected frequency in the tuning box as a standby frequency.

## 4.7 TRANSPONDER

### Mode Selection

The **STBY**, **ON** and **ALT** Softkeys can be accessed by pressing the **XPDR** Softkey.

#### Ground Mode (Automatic)

GND is displayed when the aircraft is on the ground.

 


Figure 4-10 Ground Mode

#### Reply Status

When the transponder sends replies to interrogations, an “R” indication appears momentarily in the reply status field.

 


Figure 4-11 Reply Indication

### Code Selection

- 1) Press the **XPDR** Softkey to display the transponder Mode Selection softkeys.
- 2) Press the **CODE** Softkey to display the transponder Code Selection softkeys, which includes the digit softkeys.
- 3) Press the appropriate digit softkeys to enter the code in the four-digit code field of the Transponder Status bar. Five seconds after the fourth digit has been entered, the transponder code becomes activated.

When entering a code, press the **BKSP** Softkey as needed to back up and change code digits.

Following is a list of important codes:

- 1200 – VFR code in the U.S. (please refer to the ICAO standards for VFR codes in other countries).
- 7000 – VFR code commonly used in Europe (please refer to the ICAO standards).
- 7500 – Hijack code.
- 7600 – Loss of communication code.
- 7700 – Emergency code.
- 7777 – Military interceptor operations code (NEVER ENTER THIS CODE).
- 0000 – Code for military use (in the U.S.).

Flight ID Reporting

If so configured, the Flight ID may be entered in the Timer/Reference window.

REFERENCES			
TIMER	00:00:00	UP	START?
GLIDE	110KT	◀ ON ▶	
Vx	84KT	◀ ON ▶	
Vy	100KT	◀ ON ▶	
BARO MIN	80FT	◀ ON ▶	
FLIGHT ID	AIR265__		

Figure 4-12 Timer/References Window

Blank Page

## SECTION 5: AUDIO PANEL

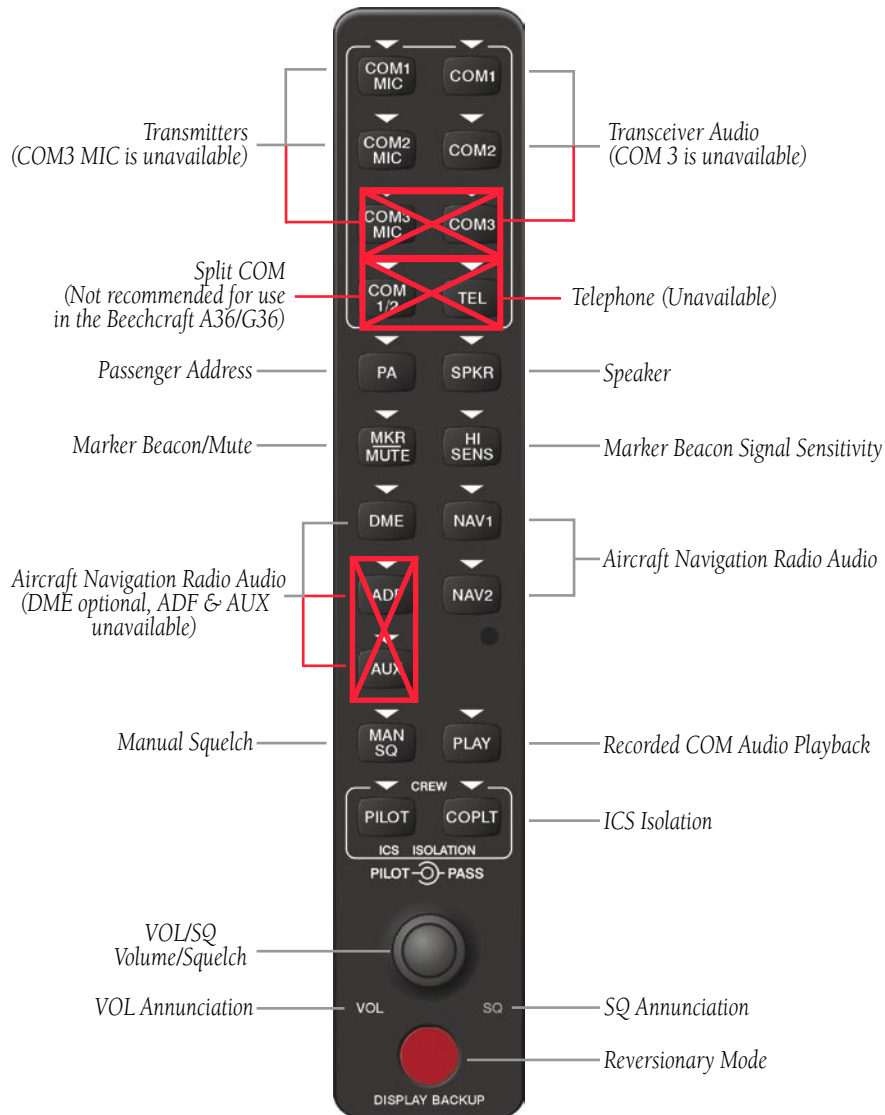


Figure 5-1 Audio Panel Controls

## 5.1 COM RADIO SELECTION

Pressing the **COM1 MIC** or **COM2 MIC** Key selects the active transmitter (i.e., microphone). The associated receiver audio (**COM1** or **COM2**) also becomes selected when the COM MIC Key is pressed.

To prevent deselecting the desired received audio when pressing another COM MIC Key, press the already selected **COM1** or **COM2** Key before pressing the other COM MIC Key.



Figure 5-2 Transceivers

## 5.2 MARKER BEACON RECEIVER

The marker beacon receiver is always on. Only the marker beacon audio can be turned off. Figure 5-3 shows the marker beacon annunciators on the PFD.

When the **MKR/MUTE** Key is pressed, the key annunciator is lit and the audio tone can be heard over the speaker or headsets during marker beacon reception.

When the tone is active, pressing the **MKR/MUTE** Key once mutes the audio but does not affect the marker annunciator. The audio returns when the next marker signal is received.

To turn off the marker beacon audio, press the **MKR/MUTE** Key once when there is no marker indication present, or press twice when an indication is present. The key annunciator will be extinguished when the marker beacon audio is turned off.

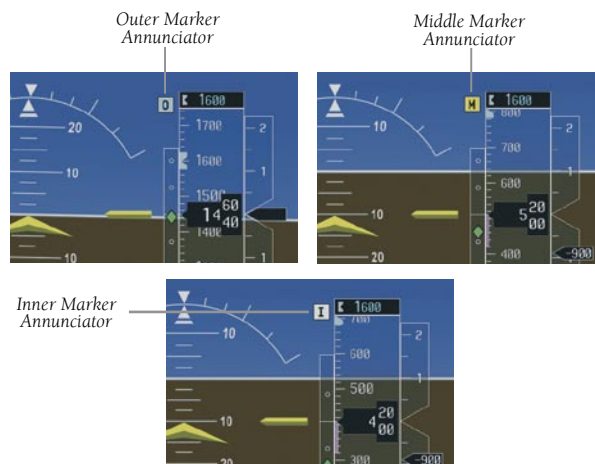


Figure 5-3 Marker Beacon Annunciators on the PFD

## Marker Beacon Signal Sensitivity

The **HI SENS** Key can be pressed for increased marker beacon signal sensitivity.



Figure 5-4 Marker Beacon

## 5.3 NAV RADIO AUDIO SELECTION

Pressing **DME**, **NAV1**, or **NAV2** selects and deselects the radio source and activates the annunciator. Selected audio can be heard over the headset and the speakers. These three keys can be selected individually or together.



Figure 5-5 Navigation Radios

## 5.4 INTERCOM SYSTEM (ICS) ISOLATION

Press the **PILOT** and/or **COPLT** Key to select who is isolated from hearing the Nav/Com radios and music. Selection scenarios are addressed in Table 5-1.



Figure 5-6 ICS Isolation

## 5.5 INTERCOM SQUELCH CONTROL

Select manual squelch for intercom audio by pressing the **MAN SQ** Key to light the annunciator.

Pressing the small **VOL/SQ** Knob now switches between volume and squelch adjustment by lighting **VOL** or **SQ** respectively.



Figure 5-7 Volume/Squelch Control

Mode	PILOT KEY ANNUNCIATOR	COPLT KEY ANNUNCIATOR	Pilot Hears	Copilot Hears	Passenger Hears
<b>ALL</b>	OFF	OFF	Selected radios; pilot; copilot; passengers; MUSIC 1	Selected radios; pilot; copilot; passengers; MUSIC 1	Selected radios; pilot; copilot; passengers; MUSIC 2
<b>PILOT</b>	ON	OFF	Selected radios; pilot	Copilot; passengers; MUSIC 1	Copilot; passengers; MUSIC 2
<b>COPILOT</b>	OFF	ON	Selected radios; pilot; passengers; MUSIC 1	Copilot	Selected radios; pilot; passengers; MUSIC 2
<b>CREW</b>	ON	ON	Selected radios; pilot; copilot	Selected radios; pilot; copilot	Passengers; MUSIC 2

Table 5-1 ICS Isolation Modes

## 5.6 DIGITAL CLEARANCE RECORDER AND PLAYBACK

Each reception of primary active COM audio is automatically recorded in a memory block. When the next transmission is received, it is recorded in the next memory block, and so on. Once the 2.5 minutes of recording time has been reached, the recorder begins recording over the stored memory blocks, starting from the oldest block. Powering off the unit automatically clears all recorded blocks.



Figure 5-8 Playback

- Pressing **PLAY** once plays the latest recorded memory block, then returns to normal operation.
- Pressing **MKR/MUTE** while playing a memory block stops play.
- Pressing the **PLAY** Key during play begins playing the previously recorded memory block. Each subsequent press of the **PLAY** Key will begin playing the next previously recorded block.

If a COM input signal is detected during playback, playback is halted and the new COM input signal is recorded as the latest block.

## SECTION 6: AUTOMATIC FLIGHT CONTROL

In addition to the AFCS (Automatic Flight Control System) keys on the MFD, as discussed in the System Overview section, the following buttons and switches used by the AFCS are located in the cockpit separately from the PFD and MFD.

- **AP DISC (Autopilot Disconnect) Button** — Located on the pilot's control wheel, pressing this button disengages the autopilot. Pressing it also acknowledges an autopilot disconnect.
- **CWS (Control Wheel Steering) Button** — Located on the pilot's control wheel, pressing and holding the **CWS** button disengages the control surface servos without disengaging the autopilot. If the flight director has not been activated, pressing the **CWS** button will activate the flight director in the default pitch and roll hold modes.
- **GA (Go Around) Button** — Located on the subpanel or throttle lever, the **GA** button disengages the autopilot and selects the Go Around Pitch and Roll (wings level) modes.
- **MET (Manual Electric Trim) Switch** — This switch is used to operate manual electric pitch trim. Moving both switches forward simultaneously trims the aircraft nose down. Moving both switches aft simultaneously trims the aircraft nose up. The left switch is the ARM contact and the right switch controls the up/down trim. Pressing the ARM switch disengages the autopilot, if currently engaged. If one side of the switch is active for more than three seconds without the other side also being active, 'PTRM' is displayed in the AFCS System Status field on the PFD. Pressing the MET ARM switch also acknowledges an autopilot disconnect.

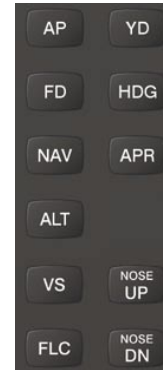


Figure 6-1 AFCS Keys

Pressing the **FD** Key activates only the flight director in the default Pitch Hold/Roll modes without engaging the autopilot. Pressing the **AP** Key activates the flight director and yaw damper, and engages the autopilot. When only the flight director is engaged, pressing the **FD** Key disengages the flight director.

Upon activation of the autopilot and/or flight director, command bars are displayed on the PFD. If the attitude information being sent to the flight director becomes invalid or unavailable, the command bars are removed from the display.



Figure 6-2 Command Bars

### 6.1 MODE ANNUNCIATIONS

Mode annunciations are displayed on the PFD. Figure 6-3 shows the AFCS Status Bar fields. Modes associated with aircraft movement about the roll axis are displayed on the left side. Modes associated with aircraft movement about the pitch axis are displayed on the right side. Armed modes are displayed in white and active modes are displayed in green.

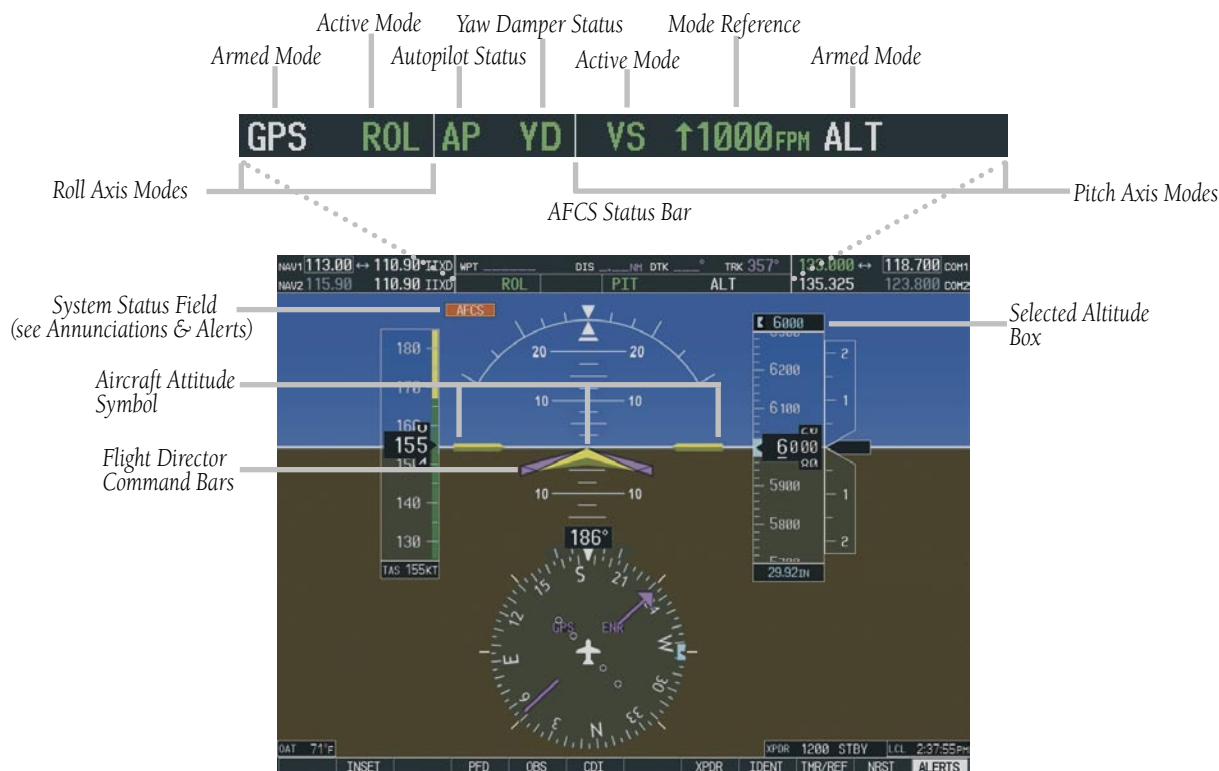


Figure 6-3 PFD AFCS Display

## 6.2 OVERSPEED PROTECTION

An overspeed annunciation (flashing inverse video) is displayed above the airspeed tape.



Figure 6-4 Overspeed Annunciation

When an overspeed caution occurs, reduce engine power and/or adjust the pitch reference to slow the aircraft.

## 6.3 AP ENGAGEMENT/DISENGAGEMENT

When the **AP** Key is pressed, the system engages the autopilot. If the flight director is not already active, it is also engaged when the **AP** Key is pressed. If the yaw damper is not already active, it too is engaged when the **AP** Key pressed.

Autopilot engagement is displayed in the Autopilot Status field of the AFCS Status Bar. Autopilot engagement is indicated by a green 'AP'.



Figure 6-5 Autopilot Engaged Annunciation

## Automatic Disengagement

Automatic disengagement typically occurs due to a failure. Automatic disengagement is annunciated by a flashing ‘AP’, alternating red on white and white on red in the Autopilot Status field. Also, the autopilot disconnect aural alert will be heard. Both the annunciation and the aural alert will continue until acknowledged by pressing the **AP DISC** button or the **MET ARM** switch. The Yaw Damper may or may not disengage, depending on the cause of the automatic AP disengagement.



Figure 6-6 Automatic Disconnect Annunciation

## Manual Disengagement

The autopilot may also be manually disengaged by pressing the **AP DISC** button, the **GA** button, the **MET ARM** switch, or by pressing the **AP** Key on the MFD. Manual disengagement is annunciated by a five-second flashing yellow ‘AP’ in the Autopilot Status field and by a two-second Autopilot disconnect aural alert. The Yaw Damper will also disengage with the autopilot.



Figure 6-7 Manual Disconnect Annunciation

## Control Wheel Steering

Pressing and holding the **CWS** button disengages the servos from the flight control surfaces and allows manual maneuvering of the aircraft. At the same time, the flight director is synchronized to the aircraft attitude during the maneuver. The ‘AP’ annunciation is temporarily replaced by ‘CWS’ in white until the **CWS** button is released.



Figure 6-8 CWS Annunciation

## Yaw Damper

When the autopilot is engaged, the Yaw Damper is automatically engaged. When the Yaw Damper is active, the ‘YD’ annunciation appears in the Yaw Damper Status field as shown:



Figure 6-9 Yaw Damper Active

To disengage the Yaw Damper, press the **YD** Key. The ‘YD’ annunciation turns yellow and flashes for five seconds upon disengagement:



Figure 6-10 Yaw Damper Disengagement

## 6.4 LOSS OF DATA

In general, a flashing yellow mode annunciation indicates either the loss of sensor data (AHRS, ADC, or GIA) or loss of navigation data (VOR, LOC, or GPS) required to compute commands.

When such a loss occurs, the system automatically reverts to the default mode for the affected axis (wings level ROL for roll axis, PIT for pitch axis). The flashing annunciation stops when the pilot presses the affected mode button or selects another mode for the axis. If no pilot action is taken, the flashing annunciation stops after ten seconds.



Figure 6-11 Loss of VOR Signal

## 6.5 PITCH AXIS MODES

Mode annunciations for active pitch axis modes are shown in green during normal operation. Note the Go-Around button is not located on the MFD.

<b>AFCS Key</b>	<b>AFCS Mode</b>	<b>Annunciation</b>
FD/AP only	Pitch Hold (Default)	<b>PIT</b>
ALT	Altitude Hold	<b>ALT nnnnn FT</b>
VS	Vertical Speed	<b>VS nnnn FPM</b>
FLC	Flight Level Change	<b>FLC nnn KT</b>
APR	Glideslope (vertical component of Approach)	<b>GS</b>
GA	Go Around	<b>GA</b>

The default pitch axis mode is Pitch Hold (PIT). When no other pitch axis modes are selected, this is the active pitch axis mode when the autopilot and/or flight director is engaged.

## Pitch Hold Mode (PIT)

- 1) Press the **AP** or **FD** Key. 'PIT' will be displayed in green in the Active Mode field of the AFCS Status Bar. The system will maintain or give command bar direction for a constant pitch attitude (pitch reference) depending on which key is pressed.

- 2) Altitude Hold mode is automatically armed with 'ALT' displayed white in the Armed Mode field to the right of the 'PIT' annunciation.
- 3) Pitch attitude can be adjusted in 0.5 degree increments by pressing the **NOSE UP/NOSE DN** Keys.
- 4) Aircraft pitch may also be changed by pressing and holding the **CWS** button to manually establish the desired pitch using the control wheel. When the **CWS** button is released, the current pitch angle will be maintained.
- 5) If desired, enter an altitude in the Selected Altitude Box by turning the **ALT** Knob. As the selected altitude is reached 'ALT' will flash in green for 10 seconds in the Active Mode field, after which the annunciation stops flashing. This signals the altitude capture is complete and the selected altitude will be maintained.  
If only the flight director is engaged, pitch commands are given to manually maintain the selected altitude.



### Figure 6-12 Pitch Hold Mode

## Altitude Hold Mode (ALT)

- 1) Press the **ALT** Key. The flight director is activated (if not already active) and 'ALT' is now displayed in green in the Active Mode field with the current altitude displayed in the Altitude Reference field.
- 2) Pitch commands will be given to manually maintain the current altitude. Press the **AP** Key to engage the autopilot for maintaining the current altitude.

- 3) To change aircraft altitude, press and hold the **CWS** button and manually maneuver to the desired altitude. Upon reaching the desired altitude, release the **CWS** button. This new altitude is now displayed in the Altitude Reference field. The autopilot will now hold the aircraft at this altitude.



**NOTE:** If the Selected Altitude is captured during CWS maneuvering, the Flight Director altitude reference is not changed. To adjust the altitude reference in this case, the pilot must again press the **CWS** button after the Selected Altitude is captured.

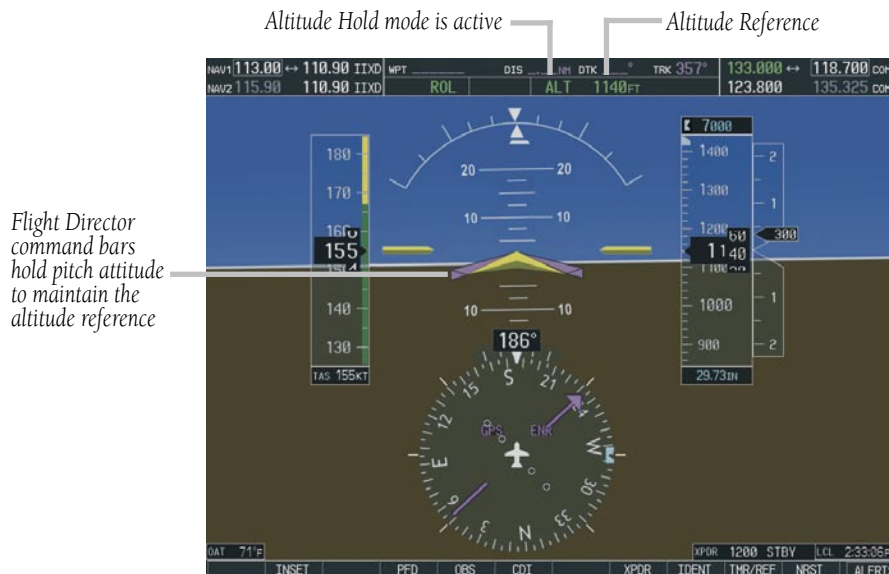


Figure 6-13 Altitude Hold Mode

## Vertical Speed Mode (VS)

- 1) Press the **VS** Key. The flight director is now activated (if not already active) and 'VS' is displayed in green in the Active Mode field and the Vertical Speed Bug will appear on the Vertical Speed Indicator. Pitch commands are given to manually maintain vertical speed. Press the **AP** Key to engage the autopilot for maintaining the current vertical speed.

Altitude Hold mode is automatically armed with 'ALT' displayed white in the Armed Mode field to the right of the 'VS' annunciation.

- 2) The Vertical Speed Bug can be adjusted in 100 fpm increments by pressing the **NOSE UP/NOSE DN** Keys to set the desired vertical speed. The vertical speed setting will be displayed in the Selected Vertical Speed box and in the Vertical Speed Reference field in the AFCS Status Bar.

The Vertical Speed box is located above the VSI when the aircraft is climbing and below the VSI when descending.

- 3) Vertical speed may also be changed by pressing and holding the **CWS** button to manually establish the desired vertical speed using the control wheel. When the **CWS** button is released, the current vertical speed will be maintained.
- 4) A desired altitude may be entered in the Selected Altitude Box by turning the **ALT** Knob. With Altitude Hold mode armed, as the selected altitude is reached 'ALT' will flash in green for 10 seconds in the Active Mode field, after which the annunciation stops flashing. This signals the altitude capture is complete and the selected altitude will be maintained. If only the flight director is engaged, pitch and roll commands are given to manually maintain the selected altitude.

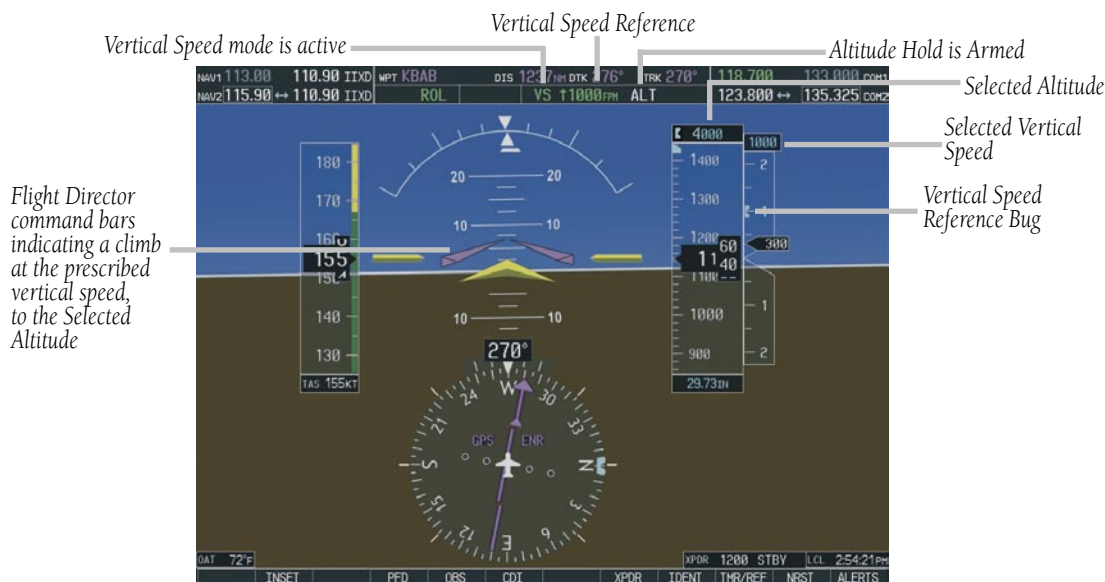


Figure 6-12 Vertical Speed Hold Mode

## Flight Level Change Mode (FLC)

- 1) Select the desired altitude by turning the **ALT** Knob to set the altitude in the Altitude Select box. This altitude must be selected first because Flight Level Change mode will only fly **toward** a selected altitude.
- 2) Press the **FLC** Key. The flight director is activated (if not already active) and 'FLC' is now displayed in green in the Active Mode field and the Airspeed Bug will appear on the Airspeed Indicator. Pitch commands are given to manually maintain airspeed. Press the **AP** Key to engage the autopilot for maintaining the current airspeed.  
Altitude Hold mode is automatically armed with 'ALT' displayed white in the Armed Mode field to the right of the 'FLC' annunciation.
- 3) The Airspeed Bug can be adjusted in 1 knot increments by pressing the **NOSE UP/NOSE DN** Keys to set the desired airspeed. The airspeed setting will be displayed in the Selected

Airspeed box above the Airspeed Indicator and in the Airspeed Reference field in the AFCS Status Bar.

- 4) Airspeed may also be changed by pressing and holding the **CWS** button to manually establish the desired airspeed using the control wheel. When the **CWS** button is released, the current airspeed will be maintained.
- 5) Adjust engine power to allow the autopilot to fly the aircraft at a pitch attitude which corresponds to the selected airspeed and the desired flight profile (descent or climb).
- 6) With Altitude Hold mode armed, as the selected altitude is reached, 'ALT' will flash in green for 10 seconds in the Active Mode field, after which the annunciation stops flashing. This signals the altitude capture is complete and the selected altitude will be maintained at the selected airspeed. If only the flight director is engaged, pitch commands are given to manually maintain the selected altitude.



Figure 6-15 Flight Level Change Mode

## Go-Around Mode (GA)

Pressing the **GA** button (not located on the MFD) engages the flight director in a wings level, 7 degree pitch up attitude. Go-Around mode disengages the autopilot, and arms Altitude Hold Mode automatically. Subsequent autopilot engagement is also allowed. If the pitch attitude is changed manually (e.g with **CWS** button or the **NOSE UP/NOSE DN** Keys), Pitch and Roll Hold modes will automatically be selected.

## Glideslope (GS)



**NOTE:** Pressing the **CWS** button while *Glideslope Mode* is active does not cancel the mode. The autopilot guides the aircraft back to the glideslope upon release of the **CWS** button.

Glideslope Mode is only available when the flight director has been set for approach. Glideslope Mode is automatically armed under the following conditions:

- Valid localizer frequency is tuned
- Horizontal Situation Indicator (HSI) is in LOC mode, with valid deviation indication
- Valid glideslope deviation
- **APR** Key is pressed



Figure 6-16 Go-Around Mode

## 6.6 ROLL AXIS MODES

Mode annunciations for active roll axis modes are shown in green during normal operation.

AFCS Key	AFCS Mode	Annunciation
FD/AP only	Roll Hold (Default)	ROL
HDG	Heading Select	HDG
NAV	VOR Enroute Arm / Capture / Track	VOR
	GPS Arm / Capture / Track	GPS
	BC Arm / Capture / Track	BC
	LOC Arm / Capture / Track; (No Glideslope)	LOC
APR	GPS Arm / Capture / Track	GPS
	VOR Approach Arm / Capture / Track	VAPP
	ILS Approach Arm / Capture / Track (Glideslope pitch mode automatically armed)	LOC
GA	Go Around (Wings Level)	GA

The default roll axis mode is Roll Hold (ROL). When no other roll axis modes are selected, this is the active roll axis mode when the autopilot and/or flight director is engaged.

### Roll Hold Mode (ROL)

- 1) Press the **FD** or **AP** Key.

If the aircraft bank angle is  $\geq 6$  degrees when the key is pressed, Roll Hold mode is selected by default. Roll attitude at the time of activation is maintained by the autopilot up to 22°. If only the flight director is active, command bars indicate the proper roll attitude.

If the aircraft bank angle is  $< 6$  degrees when the key is pressed, the aircraft will be maintained at wings level. If only the flight director is active, command bars give guidance to maintain wings level.

Roll Hold mode is annunciated by 'ROL'.

 


Figure 6-17 Roll Hold Mode

- 2) A new heading can be established by pressing and holding the **CWS** button and manually turning the aircraft to the desired new heading. Release the **CWS** button and the aircraft will maintain wings level at approximately the new heading, but will not hold the heading. The same practice applies to holding roll attitude.

## Heading Select Mode (HDG)

- 1) Turn the **HDG** Knob to move the heading bug on the HSI to the desired heading. When the knob is turned, the Selected Heading box will appear and remain for three seconds after the knob stops moving. The selected heading will be displayed in the Selected Heading box.
- 2) With the autopilot and/or flight director engaged, press the **HDG** Key. 'HDG' is now displayed in green in the Active Mode field. If the autopilot is engaged, the aircraft will begin to turn toward the selected heading. When the selected heading is reached, the aircraft will maintain this heading. If only the flight director is engaged, manually maneuver the aircraft to the command bars to acquire the selected heading.
- 3) The heading may be adjusted by turning the **HDG** Knob and moving the heading bug to a new heading. The aircraft will turn in the same direction the heading bug is moved. However, if the heading bug is moved more than 340 degrees at a time, a turn reversal will be the result.



## Navigation Mode (GPS, VOR, LOC, or BC)

Pressing the **NAV** Key activates the Navigation Mode. The Navigation mode acquires and tracks the selected navigation receiver on the HSI (e.g. GPS, VOR or LOC). GPS roll steering commands are followed when the HSI is in GPS mode, and creates roll steering commands from the Selected Course and deviation when the HSI is in VOR, LOC, or BC (backcourse) modes.

Turning the **CRS** Knob moves the Course Pointer and displays the Selected Course box. The Selected Course is displayed in the box. The box is displayed while the knob is turning and disappears three seconds after the knob stops turning.

Backcourse mode is automatically selected when the localizer front course is greater than 105 degrees from the aircraft heading.

## Navigation Mode Armed

If the CDI is not centered (deviation >1 dot) when the Navigation mode is selected, the mode is automatically armed. The armed annunciation appears in white to the left of the active roll axis mode.

See the Example Procedures Using AFCS section for more information.



**NOTE:** When making a backcourse approach, set Selected Course to the localizer front course.

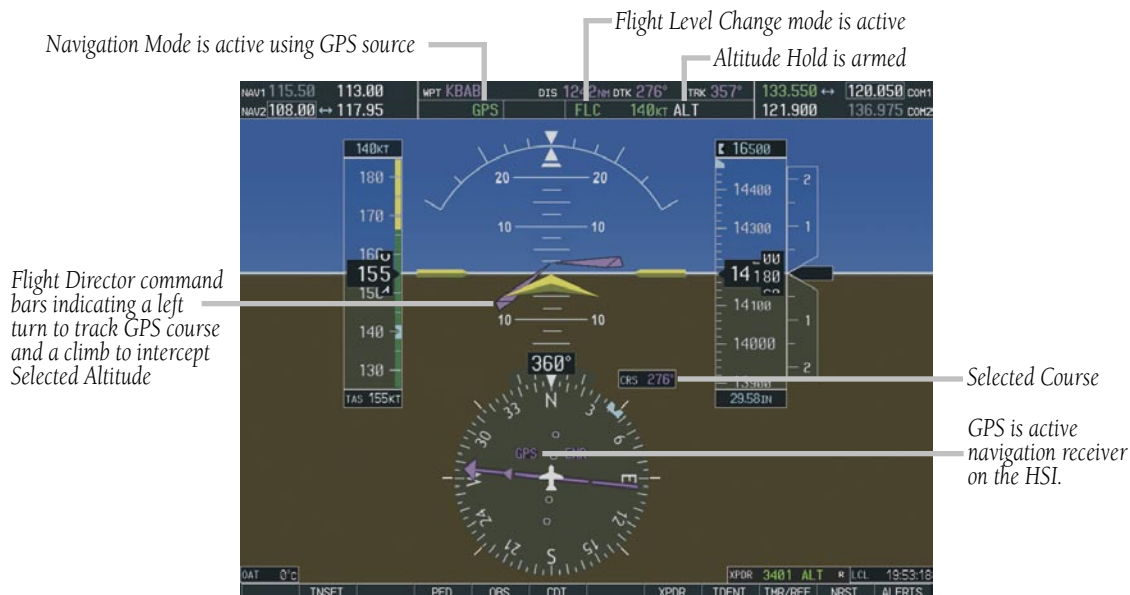


Figure 6-19 Navigation Mode

## Approach Mode (GPS, VAPP or LOC)

The Approach mode acquires and tracks the selected navigation receiver on the HSI (GPS, VOR or LOC). This mode uses the selected navigation receiver deviation and desired course inputs to fly the approach. The Approach mode provides greater sensitivity for VOR tracking than Navigation mode, and allows the autopilot to fly an ILS approach with a glideslope.



**NOTE:** While using Approach mode, the Glideslope mode is automatically armed when LOC mode is selected on the HSI.

If the CDI is is not centered (deviation >1 dot) when the Approach mode is selected, the mode is automatically armed. The armed annunciation appears in white to the left of the active roll axis mode.

See the Example Procedures Using AFCS section for more information.

## Go Around (GA)

Go Around mode maintains a wings level, 7 degree nose up attitude for instances where the pilot wishes to execute a missed approach or go around. Figure 6-16 depicts the Go Around mode on the PFD.



Figure 6-20 Approach Mode

## 6.7 EXAMPLE PROCEDURES USING AFCS

This section provides a scenario-based set of procedures showing various autopilot modes used during a flight. In this scenario, the aircraft departs Reid-Hillview Airport (KRHV) from runway 13L, enroute to Fresno Yosemite International Airport (KFAT). Climb to an altitude of 7,000 feet MSL and fly a heading of 070 degrees to intercept airway V107. Fly airway V107 to Panoche VORTAC (PXN) using VOR navigation, then fly airway V230 using a GPS flight plan. Prior to reaching Clovis VORTAC (CZQ), descend to 3,000 feet and load the ILS approach to R29R at KFAT. Fly the ILS approach and execute a missed approach.



**NOTE:** The diagrams in the following examples are for instructional purposes only and may not be used for navigation.

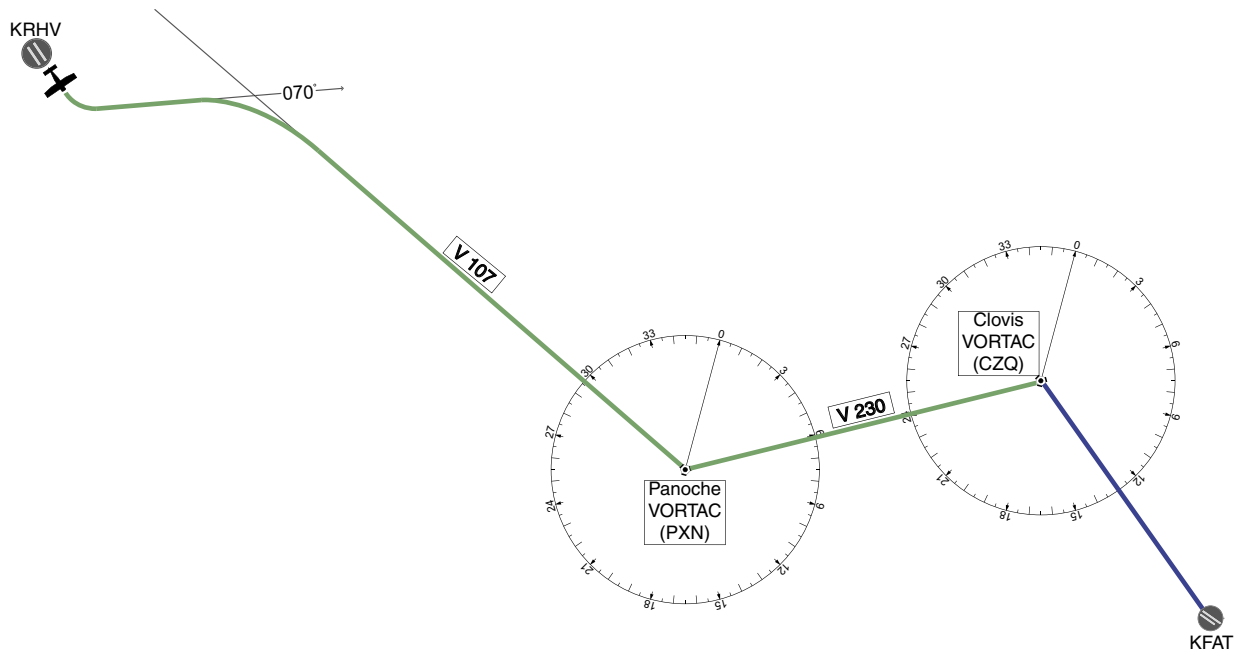


Figure 6-21 Flight Plan Overview

Departure

Climb to the selected altitude and fly an assigned heading:

- 1) Upon takeoff, set the Selected Altitude to 7000 feet using the **ALT** Knob.  
To have the autopilot capture this altitude, use Pitch Hold, Vertical Speed, or Flight Level Change Mode. In this example, Vertical Speed Mode is used.
- 2) Upon reaching the desired vertical speed of 1000 fpm, enable the flight director in Vertical Speed Mode.
  - a) Press the **VS** Key. Altitude Hold Mode is armed automatically.

ROL		VS ↑1000FPM	ALT
-----	--	-------------	-----

- b) Press the **AP** Key to engage the autopilot in Roll Hold and Vertical Speed modes.

ROL	AP	YD	VS ↑1000FPM	ALT
-----	----	----	-------------	-----

- 3) Activate Heading Select Mode while the autopilot is engaged in the climb.
  - a) Use the **HDG** Knob to set the Selected Heading to 070°.
  - b) Press the **HDG** Key. The autopilot follows the Heading Bug on the HSI and turns the aircraft to the desired heading.

HDG	AP	YD	VS ↑1000FPM	ALT
-----	----	----	-------------	-----

- 4) As the aircraft climbs to the Selected Altitude, the flight director changes from Vertical Speed to Altitude Hold Mode. This active mode change is indicated by the green 'ALT' annunciation flashing for ten seconds.

HDG	AP	YD	ALT	7000FT
-----	----	----	-----	--------

- 5) Upon reaching the Selected Altitude, the autopilot completes the capture process and levels the aircraft. From this point, the flight director continues to operate in Altitude Hold Mode.

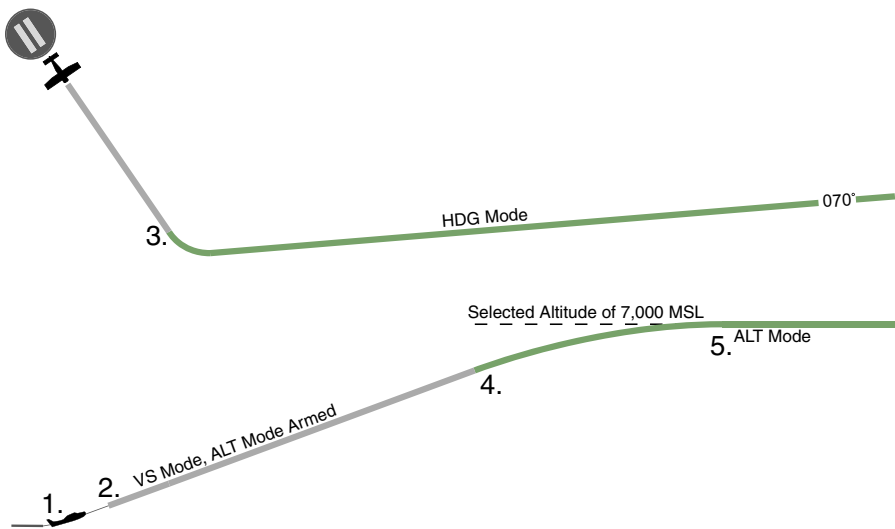


Figure 6-22 Departure

## Intercepting a VOR Radial



**NOTE:** Changing the HSI mode cancels Navigation Mode and causes the flight director to revert to Roll Hold Mode.

During climb-out, the autopilot continues to fly the aircraft in Heading Select Mode. Airway V107 to Panoche VORTAC (PXN) should now be intercepted.

- 1) Tune the VOR frequency and activate Heading Select Mode.
  - a) Use the **CDI** Softkey to set the HSI mode to VOR.
  - b) Use the **CRS** Knob to set the Selected Course to 116°. Note that at this point, the flight director is still in Heading Select Mode and the autopilot continues to fly 070°.

- c) Press the **NAV** Key to arm Navigation Mode. The white annunciation 'VOR' appears to the left of the active roll mode.

VOR	HDG	AP	YD	ALT	7000FT
-----	-----	----	----	-----	--------

- 2) When the CDI shows less than one dot, the flight director changes from Heading Select to Navigation Mode, and the green annunciation 'VOR' flashes. The autopilot begins turning to intercept the Selected Course.

VOR	AP	YD	ALT	7000FT
-----	----	----	-----	--------

- 3) The autopilot continues the turn until the aircraft is established on the Selected Course.

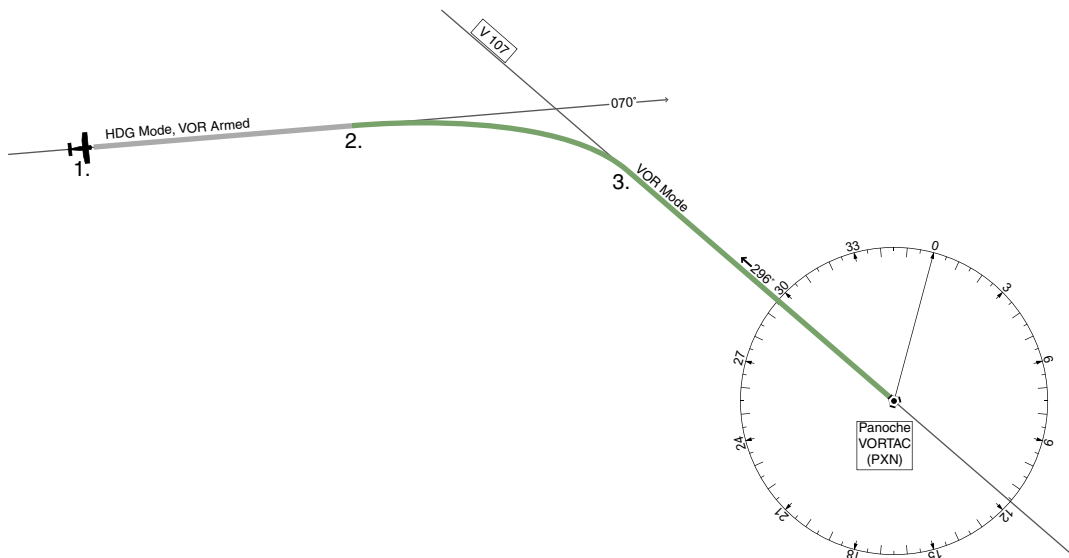


Figure 6-23 Intercepting a VOR

## Flying a GPS Flight Plan

- 1) Enter Panoche VORTAC (PXN) and Clovis VORTAC (CZQ) into the GPS flight plan, in preparation to intercept this leg.
- 2) Transition from VOR to GPS Navigation Mode.
  - a) Use the **CDI** Softkey to put the HSI in GPS mode. This cancels VOR mode on the HSI and the flight director loses the VOR signal. As a result, the VOR annunciation flashes yellow.

*Flashes for ten seconds, then transitions to ROL.*

**VOR** | **AP** | **YD** | **ALT** | **7000<sub>FT</sub>**

**ROL** | **AP** | **YD** | **ALT** | **7000<sub>FT</sub>**

- b) Press the **NAV** Key to activate GPS Navigation Mode to cause the autopilot to steer the aircraft toward the active flight plan leg.

**GPS** | **AP** | **YD** | **ALT** | **7000<sub>FT</sub>**

If the **NAV** Key is not pressed within 10 seconds of the HSI mode change, the flight director will roll the wings level and enter Roll Hold Mode.

- 3) Once the flight plan leg is intercepted, the autopilot continues to track GPS guidance to the end of the flight plan.

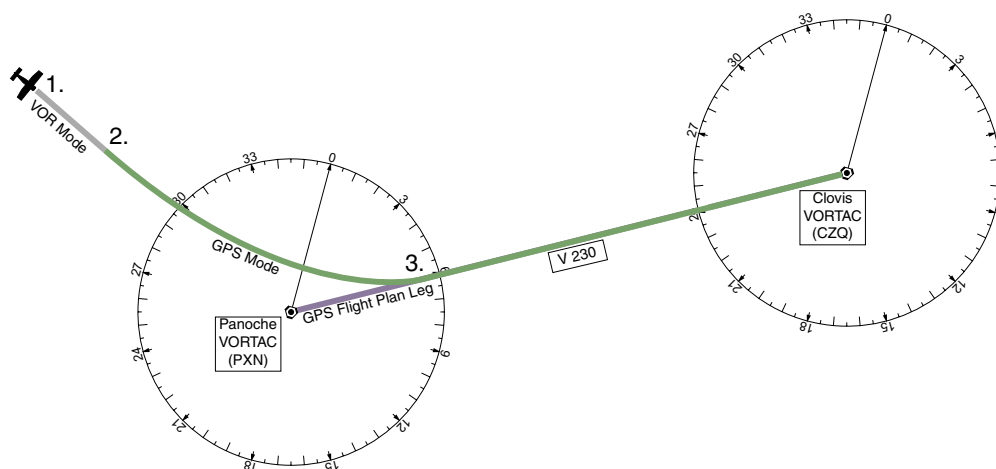


Figure 6-24 Transition to GPS Flight Plan

## Flight Level Change (Descent)

While flying the GPS leg from Panoche VORTAC to Clovis VORTAC, the aircraft is cleared to make a descent to 3000 feet in preparation for the approach to KFAT.

- 1) Enter Flight Level Change Mode.
  - a) Using the **ALT** Knob, set the Selected Altitude to 3000 feet.
  - b) Press the **FLC** Key to activate Flight Level Change Mode. The annunciation 'FLC' appears next to the Airspeed Reference, which defaults to the current aircraft airspeed, 142 knots. Altitude Hold Mode is armed automatically.

- 2) Reduce power to allow descent in Flight Level Change Mode. The autopilot maintains the Airspeed Reference.
- 3) Upon capturing the Selected Altitude, the flight director changes from Flight Level Change to Altitude Hold Mode. The annunciation 'ALT' flashes in green to indicate the altitude capture. After the capture is complete, the autopilot holds the aircraft level at the Selected Altitude.

GPS | AP YD | ALT 3000FT

GPS | AP YD | FLC 142KT ALT

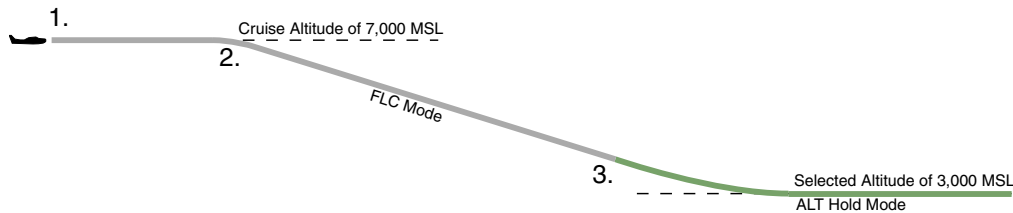


Figure 6-25 FLC Descent

## ILS Approach

- 1) Transition from GPS Navigation Mode to Heading Select Mode.
  - a) Load the Runway 29R ILS approach for KFAT into the Flight Plan.
  - b) Select 'Vectors to Final' for the transition.
  - c) Set the Selected Heading after getting vectors from ATC and press the **HDG** Key. The autopilot turns the aircraft to the desired heading.
- 2) Use Heading Select Mode to comply with ATC vectors as requested.
- 3) In preparation for approach, tune the localizer frequency and select LOC mode on the HSI.
- 4) Press the **APR** Key when cleared for approach to arm the Approach Mode. 'LOC' and 'GS' appear in the armed roll and pitch mode fields, respectively. The autopilot and flight director determine when to begin the turn to intercept the final approach course.
- 5) The autopilot flies the ILS Approach. At the Decision Height, there are two options: push the **AP DISC** switch and land the aircraft, or use the **GA** button to execute a missed approach (refer to the following procedure).

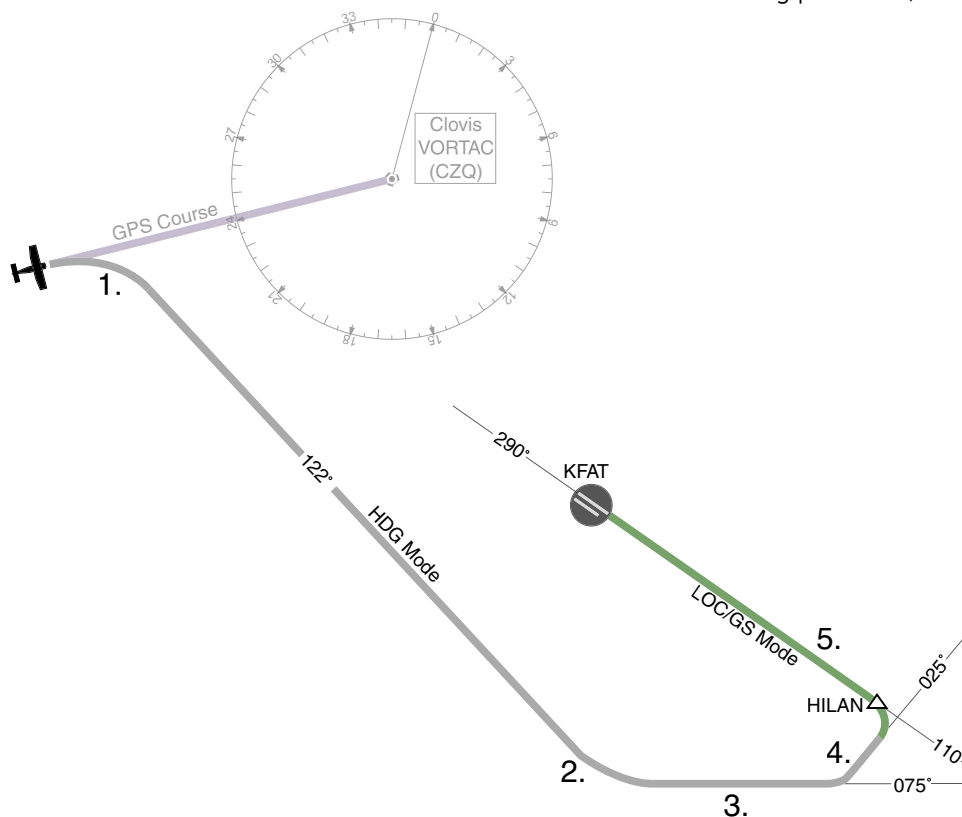


Figure 6-26 ILS Approach to KFAT

## Go-Around / Missed Approach

- 1) Push the **GA** button at the Decision Height and apply full power to execute a missed approach. The flight director Command Bars establish a nose-up climb to follow.

Note that when the **GA** button is pushed, the autopilot disconnects and the 'AP' annunciation flashes yellow for five seconds

- 2) Start the climb to the prescribed altitude in the published Missed Approach Procedure.
  - a) Press the **AP** Key to re-engage the autopilot.
  - b) Set the HSI to GPS mode.
  - c) Press the **NAV** Key to have the autopilot fly to the hold.
  - d) Select the **SUSP** Softkey to resume sequencing approach legs to the Missed Approach Hold Point (MAHP). The autopilot flies direct to Clovis VORTAC according to the loaded approach (see Figure 6-27).
- 3) Use the **ALT** Knob to set a Selected Altitude to hold. The **CWS** button may be used to set a new pitch attitude.

As the Selected Altitude is captured, Altitude Hold Mode becomes active and the autopilot maintains the Selected Altitude.

- 4) To use the autopilot to fly the hold in Heading Select Mode, set the Selected Heading using the **HDG** Knob and press the **HDG** Key. Use the **HDG** Knob guide the aircraft for the remainder of the hold.

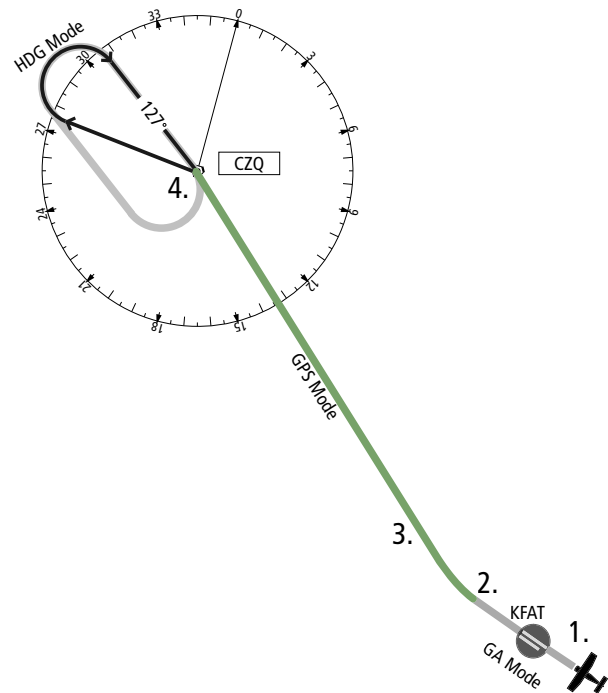


Figure 6-27 Go Around / Missed Approach

Blank Page

## SECTION 7: NAVIGATION

The following discussions pertain to the Multi Function Display, unless otherwise indicated.

### 7.1 NAVIGATION MAP PAGE

#### Select the MAP Page Group

- 1) Turn the large **FMS** Knob until MAP is highlighted in the page group window in the lower right of the MFD display.
- 2) Turn the small **FMS** Knob to select the first MAP page (indicated by a solid rectangular icon).
- 3) Press the **MAP** Softkey to display softkeys for the available information which may be displayed on the map.



**WARNING:** The map display should only be used for situational awareness. Any map display indication should be compared with approved navigation sources.

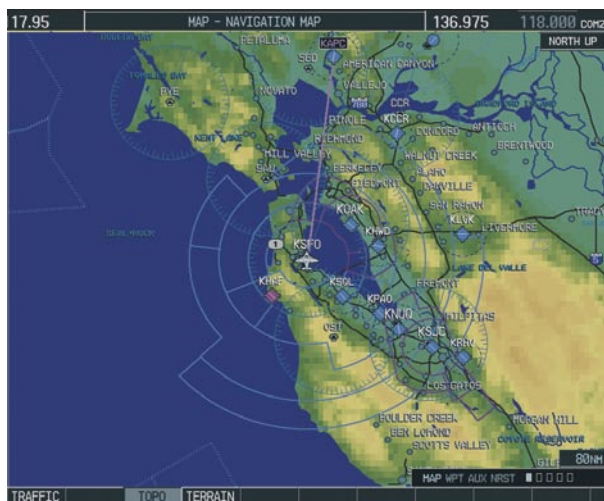


Figure 7-1 Navigation Map Page

### 7.2 DIRECT-TO NAVIGATION

#### Direct-to Navigation from the MFD

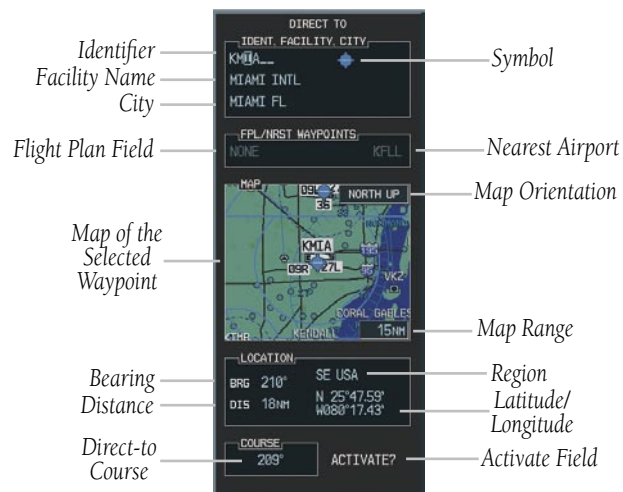


Figure 7-2 MFD Direct-to Window

#### Enter a Direct-to destination:

- 1) Press the **Direct-to** (**D▶**) Key.
- 2) Turn the small **FMS** Knob to enter the first letter of the destination waypoint identifier. Turn the large **FMS** Knob to the right to move the cursor to the next character position.
- 3) Repeat step 2 to spell out the rest of the waypoint identifier.
- 4) Press the **ENT** Key to confirm the identifier. The 'Activate?' field is highlighted.
- 5) Press the **ENT** Key to activate.

#### Select a Direct-to destination to a flight plan waypoint or nearest airport:

- 1) Press the **Direct-to** (**D▶**) Key.
- 2) Turn the large **FMS** Knob to highlight the Flight Plan Field or Nearest Airport Field.
- 3) Turn the small **FMS** Knob to display a list of waypoints or airports.

- 4) Continue turning the small **FMS** Knob to scroll through the list and highlight the desired waypoint or airport.
- 5) Press the **ENT** Key to confirm the selection. Press **ENT** again to activate a Direct-to.

## Re-center the CDI (HSI) needle to the same destination waypoint:

- 1) Press the **Direct-to** (**D▶**) Key, followed by pressing the **ENT** Key twice. NOTE: If a missed approach point (MAP) is the current destination, the approach will be canceled.

## Manually define the Direct-to course:

- 1) Press the **Direct-to** (**D▶**) Key.
- 2) Turn the **FMS** Knobs to select the destination waypoint.
- 3) Press the **ENT** Key to confirm the selected waypoint, then turn the large **FMS** Knob to highlight the Direct-to Course field.
- 4) Turn the **FMS** Knobs to select the desired course and press the **ENT** Key.
- 5) Press the **ENT** Key again to begin navigation using the selected destination and course.

## Cancelling Direct-to Navigation:

- 1) Press the **Direct-to** (**D▶**) Key.
- 2) Press the **MENU** Key to display the Direct-to options menu.
- 3) With 'Cancel Direct-To NAV' highlighted, press the **ENT** Key. If a flight plan is still active, the G1000 resumes navigating the flight plan along the closest leg.

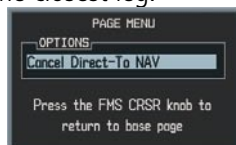


Figure 7-3 Canceling Direct-to Navigation

## Direct-to Navigation from the PFD

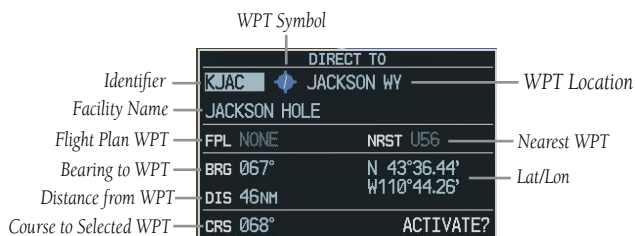


Figure 7-4 PFD Direct-to Window

- 1) Press the Direct-to Key (**D▶**).
- 2) Turn the large **FMS** Knob to place the cursor in the desired selection field.
- 3) Turn the small **FMS** Knob to begin selecting the desired identifier, location, etc.
- 4) Press the **ENT** Key.
- 5) The cursor is now flashing on 'ACTIVATE?'. Press the **ENT** Key again to activate.

## Cancelling Direct-to Navigation:

- 1) Press the Direct-to (**D▶**) Key.
- 2) Press the **MENU** Key to display the Options Window. The cursor will be flashing on 'Cancel Direct-to NAV'.
- 3) Press the **ENT** Key to cancel the direct-to.

## 7.3 AIRPORT INFORMATION

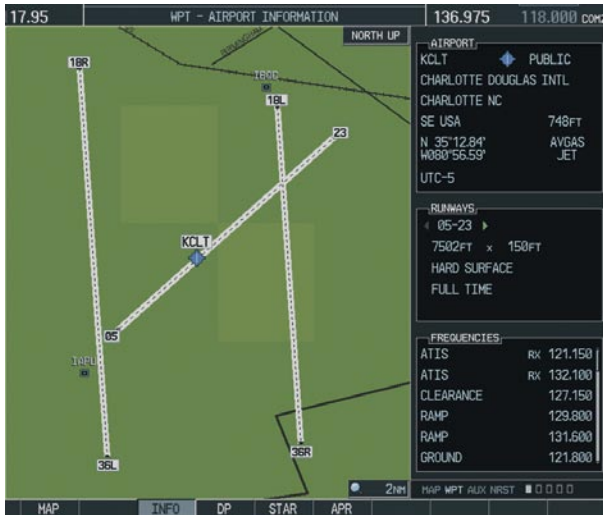


Figure 7-5 Airport Information Page

### Select the Airport Information Page

- 1) Turn the large **FMS** Knob to select the 'WPT' page group. Turn the small **FMS** Knob to select the first rectangular page icon.

### Enter a Waypoint Facility Name or City Location

- 1) Press the **FMS** Knob to activate the cursor.
- 2) Turn the large **FMS** Knob to select the facility name or location (city) field.
- 3) Turn the small **FMS** Knob to select the desired character.
- 4) Turn the large **FMS** Knob to select the next character field.
- 5) Repeat steps 3 and 4 until the facility name or location is selected, then press the **ENT** Key. If there are duplicate names in the database, a list is displayed from which to choose the desired location.

- 6) To remove the flashing cursor, press the **FMS** Knob.

### Access Runway Information

- 1) Press the **FMS** Knob to activate the cursor.
- 2) Turn the large **FMS** Knob to place the cursor on the Runways field.
- 3) Turn the small **FMS** Knob to display the next runway for the selected airport.
- 4) Continue turning the small **FMS** Knob to select the desired runway.
- 5) To remove the flashing cursor, press the **FMS** Knob.

### Access Frequency Information

- 1) Press the **FMS** Knob to activate the cursor.
- 2) Turn the large **FMS** Knob to move the cursor to the Frequencies window.
- 3) Turn either **FMS** Knob to scroll through the list, placing the cursor on the desired frequency.
- 4) Press the **ENT** Key to place the selected frequency in the standby field of the 'COM' or 'NAV' window.
- 5) To remove the flashing cursor, press the **FMS** Knob.
  - 'TX' – transmit only
  - 'RX' – receive only
  - 'PT' – part time frequency
  - 'I' – additional information exists, press the **ENT** Key

If a listed frequency has sector or altitude restrictions, the frequency is preceded by an info designation.

## 7.4 INTERSECTION INFORMATION

### Select the Intersection Information Page

- 1) Turn the large **FMS** Knob to select the WPT page group.
- 2) Turn the small **FMS** Knob to select the second rectangular page icon.



Figure 7-6 Intersection Information Page

### Access Information on an Intersection

- 1) With the Intersection Information Page displayed, press the **FMS** Knob to activate the cursor.
- 2) Turn the **FMS** Knobs to enter a name for the identifier and press the **ENT** Key.
- 3) Press the **FMS** Knob to remove the flashing cursor.

## 7.5 NDB INFORMATION

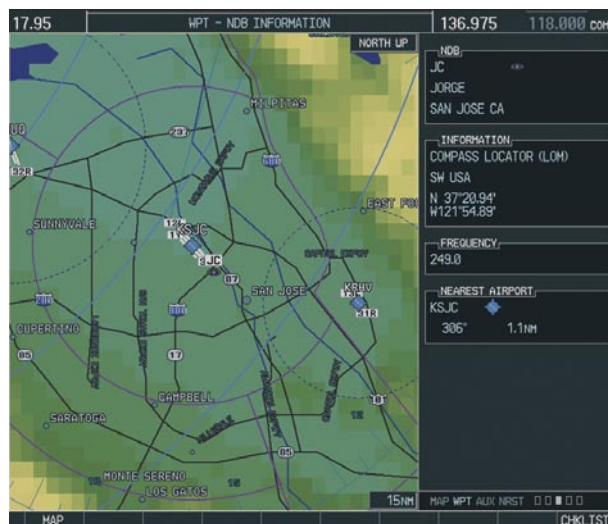


Figure 7-7 NDB Information Page

### Select the NDB Information Page

- 1) Turn the large **FMS** Knob to select the WPT page group.
- 2) Turn the small **FMS** Knob to select the third rectangular page icon

### View Information on a Specific NDB

- 1) With the NDB Information Page displayed, press the **FMS** Knob to activate the cursor.
- 2) Turn the large **FMS** Knob to highlight the desired selection field (identifier, name or closest city).
- 3) Turn the **FMS** Knobs to enter an identifier, name or city and press the **ENT** Key.
- 4) Press the **FMS** Knob to remove the flashing cursor.

## 7.6 VOR INFORMATION

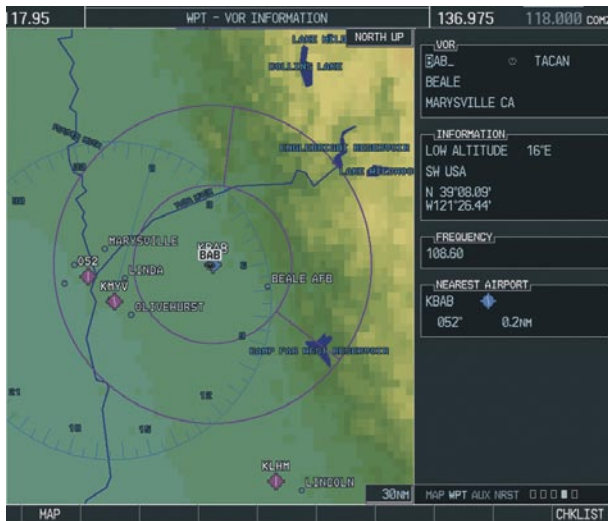


Figure 7-8 VOR Information Page

### Select the VOR Information Page

- 1) Turn the large **FMS** Knob to select the WPT page group.
- 2) Turn the small **FMS** Knob to select the fourth rectangular page icon.

### Access Information on a VOR

- 1) With the VOR Information Page displayed, press the **FMS** Knob to activate the cursor.
- 2) Turn the large **FMS** Knob to highlight the desired selection field (identifier, name or closest city).
- 3) Turn the **FMS** Knobs to enter an identifier, name or city and press the **ENT** Key.
- 4) Press the **FMS** Knob to remove the flashing cursor.

## 7.7 USER WAYPOINT INFORMATION PAGE

See the Flight Planning section for a discussion on creating and modifying user defined waypoints.

## 7.8 NEAREST AIRPORTS



Figure 7-9 Nearest Airports Page

### Nearest Airport Information on the MFD

#### Select the Nearest Airports Page

- 1) Turn the large **FMS** Knob to select the NRST page group.
- 2) Turn the small **FMS** Knob to select the first rectangular page icon.

#### Access Information on a Specific Airport

- 1) Press the **APT** Softkey located at the bottom of the display. The first airport in the nearest airports list is highlighted.
- 2) Turn the large **FMS** Knob to highlight the desired airport.

## Access Runway Information for the Selected Airport

- 1) Press the **RNWX** Softkey located at the bottom of the display.
- 2) Turn the small **FMS** Knob to select the desired runway.

## Quickly Tune the COM Transceiver to a Nearby Airport Frequency

- 1) Press the **FREQ** Softkey located at the bottom of the display.
- 2) Turn either **FMS** Knob to select the desired frequency.
- 3) Press the **ENT** Key. The selected frequency is placed in the standby frequency tuning box.
- 4) Press the **Frequency Transfer** Key to place the frequency in the active field.

## Nearest Airports Information on the PFD

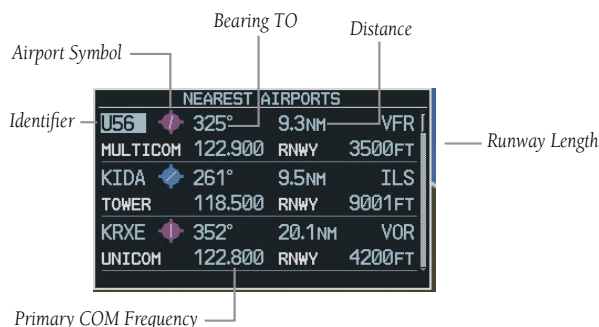


Figure 7-10 Nearest Airports Window

- 1) Press the **NRST** Softkey to display the PFD Nearest Airports Window.

## View Information on a Specific Airport in the List

- 1) Turn the large **FMS** Knob to place the cursor on the desired airport identifier.

- 2) Press the **ENT** Key to display airport information.
- 3) Press the **ENT** Key again (cursor is on 'BACK') to return to the list.

## Load an Airport COM Frequency into the Active COM

- 1) Turn the large **FMS** Knob to place the cursor on the desired airport frequency shown in the window.
- 2) Press the **ENT** Key and the selected frequency will become the standby frequency for the active COM.
- 3) Press the **Frequency Transfer** Key to make the frequency the active frequency.

## 7.9 NEAREST INTERSECTIONS

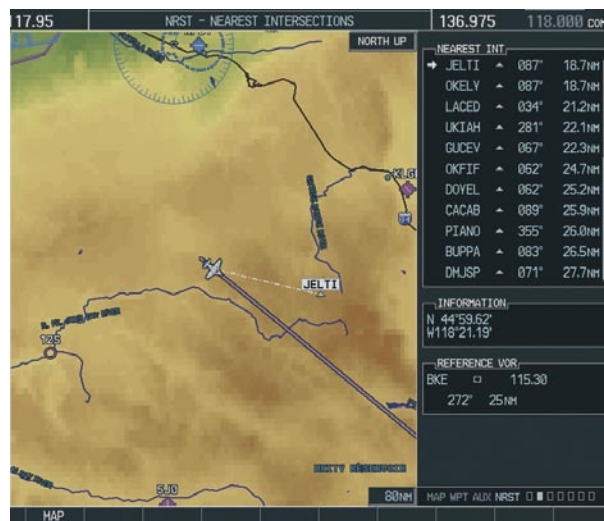


Figure 7-11 Nearest Intersections Page

## Select the Nearest Intersections Page

- 1) Turn the large **FMS** Knob to select the NRST page group.

- 2) Turn the small **FMS** Knob to select the second rectangular page icon.

## View Information on the Nearest Intersection

- 1) Press the **FMS** Knob to activate the cursor.
- 2) Turn either **FMS** Knob to select the desired intersection. Press the **ENT** Key.

## 7.10 NEAREST NDB

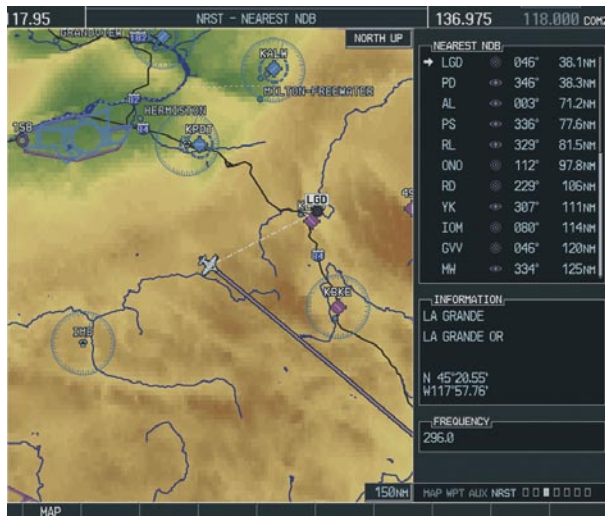


Figure 7-12 Nearest NDB Page

## Select the Nearest NDB Page

- 1) Turn the large **FMS** Knob to select the NRST page group.
- 2) Turn the small **FMS** Knob to select the third rectangular page icon.

## Access Information on a Specific NDB

- 1) Press the **FMS** Knob to activate the cursor.
- 2) Turn either **FMS** Knob to select the desired NDB. Press the **ENT** Key. The remaining information

on the Nearest NDB Page pertains to the selected NDB.

## 7.11 NEAREST VOR

### Select the Nearest VOR Page

- 1) Turn the large **FMS** Knob to select the NRST page group.
- 2) Turn the small **FMS** Knob to select the fourth rectangular page icon.



Figure 7-13 Nearest VOR Page

## View Information on the Nearest VOR

- 1) With the Nearest VOR Page selected, press the **VOR** Softkey.
  - 2) Turn either **FMS** Knob to select a VOR. Press the **ENT** Key.
- OR
- Press the **MENU** Key. Select the Select VOR Window option and press the **ENT** Key. Turn either **FMS** Knob to select a VOR.

## Select and Load a VOR Frequency

- 1) With the Nearest VOR Page selected, press the **FREQ** Softkey to highlight the VOR frequency for the selected VOR.
  - 2) Press the **ENT** Key. The selected VOR frequency is placed in the NAV standby frequency field.
- OR Press the **MENU** Key. Select the Select Frequency Window option and press the **ENT** Key. Press the **ENT** Key again when the frequency field is highlighted to place the selected VOR frequency in the NAV standby field.

## 7.12 NEAREST USER WAYPOINT



Figure 7-14 Nearest User Waypoints Page

## Select the Nearest User Waypoint Page

- 1) Turn the large **FMS** Knob to select the NRST page group.
- 2) Turn the small **FMS** Knob to select the fifth rectangular page icon.

## Select a Nearest User Waypoint

- 1) With the Nearest User Waypoint Page selected, press the **FMS** Knob to activate the cursor.
- 2) Press the **ENT** Key to select the Nearest User Waypoint.
- 3) The remaining information on the Nearest User Waypoint Page pertains to the selected Nearest User Waypoint.

## 7.13 NEAREST FREQUENCIES

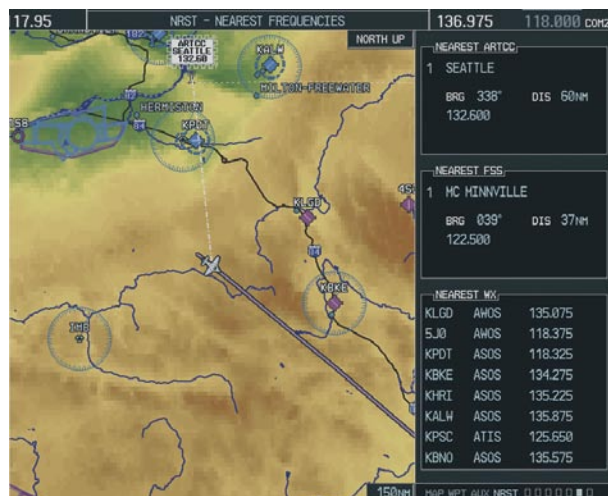


Figure 7-15 Nearest Frequencies Page

## Select the Nearest Frequencies Page

- 1) Turn the large **FMS** Knob to select the NRST page group.
- 2) Turn the small **FMS** Knob to select the sixth rectangular page icon.

## Select and Load the Nearest ARTCC, FSS, or Weather Frequency

- 1) With the Nearest Frequencies Page selected, press the **ARTCC, FSS, or Wx** Softkey.
- 2) Turn the large **FMS** Knob to select the frequency.
- 3) Press the **ENT** Key to load the frequency into the 'COM' frequency standby field.

## 7.14 NEAREST AIRSPACES

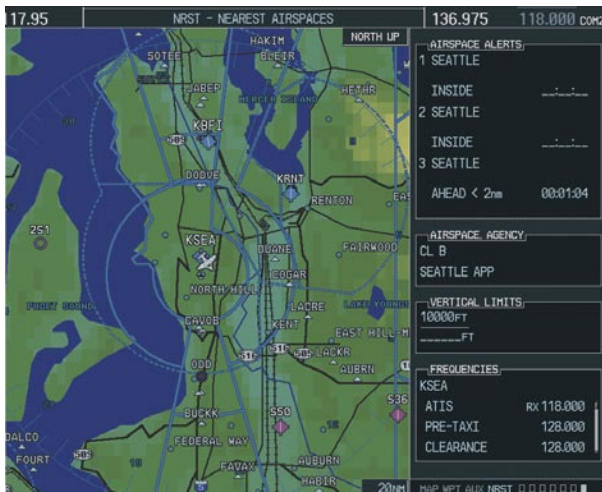


Figure 7-16 Nearest Airspaces Page

## Select the Nearest Airspaces Page

- 1) Turn the large **FMS** Knob to select the NRST page group.
- 2) Turn the small **FMS** Knob to select the seventh rectangular page icon.

## Airspace Alerts Box

- If the projected course takes the aircraft inside an airspace within the next ten minutes, 'Ahead' is displayed.

- If the aircraft is within two nautical miles of an airspace and the current course takes the aircraft inside, 'Ahead < 2 nm' is displayed.
- If the aircraft is within two nautical miles of an airspace and the current course will not take the aircraft inside, 'Within 2 nm' is displayed.
- If the aircraft has entered an airspace, 'Inside' is displayed.

## View Additional Details for a Listed Airspace

- 1) Select the Nearest Airspace Page.
- 2) Press the **FMS** Knob to activate the cursor.
- 3) Turn the large **FMS** Knob to scroll through the list, highlighting the desired airspace.
- 4) Press the **ALERTS** Softkey and turn either **FMS** Knob to select the desired airspace.
- 5) Press the **FMS** Knob to remove the flashing cursor.

## View and Quickly Load the Frequency for a Controlling Agency

- 1) Select the Nearest Airspaces Page.
- 2) Press the **FREQ** Softkey and turn either **FMS** Knob to select the desired frequency. Press the **ENT** Key to load the frequency into the 'COM' frequency standby field.

Blank Page

## SECTION 8: FLIGHT PLANNING

The following discussions pertain to the Multi Function Display, unless otherwise indicated.

### 8.1 USER DEFINED WAYPOINTS



Figure 8-1 User WPT Information Page

#### Select the User WPT Information Page

- 1) Turn the large **FMS** Knob to select the NRST page group.
- 2) Turn the small **FMS** Knob to select the fifth rectangular page icon.

#### Create a New User Waypoint

- 1) With the User Waypoint Information Page displayed, press the **FMS** Knob to activate the cursor.
- 2) Turn the **FMS** Knobs to enter a name for the new waypoint and press the **ENT** Key. The message 'Are you sure you want to create the new user waypoint' is displayed. With 'YES' highlighted, press the **ENT** Key.

- 3) Turn the large **FMS** Knob to highlight the latitude/longitude field or the Reference Waypoints field, depending on how the waypoint is to be defined.
- 4) Turn the **FMS** Knobs to enter the position coordinates or the radial and distance from the reference waypoint.
- 5) Press the **ENT** Key to accept the new waypoint.
- 6) Press the **FMS** Knob to remove the flashing cursor.

#### Create User Waypoints from the Navigation Map Page

- 1) With the Navigation Map Page displayed, push the **joystick** to activate the panning function. The target pointer is displayed at the present aircraft position.
- 2) After placing the pointer at the desired position, press the **ENT** Key. The User Waypoint Information Page is now displayed with the captured position.
- 3) Turn the **FMS** Knobs to select a waypoint name.
- 4) Press the **ENT** Key to accept the selected name. The first reference waypoint field is highlighted.
- 5) If desired, turn the **FMS** Knobs to enter the identifier of the reference waypoint and the radial and distance to the reference waypoint. Press the **ENT** Key to accept.
- 6) Press the **FMS** Knob to remove the flashing cursor.

Modify a User Waypoint

- 1) With the User Waypoint Information Page displayed, press the **FMS** Knob to activate the cursor.
- 2) Turn the large **FMS** Knob to move the cursor to the desired field and turn the small **FMS** Knob to make changes.
- 3) Press the **ENT** Key to accept the changes.
- 4) Press the **FMS** Knob to remove the flashing cursor.

Delete a User Waypoint

- 1) Select the User Waypoint Information Page and press **MENU** to display the User Waypoint Information Page Options or press the **DELETE** Softkey.
- 2) Turn the large **FMS** Knob to select 'Delete User Waypoint' and press the **ENT** Key. The message 'Would you like to delete the user waypoint' is displayed. With 'YES' highlighted, press the **ENT** Key.

8.2 VIEWING THE ACTIVE FLIGHT PLAN

Press the **FPL** Key.



Figure 8-2 Active Flight Plan Window on the PFD



Figure 8-3 Active Flight Plan Page on the MFD

8.3 ACTIVATE A STORED FLIGHT PLAN

- 1) Press the **FPL** Key and turn the small **FMS** Knob to display the Flight Plan Catalog Page.



Figure 8-4 Flight Plan Catalog Page

- 2) Press the **FMS** Knob to activate the cursor.
- 3) Turn the large **FMS** Knob to highlight the desired flight plan and press the **ACTIVE** Softkey.
- 4) With OK highlighted, press the **ENT** Key to activate the flight plan. To cancel the flight plan activation, turn the large **FMS** Knob to highlight 'CANCEL' and press the **ENT** Key.

## 8.4 ACTIVATE A FLIGHT PLAN LEG

- 1) From the Active Flight Plan Page, press the **FMS** Knob to activate the cursor and turn the large **FMS** Knob to highlight the desired destination waypoint.
- 2) Press the **ACT LEG** Softkey (using MFD only).  
OR
- 3) Press the **MENU** Key, select the 'Activate Leg' option from the page menu and press the **ENT** Key. This step must be used when activating a leg from the PFD.
- 4) With 'Activate' highlighted, press the **ENT** Key.

 


Figure 8-5 Activate Flight Plan Leg Confirmation

## 8.5 STOP NAVIGATING A FLIGHT PLAN

- 1) Press the **FPL** Key to display the Active Flight Plan Page.
- 2) Press the **MENU** Key to display the Page Menu window.

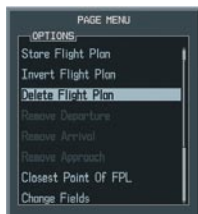


Figure 8-6 Delete Flight Plan

- 3) Turn the large **FMS** Knob to highlight 'Delete Flight Plan' and press the **ENT** Key. With 'OK' highlighted, press the **ENT** Key to deactivate the flight plan. This will not delete the stored

flight plan, only the active flight plan.

 


Figure 8-7 Delete Flight Plan Confirmation

## 8.6 INVERT ACTIVE FLIGHT PLAN

- 1) From the Active Flight Plan Page, press the **MENU** Key to display the Page Menu.
- 2) Turn the large **FMS** Knob to highlight 'Invert Flight Plan' and press the **ENT** Key. The original flight plan remains intact in its flight plan catalog storage location.
- 3) With 'OK' highlighted, press the **ENT** Key to invert the flight plan.

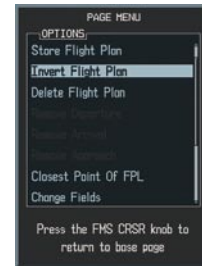


Figure 8-8 Invert Flight Plan

 


Figure 8-9 Invert Flight Plan Confirmation

## 8.7 CREATE A NEW FLIGHT PLAN

Create a new flight plan using the MFD:

- 1) Press the **FPL** Key and turn the small **FMS** Knob to display the Flight Plan Catalog Page.

- 2) Press the **NEW** Softkey to display a blank flight plan page for the first empty storage location.

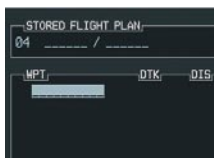


Figure 8-10 Create FPL on MFD

- 3) Turn the small **FMS** Knob to display the Waypoint Information Page. Turn the small **FMS** Knob to enter the first character of the identifier of the departure waypoint. Turn the large **FMS** Knob to move the cursor to the next character field. Repeat using the **FMS** Knobs until the desired identifier has been entered.



Figure 8-11 Waypoint Info Window

- 4) Press the **ENT** Key.
- 5) Repeat step number 3 to enter the identifier for each additional flight plan waypoint.
- 6) When all waypoints have been entered, press the **FMS** Knob to return to the Flight Plan Catalog Page. The new flight plan is now in the list.

## Create a new flight plan using the PFD



**NOTE:** A flight plan cannot be entered using the PFD if another flight plan is active.



**NOTE:** After the first leg is entered (using the PFD only), it is immediately activated.

- 1) Press the **FPL** Key and press the small **FMS** Knob to activate the cursor.
- 2) Turn the small **FMS** Knob to enter the first character of the flight plan starting identifier.
- 3) Turn the large **FMS** Knob to move the cursor to the next character field.
- 4) Turn the small **FMS** Knob to enter the next character. Continue this process until the desired identifier is entered.
- 5) Press the **ENT** Key and the cursor is now ready for entering of the next flight plan waypoint.
- 6) Repeat steps 2 through 5 to enter the identifier for each additional flight plan waypoint.
- 7) Once all waypoints have been entered, press the **FMS** Knob to return to the Active Flight Plan Window.



Figure 8-12 Creating Flight Plan on the PFD

## 8.8 LOAD A DEPARTURE

See the Procedures section for a discussion on loading and activating departure procedures.

## 8.9 LOAD AN ARRIVAL

See the Procedures section for a discussion on loading and activating arrival procedures.

## 8.10 LOAD AN APPROACH

See the Procedures section for a discussion on loading and activating approach procedures.

## 8.11 REMOVE A DEPARTURE, ARRIVAL, OR APPROACH FROM A FLIGHT PLAN

- 1) With the Active or Stored Flight Plan Page displayed, press the small **FMS** Knob to activate the cursor.
- 2) Turn the large **FMS** Knob to highlight the title for the approach, departure or arrival to be deleted. Titles appear in white directly above the procedure's waypoints.
- 3) Press the **CLR** Key to display a confirmation window. With 'OK' highlighted, press the **ENT** Key to remove the selected procedure.

## 8.12 STORE A FLIGHT PLAN

- 1) From the Flight Plan Page, press the **FMS** Knob to activate the cursor.
- 2) Turn the large **FMS** Knob to highlight the desired flight plan and press the **MENU** Key to display the Flight Plan Page options.
- 3) Turn the large **FMS** Knob to highlight 'Store Flight Plan' and press the **ENT** Key.
- 4) With 'OK' highlighted, press the **ENT** Key to store the flight plan.

 


Figure 8-13 Store Flight Plan Confirmation

## 8.13 EDIT A STORED FLIGHT PLAN

- 1) Press the **FPL** Key and turn the small **FMS** Knob to display the Flight Plan Catalog Page.
- 2) Press the **FMS** Knob to activate the cursor.
- 3) Turn the large **FMS** Knob to highlight the desired flight plan and press the **ENT** Key.
- 4) Turn the **FMS** Knobs to make the desired changes, then press the **ENT** Key.
- 5) Press the **FMS** Knob to return to the Flight Plan Catalog Page.

## 8.14 DELETE A WAYPOINT FROM THE FLIGHT PLAN

- 1) Press the **FPL** Key and turn the small **FMS** Knob to display the Flight Plan Catalog Page.
- 2) Press the **FMS** Knob to activate the cursor.
- 3) Turn the large **FMS** Knob to highlight the desired flight plan and press the **ENT** Key.
- 4) Turn the large **FMS** Knob to select the waypoint to be deleted and press the **CLR** Key to display a 'REMOVE WAYPOINT' confirmation window.
- 5) With 'OK' highlighted, press the **ENT** Key to remove the waypoint. To cancel the delete request, turn the large **FMS** Knob to highlight 'CANCEL' and press the **ENT** Key.
- 6) Once all changes have been made, press the **FMS** Knob to return to the Flight Plan Page.

 


Figure 8-14 Remove Waypoint Confirmation

### 8.15 INVERT AND ACTIVATE A STORED FLIGHT PLAN

- 1) From the Flight Plan Catalog Page, press the **FMS** Knob to activate the cursor.
- 2) Turn the large **FMS** Knob to highlight the desired flight plan and press the **MENU** Key to display the Page Menu options.
- 3) Turn the large **FMS** Knob to highlight 'Invert Flight Plan' and press the **ENT** Key. The original flight plan remains intact in its flight plan catalog storage location.
- 4) With 'OK' highlighted, press the **ENT** Key to invert the flight plan.

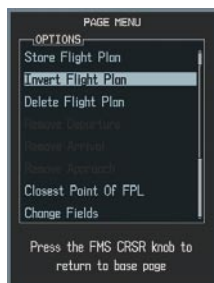


Figure 8-15 Invert Flight Plan

### 8.16 COPY A FLIGHT PLAN

- 1) From the Flight Plan Catalog press the **FMS** Knob to activate the cursor, turn the large **FMS** Knob to highlight the flight plan to be copied, then press the **MENU** Key to display the Flight Plan Catalog Options.
- 2) Turn the large **FMS** Knob to highlight 'Copy Flight Plan #' and press the **ENT** Key.
- 3) A 'Copy to flight plan?' confirmation window is displayed. With 'OK' highlighted, press the **ENT** Key to copy the flight plan. To cancel, turn

the large **FMS** Knob to highlight 'CANCEL' and press the **ENT** Key.

### 8.17 DELETE A FLIGHT PLAN

- 1) From the Flight Plan Catalog Page, press the **FMS** Knob to activate the cursor, turn the large **FMS** Knob to highlight the flight plan to be deleted.
- 2) Press the **MENU** Key to display the Flight Plan Catalog options.
- 3) Turn the large **FMS** Knob to highlight 'Delete Flight Plan' and press the **ENT** Key.
- 4) A 'Delete flight plan?' confirmation window is displayed. With 'OK' highlighted, press the **ENT** Key to delete the flight plan. To cancel, turn the large **FMS** Knob to highlight 'CANCEL' and press the **ENT** Key.

### 8.18 GRAPHICAL FLIGHT PLAN CREATION

- 1) Press the **FPL** Key to display the Active Flight Plan Page.
- 2) Press the **joystick** to activate the map pointer. Use the **joystick** to move the pointer to the desired point on the map to be inserted as a waypoint in the flight plan.
- 3) Press the **LD WPT** Softkey. The selected waypoint will be inserted at the end of the flight plan.
- 4) If the selected waypoint is to be placed elsewhere in the flight plan, press the **FMS** Knob to activate the cursor. Waypoints are inserted *ABOVE* the cursor.
- 5) After placing the cursor at the desired point in the list of waypoints, press the **LD WPT** Softkey.

## 8.19 TRIP PLANNING

- 1) Turn the large **FMS** Knob to select the AUX page group.
- 2) Turn the small **FMS** Knob to select the first rectangular page icon.
- 3) The current page mode is displayed at the top of the page: 'AUTOMATIC' or 'MANUAL'. To change the page mode, press the **AUTO** or **MANUAL** Softkey.



Figure 8-16 Trip Planning Page

- 4) For Direct-to planning, press the **WPTS** Softkey and verify that the 'from' waypoint field indicates P.POS (present position). If necessary, press the **MENU** Key and select 'Set WPT to Present Position' to display P.POS. Press the **ENT** Key and the flashing cursor moves to the 'to' waypoint field. Turn the **FMS** Knobs to enter the identifier of the 'to' waypoint and press the **ENT** Key to accept the waypoint. OR,
- 5) For point-to-point planning, turn the **FMS** Knobs to enter the identifier of the 'from' waypoint. Once the waypoints identifier is entered, press the **ENT** Key to accept the waypoint. The flashing cursor moves to the 'to' waypoint. Again, turn the **FMS** Knobs to enter the identifier of the 'to' waypoint and press the **ENT** Key to accept the waypoint. OR,
- 6) For flight plan leg planning, press the **FPL** Softkey (at the bottom of the display) and turn the small **FMS** Knob to select the desired flight plan (already stored in memory), by number. Turn the large **FMS** Knob to highlight the 'LEG' field and turn the small **FMS** Knob to select the desired leg of the flight plan, or select 'CUM' to apply trip planning calculations to the entire flight plan.
- 7) Turn the large **FMS** Knob to highlight the departure time (DEP TIME) field.



**NOTE:** The departure time on the Trip Planning Page is used for preflight planning. Refer to the Utility Page for the actual flight departure time.

- 8) Turn the **FMS** Knobs to enter the departure time. Press the **ENT** Key when finished. (Departure time may be entered in local or UTC time, depending upon unit settings).
- 9) Turn the **FMS** Knobs to enter the fuel flow. Press the **ENT** Key when finished. Note that in automatic page mode, fuel flow is provided by the system.
- 10) The flashing cursor moves to the fuel on board field. Turn the **FMS** Knobs to modify the fuel on board. Press the **ENT** Key when finished. Note that in automatic mode this is provided by the system.
- 11) The flashing cursor moves to the calibrated airspeed field. Turn the **FMS** Knobs to enter a calibrated airspeed. Press the **ENT** Key when finished.

## 8.20 VERTICAL NAVIGATION (VNAV) PAGE



**NOTE:** An active flight plan or Direct-to must be entered in order to utilize VNAV.



**NOTE:** VNAV is advisory only and cannot be coupled to the autopilot.

- 5) Press the **ENT** Key. The cursor is now positioned over the 'Before' and 'After' field.
- 6) Turn the small **FMS** Knob to select whether the previously set distance is 'Before' or 'After' the endpoint.
- 7) Press the **ENT** Key. The cursor is now placed over the VNAV profile endpoint field.

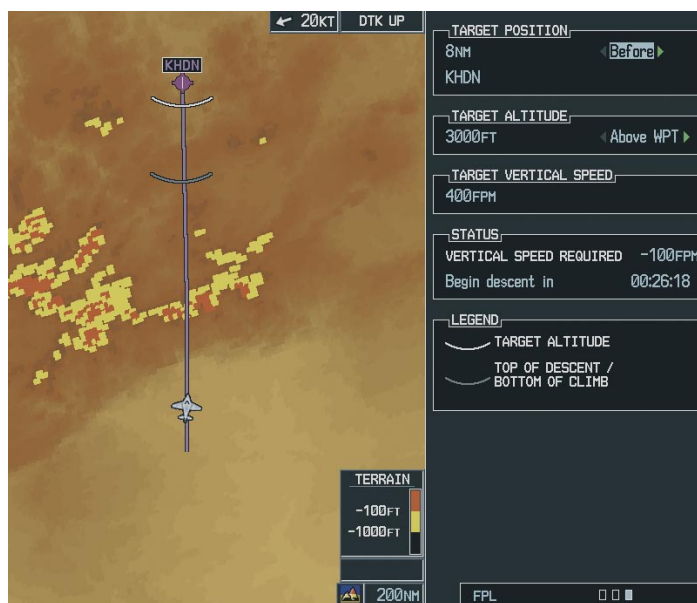


Figure 8-17 Vertical Navigation (VNAV) Page

### Create a Vertical Navigation Profile

- 1) Press the **FPL** Key.
- 2) Turn the small **FMS** Knob to select the third page icon.
- 3) Press the **FMS** Knob to activate the cursor.
- 4) With the 'TARGET POSITION' distance field highlighted, turn the **FMS** Knobs to select the desired distance for Top Of Climb or Bottom Of Descent from the VNAV profile endpoint. The default distance is 4 nm.
- 5) Press the **ENT** Key. The cursor is now positioned over the 'Before' and 'After' field.
- 6) Turn the small **FMS** Knob to select whether the previously set distance is 'Before' or 'After' the endpoint.
- 7) Press the **ENT** Key. The cursor is now placed over the VNAV profile endpoint field.
- 8) Turn the small **FMS** Knob to display a list possible VNAV profile endpoints. When using a flight plan, the target reference waypoint itself can be specified from the waypoints contained in the flight plan. By default, the last waypoint in the flight plan is selected. Highlight the desired waypoint.
- 9) Press the **ENT** Key.
- 10) With the 'TARGET ALTITUDE' field highlighted, turn the small and large **FMS** Knobs to select

the target altitude. If the selected altitude is above the current aircraft altitude, a profiled climb is created. If the selected altitude is below the current aircraft altitude, a profiled descent will be created.

- 11) Press the **ENT** Key. The cursor is now placed in the 'TARGET VERTICAL SPEED' field. The default profile utilizes a 400 foot-per-minute descent rate.
- 12) To change the vertical speed, turn the **FMS** Knobs to enter the desired vertical speed. Press the **ENT** Key when finished.

With the profile set, the vertical speed required (VSR) is displayed. Expect the following to occur when using the vertical navigation feature:

At one minute prior to reaching the Bottom Of Climb or Top Of Descent point (gray arc), the message 'APPR VPROF - Approaching VNAV Profile' is displayed as a PFD alert. The descent (or climb) angle also locks to prevent changes in speed from altering the profile. If selected, the vertical speed required (VSR) readout on the default NAV and map pages shows the desired vertical speed to maintain the proper descent (or climb) angle. At 500 feet above (or below, for a climb) the target altitude (white arc), an 'APPR TRG ALT' - Approaching Target Altitude" message is provided. The VSR readout on the Navigation Map Page is blanked out at this point.

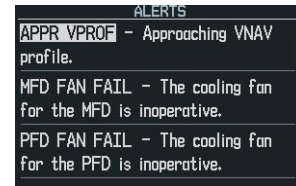


Figure 8-18 Approaching VNAV Profile Message (PFD)

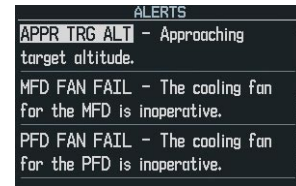


Figure 8-19 Approaching Target Altitude Message (PFD)

To display terrain or topo data on the Vertical Navigation Map Page, press the **MAP** Softkey. Press the **TOPO**, **TERRAIN**, or **LTNG** Softkey. Press the same softkey to remove the displayed data from the Vertical Navigation Page.

### VNAV Page Menu Options

The VNAV messages are not enabled until the 'VNAV Messages On?' option is enabled from the VNAV Page Menu Options. To display the page menu, press the **MENU** Key (with the VNAV Page displayed). The VNAV Page Options Menu also allows the pilot to restore VNAV page defaults.

Blank Page

## SECTION 9: PROCEDURES

### 9.1 ARRIVALS AND DEPARTURES

#### Load and Activate a Departure Procedure

- 1) With the Navigation Map Page displayed, press the **FPL** Key.
- 2) Press the **LD DP** Softkey. If a flight plan is active, the departure airport will be displayed as the default. A list of available departures is also displayed.
- 3) If no flight plan is active, use the **FMS** Knobs to enter the identifier of the desired airport. Press the **ENT** Key.
- 4) Turn the large **FMS** Knob to highlight the Departure field. Turn the small **FMS** Knob to display a list of available departures.
- 5) Turn either **FMS** Knob to select the desired departure and press the **ENT** Key.



Figure 9-1 Select Departure

- 6) A list of runways may be displayed for the departure. Turn either **FMS** Knob to select the desired runway and press the **ENT** Key.
- 7) A list of available transitions is displayed for the departure. Turn either **FMS** Knob to highlight the desired transition waypoint and press the **ENT** Key.



Figure 9-2 Select Departure Transition

- 8) With 'LOAD?' highlighted, press the **ENT** Key. The departure will be active when the flight plan is active.

#### Load and Activate An Arrival Procedure

- 1) With the Navigation Map Page displayed, press the **FPL** Key.
- 2) Press the **LD STAR** Softkey. If a flight plan is active, the destination airport will be displayed as the default. A list of available arrivals is also displayed.
- 3) If no flight plan is active, use the **FMS** Knobs to enter the identifier of the desired airport. Press the **ENT** Key.
- 4) Turn the large **FMS** Knob to highlight the Arrival field. Turn the small **FMS** Knob to display a list of available arrivals.
- 5) Turn either **FMS** Knob to select the desired arrival and press the **ENT** Key.



Figure 9-3 Select Arrival

- 6) A second window is displayed listing available transitions for the arrival. Turn either **FMS** Knob to highlight the desired transition waypoint and press the **ENT** Key.



### Figure 9-4 Select Arrival Transition

- 7) A third window is displayed listing the available runways. Turn either **FMS** Knob to select the desired runway and press the **ENT** Key.



### Figure 9-5 Select Arrival Runway

- 8) With 'LOAD?' highlighted, press the **ENT** Key. If a flight plan is active, the selected arrival procedure is inserted after the destination airport and becomes part of the active flight plan. If no flight plan is active when the arrival is loaded, the arrival procedure will become the active flight plan.

## 9.2 APPROACHES

Not all approaches in the database are approved for GPS use. When selecting an approach, a “GPS” designation to the right of the procedure name indicates the procedure can be flown using the GPS receiver. Some procedures

will not have this designation, meaning the GPS receiver can be used for supplemental navigation guidance only. If the GPS receiver cannot be used for primary guidance, the appropriate navigation receiver must be used for the selected approach (e.g., VOR or ILS). The final course segment of ILS approaches, for example, must be flown by tuning the Nav receiver to the proper frequency and selecting that Nav receiver on the CDI.

## Load and/or Activate an Approach Procedure

- 1) With the Navigation Map Page displayed, press the **FPL** Key.
- 2) Press the **LD APR** Softkey. If a flight plan is active, the destination airport will be displayed as the default. A list of available approaches is also displayed.
- 3) If no flight plan is active, use the **FMS** Knobs to enter the identifier of the desired airport. Press the **ENT** Key.
- 4) Turn the large **FMS** Knob to highlight the Approach field. Turn the small **FMS** Knob to display a list of available approaches.



### Figure 9-6 Selecting an Approach Procedure

- 5) Turn either **FMS** Knob to highlight the desired approach. Press the **ENT** Key.

- 6) The cursor will move to the TRANSITIONS field. Turn the large **FMS** Knob to highlight the desired transition waypoint and press the **ENT** Key. (The “Vectors” option assumes vectors will be received to the final course segment of the approach and will provide navigation guidance relative to the final approach course.)



**Figure 9-7 Selecting an Approach Transition**

- 7) Turn the large **FMS** Knob to highlight 'Activate?' and press the **ENT** Key to activate the approach. Selecting 'Load?' will add the procedure to the flight plan without immediately using it for navigation guidance.

### **Activate An Approach in the Active Flight Plan**

- 1) With the Navigation Map Page displayed, press the **PROC** Key.
- 2) Turn the large **FMS** Knob to highlight 'ACTIVATE APPROACH'.
- 3) Press the **ENT** Key. The approach procedure is now active.

Blank Page

## SECTION 10: HAZARD AVOIDANCE

### 10.1 CUSTOMIZING THE HAZARD DISPLAYS ON THE NAVIGATION MAP

- 1) With the Navigation Map Page displayed, press the **MENU** Key to display the Navigation Map Page Menu. The cursor flashes on the 'Map Setup' option.
- 2) Press the **ENT** Key. The Map Setup Menu is displayed. Turn the small **FMS** Knob to select the 'Weather' or 'Traffic' group to customize the display of weather features. Select 'Traffic' to customize the display of traffic.
- 3) Press the small **FMS** Knob to return to the Navigation Map Page.

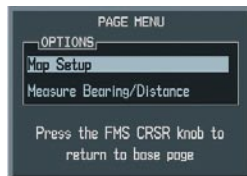


Figure 10-1 Page Menu



Figure 10-2 Map Setup Menu



Figure 10-3 Map Setup Group List

### 10.2 STORMSCOPE® (OPTIONAL)



**WARNING:** The Stormscope system is not intended to be used for hazardous thunderstorm penetration. Weather information on the G1000 MFD is approved for weather avoidance only. Refer to the WX-500 Pilot's Guide for detailed operation.

#### Displaying Stormscope Lightning Data on the Navigation Map Page

- 1) Press the **MAP** Softkey.
- 2) Press the **STRMSCP** Softkey. Press the **STRMSCP** Softkey again to remove Stormscope Lightning Data from the Navigation Map Page.



Figure 10-4 In-Flight Navigation Map Page Displaying Stormscope Lightning Data

Lightning Age	Symbol
Strike is less than 6 seconds old	
Strike is between 6 and 60 seconds old	
Strike is between 1 and 2 minutes old	
Strike is between 2 and 3 minutes old	

At a map range of less than 25 nm, Stormscope lightning data is not displayed, but can still be present. The presence of Stormscope lightning data is indicated by the annunciation 'LTNG < 25 nm' in the upper right corner.



Figure 10-5 Lightning Display Range Annunciation

## Select 'cell' or 'strike' as the Stormscope lightning mode:

- 1) With the Weather Group selected, press the **ENT** Key. The cursor flashes on 'STRMSCP LTNG'.
- 2) Turn the large **FMS** Knob to select 'STRMSCP MODE'.
- 3) Turn either **FMS** Knob to display the 'Cell/Strike' window.
- 4) Turn either **FMS** Knob to select 'Cell' or 'Strike'. Press the **ENT** Key.
- 5) Push the **FMS** Knob to return to the Navigation Map Page.

## Clear Stormscope lightning data from the Navigation Map Page:

- 1) Press the **MENU** Key (with the Navigation Map Page displayed).
- 2) Turn either **FMS** Knob to highlight the 'Clear Lightning Data' field and press the **ENT** Key.



**NOTE:** If heading input is lost, strikes and/or cells must be cleared manually after the execution of each turn. This is to ensure that the strike and/or cell positions are depicted accurately in relation to the nose of the aircraft.

## Stormscope Page

- 1) Turn the large **FMS** Knob until the Map Page group is selected.
- 2) Turn the small **FMS** Knob until the Stormscope Page is selected. This is the third rectangular page icon.



Figure 10-6 Stormscope Page

## Change the Stormscope lightning mode between 'cell' and 'strike':

- 1) Select the Stormscope Page.
- 2) Press the **MODE** Softkey. The **CELL** and **STRIKE** Softkeys are displayed. Press the **CELL** Softkey to display 'CELL' data or press the **STRIKE** Softkey to display 'STRIKE' data. 'CELL' or 'STRIKE' is displayed in the mode box located in the upper left corner of the Stormscope Page.



**NOTE:** "Cell mode" uses a clustering program to identify clusters of electrical activity that indicate cells.

## Change the viewing mode between 360° and 120°:

- 1) Select the Stormscope Page.
- 2) Press the **VIEW** Softkey. The **360** and **ARC** Softkeys are displayed. Press the **360** Softkey to display a 360° viewing area or press the **ARC** Softkey to display a 120° viewing area.

Press the **CLEAR** Softkey to remove all Stormscope lightning data from the display.

## 10.3 XM WEATHER (OPTIONAL)



**WARNING:** XM Weather is not intended to be used for hazardous weather penetration. Weather information provided by XM Radio Service is approved only for weather avoidance, not penetration.

- 1) Press the **MAP** Softkey.
- 2) Press the **NEXRAD** or **XM LTNG** Softkey to display the desired weather. Press the applicable softkey again to remove weather data from the Navigation Map Page.

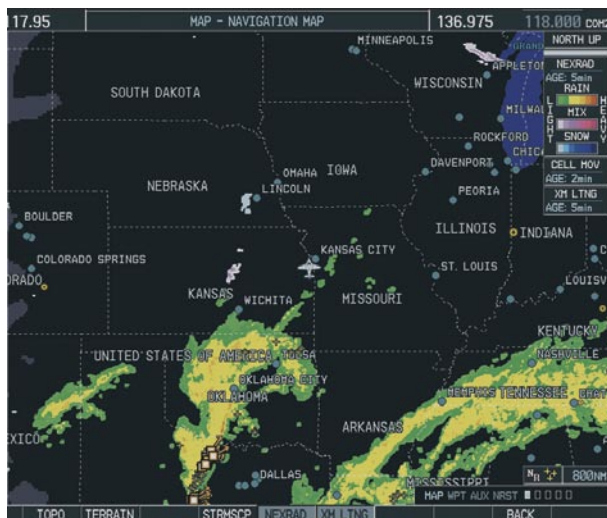


Figure 10-7 Navigation Map Page Displaying NEXRAD Weather

## Displaying METAR and TAF information on the Airport Information Page

### Display METAR and TAF text on the Airport Information Page:

- 1) Turn the large **FMS** Knob to select the WPT Page Group.
- 2) Turn the small **FMS** Knob to select the Airport Information Page.
- 3) Press the **WX** Softkey to display METAR and TAF text (METAR and TAF information is updated every 12 minutes).

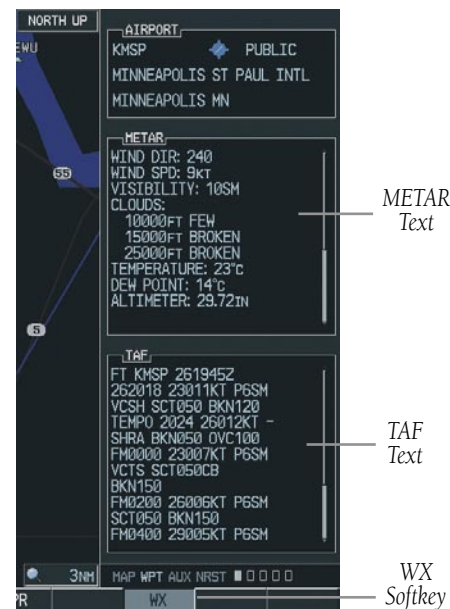


Figure 10-8 METAR and TAF Text Displayed on the Airport (Weather) Information Page

## Displaying Weather on the Weather Data Link Page

### Select the Weather Data Link Page:

- 1) Turn the large **FMS** Knob to select the Map Page Group.
- 2) Turn the small **FMS** Knob to select the fourth rectangular page icon.
- 3) Press the available softkeys to select the desired XM weather product.
- 4) Press the **LEGEND** Softkey to view the legends for the selected products. If necessary, turn either **FMS** Knob to scroll through the list. Press the small **FMS** Knob or the **ENT** Softkey to return to the map.

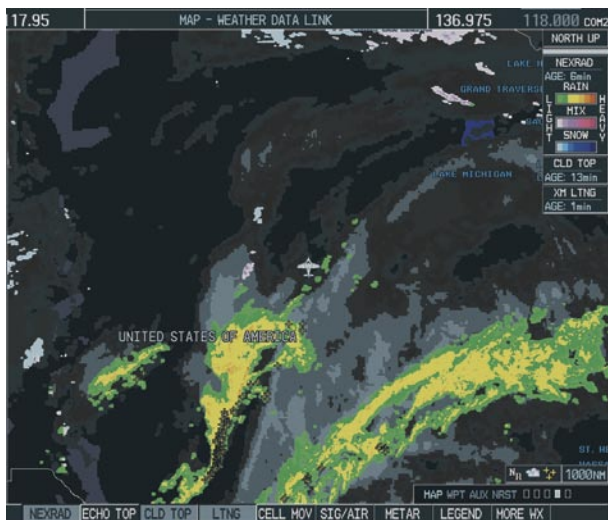


Figure 10-9 Weather Data Link Page

**NEXRAD** – Press the **NEXRAD** Softkey to show NEXRAD weather and radar coverage information. Areas where radar coverage is not available will be shown in grayish-purple. The display is updated every five minutes.

### NEXRAD Limitations

Certain limitations exist regarding the NEXRAD radar displays. Some, but not all, are listed here:

- NEXRAD base reflectivity does not provide sufficient information to determine cloud layers or precipitation characteristics (hail vs. rain, etc).
- An individual NEXRAD site cannot depict high altitude storms at close ranges, and has no information about storms directly over the site.
- The resolution of displayed NEXRAD data is 4 square kilometers. Therefore, when zoomed in on the display, each square block is 2 kilometers on each side. The intensity level reflected by the square will be the highest level sampled within the square area.

**ECHO TOP** – Press the **ECHO TOP** Softkey to show the location, elevation, and direction the highest radar echo. This may not indicate the top of a storm or clouds, only the highest radar return echo. ECHO TOPS cannot be displayed along with NEXRAD and CLOUD TOPS. When ECHO TOPS is activated, NEXRAD and CLOUD TOPS are removed. Refer to the Legend for a description of the ECHO TOPS coding. The display is updated every 7.5 minutes.

**CLD TOP** – Press the **CLD TOP** Softkey to show the cloud top altitude determined from satellite imagery. The display is updated every 15 minutes.

**LTNG** – Pressing the **LTNG** Softkey shows the location of cloud-to-ground lightning strikes. The display is updated every five minutes.



**NOTE:** Strikes depicted represent cloud to ground strikes within a 2 kilometer radius of the actual strike location. Therefore, the exact location of the strike is not displayed.

**CELL MOV** – Pressing the **CELL MOV** Softkey shows storm cell movement by displaying an arrow pointing in the direction of predicted movement. The display is updated every 12 minutes.

**SIG/AIR** – Pressing the **SIG/AIR** Softkey shows SIGMET and AIRMET information. The display is updated every 12 minutes.

**METAR** – Press the **METAR** Softkey to graphically display METARs. METARs are shown as colored flags at airports providing METAR reports. The display is updated every 12 minutes.

**MORE WX** – Press the **MORE WX** Softkey to display the following group of softkeys for additional weather control:

**SFC** – Pressing the **SFC** Softkey for Surface Analysis shows current or forecast conditions. Forecasts are available for intervals of Current, 12, 24, 36, and 48 hours. Press the softkey corresponding to the desired forecast. The closest city forecast information is displayed in the legend. The display is updated every 12 minutes.

**FRZ LVL** – Press the **FRZ LVL** Softkey to display contour lines for freezing levels. The display is updated every 12 minutes.

**WIND** – Press the **WIND** Softkey to show wind speed and direction at a selected altitude from the ground up to 42,000 feet in 3,000 foot increments. After pressing the **WIND** Softkey, press the softkey corresponding to the desired winds aloft altitude. The display is updated every 12 minutes.

**COUNTY** – Pressing the **COUNTY** Softkey provides specific public awareness and protection weather warnings for Tornado, Severe Thunderstorm, and Flood conditions provided by the National Weather Service (NWS). The display is updated every 5 minutes.

**CYCLONE** – Pressing the **CYCLONE** Softkey shows the current location of cyclones (hurricanes and tropical storms) and their projected track at various time intervals. The update rate is every 12 minutes.

## Map Panning Information – Weather Data Link Page

- 1) Push in the **joystick** to display the panning arrow.
- 2) Move the **joystick** to place the panning arrow on AIRMETs, TFRs, METARs, or SIGMETs. Press the **ENT** Key to display pertinent information for the selected product.

Note that pressing the **ENT** Key when panning over an AIRMET or a SIGMET displays an information box that displays the text of the report. Panning over an airport with METAR information does not display more information but allows the user to press the **ENT** Key and select that Airport's Information Page to display the text of the report. Pressing the **ENT** Key when panning over a TFR displays TFR specific information.

## Weather Products and Symbols

Figure 10-10 depicts the symbol for each weather product (read from left to right). When a weather product is active, the product symbol is displayed in the lower right of the screen.

- NEXRAD
- Cloud Top/Echo Top
- XM Lightning
- Cell Movement
- SIGMETs/AIRMETs
- METARs
- City Forecast

- Surface Analysis
- Freezing Levels
- Winds Aloft
- County Warnings
- Cyclone Warnings

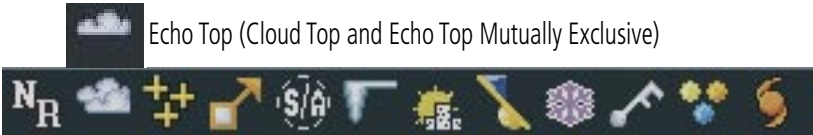


Figure 10-10 Weather Product Symbols

The XM Information Page in the AUX Page Group will display the weather products available for the current subscription. A green box by the weather product means that it is available.



**NOTE:** The *DONE* Softkey on the AUX - XM INFORMATION page is used to save the GDL 69(A) activation data when the XM services are initially set up. It is not used during normal operation of the GDL 69(A), and it should have no adverse effects if inadvertently selected during flight. Refer to the GDL 69/69A XM Satellite Radio Activation Instructions (190-00355-04, Rev E or later) for further information.

Weather Product Age

The age for each of the enabled products is displayed on the right side of the display. Times are based on Zulu time when the data was assembled on the ground, not the time the data was received by the XM receiver. When the age of a weather product has exceeded half of the expiration time, the product time will change from light blue to amber in color.

Weather Product	Expires After (minutes)
SIGMETs/AIRMETs	60
City Forecasts	60
County Warnings	60
Cyclone Warnings	60
Echo Tops	30
Freezing Levels	60
METARs	90
Lightning	30
NEXRAD	30
Radar Coverage	30
Cell Movement	30
Surface Analysis	60
TFRs	60
Winds Aloft	60
TAFs	60
Clouds Tops	60

## 10.4 TRAFFIC INFORMATION SERVICE (TIS)



**NOTE:** If the G1000 is configured to use the optional Skywatch Traffic Advisory System, TIS will not be available for use.



**NOTE:** Traffic Information Service (TIS) is only available when the aircraft is within the service volume of a TIS capable terminal radar site.

### Displaying Traffic on the Traffic Map Page

- 1) Turn the large **FMS** Knob to select the Map Page Group.
- 2) Turn the small **FMS** Knob to select the second rectangular page icon.
- 3) Press the **OPERATE** Softkey to begin displaying traffic. 'TIS OPERATING' is displayed in the Traffic mode field.
- 4) Press the **STANDBY** Softkey to place the system in the Standby mode. 'TIS STANDBY' will be displayed in the Traffic mode field.
- 5) Rotate the **joystick** clockwise to display a larger area or rotate counter-clockwise to display a smaller area.

If data is not received for a period longer than 6 seconds, the age of the present data will be displayed in the lower left of the screen along with the annunciation that the system has entered Coast mode. The system will maintain the traffic display (up to 60 seconds) until the next data reception. If no data is received after 60 seconds, traffic will be removed from the display.

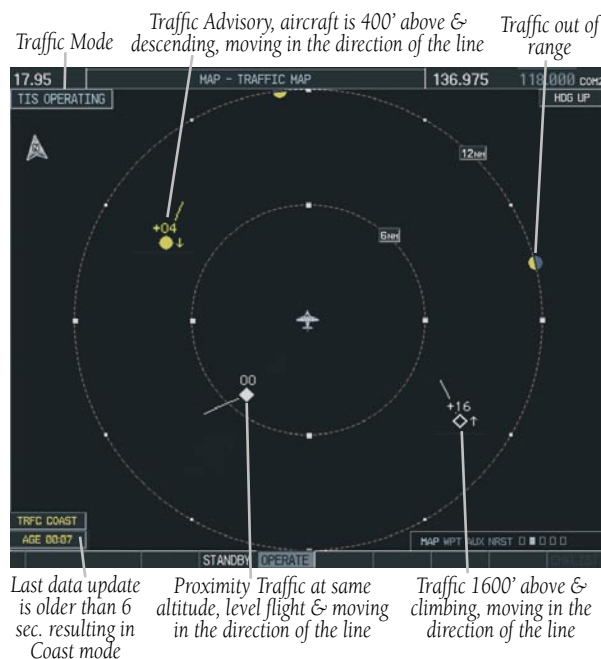


Figure 10-11 Traffic Map Page

### Displaying Traffic on the Navigation Map

- 1) Ensure TIS is operating. With the Navigation Map displayed, press the **MAP** Softkey.
- 2) Press the **TRAFFIC** Softkey. Traffic will now be displayed on the map.

### TIS Audio Alert

When a Traffic Advisory (TA) is displayed, an audio alert "Traffic" is given.

"Traffic Not Available" will be heard whenever TIS service becomes unavailable.

## 10.5 SKYWATCH TRAFFIC ADVISORY SYSTEM (TAS)(OPTIONAL)

Refer to the SkyWatch pilot's guide for a detailed discussion of the SkyWatch system.

### Displaying Traffic on the Traffic Map Page

- 1) Turn the large **FMS** Knob to select the Map Page Group.
- 2) Turn the small **FMS** Knob to select the second rectangular page icon.
- 3) Press the **OPERATE** Softkey to begin displaying traffic. 'TAS OPERATING' is displayed in the Traffic mode field.
- 4) Press the **ALT MODE** Softkey to change the altitude volume. Select the desired altitude volume by pressing the the **BELOW**, **NORMAL**, **ABOVE**, or **UREST** (unrestricted) Softkey. The selection is displayed in the Altitude mode field.
- 5) Press the **STANDBY** Softkey to place the system in the Standby mode. 'TAS STANDBY' will be displayed in the Traffic mode field.
- 6) Rotate the **joystick** clockwise to display a larger area or rotate counter-clockwise to display a smaller area.

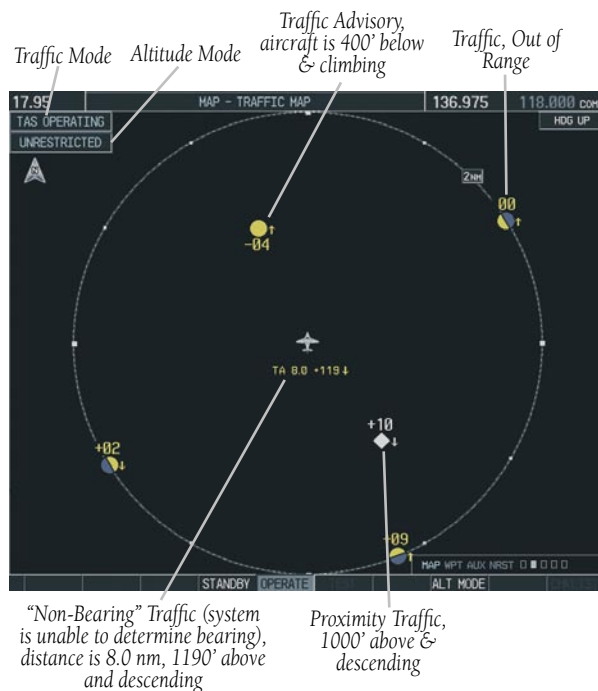


Figure 10-12 Traffic Map Page

### Displaying Traffic on the Navigation Map

- 1) Ensure the SkyWatch system is operating. With the Navigation Map displayed, press the **MAP** Softkey.
- 2) Press the **TRAFFIC** Softkey. Traffic will now be displayed on the map.

Traffic Advisory

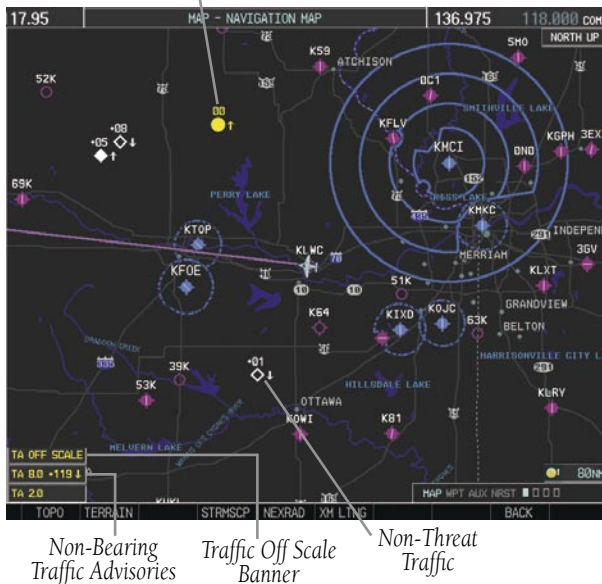


Figure 10-13 TAS Traffic on Navigation Map

- 4) Rotate the **JOYSTICK** clockwise to display a larger area or rotate counter-clockwise to display a smaller area.

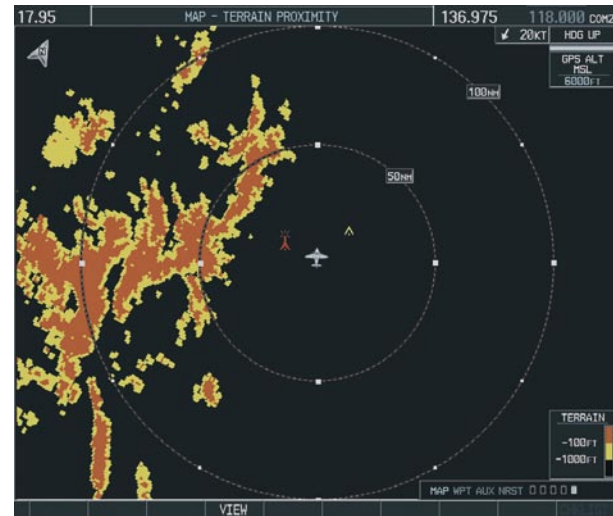


Figure 10-14 Terrain Proximity Page

## 10.6 TERRAIN AND OBSTACLE PROXIMITY

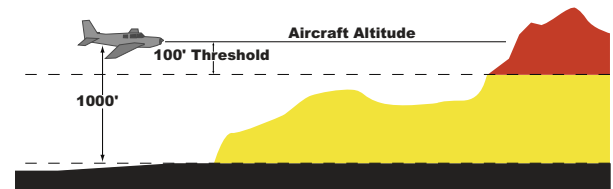


**NOTE:** Terrain data is not displayed when the aircraft latitude is greater than 75 degrees north or 60 degrees south.

### Displaying Terrain and Obstacles on the Terrain Proximity Page

- 1) Turn the large **FMS** Knob to select the Map Page Group.
- 2) Turn the small **FMS** Knob to select the last rectangular page icon.
- 3) If desired, press the **VIEW** Softkey to access the **ARC** and **360** Softkeys. When the **ARC** Softkey is pressed, a radar-like 120° view is displayed. Press the **360** Softkey to return to the 360° default display.

Color	Indication
RED	Terrain/Obstacle at or within 100' below or above aircraft altitude.
YELLOW	Terrain/Obstacle between 100' and 1000' below current aircraft altitude.



### Displaying Terrain and Obstacles on the Navigation Map

- 1) With the Navigation Map displayed, press the **MAP** Softkey.
- 2) Press the **TERRAIN** Softkey. Terrain and obstacle proximity will now be displayed on the map.





Unlighted Obstacle (Height is less than 1000' AGL)	Lighted Obstacle (Height is less than 1000' AGL)	Unlighted Obstacle (Height is greater than 1000' AGL)	Lighted Obstacle (Height is greater than 1000' AGL)
			

Figure 10-15 Obstacle Symbols

## 10.7 TERRAIN AWARENESS & WARNING SYSTEM (TAWS) DISPLAY (OPTIONAL)



**NOTE:** Terrain data is not displayed when the aircraft latitude is greater than 75 degrees north or 60 degrees south.



**NOTE:** TAWS operation is only available when the G1000 is configured for a TAWS-B installation.

### Displaying Terrain on the TAWS Page

- 1) Turn the large **FMS** Knob to select the Map Page Group.
- 2) Turn the small **FMS** Knob to select the TAWS Page.
- 3) If desired, press the **VIEW** Softkey to access the **ARC** and **360** Softkeys. When the **ARC** Softkey is pressed, a radar-like 120° view is displayed. Press the **360** Softkey to return to the 360° default display.
- 4) Rotate the **JOYSTICK** clockwise to display a larger area or rotate counter-clockwise to display a smaller area.

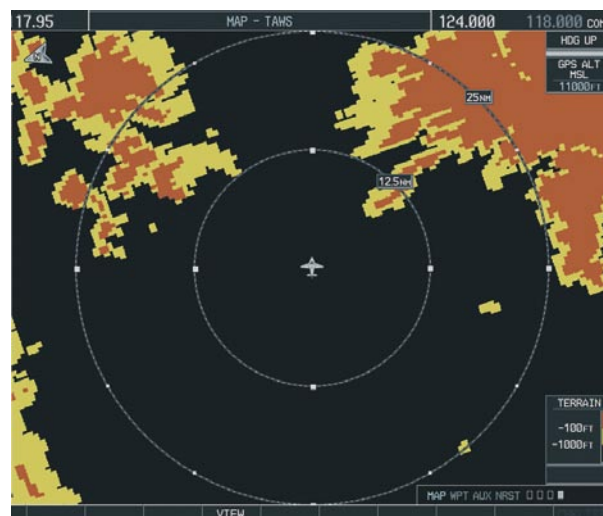


Figure 10-16 TAWS Page (360° View)


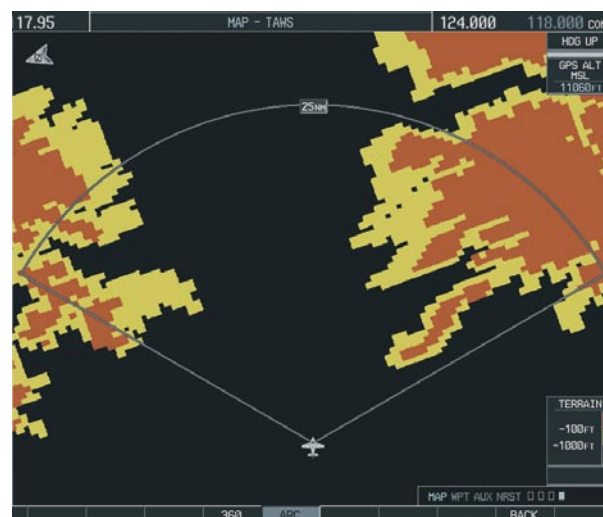


Figure 10-17 TAWS Page (ARC View)

Color	Terrain/Obstacle Location	Suggested Pilot Response
Red	Terrain/Obstacle at or within 100' below or above aircraft altitude.	Initiate climb and/or turn away from terrain/obstacle.
Yellow	Terrain/Obstacle between 100' and 1000' below current aircraft altitude.	Be aware of surroundings. Be prepared to take action.
Black	Terrain/Obstacle is more than 1000' below aircraft altitude.	No action required.

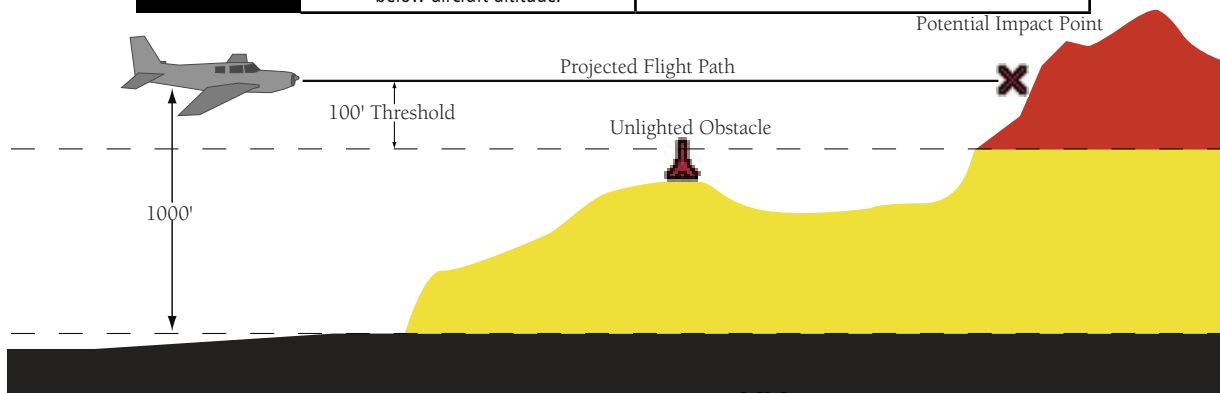

## TAWS Inhibit

### Enable/Disable Aviation Data

- 1) While the TAWS Page is displayed, press the **MENU** Key.
- 2) Turn the small **FMS** Knob to select "Show (or Hide) Aviation Data".
- 3) Press the **ENT** Key.



Figure 10-18 TAWS Page Menu

Flying VFR into an area where unique terrain exists could cause the system to annunciate a nuisance alert. When TAWS is inhibited, only FLTA and PDA alerts are disabled.

### Inhibit TAWS:

- 1) While the TAWS Page is displayed, press the **MENU** Key.
- 2) Turn the small **FMS** Knob to select 'Inhibit TAWS'.
- 3) Press the **ENT** Key.

### Enable TAWS:

- 1) While the TAWS Page is displayed, press the **MENU** Key.
- 2) Turn the small **FMS** Knob to select 'Enable TAWS'.
- 3) Press the **ENT** Key.

## Manual System Test

A system test is automatically performed at power-up. After successful completion of the test, “**TAWS System Test, OK**” will be heard.

The system test may also be initiated manually, but only when the aircraft is on the ground. To manually verify proper operation of the aural and visual annunciations of the system, perform the following steps.

- 1) While the TAWS Page is displayed, press the **MENU** Key.
- 2) Turn the small **FMS** Knob to select ‘Test TAWS’.
- 3) Press the **ENT** Key. During the test ‘TAWS TEST’ is displayed in the center of the TAWS Page.

When all is in working order, “TAWS System Test, OK” will be heard.

## Forward Looking Terrain Avoidance (FLTA)

The Forward Looking Terrain Avoidance alert is composed of two sub-functions:

### Reduced Required Terrain Clearance (RTC) and Reduced Required Obstacle Clearance (ROC)

This provides alerts when the aircraft flight path is above terrain and/or obstacles, yet is projected to come within minimum clearance values outlined in the following table. When an RTC or ROC alert is issued, a potential impact point is displayed on the TAWS Page as a yellow or red ‘X’.

### Imminent Terrain Impact (ITI) and Imminent Obstacle Impact (IOI)

This provides alerts when the aircraft is below the elevation of terrain in the aircraft’s projected path. ITI and IOI alerts are accompanied by a potential impact point displayed on the TAWS Page as a yellow or red ‘X’. The

alert is given when the projected vertical flight path is calculated to come within minimum clearance altitudes in the following table.

Phase of Flight	Level Flight	Descending
Enroute	700 ft.	500 ft.
Terminal	350 ft.	300 ft.
Approach	150 ft.	100 ft.
Departure	100 ft.	100 ft.

During the final approach phase of flight, RTC/ROC/ ITI/IOI alerts are automatically inhibited when the aircraft is below 200 feet AGL while within 0.5 nm of the approach runway or is below 125 feet AGL while within 1 nm of the runway.

## Premature Descent Alert (PDA)

A Premature Descent Alert is issued when the system detects that the aircraft is significantly below the normal approach path to a runway. The PDA alert mode functions only during descent to land.

PDA alerting begins when the aircraft is within 15 nm of the destination airport and ends when the aircraft is either 0.5 nm from the runway threshold OR is at an altitude of 125 feet AGL while within 1 nm of the threshold. During the final descent, algorithms will set a threshold for alerting based on speed, distance, and other parameters.

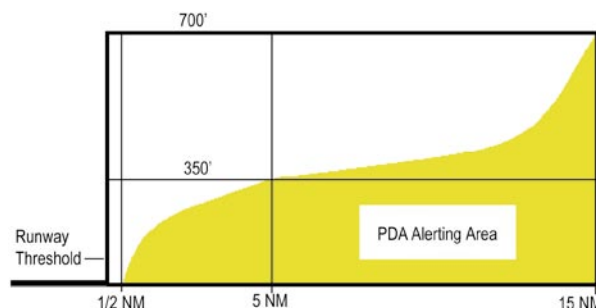


Figure 10-19 PDA Alerting

## Excessive Descent Rate Alert (EDR)

The purpose of the Excessive Descent Rate alert is to provide suitable alerts when the aircraft is determined to be closing (descending) upon terrain at an excessive speed. Figure 10-20 displays the correlation between height above terrain and descent rate, resulting in the two EDR alerts. EDR alerts have two levels of severity, caution (sink rate) and warning (pull-up).

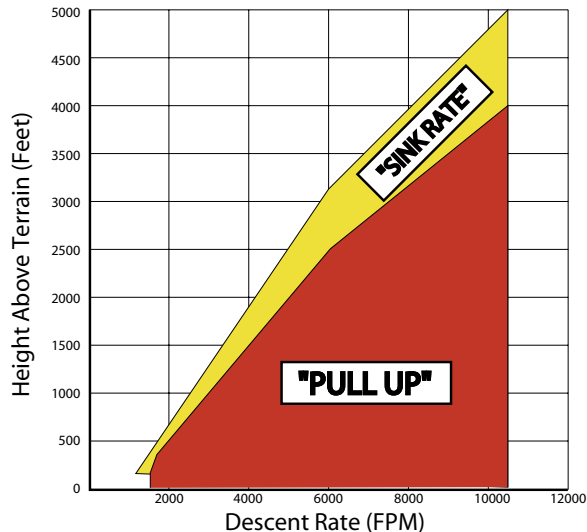


Figure 10-20 Excessive Descent Rate

## Negative Climb Rate After Takeoff Alert (NCR)

The purpose of the Negative Climb Rate After Takeoff alert is to provide suitable alerts to the pilot when the system determines that the aircraft is losing altitude (closing upon terrain) after takeoff. The aural message “**Don’t Sink**” is given for NCR alerts, accompanied by an annunciation and a pop-up terrain alert on the display.

## “Five-Hundred” Aural Alert

The purpose of the aural alert message “Five-hundred” is to provide an advisory alert to the aircrew that the aircraft is five-hundred feet above terrain. When the aircraft descends within 500 feet of terrain, the aural message “**Five-hundred**” is heard. There are no display annunciations or pop-up alerts that accompany the aural message.

## Displaying Terrain and Obstacles on the Navigation Map

- 1) With the Navigation Map displayed, press the **MAP** Softkey.
- 2) Press the **TERRAIN** Softkey. Terrain and obstacle proximity will now be displayed on the map.






Unlighted Obstacle (Height is less than 1000' AGL)	Lighted Obstacle (Height is less than 1000' AGL)	Unlighted Obstacle (Height is greater than 1000' AGL)	Lighted Obstacle (Height is greater than 1000' AGL)	Potential Impact Points
				

Figure 10-21 TAWS Symbols

## Pop-up Alerts

When a terrain or obstacle alert is issued, a pop-up window is displayed on the MFD with the appropriate alert.

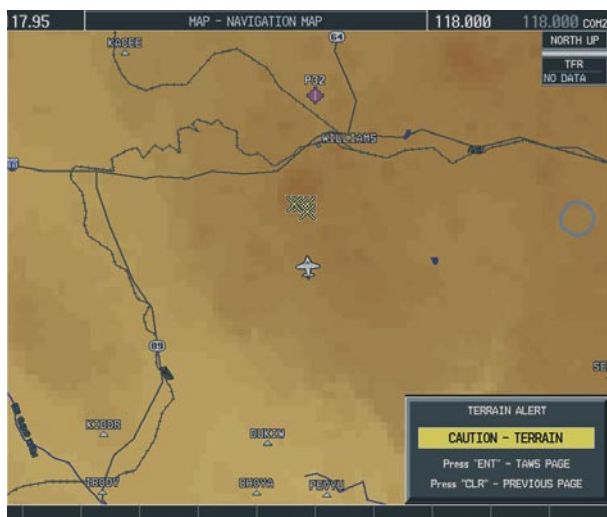


Figure 10-22 Alert Pop-Up

Press the **ENT** Key to display the TAWS Page, or press the **CLR** Key to remain on the existing page.

## TAWS Alerts Summary

The following table shows the possible TAWS alert types with corresponding annunciations and aural messages.


Alert Type	PFD/MFD TAWS Page Annunciation	MFD Pop-Up Alert	Aural Message
Excessive Descent Rate Warning (EDR)	<b>PULL UP</b>	<b>PULL-UP</b>	"Pull Up"
Reduced Required Terrain Clearance Warn- ing (RTC)	<b>PULL UP</b>	<b>TERRAIN - PULL-UP</b> or <b>TERRAIN AHEAD - PULL-UP</b>	"Terrain, Terrain; Pull Up, Pull Up" or "Terrain Ahead, Pull Up; Terrain Ahead, Pull Up"
Imminent Terrain Impact Warning (ITI)	<b>PULL UP</b>	<b>TERRAIN AHEAD - PULL-UP</b> or <b>TERRAIN - PULL-UP</b>	Terrain Ahead, Pull Up; Terrain Ahead, Pull Up" or "Terrain, Terrain; Pull Up, Pull Up"
Reduced Required Obstacle Clearance Warning (ROC)	<b>PULL UP</b>	<b>OBSTACLE - PULL-UP</b> or <b>OBSTACLE AHEAD - PULL-UP</b>	"Obstacle, Obstacle; Pull Up, Pull Up" or "Obstacle Ahead, Pull Up; Obstacle Ahead, Pull Up"
Imminent Obstacle Impact Warning (IOI)	<b>PULL UP</b>	<b>OBSTACLE AHEAD - PULL-UP</b> or <b>OBSTACLE - PULL-UP</b>	"Obstacle Ahead, Pull Up; Obstacle Ahead, Pull Up" or "Obstacle, Obstacle; Pull Up, Pull Up"
Reduced Required Terrain Clearance Caution (RTC)	<b>TERRAIN</b>	<b>CAUTION - TERRAIN</b> or <b>TERRAIN AHEAD</b>	"Caution, Terrain; Caution, Terrain" or "Terrain Ahead; Terrain Ahead"
Imminent Terrain Impact Caution (ITI)	<b>TERRAIN</b>	<b>TERRAIN AHEAD</b> or <b>CAUTION - TERRAIN</b>	"Terrain Ahead; Terrain Ahead" or "Caution, Terrain; Caution, Terrain"
Reduced Required Obstacle Clearance Caution (ROC)	<b>TERRAIN</b>	<b>CAUTION - OBSTACLE</b> or <b>OBSTACLE AHEAD</b>	"Caution, Obstacle; Caution, Obstacle" or "Obstacle Ahead; Obstacle Ahead"
Imminent Obstacle Impact Caution (IOI)	<b>TERRAIN</b>	<b>OBSTACLE AHEAD</b> or <b>CAUTION - OBSTACLE</b>	"Obstacle Ahead; Obstacle Ahead" or "Caution, Obstacle; Caution, Obstacle"
Premature Descent Alert Caution (PDA)	<b>TERRAIN</b>	<b>TOO LOW - TERRAIN</b>	"Too Low, Terrain"
Altitude Callout "500"	None	None	"Five-Hundred"
Excessive Descent Rate Caution (EDR)	<b>TERRAIN</b>	<b>SINK RATE</b>	"Sink Rate"
Negative Climb Rate Caution (NCR)	<b>TERRAIN</b>	<b>DON'T SINK</b> or <b>TOO LOW - TERRAIN</b>	"Don't Sink" or "Too Low, Terrain"

SECTION 10 – HAZARD AVOIDANCE

The following system status annunciations may also be issued.

Alert Type	PFD/MFD TAWS Page Annunciation	MFD Pop-Up Alert	Aural Message
TAWS System Test Fail	TAWS FAIL	None	"TAWS System Failure"
TAWS Alerting is disabled	TAWS INHB	None	None
No GPS position or excessively degraded GPS signal	TAWS N/A	None	"TAWS Not Available" "TAWS Available" will be heard when sufficient GPS signal is re-established.
System Test in progress	TAWS TEST	None	None
System Test pass	None	None	"TAWS System Test OK"

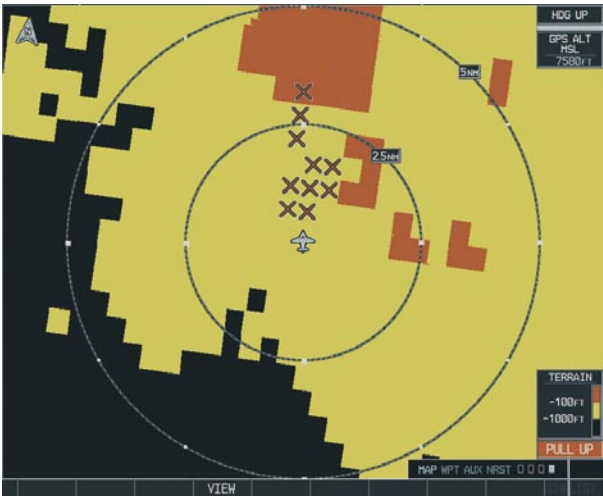Alert Annunciations



Alert Annunciation

Figure 10-23 Alert Annunciation on the TAWS Page



Figure 10-24 Alert Annunciation on the PFD

# SECTION 11: ABNORMAL OPERATION

## 11.1 REVERSIONARY MODE

Should a system detected failure occur in either display, the G1000 automatically enters reversionary mode. In reversionary mode, critical flight instrumentation is combined with engine instrumentation on the remaining display. Minimal navigation capability is available on the reversionary mode display.

Reversionary display mode can also be manually activated by the pilot if the system fails to detect a display problem. The reversionary mode is activated manually by pressing the red **DISPLAY BACKUP** button on the bottom of the audio panel (GMA 1347). Pressing the red **DISPLAY BACKUP** button again deactivates reversionary mode.



**NOTE:** The Beechcraft A36/G36 Pilot's Operating Handbook (POH) always takes precedence over the information found in this section.



Normal PFD Display



Normal MFD Display



MFD in Reversionary Mode

Figure 11-1 G1000 Reversionary Mode: Failed PFD

## 11.2 ABNORMAL COM OPERATION

When a COM tuning failure is detected by the system, the emergency frequency (121.500 MHz) is automatically loaded into the active frequency field of the COM radio for which the tuning failure was detected. In the event of a dual display failure, the emergency frequency (121.500 MHz) automatically becomes the active frequency to the pilot through the pilot headset.

## 11.3 UNUSUAL ATTITUDES

The PFD will ‘declutter’ when the aircraft enters an unusual attitude. Only the basic primary functions will be displayed in these situations.

Red extreme pitch warning chevrons pointing toward the horizon are displayed starting at 50 degrees above and 30 degrees below the horizon line.

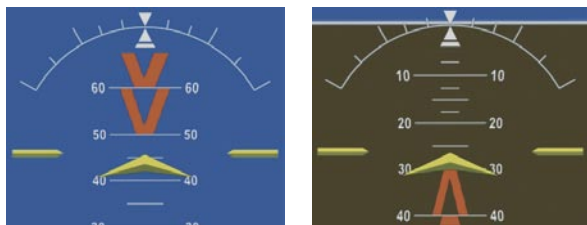


Figure 11-2 Extreme Pitch Indication

## 11.4 STORMSCOPE OPERATION WITH LOSS OF HEADING INPUT

If heading is lost, strikes and/or cells must be cleared manually after the execution of each turn. This is to ensure that the strike and/or cell positions are depicted accurately in relation to the nose of the aircraft.

## 11.5 HAZARD DISPLAYS WITH LOSS OF GPS POSITION

If GPS position is lost, or becomes invalid, selected hazards being displayed on the Navigation Map Page will be removed until GPS position is again established. The icons in the lower right of the screen, indicating the selected functions for display, will show an ‘X’, as shown in Figure 11-3.



Figure 11-3 Loss of Hazard Functions with Loss of GPS Position

## SECTION 12: ANNUNCIATIONS & ALERTS



**NOTE:** The Beechcraft A36/G36 Pilot's Operating Handbook (POH) supersedes information found in this document.

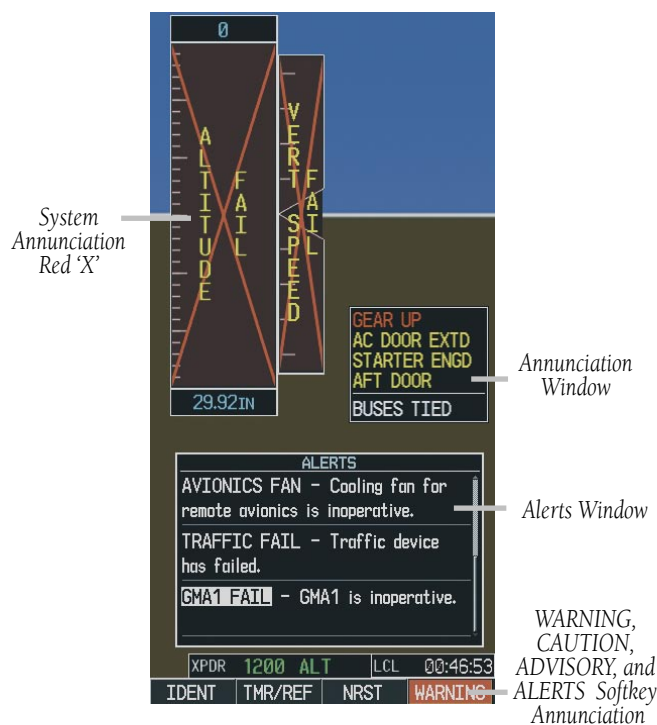


Figure 12-1 G1000 Alerting System

The G1000 Alerting System conveys alerts to the pilot using a combination of the following items:

- **Annunciation Window:** The Annunciation window displays abbreviated annunciation text. The Annunciation Window is located to the right of the Altitude and Vertical Speed windows on the PFD display (or the MFD if system is in reversionary mode). All A36/G36 annunciations can be displayed simultaneously. A white horizontal

line separates annunciations that are acknowledged from annunciations that are not yet acknowledged. Acknowledged annunciations are always above the line. Annunciations are displayed in order of priority from top to bottom. The highest priority annunciation is displayed at the top of the Annunciation Window.

- **Alerts Window:** The Alerts window displays annunciation and alert message text. Up to 64 prioritized alerts can be displayed in the Alerts Window. Pressing the **ALERTS** Softkey displays the Alerts Window. Pressing the **ALERTS** Softkey again removes the Alerts Window from the display. When the Alerts Window is displayed, the pilot may use the large **FMS** Knob to scroll through the alert list. Higher priority alerts are displayed at the top of the window. Lower priority alerts are displayed at the bottom of the window. Active alerts are displayed in white text. Alerts that have become inactive will change to gray text. The **ALERTS** Softkey will flash if the state of a displayed alert changes or a new alert is displayed. The inactive alerts can be removed from the Alerts window by pressing the flashing **ALERTS** Softkey.
- **ALERTS Softkey Annunciation:** When an alert is issued, the **ALERTS** Softkey is used as a flashing annunciation to accompany an alert. During the alert, the **ALERTS** Softkey assumes a new label consistent with alert level (WARNING, CAUTION, or ADVISORY). Pressing the softkey annunciation acknowledges that the pilot is aware of the alert. The softkey then returns to the previous **ALERTS** label. The pilot can then press the **ALERTS** Softkey again to view alert text messages.
- **System Annunciations:** Typically, a large red 'X' appears in a window when a related LRU fails or

detects invalid data. A red 'X' is accompanied by an alert message in the Alerts Window.

- **Audio Alerting System:** The G1000 system issues audio alert tones when specific system conditions are met. See the Alert Levels Definitions section for more information.

### 12.1 ALERT LEVEL DEFINITIONS

The G1000 Alerting System, as installed in Beechcraft A36/G36 aircraft, uses four alert levels.

- **WARNING:** This level of alert is time critical and requires immediate pilot attention. A warning annunciation is displayed in the Annunciation Window as *red* text. A warning annunciation is also accompanied by a flashing red **WARNING** Softkey label, as shown in Figure 12-2. Pressing the **WARNING** Softkey acknowledges the presence of the warning alert, and stops the aural tone (if applicable). The softkey has now reverted to the **ALERTS** Softkey label and displays a description of the warning annunciation in the Alerts Window when pressed.
- **CAUTION:** This level of alert indicates the existence of abnormal conditions on the aircraft that may require pilot intervention. A caution annunciation is displayed in the Annunciation Window as *yellow* text. A caution annunciation is also accompanied by a flashing yellow **WARNING** Softkey label, as shown in Figure 12-3. Pressing the **CAUTION** Softkey acknowledges the presence of the caution alert. The softkey has now reverted to the **ALERTS** Softkey label and displays a description of the caution annunciation in the Alerts Window when pressed.

- **ADVISORY ANNUNCIATION:** This level of alert provides general information to the pilot that may not need immediate attention. An advisory annunciation is displayed in the Annunciation Window as *white* text. An advisory annunciation is also accompanied by a flashing white **ADVISORY** Softkey label, as shown in Figure 12-4. Pressing the **ADVISORY** Softkey acknowledges the presence of the advisory alert. The softkey has now reverted to the **ALERTS** Softkey label and displays a description of the advisory annunciation in the Alerts Window when pressed.
- **ALERT MESSAGE:** These messages are provided to make the pilot aware of G1000 system problems or status, and may not require pilot action. An alert message is accompanied by a flashing white **ADVISORY** Softkey label, as shown in Figure 12-4. Pressing the **ADVISORY** Softkey acknowledges the presence of the advisory alert. The softkey has now reverted to the **ALERTS** Softkey label and displays a description of the alert message in the Alerts Window when pressed.

 


Figure 12-2 WARNING Softkey Annunciation



Figure 12-3 CAUTION Softkey Annunciation

 


Figure 12-4 ADVISORY Softkey Annunciation

## 12.2 A36/G36 AIRCRAFT ANNUNCIATIONS & ALERTS

The following alert annunciations are configured specifically for the Beechcraft A36/G36 aircraft. See the Beechcraft A36/G36 Pilot's Operating Handbook (POH) for information regarding pilot responses.

### WARNING Annunciation

Annunciation Window Text	Alerts Window Message	Audio Alert
<b>GEAR UP</b>	Gear up.	Continuous Tone (received through the G1000 audio from another source)
<b>ALT 1 INOP</b>	Alternator 1 offline.	Repeating Tone
<b>ALT 2 INOP</b>	Alternator 2 offline.	Repeating Tone
<b>ALT 1-2 INOP</b>	Alternators 1 and 2 offline.	Repeating Tone

### CAUTION Annunciation

Annunciation Window Text	Alerts Window Message	Audio Alert
<b>AC DOOR EXTD</b>	Air conditioner on and door extended.	Single Chime
<b>STARTER ENGD</b>	Starter relay has power applied.	Single Chime
<b>BUS1 VOLT HI</b>	Bus 1 voltage greater than 30 VDC.	Single Chime
<b>BUS2 VOLT HI</b>	Bus 2 voltage greater than 30 VDC.	Single Chime
<b>AFT DOOR</b>	Aft door not latched.	Single Chime

### ADVISORY Annunciation

Annunciation Window Text	Alerts Window Message	Audio Alert
<b>BUSES TIED</b>	Bus 2 is tied to Bus 1.	None

### Alert Message

Alerts Window Message	Audio Alert
<b>PFD FAN FAIL</b> – The cooling fan for the PFD is inoperative.	None
<b>MFD FAN FAIL</b> – The cooling fan for the MFD is inoperative.	None
<b>AVIONICS FAN</b> – The cooling fan for remote avionics is inoperative.	None

12.3 AFCS ALERTS

System Status Field

The following AFCS alert annunciations appear in the AFCS System Status field on the PFD.

- **WARNING:** Red annunciation is time critical and indicates an abnormal AFCS condition requiring immediate pilot attention.
- **CAUTION:** Yellow annunciation indicates the existence of abnormal AFCS conditions that may require pilot intervention.

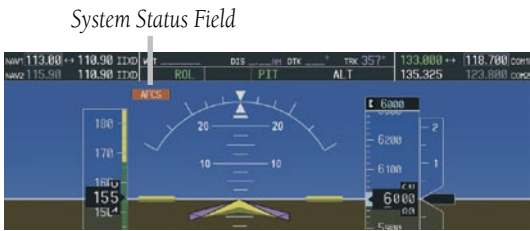




 




 



 
 
 
 
 
 
 

 
 


Figure 12-5 AFCS System Status Field

Condition	Annunciation	Description
Pitch Failure	PTCH	Pitch axis control failure. AP is inoperative.
Roll Failure	ROLL	Roll axis control failure. AP is inoperative.
MET Switch Stuck, or Pitch Trim Axis Control Failure	PTRM	If annunciated when AP is engaged, take control of the aircraft and disengage the autopilot. If annunciated when AP is not engaged, move each half of the MET switch separately to check if a stuck switch is causing the annunciation.
Yaw Damper Failure	YAW	Yaw Damper control failure.
System Failure	AFCS	AP and MET are unavailable. FD may still be available.
Elevator Mistrim Up	↑ELE	A condition has developed causing the pitch servo to provide a sustained force. Be prepared to apply nose up control wheel force upon autopilot disconnect.
Elevator Mistrim Down	↓ELE	A condition has developed causing the pitch servo to provide a sustained force. Be prepared to apply nose down control wheel force upon autopilot disconnect.
Aileron Mistrim Left	←AIL	A condition has developed causing the roll servo to provide a sustained left force. Ensure the slip/skid indicator is centered and observe any maximum fuel imbalance limits.
Aileron Mistrim Right	AIL→	A condition has developed causing the roll servo to provide a sustained right force. Ensure the slip/skid indicator is centered and observe any maximum fuel imbalance limits.
Rudder Mistrim Left	←RUD	A condition has developed causing the yaw servo to provide a sustained force. Ensure the slip/skid indicator is centered and observe any maximum fuel imbalance limits.
Rudder Mistrim Right	RUD→	A condition has developed causing the yaw servo to provide a sustained force. Ensure the slip/skid indicator is centered and observe any maximum fuel imbalance limits.
Preflight Test	PFT	Performing preflight system test. Upon completion, the aural alert will be heard.
	PFT	Preflight system test has failed.

## 12.4 TAWS ALERTS

Annunciations appear on the PFD and MFD. Pop-up alerts appear only on the MFD.

Alert Type	PFD/MFD TAWS Page Annunciation	MFD Pop-Up Alert	Aural Message
Excessive Descent Rate Warning (EDR)			"Pull Up"
Reduced Required Terrain Clearance Warning (RTC)		 or 	"Terrain, Terrain; Pull Up, Pull Up" or "Terrain Ahead, Pull Up; Terrain Ahead, Pull Up"
Imminent Terrain Impact Warning (ITI)		 or 	Terrain Ahead, Pull Up; Terrain Ahead, Pull Up" or "Terrain, Terrain; Pull Up, Pull Up"
Reduced Required Obstacle Clearance Warning (ROC)		 or 	"Obstacle, Obstacle; Pull Up, Pull Up" or "Obstacle Ahead, Pull Up; Obstacle Ahead, Pull Up"
Imminent Obstacle Impact Warning (IOI)		 or 	"Obstacle Ahead, Pull Up; Obstacle Ahead, Pull Up" or "Obstacle, Obstacle; Pull Up, Pull Up"
Reduced Required Terrain Clearance Caution (RTC)		 or 	"Caution, Terrain; Caution, Terrain" or "Terrain Ahead; Terrain Ahead"
Imminent Terrain Impact Caution (ITI)		 or 	"Terrain Ahead; Terrain Ahead" or "Caution, Terrain; Caution, Terrain"
Reduced Required Obstacle Clearance Caution (ROC)		 or 	"Caution, Obstacle; Caution, Obstacle" or "Obstacle Ahead; Obstacle Ahead"
Imminent Obstacle Impact Caution (IOI)		 or 	"Obstacle Ahead; Obstacle Ahead" or "Caution, Obstacle; Caution, Obstacle"
Premature Descent Alert Caution (PDA)			"Too Low, Terrain"
Altitude Callout "500"	None	None	"Five-Hundred"
Excessive Descent Rate Caution (EDR)			"Sink Rate"
Negative Climb Rate Caution (NCR)		 or 	"Don't Sink" or "Too Low, Terrain"

TAWS System Status Annunciations

Alert Type	PFD/MFD TAWS Page Annunciation	MFD Pop-Up Alert	Aural Message
TAWS System Test Fail	TAWS FAIL	None	"TAWS System Failure"
TAWS Alerting is disabled	TAWS INHB	None	None
No GPS position or excessively degraded GPS signal	TAWS N/A	None	"TAWS Not Available" "TAWS Available" will be heard when sufficient GPS signal is re-established.
System Test in progress	TAWS TEST	None	None
System Test pass	None	None	"TAWS System Test OK"

12.5 TRAFFIC VOICE ALERTS







Voice Alert	Alert Trigger
"Traffic"	Played when a Traffic Advisory (TA) is issued.
"Traffic Not Available"	Played when the traffic system fails or cannot communicate.
"Traffic, Traffic"	Played when a Traffic Advisory (TA) is issued (Skywatch TAS system).
"Traffic Advisory System Test Passed"	Played when the TAS system passes a pilot-initiated self test.
"Traffic Advisory System Test Failed"	Played when the TAS system fails a pilot-initiated self test.

12.6 G1000 SYSTEM ANNUNCIATIONS




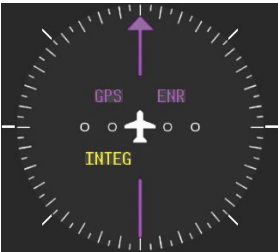

When an LRU or an LRU function fails, a large red 'X' is typically displayed on windows associated with the failed data. The following section describes various system annunciations. Refer to the POH for additional information regarding pilot responses to these annunciations.



**NOTE:** Upon power-up of the G1000 system, certain windows remain invalid as G1000 equipment begins to initialize. All windows should be operational within one minute of power-up. Should any window continue to remain flagged, the G1000 system should be serviced by a Garmin-authorized repair facility.

System Annunciation	Comment
	Attitude and Heading Reference System is aligning.
	Display system is not receiving attitude information from the AHRS.
	Display system is not receiving airspeed input from air data computer.
	Display is not receiving altitude input from the air data computer.
	Display is not receiving vertical speed input from the air data computer.
	Display is not receiving valid heading input from AHRS.

SECTION 12 – ANNUNCIATIONS  
& ALERTS

	Display is not receiving altitude input from the air data computer.
	Display is not receiving vertical speed input from the air data computer.
	Display is not receiving valid heading input from AHRS.
	GPS information is either not present or is invalid for navigation use. Note that AHRS utilizes GPS inputs during normal operation. AHRS operation may be degraded if GPS signals are not present (see POH).
	Display is not receiving valid transponder information.
Other Various Red X Indications	A red 'X' through any other display field, such as engine instrumentation fields, indicates that the field is not receiving valid data.

A red 'X' may be the result of an LRU or an LRU function failure. The Figure 12-6 illustrates all possible flags and the responsible LRUs.

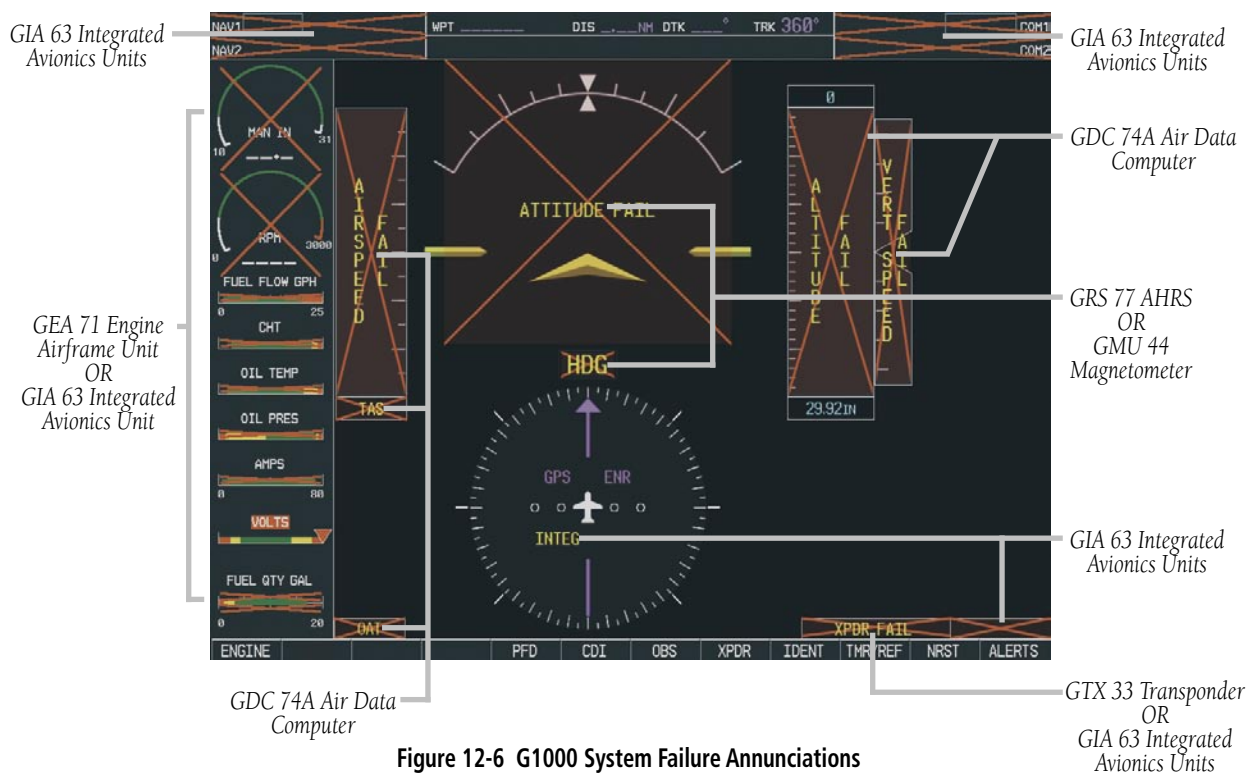


Figure 12-6 G1000 System Failure Annunciations

## 12.7 G1000 SYSTEM ALERT MESSAGES

This section describes various G1000 system alert messages. Certain messages are issued due to an LRU or an LRU function failure. Such messages are displayed in the Alerts Window and are normally accompanied by a corresponding red 'X' annunciation as shown previously in the G1000 System Annunciation section.



**NOTE:** This section provides information regarding G1000 alert messages that may be displayed by the system. Knowledge of the aircraft, systems, flight conditions, and other existing operational priorities must be considered when responding to a message. Always use sound pilot judgment. The Beechcraft A36/G36 Pilot's Operating Handbook (POH) takes precedence over any conflicting guidance found in this section.

## MFD & PFD Message Advisories

Message	Comments
<b>DATA LOST</b> – Pilot stored data was lost. Recheck settings.	The pilot profile data was lost. System reverts to default pilot profile and settings. The pilot may reconfigure the MFD & PFD with preferred settings, if desired.
<b>XTALK ERROR</b> – A flight display crosstalk error has occurred.	The MFD and PFD are not communicating with each other. The G1000 system should be serviced.
<b>PFD1 SERVICE</b> – PFD1 needs service. Return unit for repair.	The PFD and/or MFD self-test has detected a problem. The G1000 system should be serviced.
<b>MFD1 SERVICE</b> – MFD1 needs service. Return unit for repair.	
<b>PFD1 CONFIG</b> – PFD1 configuration error. Config service req'd.	The PFD and/or MFD configuration settings do not match backup configuration memory. The G1000 system should be serviced.
<b>MFD1 CONFIG</b> – MFD1 configuration error. Config service req'd.	
<b>SW MISMATCH</b> – GDU software mismatch. Xtalk is off.	The MFD and PFD have different software versions installed. The G1000 system should be serviced.
<b>MANIFEST</b> – PFD1 software mismatch. Communication halted.	The PFD and/or MFD has incorrect software installed. The G1000 system should be serviced.
<b>MANIFEST</b> – MFD1 software mismatch. Communication halted.	
<b>PFD1 COOLING</b> – PFD1 has poor cooling. Reducing power usage.	The PFD and/or MFD is overheating and is reducing power consumption by dimming the display. If problem persists, the G1000 system should be serviced.
<b>MFD1 COOLING</b> – MFD1 has poor cooling. Reducing power usage.	
<b>PFD1 "KEY" KEYSTK</b> – Key is stuck.	A key is stuck on the PFD and/or MFD bezel. Attempt to free the stuck key by pressing it several times. The G1000 system should be serviced if the problem persists.
<b>MFD1 "KEY" KEYSTK</b> – Key is stuck.	
<b>CNFG MODULE</b> – PFD1 configuration module is inoperative.	The PFD configuration module backup memory has failed. The G1000 system should be serviced.
<b>PFD1 VOLTAGE</b> – PFD1 has low voltage. Reducing power usage.	The PFD1 voltage is low. The G1000 system should be serviced.
<b>MFD1 VOLTAGE</b> – MFD1 has low voltage. Reducing power usage.	The MFD1 voltage is low. The G1000 system should be serviced.

## Database Message Advisories

Alerts Window Message	Comments
<b>MFD1 DB ERR</b> – MFD1 aviation database error exists.	The MFD and/or PFD detected a failure in the aviation database. Attempt to reload the aviation database. If problem persists, the G1000 system should be serviced.
<b>PFD1 DB ERR</b> – PFD1 aviation database error exists.	
<b>MFD1 DB ERR</b> – MFD1 basemap database error exists.	The MFD and/or PFD detected a failure in the basemap database.
<b>PFD1 DB ERR</b> – PFD1 basemap database error exists.	
<b>MFD1 DB ERR</b> – MFD1 terrain database error exists.	The MFD and/or PFD detected a failure in the terrain database. Ensure that the terrain card is properly inserted in display. Replace terrain card. If problem persists, The G1000 system should be serviced.
<b>PFD1 DB ERR</b> – PFD1 terrain database error exists.	
<b>MFD1 DB ERR</b> – MFD1 obstacle database error exists.	The MFD and/or PFD detected a failure in the obstacle database. Ensure that the data card is properly inserted. Replace data card. If problem persists, The G1000 system should be serviced.
<b>PFD1 DB ERR</b> – PFD1 obstacle database error exists.	
<b>MFD1 DB ERR</b> – MFD1 airport terrain database error exists.	The MFD and/or PFD detected a failure in the airport terrain database. Ensure that the data card is properly inserted. Replace data card. If problem persists, The G1000 system should be serviced.
<b>PFD1 DB ERR</b> – PFD1 airport terrain database error exists.	
<b>DB MISMATCH</b> – Aviation database version mismatch. Xtalk is off.	The PFD and MFD have different aviation database versions installed. Crossfill is off. Install correct aviation database version in both displays.
<b>DB MISMATCH</b> – Aviation database type mismatch. Xtalk is off.	The PFD and MFD have different aviation database types installed (Americas, European, etc.). Crossfill is off. Install correct aviation database type in both displays.
<b>DB MISMATCH</b> – Basemap database version mismatch. Xtalk is off.	The PFD and MFD have different basemap database versions installed. Crossfill is off. Install correct basemap database version in both displays.
<b>DB MISMATCH</b> – Terrain database version mismatch. Xtalk is off.	The PFD and MFD have different terrain database versions installed. Crossfill is off. Install correct terrain database version in both displays.
<b>DB MISMATCH</b> – Terrain database type mismatch. Xtalk is off.	The PFD and MFD have different terrain database types installed. Crossfill is off. Install correct terrain database type in both displays.
<b>DB MISMATCH</b> – Obstacle database version mismatch. Xtalk is off.	The PFD and MFD have different obstacle database versions installed. Crossfill is off. Install correct obstacle database version in both displays.

## Database Message Advisories (Cont.)

Alerts Window Message	Comments
<b>DB MISMATCH</b> – Airport Terrain database mismatch. Xtalk is off	The PFD and MFD have different airport terrain databases installed. Crossfill is off. Install correct airport terrain database in both displays.

## GMA 1347 Message Advisories

Alerts Window Message	Comments
<b>GMA1 FAIL</b> – GMA1 is inoperative.	The audio panel self-test has detected a failure. The audio panel is unavailable. The G1000 system should be serviced.
<b>GMA1 CONFIG</b> – GMA1 configuration error. Config service req'd.	The audio panel configuration settings do not match backup configuration memory. The G1000 system should be serviced.
<b>MANIFEST</b> – GMA1 software mismatch. Communication halted.	The audio panel has incorrect software installed. The G1000 system should be serviced.
<b>GMA1 SERVICE</b> – GMA1 needs service. Return unit for repair.	The audio panel self-test has detected a problem in the unit. Certain audio functions may still be available, and the audio panel may still be usable. The G1000 system should be serviced when possible.
<b>BACKUP PATH</b> – Audio panel 1 using backup data path.	The #1 audio panel is using a backup communication path. The G1000 system should be serviced when possible.

## GIA 63 Message Advisories

Alerts Window Message	Comments
<b>GIA1 CONFIG</b> – GIA1 configuration error. Config service req'd.	The GIA1 and/or GIA2 configuration settings do not match backup configuration memory. The G1000 system should be serviced.
<b>GIA2 CONFIG</b> – GIA2 configuration error. Config service req'd.	
<b>GIA1 COOLING</b> – GIA1 temperature too low.	The GIA1 and/or GIA2 temperature is too low to operate correctly. Allow units to warm up to operating temperature.
<b>GIA2 COOLING</b> – GIA2 temperature too low.	
<b>GIA1 COOLING</b> – GIA1 over temperature.	The GIA1 and/or GIA2 temperature is too high. If problem persists, the G1000 system should be serviced.
<b>GIA2 COOLING</b> – GIA2 over temperature.	

**GIA 63 Message Advisories (Cont.)**

<b>Alerts Window Message</b>	<b>Comments</b>
<b>GIA1 SERVICE</b> – GIA1 needs service. Return the unit for repair.	The GIA1 and/or GIA2 self-test has detected a problem in the unit. The G1000 system should be serviced.
<b>GIA2 SERVICE</b> – GIA2 needs service. Return the unit for repair.	
<b>HW MISMATCH</b> – GIA hardware mismatch. Communication halted.	There is a hardware mismatch between GIA1 and GIA2. The G1000 system should be serviced.
<b>MANIFEST</b> – GIA1 software mismatch. Communication halted.	The GIA1 and/or GIA 2 has incorrect software installed. The G1000 system should be serviced.
<b>MANIFEST</b> – GIA2 software mismatch. Communication halted.	
<b>COM1 TEMP</b> – COM1 over temp. Reducing transmitter power.	The system has detected an over temperature condition in COM1 and/or COM2. The transmitter will operate at reduced power. If the problem persists, the G1000 system should be serviced.
<b>COM2 TEMP</b> – COM2 over temp. Reducing transmitter power.	
<b>COM1 SERVICE</b> – COM1 needs service. Return unit for repair.	The system has detected a failure in COM1 and/or COM2. COM1 and/or COM2 may still be usable. The G1000 system should be serviced when possible.
<b>COM2 SERVICE</b> – COM2 needs service. Return unit for repair.	
<b>COM1 PTT</b> – COM1 push-to-talk key is stuck.	The COM1 and/or COM2 external push-to-talk switch is stuck in the enable (or “pressed”) position. Press the PTT switch again to cycle its operation. If the problem persists, the G1000 system should be serviced.
<b>COM2 PTT</b> – COM2 push-to-talk key is stuck.	
<b>COM1 RMT XFR</b> – COM1 remote transfer key is stuck.	The COM1 and/or COM2 transfer switch is stuck in the enabled (or “pressed”) position. Press the transfer switch again to cycle its operation. If the problem persists, the G1000 system should be serviced.
<b>COM2 RMT XFR</b> – COM2 remote transfer key is stuck.	
<b>RAIM UNAVAIL</b> – RAIM is not available from FAF to MAP waypoints.	GPS satellite coverage is insufficient to perform Receiver Autonomous Integrity Monitoring (RAIM) from the FAF to the MAP waypoints.
<b>RAIM UNAVAIL</b> – RAIM is not available.	GPS satellite coverage is insufficient to perform Receiver Autonomous Integrity Monitoring (RAIM) for the current phase of flight.
<b>POSN ERROR</b> – RAIM has determined GPS position is in error.	When a RAIM position error is detected, GPS is flagged and the system no longer provides GPS-based guidance.

## GIA 63 Message Advisories (Cont.)

Alerts Window Message	Comments
<b>DGRD GPS ACC</b> – GPS position accuracy degraded & RAIM unavailable.	GPS position accuracy has been degraded and RAIM is not available.
<b>GPS1 FAIL</b> – GPS1 is inoperative.	A failure has been detected in the GPS1 and/or GPS2 receiver. The receiver is unavailable. The G1000 system should be serviced.
<b>GPS2 FAIL</b> – GPS2 is inoperative.	
<b>GPS1 SERVICE</b> – GPS1 needs service. Return unit for repair.	A failure has been detected in the GPS1 and/or GPS2 receiver. The receiver may still be available. The G1000 system should be serviced.
<b>GPS2 SERVICE</b> – GPS2 needs service. Return unit for repair.	
<b>NAV1 SERVICE</b> – NAV1 needs service. Return unit for repair.	A failure has been detected in the NAV1 and/or NAV2 receiver. The receiver may still be available. The G1000 system should be serviced.
<b>NAV2 SERVICE</b> – NAV2 needs service. Return unit for repair.	
<b>NAV1 RMT XFR</b> – NAV1 remote transfer key is stuck.	The remote NAV1 and/or NAV2 transfer switch is stuck in the enabled (or “pressed”) state. Press the transfer switch again to cycle its operation. If the problem persists, the G1000 system should be serviced.
<b>NAV2 RMT XFR</b> – NAV2 remote transfer key is stuck.	
<b>G/S1 FAIL</b> – G/S1 is inoperative.	A failure has been detected in glideslope receiver 1 and/or receiver 2. The G1000 system should be serviced.
<b>G/S2 FAIL</b> – G/S2 is inoperative.	
<b>G/S1 SERVICE</b> – G/S1 needs service. Return unit for repair.	A failure has been detected in glideslope receiver 1 and/or receiver 2. The receiver may still be available. The G1000 system should be serviced when possible.
<b>G/S2 SERVICE</b> – G/S2 needs service. Return unit for repair.	

## GEA 71 Message Advisories

Alerts Window Message	Comments
<b>GEA1 CONFIG</b> – GEA1 configuration error. Config service req'd.	The GEA 71 configuration settings do not match those of backup configuration memory. The G1000 system should be serviced.
<b>MANIFEST</b> – GEA1 software mismatch. Communication halted.	The GEA 71 has incorrect software installed. The G1000 system should be serviced.
<b>BACKUP PATH</b> – EIS using backup data path.	The GEA 71 is using a backup communication path. The G1000 system should be serviced when possible.

### **GTX 33 Message Advisories**

<b>Alerts Window Message</b>	<b>Comments</b>
<b>XPDR1 CONFIG</b> – XPDR1 config error. Config service req'd.	The transponder configuration settings do not match those of backup configuration memory. The G1000 system should be serviced.
<b>MANIFEST</b> – GTX1 software mismatch. Communication halted.	The transponder has incorrect software installed. The G1000 system should be serviced.
<b>BACKUP PATH</b> – XPDR1 using backup data path.	The #1 transponder is using a backup communications path. The G1000 system should be serviced when possible.

### **GRS 77 Message Advisories**

<b>Alerts Window Message</b>	<b>Comments</b>
<b>AHRS1 TAS</b> – AHRS1 not receiving airspeed.	The #1 AHRS is not receiving true airspeed from the air data computer. The AHRS relies on GPS information to augment the lack of airspeed. The G1000 system should be serviced.
<b>AHRS1 GPS</b> – AHRS1 using backup GPS source.	The #1 AHRS is using the backup GPS path. Primary GPS path has failed. The G1000 system should be serviced when possible.
<b>AHRS1 GPS</b> – AHRS1 not receiving any GPS information.	The #1 AHRS is not receiving any or any useful GPS information. Check AFMS limitations. The G1000 system should be serviced.
<b>AHRS1 GPS</b> – AHRS1 not receiving backup GPS information.	The #1 AHRS is not receiving backup GPS information. The G1000 system should be serviced.
<b>AHRS1 GPS</b> – AHRS1 operating exclusively in no-GPS mode.	The #1 AHRS is operating exclusively in no-GPS mode. The G1000 system should be serviced.
<b>MANIFEST</b> – GRS1 software mismatch. Communication halted.	The AHRS has incorrect software installed. The G1000 system should be serviced.
<b>BACKUP PATH</b> – AHRS1 using backup data path.	The #1 AHRS is using a backup communications data path. The G1000 system should be serviced when possible.
<b>AHRS1 SRVC</b> – AHRS1 Magnetic-field model needs update.	The #1 AHRS earth magnetic field model is out of date. Update magnetic field model when practical.
<b>GEO LIMITS</b> – AHRS1 too far North/South, no magnetic compass.	The aircraft is outside geographical limits for approved AHRS operation. Heading is flagged as invalid.

## GMU 44 Message Advisories

Alerts Window Message	Comments
<b>HDG FAULT</b> – AHRS1 magnetometer fault has occurred.	A fault has occurred in the GMU 44. Heading is flagged as invalid. The AHRS uses GPS for backup mode operation. The G1000 system should be serviced.
<b>MANIFEST</b> – GMU1 software mismatch. Communication halted.	The GMU 44 has incorrect software installed. The G1000 system should be serviced.

## GDL 69 Message Advisories

Alerts Window Message	Comments
<b>GDL69 CONFIG</b> – GDL 69 configuration error. Config service req'd.	GDL 69 configuration settings do not match those of backup configuration memory. The G1000 system should be serviced.
<b>GDL69 FAIL</b> – GDL 69 has failed.	A failure has been detected in the GDL 69. The receiver is unavailable. The G1000 system should be serviced

## GDC 74A Message Advisories

Alerts Window Message	Comments
<b>GDC1 CONFIG</b> – GDC1 configuration error. Config service req'd.	GDC 74A configuration settings do not match those of backup configuration memory. The G1000 system should be serviced.
<b>MANIFEST</b> – GDC1 software mismatch. Communication halted.	The GDC 74A has incorrect software installed. The G1000 system should be serviced.
<b>BACKUP PATH</b> – ADC1 using backup data path.	The GDC 74A is using a backup communications data path. The G1000 system should be serviced when possible.

## Miscellaneous Message Advisories

Alerts Window Message	Comments
<b>FPL WPT LOCK</b> – Flight plan waypoint is locked.	Upon power-up, the G1000 system detects that a stored flight plan waypoint is locked. This occurs when an aviation database update eliminates an obsolete waypoint. The flight plan cannot find the specified waypoint and flags this message. This can also occur with user waypoints in a flight plan that is deleted. Remove the waypoint from the flight plan if it no longer exists in any database, OR update the waypoint name/identifier to reflect the new information.
<b>FPL WPT MOVE</b> – Flight plan waypoint moved.	The system has detected that a waypoint coordinate has changed due to a new aviation database update. Verify that stored flight plans contain correct waypoint locations.
<b>TIMER EXPIRD</b> – Timer has expired.	The system notifies the pilot that the timer has expired.
<b>DB CHANGE</b> – Database changed. Verify user modified procedures.	This occurs when a stored flight plan contains procedures that have been manually edited. This alert is issued only after an aviation database update. Verify that the user-modified procedures in stored flight plans are correct and up to date.
<b>FPL TRUNC</b> – Flight plan has been truncated.	This occurs when a newly installed aviation database eliminates an obsolete approach or arrival used by a stored flight plan. The obsolete procedure is removed from the flight plan. Update flight plan with current arrival or approach.
<b>APPR VPROF</b> – Approaching VNAV profile.	Aircraft is approaching VNAV profile. Prepare to climb or descend to meet VNAV profile.
<b>APPR TRG ALT</b> – Approaching target altitude.	Aircraft is approaching target altitude. Prepare to level aircraft.
<b>LOCKED FPL</b> – Cannot navigate locked flight plan.	This occurs when the pilot attempts to activate a stored flight plan that contains locked waypoint. Remove locked waypoint from flight plan. Update flight plan with current waypoint.
<b>WPT ARRIVAL</b> – Arriving at waypoint -[xxxx]	Arriving at waypoint [xxxx], where [xxxx] is the waypoint name.
<b>STEEP TURN</b> – Steep turn ahead.	A steep turn is 15 seconds ahead. Prepare to turn.
<b>INSIDE ARSPC</b> – Inside airspace.	The aircraft is inside the airspace.
<b>ARSPC AHEAD</b> – Airspace ahead less than 10 minutes.	Special use airspace is ahead of aircraft. The aircraft will penetrate the airspace within 10 minutes.

## Miscellaneous Message Advisories (Cont.)

Alerts Window Message	Comments
<b>ARSPC NEAR</b> – Airspace near and ahead.	Special use airspace is near and ahead of the aircraft position.
<b>ARSPC NEAR</b> – Airspace near – less than 2 nm.	Special use airspace is within 2 nm of the aircraft position.
<b>LEG UNSMOOTH</b> – Flight plan leg will not be smooth.	The approaching flight plan waypoints are too close to allow for smooth turns. Prepare for steep turns ahead and expect noticeable course deviations.
<b>APPR INACTV</b> – Approach is not active.	The system notifies the pilot that the loaded approach is not active. Activate approach when required.
<b>SLCT AUTOSEQ</b> – Select auto sequence mode.	The system notifies the pilot to select auto-sequence mode. Press the OBS Softkey to deactivate the OBS mode.
<b>SLCT FREQ</b> – Select appropriate frequency for approach.	The system notifies the pilot to load the approach frequency for the appropriate NAV receiver. Select the correct frequency for the approach.
<b>SLCT NAV</b> – Select NAV on CDI for approach.	The system notifies the pilot to set the CDI to the correct NAV receiver. Set the CDI to the correct NAV receiver.
<b>NO WGS84 WPT</b> – Non WGS 84 waypoint for navigation -[xxxx]	The selected waypoint [xxxx] does not use the WGS 84 datum. Cross-check position with alternate navigation sources.
<b>TRAFFIC FAIL</b> – Traffic device has failed.	The G1000 is no longer receiving data from the traffic system. The traffic device should be serviced.
<b>STRMSCP FAIL</b> – Stormscope has failed.	Stormscope has failed. The G1000 system should be serviced.
<b>BACKUP PATH</b> – Stormscope using backup path.	Stormscope is using the backup communication path. The G1000 system should be serviced when possible.

## A

Abnormal COM operation 11-2  
 Activate a flight plan 8-3  
 Active flight plan 8-2  
 Advisory 12-1, 12-2  
 AFCS 1-3, 6-1, 6-2, 6-4, 6-6, 6-7, 6-9, 6-11, 6-12, 6-13, 12-4  
 Age 10-6  
 AHRS 12-15  
 Aircraft alerts 12-3  
 AIRMET 10-5  
 Airport frequency 7-6  
 Airport information 7-3  
 Airspace alerts 7-9  
 Airspeed indicator 2-3  
 Airspeed trend vector 2-3  
 Alerting System 12-1  
 Alerts 12-1  
 Alert levels 12-2  
 Alert Message 12-2  
 Alert message 12-1  
 Alert Pop-Up 10-14  
 Altitude hold 1-4, 6-4 – 6-8, 6-10  
 Altitude trend vector 2-4  
 ALT knob 1-4  
 Annunciations 12-1  
 AP 1-4, 6-1 – 6-7, 6-9, 12-4  
 Approaches 9-2  
 Approach activation 4-4  
 Approach markers  
   Signal augmentation 5-2  
 Approach Mode 6-12  
 AP disconnect 6-1  
 Arrivals 9-1  
 ASSIST 3-1  
 Attitude indicator 2-3  
 Audio alerting system 12-2  
 Audio panel 4-3, 5-1  
 Audio panel controls  
   DME 5-2  
   NAV1 5-2  
   NAV2 5-2  
 Auto-tuning 4-3, 4-4

Automatic squelch 4-3  
 Autopilot 6-1 – 6-10, 6-12, 6-13, 12-4  
 Aviation database 1-9

## B

Backcourse 6-11  
 Barometric setting 2-4  
 Base reflectivity 10-4  
 BKSP softkey 4-4  
 BRG1 2-7  
 BRG2 2-7

## C

Caution 12-1, 12-2  
 CDI 2-7, 12-18  
 Cell 10-2  
 Cell mode 10-2  
 Cell movement 10-5  
 Cloud tops 10-4  
 CLR key 1-3  
 Coast mode 10-7  
 Codes (important) 4-5  
 Code selection 4-4  
 CODE softkey 4-4  
 COM Frequency Window 4-1  
 COM knob 4-3  
 Controls 1-2, 4-1  
 Control Wheel Steering 6-1, 6-3  
 Create a new flight plan 8-3, 8-4  
 Create a new user waypoint 8-1  
 CWS 6-1, 6-3 – 6-9  
 Cyclones 10-5  
 Cylinder select 3-1  
 CYL SLCT 3-1

## D

Departures 9-1  
 Direct-to 7-1  
 DME 1-6  
 Dual CDU failure 11-2

## E

Echo tops 10-4  
 Edit a flight plan 8-5  
 EDR 10-13  
 Emergency code 4-5  
 Engine display 3-1  
 ENGINE softkey 3-1  
 Excessive Descent Rate 10-13

## F

FCC iv  
 FD 1-4  
 Five-Hundred Aural Alert 10-13  
 FLC 1-4, 6-4, 6-7  
 Flight director 6-1 – 6-4, 6-6 – 6-10  
 Flight ID 4-5  
 Flight level change 1-4, 6-4, 6-7, 6-11, 6-16  
 Flight Plan Catalog 9-1, 9-2  
 FLTA 10-12  
 Forward Looking Terrain Avoidance 10-12  
 FPL key 1-3  
 Freezing level 10-5  
 Frequency toggle key 1-3, 4-3

## G

GA 6-1, 6-3, 6-4, 6-8, 6-9, 6-12  
 Glideslope 2-2, 2-5, 6-4, 6-8, 6-9, 6-12  
 GMA 1347 1-1  
 Go Around 6-1, 6-4, 6-8, 6-9, 6-12, 6-19

## H

HDG key 6-10  
 Heading hold 6-9  
 Heading indication 2-6, 2-7  
 Heading Select 1-3, 1-4, 6-9, 6-10  
 Heading Select Mode 6-10  
 Headset(s) 5-2  
 Hijack code 4-5

Horizontal situation indicator 2-6  
Hurricanes 10-5

## I

ICAO 4-5  
ID 4-3  
IDENT function 4-5  
Imminent Terrain Impact 10-12  
Impact point 10-12  
Inhibit 10-11  
Inhibit TAWS 10-11  
INTEG 2-8  
Interrogations 4-4  
IOI 10-12, 10-15, 12-5  
ITI 10-12

## K

Key(s) 1-4

## L

Lighted obstacle 10-14  
Lightning 1-4, 1-7, 10-2, 10-3, 10-4  
Load approach 8-5  
Load a VOR frequency 7-8  
Load departure 8-4  
Load the frequency for a controlling agency 7-9  
Load the nearest ARTCC frequency 7-9  
Loss of communication code 4-5

## M

Manual Electric Trim 6-1  
MAP 7-1  
Map panning 10-5  
Marker beacon 2-5  
Message advisories 12-10 – 12-18  
MET 6-1, 6-3, 12-4  
METAR 10-3, 10-5  
MFD 1-1, 4-4  
Military interceptor operations code 4-5  
Missed Approach 6-19

MKR/MUTE 5-2, 5-4  
Mode selection softkeys 4-4  
Morse code identifier 4-3

## N

Nav/Com controls 4-1  
NAV1 5-2  
NAV2 5-2  
NAVAIDS iii  
Navigation 7-1  
Navigation Mode 6-11  
Navigation status window 2-2  
NAV Frequency Window 4-1  
NCR 10-13  
Nearest Airports Page 7-3, 7-5 – 7-9, 8-1  
Nearest ARTCC & FSS frequencies 7-8  
Negative Climb Rate After Takeoff 10-13  
NEXRAD 1-4, 1-7, 10-3 – 10-6

## O

OBS 2-8  
Obstacles 10-9, 10-10, 10-14, 12-11, 12-12, 12-13  
Operation 5-2  
Optional  
NAV radios 4-3  
overspeed 6-2

## P

Page group icon 1-8  
PDA 10-12  
PFD 1-1, 4-1, 4-4  
PIT 6-3, 6-4  
pitch axis modes 6-3, 6-4  
Pitch hold 1-4, 6-1, 6-4, 6-8  
Pitch Hold Mode 6-4  
PLAY key 5-4  
Premature Descent Alert 10-12  
PROC key 1-3

## R

Red pointer 2-3  
Remove departure, arrival, or approach 8-5  
Replies 4-4  
Reversionary mode 11-1  
Revision RR-1  
ROC 10-12, 10-15, 12-5  
Roll Axis Modes 6-2, 6-9  
Roll Hold 6-9  
RTC 10-12  
RX indicator 4-3  
R indication 4-4

## S

Selected vertical speed 2-5  
Severe thunderstorm 10-5  
SIGMET 10-5  
Slip/Skid indicator 2-3  
Softkey function (MFD) 1-4, 1-7  
Speed ranges 2-3  
Squelch 5-3  
Store Flight Plan 8-5  
Stormscope lightning data 1-4, 1-7, 10-2, 10-3  
Strike 10-2  
Strike mode 10-2  
System annunciations 12-1, 12-6  
System message advisories 12-9

## T

TA 10-7, 12-6  
TAF 10-3  
TAS 10-8, 10-9, 12-6, 12-15  
TAWS 10-10 – 10-12, 10-14 – 10-16, 12-5, 12-6  
TAWS-B 10-10  
TAWS system test 10-12  
Terrain 10-9, 10-10, 10-14, 10-16, 11-2, 12-11  
Terrain proximity 10-9  
TIS 10-7

Tornado 10-5  
 Traffic Advisory 10-7, 10-8, 10-9, 12-6  
 Traffic advisory 10-16  
 Traffic map page 10-7, 10-8, 10-9, 10-14  
 Transponder 4-4  
 Transponder Status bar 4-4  
 Tropical storms 10-5  
 TX 4-3

## U

Unlighted obstacle 10-14

## V

Vertical Deviation/Glideslope indicator 2-5  
 Vertical navigation profile 8-8  
 Vertical speed 1-4, 2-1, 2-5, 6-4, 6-6, 12-1  
 Vertical Speed Bug 2-5  
 Vertical Speed Mode 6-6  
 VFR code 4-5  
 VHF 4-1  
 Voice Alerts 12-6  
 Voice alerts 12-6  
 VOL/PUSH ID 4-2  
 VOL/PUSH SQ 4-2, 4-3  
 Volume/squelch 5-3  
 VS 1-4, 6-4, 6-6  
 Vspeeds 2-3

## W

WARN 2-8  
 Warning 12-1, 12-2, 12-4  
 Weather data link page 10-4  
 Weather product symbol 10-5  
 Weather product symbols 10-6  
 Weather warnings 10-5  
 Wind direction 10-5  
 Wind speed 10-5

## X

XM weather 10-4  
 XPDR softkey 4-4

## Y

Yaw Damper 1-4, 6-2, 6-3, 12-4  
 Yaw damper 1-4, 6-2, 6-3, 12-4  
 YD 1-4

Blank Page





Garmin International, Inc.  
1200 East 151st Street  
Olathe, KS 66062, U.S.A.  
p: 913.397.8200 f: 913.397.8282

Garmin AT, Inc.  
2345 Turner Road SE  
Salem, OR 97302, U.S.A.  
p: 503.391.3411 f: 503.364.2138

Garmin (Europe) Ltd  
Liberty House, Bulls Copse Road  
Hounslow Business Park  
Southampton, SO40 9RB, U.K.  
p: 44/0870.8501241 f: 44/0870.8501251

Garmin Corporation  
No. 68, Jangshu 2nd Road  
Shijr, Taipei County, Taiwan  
p: 886/2.2642.9199 f: 886/2.2642.9099

[www.garmin.com](http://www.garmin.com)