

GPSMAP 172/172C Quick Reference



POWER ON/OFF SEQUENCE

BACKLIGHT



ENTER
MARK



 
 
 
 
MENU



QUIT




ENTER
MARK

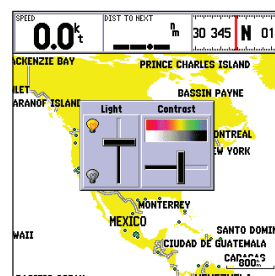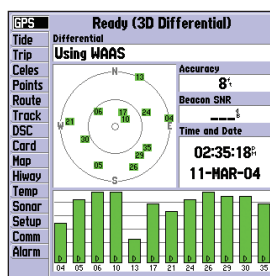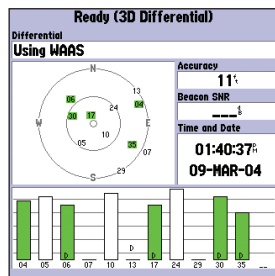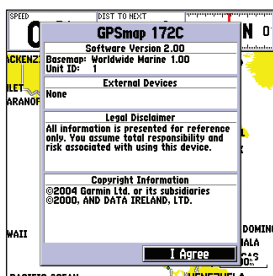

- Press and hold the **POWER** key to turn the GPSMAP 172/172C On.
- Press **ENTER** to acknowledge the warning.
- The GPS Page will be displayed while the GPSMAP 172/172C is acquiring satellite data.
- To start the simulator, from the GPS page press **MENU**, select 'Start Simulator' and press **ENTER**.
- To view the GPS info after the unit has acquired, press **MENU** twice, then highlight the 'GPS' tab on the Main Menu using the **ARROW KEYPAD**.
- Press and hold the **POWER** key for approximately three seconds to turn the unit off.


- Briefly press the **POWER** key to activate the backlight adjustments.
- Pressing the **ARROW KEYPAD UP/DOWN** adjusts the backlight level and **LEFT/RIGHT** adjusts the contrast. Press **ENTER** to accept.

 PAGE SEQUENCE

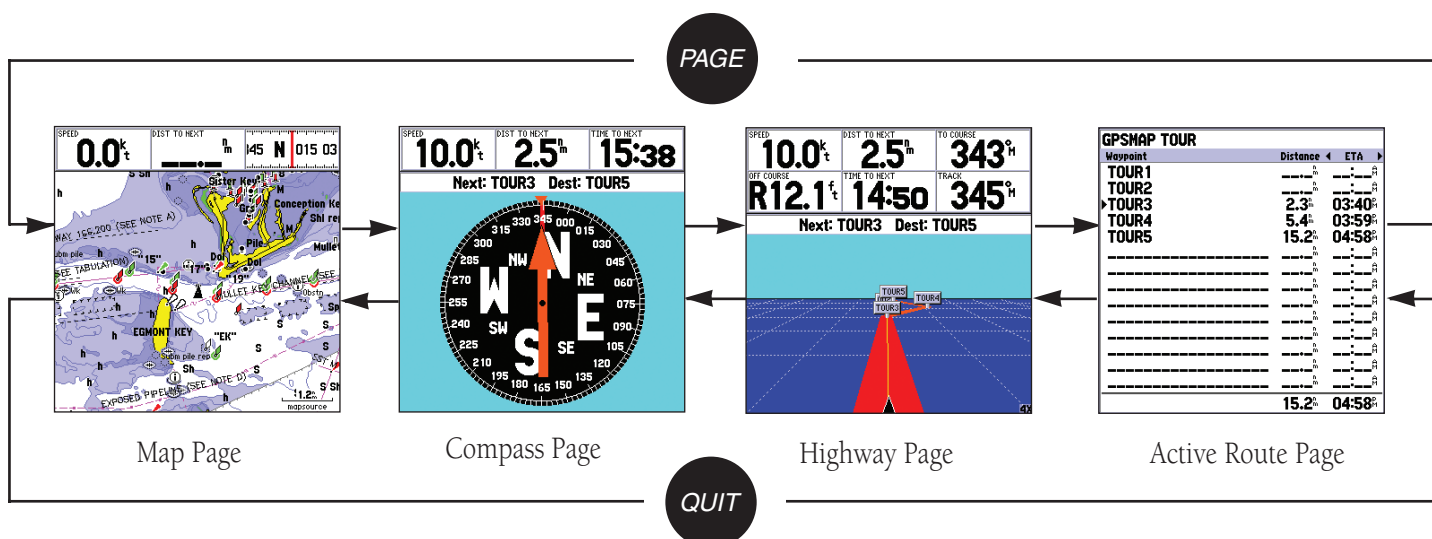


PAGE OPTION MENUS

 
MENU

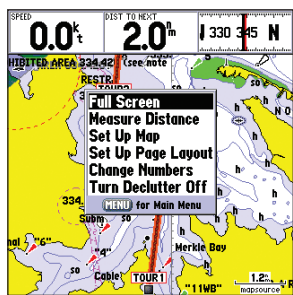


MENU

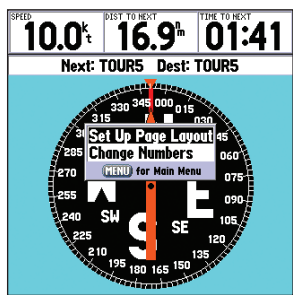 

MENU

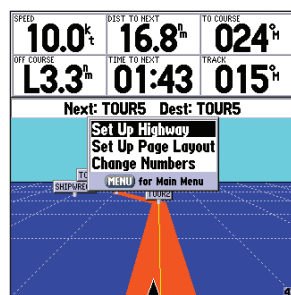 

MENU

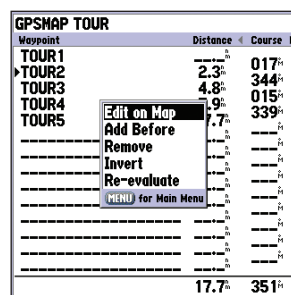 


To display page options, press the **MENU** button once from the corresponding page.


FIND FUNCTION

MOB

 FIND

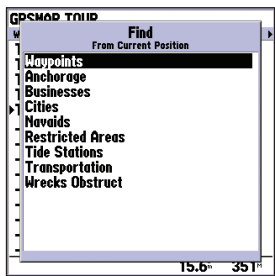

NAV
MOB

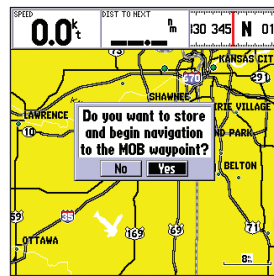 










- Press the **FIND** button to display the Find List.
- Use the **ARROW KEYPAD** to highlight the desired category and press **ENTER**.
- Use the **ARROW KEYPAD** to highlight the item you wish to see more details on and press **ENTER**.


- Hold the **MOB** key for two seconds to activate the MOB function.
- To store the Man Over Board (MOB) waypoint and begin immediate navigation to that point, press **ENTER**.
- To stop MOB navigation, press the **NAV** key and choose 'Stop Navigation'.
- With MOB navigation cancelled, the MOB waypoint can be deleted from the waypoint list. Deleting the waypoint removes it from the Map page.



KEYPAD USAGE

	POWER/BACKLIGHT - Turns the unit on/off and controls the screen backlighting.
	PAGE - Scrolls the main pages in sequence and returns display from a submenu page to a main page.
	QUIT - Returns display to a previous page, restores a data field's previous value, and exits out of menus.
	MENU - Displays available options for the current page. Pressing twice or holding for two seconds displays the Main Menu.
	ENTER - Activates highlighted fields, confirms menu options, and accepts data entry. MARK - When pressed for 2 seconds, your present position is captured, and the 'Mark Position' window is displayed.
	NAV - Activates the navigation options, allowing you to navigate using a waypoint, route or track. MOB - (Man Over Board) When pressed and held for 2 seconds, the MOB function captures your present position and instantly sets a return course.
	OUT - Increases the scale of the moving Map and Highway pages. IN - Decreases the scale of the moving Map and Highway pages.
	ARROW KEYPAD - Controls the movement of the cursor and is used to select options and positions, and to enter data.
	FIND - Activates the Find options, allowing a search for user points, map items, and any optional data card information.

DATA ENTRY

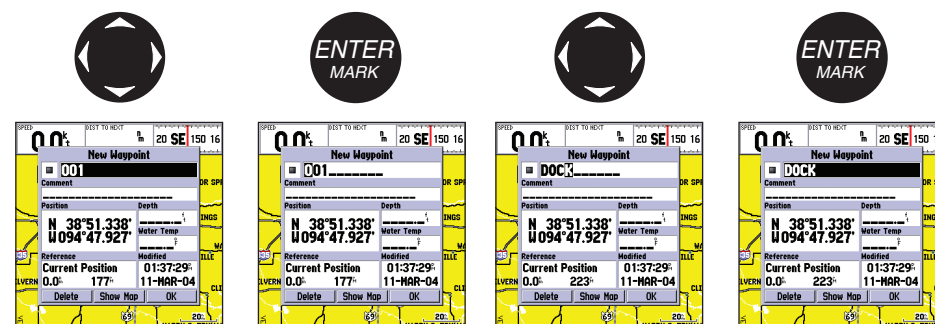


- To start data entry, highlight the desired field using the **ARROW KEYPAD**.
- Press the **ENTER** key to access the field.
- Use the **ARROW KEYPAD** to select alphanumeric characters.
- Press the **ENTER** key to confirm.
- You may change data in fields such as symbol, name, coordinates, and depth when marking a waypoint.

MARKING WAYPOINTS




- To capture your present position, press and hold the **ENTER/MARK** key until the 'New Waypoint' window displays.
- Press the **ENTER** key to save the waypoint.
- To mark a specific position on the map, move the pointer to the map position.
- Briefly press the **ENTER/MARK** key to display the 'New Map Waypoint' page.
- Press **ENTER/MARK** to save the new waypoint.

NAVIGATION

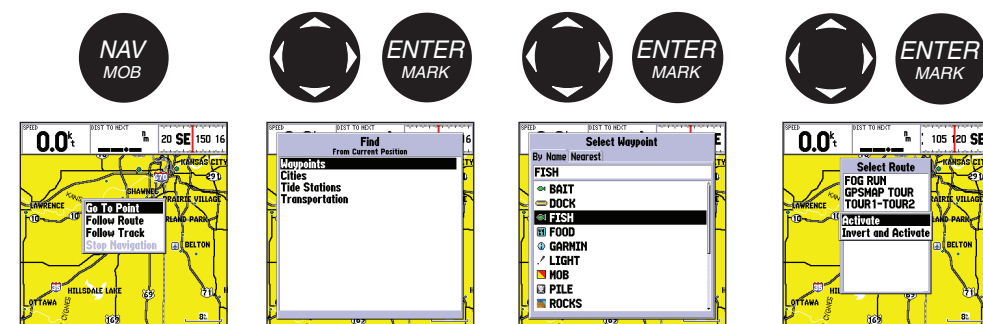

- Press the **NAV** key to activate the navigation selections.
- Using the **ARROW KEYPAD**, select 'Go To Point', 'Follow Route', or 'Follow Track' and press the **ENTER** key.
- Select the point, track, or route from the list then press the **ENTER** key.
 1. If you selected a point, press **ENTER** again with 'Go To' highlighted.
 2. If you selected a route or saved track, choose from the selections and press the **ENTER** key to begin navigation.

MAIN MENU

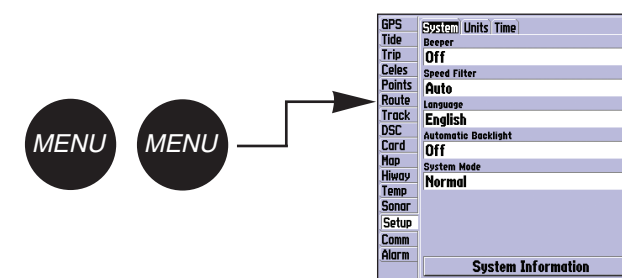

- Press the **MENU** button twice (or hold it for two seconds) to display the Main Menu page.
- Press the **ARROW KEYPAD** UP or DOWN to highlight the menu tabs.
- Press the **ARROW KEYPAD** LEFT or RIGHT to highlight the submenu tabs and Main Menu options.
- Press the **ENTER** key to change an option.