# GARMIN.

### **Printing a Mounting Template**

#### NOTICE

These instructions for printing a mounting template must be followed precisely. Failure to do so may result in incorrect dimensions on the template and an incorrect cutout (too large or too small) on the mounting surface of your boat.

To print the attached mounting template, check the dimensions of the template and select the appropriate size of paper. Both the length and width measurements are indicated on the template.

The paper size must be larger than the dimensions of the template. Select the paper size using the **Properties** button in the Adobe Acrobat print dialog box.

Select Auto-Rotate and Center to ensure the template prints in the correct orientation.


#### **IMPORTANT:** When printing the flush mount template, set **Page Scaling** in the Adobe Acrobat print dialog box to **None**.

	Print Printer Name:  Na	Properties Comments and Forms: Document and Markups	Properties: Select the paper size.
Page Scaling: Select <b>None</b> : Auto-Rotate and Center: Select with a check mark for correct orientation	Print Range All Current view Current page Pages from: 1 to: 1 Subset All pages in range Collate Page Handling Copies: 1 Collate Page Scaling None Auto-Rotate and Center Choose Paper Source by PDF page size Print to file Print color as black Printing Tips Advanced	Preview	Paper size (example): Use appropriate size paper.

#### NOTICE

After printing and before cutting the mounting surface, measure the printed template to ensure both the length and the width printed at the correct size and to ensure that the dimensions of the printed template match the actual size of your mount. Garmin is not responsible for any damages or expenses resulting from a miscut mounting surface arising from a failure to follow these instructions.

## GPSMAP 2x06/2x10/3x06/3x10 FLUSH MOUNT TEMPLATES

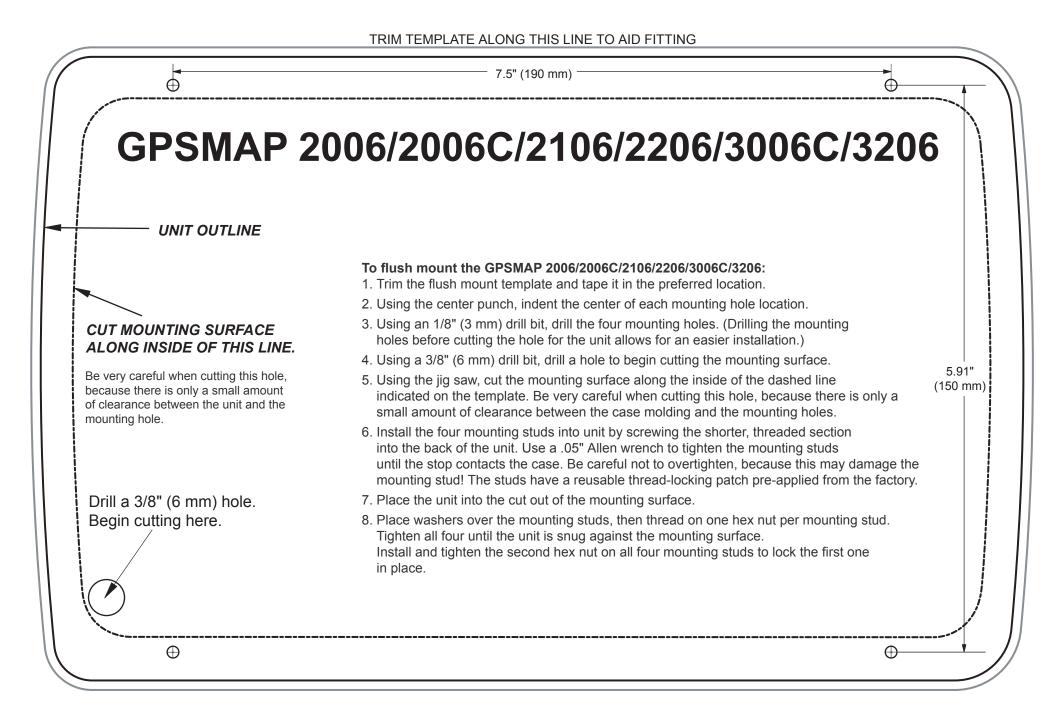

Garmin International 1200 E. 151st Street, Olathe, KS 66062 190-00243-00 Rev. F April 2006

Dria

Printed in Taiwan

