

GARMIN[®]

nüvi[®] 1690 owner's manual



01102291

© 2009–2010 Garmin Ltd. or its subsidiaries

Model number: 01102291

Garmin International, Inc.
1200 East 151st Street,
Olathe, Kansas 66062,
USA
Tel. (913) 397.8200 or
(800) 800.1020
Fax (913) 397.8282

Garmin (Europe) Ltd.
Liberty House
Hounslow Business Park,
Southampton, Hampshire, SO40 9LR UK
Tel. +44 (0) 870.8501241 (outside the UK)
0808 2380000 (within the UK)
Fax +44 (0) 870.8501251

Garmin Corporation
No. 68, Jangshu 2nd Road,
Sijhih, Taipei County,
Taiwan
Tel. 886/2.2642.9199
Fax 886/2.2642.9099

All rights reserved. Except as expressly provided herein, no part of this manual may be reproduced, copied, transmitted, disseminated, downloaded or stored in any storage medium, for any purpose without the express prior written consent of Garmin. Garmin hereby grants permission to download a single copy of this manual onto a hard drive or other electronic storage medium to be viewed and to print one copy of this manual or of any revision hereto, provided that such electronic or printed copy of this manual must contain the complete text of this copyright notice and provided further that any unauthorized commercial distribution of this manual or any revision hereto is strictly prohibited.

Information in this document is subject to change without notice. Garmin reserves the right to change or improve its products and to make changes in the content without obligation to notify any person or organization of such changes or improvements. Visit the Garmin Web site (www.garmin.com) for current updates and supplemental information concerning the use and operation of this and other Garmin products.

Garmin[®], the Garmin logo, MapSource[®], and nüvi[®] are trademarks of Garmin Ltd. or its subsidiaries, registered in the USA and other countries. myGarmin[™], myGarmin Agent[™], Garmin Lock[™], Hotfix[™], nüLink![™], nüMaps Guarantee[™], nüMaps Lifetime[™], ecoRoute[™], cityXplorer[™] and Ciao![™] are trademarks of Garmin Ltd. or its subsidiaries. These trademarks may not be used without the express permission of Garmin.

The Bluetooth[®] word mark and logos are owned by the Bluetooth SIG, Inc., and any use of such name by Garmin is under license. microSD[™] is a trademark of SanDisk or its subsidiaries. Windows[®] is a registered trademark of Microsoft Corporation in the United States and other countries. Mac[®] is a trademark of Apple Computer, Inc., registered in the U.S. and other countries.

May 2010

Part Number 190-01099-00 Rev. D

Printed in Taiwan

Table of Contents

Getting Started.....	1	Using the On-Screen Keyboard.....	8
Looking at Your nüvi	1	Searching Near Another Location	9
Using the Main Menu.....	1	Finding Recently Found Places	9
Using the Main Menu Toolbar....	2	Using the Go! Page	9
Mounting Your nüvi	2	Finding Places in Pedestrian Mode	10
Charging Your nüvi	3	Finding a Place by Spelling the Name	11
Acquiring Satellites	4	Using Favorites.....	11
Selecting a Usage Mode	4	Using Photo Navigation.....	12
Using the Power Button.....	5	Sending Found Places to Your nüvi	13
Adjusting the Volume.....	5	Finding a Place Using the Map.....	13
Navigating the Screens	5	Entering Coordinates.....	14
Finding Your Destination.....	5	Using the Map Pages	15
Adding a Stop	6	Viewing the Trip Computer	16
Changing Destinations	6	Viewing the Turn List.....	16
Taking a Detour	6	Viewing the Next Turn Page....	17
Stopping the Route.....	6		
Finding Places	7		
Finding an Address.....	7		
Setting a Home Location	7		

Viewing the Junction View Page.....	17
Using the Pedestrian Map Page.....	18
Using Traffic Data	19
Traffic in Your Area	19
Traffic on Your Route.....	20
Viewing the Traffic Map	21
Viewing Traffic Delays	21
Disabling Traffic.....	21
Using Garmin nüLink! Services.....	22
Finding a Destination with Local Search.....	22
Finding a Destination Using Phone Book Listings	23
Finding Fuel Prices.....	24
Checking Movie Times	24
Finding Local Events	24

Making Hands-free Phone Calls	25
Pairing Your Phone.....	25
Receiving a Call	26
In a Call	27
Accessing the Phone Menu.....	27
Finding Friends with Ciao!™	30
About Ciao! Networks.....	30
Joining Ciao!.....	30
Inviting a Friend by Phone Number	31
Inviting a Friend by E-mail	31
Viewing an Invitation.....	31
Accepting or Declining a Pending Invitation.....	32
Viewing Friends	32
Removing a Friend	32
Entering Your Status.....	33
Changing Your Visibility	33
Disabling Ciao!	33

Managing Files.....	34	Viewing Offers	44
Supported File Types.....	34	Customizing the nüvi	45
Connecting Your nüvi to Your Computer	34	Changing the System Settings	45
Transferring Files.....	35	Changing the Navigation Settings	46
Deleting Files.....	35	Adjusting the Display Settings ..	46
Using the Tools	36	Updating the Time Settings	47
Accessing the Settings	36	Setting the Languages.....	47
Using the Where Am I? Page ..	36	Changing the Map Settings	48
Accessing Help.....	36	Changing Security Settings	49
Using ecoRoute™	36	Setting the Bluetooth Technology Options.....	49
Viewing myGarmin™ messages.....	40	Changing the Proximity Points Settings	50
Viewing Flight Information	40	Restoring All Settings	50
Viewing Weather Information ..	41	Appendix	51
Using the Picture Viewer	41	Caring for Your nüvi	51
Using the Unit Converter	42	Locking Your nüvi	52
Using the Currency Coverter ...	42	Calibrating the Screen	52
Using the World Clock	43	Updating the Software	53
Creating Routes.....	43	Clearing User Data	53
Using the Calculator	44		
Accessing My Data.....	44		

Battery Information	53
Removing the nüvi and Mount	54
Mounting on Your Dashboard ..	54
nüMaps Guarantee™	55
nüMaps Lifetime™	55
Additional Maps	55
About GPS Satellite Signals	55
Extras and Optional Accessories.....	56
Garmin Travel Guide	57
Contacting Garmin.....	58
Registering Your nüvi.....	58
Specifications	60
Troubleshooting.....	61
Index	64

Getting Started

Looking at Your nüvi



See the *Important Safety and Product Information* guide in the product box for product warnings and other important information.

Power button:

Press and hold to turn the nüvi on and off. Press and quickly release to view Power button menu, see [page 5](#).

microSD™
card slot



Microphone

Mini-USB
connector

Using the Main Menu



- 1 Touch to find a destination.
- 2 Touch to view the map.
- 3 Touch to make a call when connected to a [compatible mobile phone](#).
- 4 Touch to adjust the volume.
- 5 Touch to use tools such as settings, help, and weather.

Using the Main Menu Toolbar




- 1 GPS signal status. Touch and hold to view satellite information.
- 2 Bluetooth® technology status. Touch to change Bluetooth settings.
- 3 Usage mode indicator. Touch to select a usage mode.
- 4 Current time. Touch to change time settings.
- 5 Current temperature. Touch and hold to view weather information.
- 6 Garmin nūLink!™ services signal status. Touch and hold to view network information.
- 7 Battery status.

Mounting Your nūvi

Before mounting the nūvi, see the *Important Safety and Product Information* guide for information about laws pertaining to windshield mounting

1. Remove the clear plastic from the suction cup. Place the suction cup on the windshield.
2. Flip the lever back toward the windshield.
3. Snap the cradle onto the suction cup arm.
4. Plug the vehicle power cable into the back of cradle.

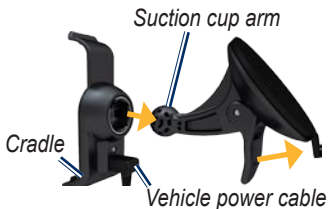

5. Fit the bottom of your nūvi into the cradle.

6. Tilt your nüvi back until it snaps into place.
7. Plug the other end of the vehicle power cable into a power outlet in your vehicle. Your unit should turn on automatically if it is plugged in and the vehicle is running. Follow the on-screen instructions.



WARNING: This product contains a lithium-ion battery. To prevent damage, remove the unit from the vehicle when exiting or store it out of direct sunlight.


Charging Your nüvi

Charge your nüvi for at least 4 hours before using on battery power.

- While your nüvi is in the cradle, connect one end of the vehicle power cable to the power outlet in your vehicle and the other end to the mini-USB connector on your cradle. The vehicle key may need to be turned to ON/ACC for the nüvi to charge.
- Connect an AC adapter (optional accessory).
- Connect your nüvi to a computer using a USB cable. The USB cable is included with some nüvi series packages. The computer must be turned on for the nüvi to charge.

Acquiring Satellites

1. Go outdoors to an open area, away from tall buildings and trees.
2. Turn on your nüvi.

Acquiring satellite signals can take a few minutes. The  bars indicate satellite strength. When at least one of the bars is green, your nüvi has acquired satellite signals.

Selecting a Usage Mode



Pedestrian



Bicycle



Automobile

Your nüvi offers several usage modes for navigation. Routing is calculated differently based on your usage mode. For example, in Pedestrian usage mode with cityXplorer™ maps loaded, your nüvi calculates a route

that uses a combination of public transit options, such as riding a bus or subway, and walking. cityXplorer maps are not included with your nüvi. See www.garmin.com to purchase cityXplorer maps.

Changing Your Usage Mode

1. From the Main menu, touch the usage mode icon on the upper-left corner.
2. Select a mode, and touch **OK**.
3. Touch **Yes**, and follow the on-screen instructions to configure your settings.



Navigating Off Road

If you are not following roadways as you navigate, use Off Road mode.

Touch **Tools** > **Settings** > **Navigation** > **Route Preference** > **Off Road** > **OK**.

Using the Power Button

Press and quickly release the power button to view additional options:



- Touch  and  to adjust the screen brightness.
- Touch **Lock Screen** to prevent accidental screen touches.
- Touch **Power Off** to turn off your nüvi. You can also turn off the nüvi by holding the power button for approximately three seconds.

Press and quickly release the power button to exit the menu.




Resetting Your nüvi

If your nüvi stops functioning, reset your nüvi by pressing and holding the **Power** button.

Adjusting the Volume

From the Main menu, touch **Volume**. Touch  and  to adjust the volume. Touch the box next to **Mute** to mute all audio.

Navigating the Screens


- To quickly return to the Main menu, touch and hold .
- Touch  and  to see more choices. Touch and hold to scroll faster.

Finding Your Destination


The Where To? menu provides several different categories for you to use when searching for addresses, cities, and other locations. The detailed maps loaded in your nüvi contain millions of points of interest, such as restaurants, hotels, and auto services.

1. Touch **Where To? > Points of Interest**.
2. Select a category.
3. Select a subcategory.
4. Select a destination.
5. Touch **Go!**.


Adding a Stop

1. While navigating a route, touch  > **Where To?**.
2. Search for the extra stop.
3. Touch **Go!**.
4. Touch **Add as Via Point** to add this stop before your final destination.

Changing Destinations

1. While navigating a route, touch  > **Where To?**.
2. Search for the extra stop.
3. Touch **Go!**.
4. Touch **Set as New Destination** to make this your final destination.

Taking a Detour

1. While navigating a route, touch .
2. Touch **Detour** or **Recalculate**.

If the route you are currently taking is the only reasonable option, the nüvi might not calculate a detour.

Stopping the Route

1. With a route active, touch **Menu**.
2. Touch **Stop**.

Finding Places

The Where To? menu provides several different categories you can use to search for locations. To learn how to perform a simple search, see [page 5](#).

Finding an Address

NOTE: Depending on the version of the maps loaded on your nüvi, the button names can change and some steps could be ordered differently.

1. Touch **Where To? > Address**.
2. Change the state, the country, or the province, if necessary.
3. Touch **Search All**. If you know the city, touch **Spell City**, enter the city/postal code, and touch **Done**. Select the city/postal code in the list. (Not all map data provides postal code searching).
4. Enter the number of the address, and touch **Done**.

5. Enter the street name, and touch **Done**.
6. Select the correct street in the list, if necessary.
7. Touch the address, if necessary.

Setting a Home Location

Set your home location for the place you return to most often.

1. To set your home location, touch **Where To? > Go Home**.
2. Select an option:
 - Enter your address.
 - Use your current location.
 - Choose from a list of recently found locations.

Going Home

To navigate home after you have set your home location, touch **Where To? > Go Home**.

Changing Your Home Location

1. Touch **Tools > My Data > Set Home Location**.
2. Select an option:
 - Enter your address.
 - Use your current location.
 - Choose from a list of recently found locations.

Editing Your Home Location

 




1. Touch **Where To? > Favorites > All Favorites > Home**.
2. Touch **Edit**, enter your changes, and touch **Done**.


If you delete your home location, you can reset it by following the steps in “Setting a Home Location.”

Using the On-Screen Keyboard

When an on-screen keyboard appears, touch a letter or number to enter it.



Touch  to add a space. Touch  and  to move the cursor. Touch  to delete a character. Touch and hold  to erase the entire entry.

Touch **Mode** to select the keyboard language mode. Touch  to enter special characters, such as punctuation marks. To change the keyboard layout, see [page 45](#).

Searching Near Another Location

1. Touch **Where To?** > **Near**.
2. Select an option.

Finding Recently Found Places


Your nüvi stores the last 50 of your recent finds in the Recently Found list. The most-recently viewed places appear at the top of the list. Touch **Where To?** > **Recently Found** to view your recently found items.



Deleting Recently Found Places

To remove all places from the Recently Found list, touch **Clear** > **Yes**. All items from the list are removed, but this does not delete the actual place from your nüvi.

Using the Go! Page

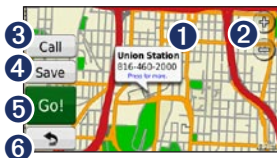After you have selected a location to navigate to, the Go! page opens.



- 1 Touch to view more information for the location.
- 2 Touch  and  to zoom in and out.
- 3 Touch to call this location when connected to a phone.
- 4 Touch to save this location to your Favorites.
- 5 Touch to create a turn-by-turn route to this location.
- 6 Touch to return to the previous page. Touch and hold to return to the Main menu.

Finding Places in Pedestrian Mode

1. Select Pedestrian usage mode (see [page 4](#)).
2. Touch **Where To?** > **Points of Interest**.
3. Select a category.
4. Select a subcategory.
5. Select a destination.
6. Touch **Go!**.
7. If you have cityXplorer maps for the current metropolitan area loaded on your nüvi, select the route you would like to take. Each route on the page offers a different combination of public transit or pedestrian options.



8. Select a leg of the route to view more-detailed instructions, or touch **Start** to create the route.



See www.garmin.com to purchase cityXplorer maps.

Finding a Place by Spelling the Name


Use the on-screen keyboard to spell the name of the destination you are looking for. You can also enter letters contained in the name to narrow the search.

1. Touch **Where To? > Points of Interest > Spell Name**.
2. Using the on-screen keyboard, enter letters of the name of your destination.
3. Touch **Done**.

Using Favorites

You can save places in your Favorites so you can quickly find them and create routes to them. Your home location is also stored in Favorites.

Saving Your Current Location

From the Map page, touch . Touch **Save Location** to save your current location.

Saving Places You Find

1. From the Go! page, touch **Save**.
2. Touch **OK**. The place is saved in **Favorites**.

Finding Saved Places

1. Touch **Where To?**.
2. Touch **Favorites**.
3. Select a category. Your saved locations are listed.

Editing Saved Places

1. Touch **Where To? > Favorites**.
2. Select the category and the location you want to edit.
3. Touch **Edit**.
4. Touch an item to edit.

Using Photo Navigation

You can load pictures that include location information. You can load these pictures on your nüvi or on a memory card and create routes to them.

1. Connect your nüvi to your computer.
2. Go to <http://connect.garmin.com/photos> to download pictures with location information.
3. Follow the instructions on the Web site to select and load pictures.
4. Touch **Where To? > Favorites > Photos**. Pictures with location information are listed.
5. Touch a picture.

Sending Found Places to Your nüvi

You can send locations to your device from various online sources, including <http://connect.garmin.com>.

1. Find a location on a supported Web site.
2. Follow instructions on the Web site to send the location to your myGarmin account.
3. To transfer locations to your device manually, connect your device to your computer using a USB cable (see [page 34](#)).



Locations sent to your myGarmin account are transferred automatically to Favorites on your device through nüLink! services. Touch **Where To?** > **Favorites** to view the locations.

Finding a Place Using the Map

Use the Browse Map page to view different parts of the map. Touch **Where To?** > **Browse Map**.



Tips for Browsing the Map

- Touch the map and drag to view different parts of the map.
- Touch  and  to zoom in and out.
- Touch any object on the map. An arrow appears, pointing at the object, and a box displays information on the location. When the box displays **Press for more**, several POIs exist at that location. Press to see the list of POIs.
- Touch **Save** to save this location.
- Touch **Go!** to navigate to the location.
- If the GPS simulator is on, touch **Set Location** to set your location to the selected location. See [page 45](#).

Entering Coordinates

If you know the geographic coordinates of your destination, you can use your nüvi to navigate to your destination using the latitude and longitude coordinates. This can be especially helpful when geocaching.



1. Touch **Where To? > Coordinates**.
2. Touch **Format** to select the correct coordinate format for the type of map you are using.
3. Touch the coordinate you want to adjust.
4. Enter the coordinates, and touch **Done**.
5. Touch **Next**. The coordinates are displayed on a map.

Using the Map Pages

Your route is marked with a magenta line. As you travel, your nüvi guides you to your destination with voice prompts, arrows on the map, and directions at the top of the map. If you depart from the original route, your nüvi recalculates the route.

Touch and drag the map to view a different area of the map. A speed limit icon could appear as you travel on major roadways.



- 1 Touch to view the Next Turn page or the Junction View page, when available.
- 2 Touch to view the Turn List.
- 3 Touch  and  to zoom in and out.
- 4 Touch to return to the Main menu.
- 5 Touch to view the Trip Computer.
- 6 Touch to view the Where Am I? page.
- 7 Touch to change the data field.

Viewing the Trip Computer



The trip computer displays your current speed and provides statistics about your trip. To view the trip computer, touch the **Speed** field on the map.

NOTE: If you make frequent stops, leave the nūvi turned on so it can accurately measure elapsed time during the trip.

Resetting Trip Computer Information

1. From the map, touch the **Speed** field.

2. Touch **Reset > Reset Trip Data** to reset the information on the trip computer.
3. Touch **Reset > Reset Max** to reset the maximum speed.

Viewing the Turn List



When you are navigating a route, the turn list displays turn-by-turn instructions for your entire route and the distance between turns.

1. Touch the text bar on the top of the map to open the turn list.
2. Touch a turn on the list to view the next turn for that route.
3. Touch **Show Map** to view the entire route on the Browse Map page.

Viewing the Next Turn Page



When you are navigating a route, the next turn shows the turn on the map and the distance and time left before you reach the turn.

To view an upcoming turn on the map, touch the turn indicator in the upper-left corner of the map, or touch any turn on the turn list.


Viewing the Junction View Page







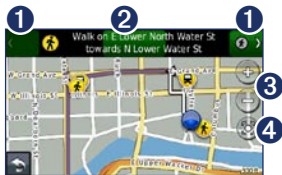


When available, the Junction View page displays a view of some upcoming junctions and in which lane you should be driving.

To view the Junction View page, touch the upper-left corner of the Map page. To access the Junction View page from the Next Turn page, touch **Junction View**.

Using the Pedestrian Map Page



In Pedestrian usage mode, your route is displayed on a two-dimensional map. The , , , , , and  icons indicate the navigation method for that section of the route. For example, when you see , board a bus at that point in the route.

- 1 Touch to toggle between legs of the route. The nüvi zooms in and out on each leg of your route, but it does not automatically move to the next leg.
- 2 Touch to view the route itinerary.
- 3 Touch to zoom in and zoom out.
- 4 Touch to recenter the map on your current location.

Using Traffic Data

NOTE: Garmin is not responsible for the accuracy of the traffic information.

NOTE: nüLink! services are not available in all areas or countries.

Your nüvi can receive traffic information through your nüLink! subscription. Your device must be receiving a signal from nüLink! services to receive traffic information.

The subscription activates automatically when you initially turn on the nüvi. Go to www.garmin.com/nulink or www.garmin.com/nulink/trafficcoverage for more information.

Traffic in Your Area


When you are receiving traffic information, a traffic icon appears in the upper-left corner of the Map page. The traffic icon changes color to indicate the severity of traffic conditions on your route or on the road you are currently travelling.

Color	Description	Meaning
Green	Low severity	Traffic is flowing normally.
Yellow	Medium severity	Traffic is slightly congested.
Red	High severity	Traffic is heavily congested or stopped.
Gray	No data	Traffic data has not updated.

Traffic on Your Route

When calculating your route, the nüvi examines the current traffic and automatically optimizes the route for the shortest time. If a severe traffic delay occurs on your route while you are navigating, the nüvi automatically recalculates the route. You might still be routed through traffic if no better alternative routes exist.

Traffic icon

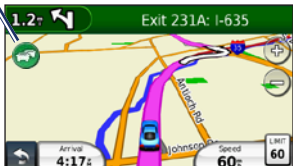

Manually Avoiding Traffic on Your Route

1. On the Map page, touch the traffic icon.
2. Touch **Traffic On Route**.
3. Touch the arrows to view other traffic delays on your route, if necessary.
4. Touch **Avoid** to avoid the traffic delay.

Viewing the Traffic Map

The traffic map shows color-coded traffic flow and delays on nearby roads.

1. On the Map page, touch the traffic icon.
2. Touch **Show Traffic Map** to view the traffic incidents on a map.

To return to the normal map from the traffic map, touch the traffic icon, and then touch **Show Normal Map**.

Viewing Traffic Delays

1. On the Map page, touch the traffic icon.
2. Touch **Traffic Search** to view a list of traffic delays.
3. To view details, touch an item in the list. If there is more than one delay, touch the arrows to view additional delays.

Disabling Traffic

1. Touch **Tools > Settings > Security**.
2. Touch the button below **Position Reporting** and touch **Off**.

Using Garmin nüLink! Services

Your nüvi comes with a subscription to nüLink! services, which allow you to receive current information on local events, fuel prices, flight times, and more. See www.garmin.com/nulink for more information.

NOTE: You may not be able to receive current data when you are in a remote location.

NOTE: nüLink! services are not available in all areas or countries.

Finding a Destination with Local Search

Local Search enables you to browse the most up-to-date location information.

1. Touch **Where To? > Local Search**.
2. Select a category.
3. Select a subcategory.
4. Select a destination.
5. Touch **Go!**

NOTE: Local Search is not available in all areas or countries.

Finding a Place by Spelling the Name

In addition to searching by spelling the name of a location, you can also search for locations within a specific category, like hair salons or art galleries.

1. Touch **Where To? > Local Search > Spell**.
2. Using the on-screen keyboard, enter letters of the name of your destination.
3. Touch **Done**.

Finding a Destination Using Phone Book Listings

1. Touch **Where To? > White Pages**.
2. Touch an option:
 - **By Name**—search for a listing using first and last names.
 - **By Phone Number**—search for a listing using a phone number.
3. Use the on-screen keyboard to enter a name or a phone number, and touch **Done**.
4. Touch a listing in the search results, if necessary.

NOTE: nüLink! services are not available in all areas or countries.

Finding Fuel Prices

1. Touch **Where To? > Fuel Prices**.
2. Touch **Fuel Type** and select the fuel type for your vehicle. A list of fuel prices per gallon at nearby gas stations appears.
3. Select a station.

NOTE: Fuel prices are not available in all areas or countries.

Checking Movie Times

1. Touch **Where To? > Movie Times**.
2. Touch **Select Day** and select an upcoming day.
3. Select **Find By Movie Title** or **Find By Movie Theater**.
4. Select a movie title or a movie theater.

NOTE: Movie times are not available in all areas or countries.

Finding Local Events

1. Touch **Where To? > Local Events**.
2. Select a category.
3. Touch **Select Day** and select an upcoming day.
4. Select an event.

Touch **Save** to save the event to Favorites.

NOTE: Local events are not available in all areas or countries.

Making Hands-free Phone Calls

Bluetooth wireless technology establishes a wireless link between two devices, such as a mobile phone and your nüvi. To determine whether your mobile phone with Bluetooth technology is compatible with the nüvi, go to www.garmin.com/bluetooth.

The first time you use two devices together, you must “pair” them by establishing a relationship using a PIN or a passkey. After the initial pairing, the two devices can connect automatically each time you turn them on.

NOTE: You might have to set your mobile phone to connect to the nüvi automatically when it is turned on.

Pairing Your Phone

To pair and connect, your phone and the nüvi must be turned on and be within 33 ft. (10 m) of each other.

Initiate pairing from your nüvi or from your phone. Refer to your phone instructions.

Pairing Using Your Phone Settings

1. Touch **Tools** > **Settings** > **Bluetooth**.
2. Select **Enabled**.
3. Enable the Bluetooth component on your phone. This might be in a menu called Settings, Bluetooth, Connections, or Hands-free.

4. Initiate a search for Bluetooth devices.
5. Select the nüvi from the list of devices.
6. Enter the nüvi Bluetooth PIN (**1234**) into your phone.

Pairing Using the nüvi Settings

1. From the Main menu, touch **Tools** > **Settings** > **Bluetooth** > **Add**.
2. Enable the Bluetooth component on your phone, and enable Find Me/Discoverable/Visible mode. These settings might be in a Bluetooth, a Connections, or a Hands-free menu.
3. Touch **OK** on the nüvi.
4. Select your phone, and touch **OK**.
5. Enter the nüvi Bluetooth PIN (**1234**) in your phone.

When your phone is connected to your nüvi, you are ready to make phone calls. Touch **Phone** on the Main menu to access the Phone menu.




When you turn on the nüvi, it tries to connect to the last phone to which it was connected.

Receiving a Call

When you get a call, the Incoming Call window opens. Touch **Answer** to answer the call. Touch **Ignore** to ignore the call and stop your phone from ringing.

The internal microphone is in the front of the nüvi; speak normally.

In a Call

During a call, the  In Call icon appears. Touch  > **End Call** to hang up. Touch  > **Call Options** for the following options:


- **Touch Tones**—displays a keypad page so that you can use automated systems, such as voice mail.
- **Transfer Audio To Phone**—this is helpful if you want to turn off the nüvi but remain on the call, or if you need privacy. To switch back, touch **Transfer Audio To Device**.
- **Mute Microphone**.

NOTE: Depending on the screen that appears on your nüvi, the In Call icon could look different.

Using Call Waiting

When you are on a call and you receive a second call (call waiting), the Incoming Call window appears. Touch **Answer** to answer the call. The first call is placed on hold.

Switching Between Calls

1. Touch  > **Switch To**.
2. Touch **End Call** to hang up. This does not disconnect the call on hold.

Accessing the Phone Menu

From the Main menu, touch **Phone** to open the Phone menu.

NOTE: Not all phones support all features of the nüvi Phone menu.

Using Your Phone Book

Each time your phone connects with the nüvi, the phone book is automatically loaded into the nüvi. It can take a few minutes for the phone book to be available. Phone book transfer is not available on all phones.

1. Touch **Phone > Phone Book**.
2. Touch the phone book entry (contact) you want to call.
3. Touch **Call** to call the contact.

Dialing a Point of Interest

1. Touch **Phone > Points of Interest**.
2. Search for the point of interest you want to call.
3. Touch **Call** or touch the phone number.

Dialing a Number

1. Touch **Phone > Dial**.
2. Enter the number, and touch **Dial**.

Viewing Your Call History

Each time your phone connects to the nüvi, your call history is automatically transferred to the nüvi. It can take a few minutes to transfer this data to the nüvi.

1. Touch **Phone > Call History**.
2. Touch a category to view those calls. The calls are listed in chronological order. The most-recent calls are at the top of the list.
3. Touch an entry, and touch **Dial**.

Calling Home

Enter a phone number for your home location so you can quickly call home.

1. Touch **Phone > Call Home**.
2. The nüvi dials your home phone number.

Entering Your Phone Number

1. Touch **Phone > Call Home**.
2. Touch **Enter Phone Number** to use the keypad page or **Select From Phonebook** (only available if your phone supports phone book transfer).
3. Touch **Done > Yes**. The nüvi dials your home phone number.

NOTE: To edit your home location or phone number, touch **Where To? > Favorites > Home > Edit**.

Placing Calls Using Voice Dial

You can place calls by speaking the contact's name. You might need to "train" your phone to recognize your voice dial commands. Refer to your phone instructions.

1. Touch **Phone > Voice Dial**.
2. Speak the contact name.

Checking the Phone Status

Check the battery level and the signal strength for your phone by touching **Phone > Status**.

Finding Friends with Ciao!™

Ciao! periodically sends your location to our partner networks and downloads the most-recent location of your friends. This application only sends your location when you tell it to, unless you enable automatic updates. See www.garmin.com/nulink for more information.

A data connection is required for this feature.

NOTE: Ciao! is not available in all areas or countries.

About Ciao! Networks

Ciao! supports multiple location-based social networks.

When you enable Ciao!, the network or networks you will be registered with appear in the terms of service.

Joining Ciao!

Before you can join Ciao!, you must register your device. See [page 59](#) for information about registering your nüvi.

1. Touch **Tools** > **Ciao!**.
2. Select **I Agree**, and touch **Continue** to accept the privacy agreement.
3. On your computer, go to the URL that appears on the device screen, and read the terms of service for the network or networks shown.
4. Select an option:
 - Touch **Accept** to accept the terms of service and enable Ciao!.
 - Touch **Decline** to decline the terms of service and leave Ciao! disabled.

Inviting a Friend by Phone Number

1. Touch **Tools** > **Ciao!** > **Invite** > **Invite by phone number**.
2. Touch the button below **Select Country** to select the country where your friend is located.
3. Touch **<Change Network>** to select a network with which your friend is registered.
4. Touch the button **<Enter Phone>** and enter a phone number in the proper format for the country you selected.
5. Touch **Done**.
6. Touch **Send Invite**.

Inviting a Friend by E-mail

1. Touch **Tools** > **Ciao!** > **Invite** > **Invite by e-mail address**.
2. Touch **<Change Network>** to select a network with which your friend is registered.
3. Touch **<Enter E-mail>** and enter an e-mail address.
4. Touch **Done**.
5. Touch **Send Invite**.

Viewing an Invitation

When you receive a Ciao! invitation, a pop-up message appears the next time you view the friend list. The pop-up message includes the name of the person who sent the invitation.

1. Touch **Tools** > **Ciao!**.

2. Touch **Accept** or **Defer**. If you accept the invitation, the person who sent the invitation is added to your friend list. If you defer, the person will appear in your friend list, but you will not be able to see his or her location.

Touch **Yes** to allow the friend to view your location.

Touch **Go!** to create a route to the friend, or touch **Map** to view the friend on the map.

Accepting or Declining a Pending Invitation

1. Touch **Tools** > **Ciao!**.
2. In the friend list, touch a friend whose status is “Pending.”
3. Touch **Accept** or **Decline**.

Viewing Friends

1. Touch **Tools** > **Ciao!**. The friend list appears.
2. Touch a friend in the list.
3. Touch **Go!** to create a route to the friend, or touch **Map** to view the friend's location on the map.

Removing a Friend

To stop sharing location information with a friend, you can remove that friend from Ciao!.

1. Touch **Tools** > **Ciao!**.
2. Touch a friend in the list.
3. Touch the information balloon on the map.
4. Touch **Remove**.
5. Touch **Yes**.

Entering Your Status

1. Touch **Tools** > **Ciao!**.
2. Touch your user name in the friend list.
3. Touch the information balloon.
4. Touch **Status**.
5. Enter a status message with up to 255 characters.
6. Touch **Done**.

Touch **Privacy** to read the privacy statement.

Touch **Disable** to disable Ciao! and clear Ciao! data from the nūvi.

Changing Your Visibility

You can choose whether or not to send location updates to your Ciao! friends by changing your visibility in the Ciao! settings.

1. Touch **Tools** > **Settings** > **Ciao!**.
2. Touch the button under **Visibility**.

3. Select an option:
 - Select **Show** to send location updates to your Ciao! friends.
 - Select **Hide** to stop sending location updates to your Ciao! friends.
4. Touch **OK**.

Disabling Ciao!

1. Touch **Tools** > **Settings** > **Ciao!** > **Disable**.
2. Touch **Yes**.

All the Ciao! information stored on your device is removed. You no longer send any position updates.

To enable Ciao!, you must join Ciao! again.

Managing Files

You can store files, such as JPEG image files, in the internal memory on the nüvi or on a memory card.

NOTE: The nüvi is not compatible with Windows® 95, 98, Me, Windows NT®, and Mac® OS 10.3 and earlier.

Supported File Types

- JPEG and JPG image files: see [page 41](#)
- Maps and GPX waypoint files from MapSource®: see [page 55](#)
- GPI custom POI files from Garmin POI Loader: see [page 57](#)

Connecting Your nüvi to Your Computer



When you connect your nüvi to your computer, you will see an option to install myGarmin Agent™, which monitors your computer USB ports and allows you to easily check for available updates. See [page 59](#) for more information.

1. Insert a memory card (optional). Press it in until it clicks.
2. Connect the mini-USB connector to the back of the nüvi.
3. Connect the larger end of the cable to an available USB port on your computer.

Your nüvi and memory card appear as removable drives in My Computer in Windows and as mounted volumes on Mac computers.

NOTE: Some computers with multiple network drives may not display the nüvi drives. See your operating system Help file to learn how to map the drives.

Transferring Files

1. Browse your computer for the file you want to copy.
2. Highlight the file, and select **Edit > Copy**.
3. Open the “Garmin” or memory card drive/volume.
4. Select **Edit > Paste Item**. The file appears in the list of files in the nüvi memory or on the memory card.
5. When you are finished transferring files, click  in your toolbar (system tray), or drag the volume icon to the **Trash**  on Mac computers.
6. Unplug your nüvi from your computer.

Deleting Files

1. Connect the nüvi to your computer, and open the nüvi or memory card drive/volume.
2. Highlight the file you want to delete.
3. Press the **Delete** key on the computer keyboard.



NOTICE: If you do not know the purpose of a file, do not delete it. Your nüvi memory contains important system files that should not be deleted.

Using the Tools

The Tools menu provides many features that are helpful when you are traveling.

From the Main menu, touch **Tools**.

Accessing the Settings

For information about the settings, see [pages 45–50](#).

Using the Where Am I? Page

Use the Where Am I? page to view current location information, including hospitals, police stations, and fuel. This feature is helpful if you need to tell emergency personnel your location.

1. From the Main menu, touch **Tools** > **Where Am I?**.

2. Touch a button on the right to view the nearest locations in that category.
3. Touch **Save Location** to save your current location.

Accessing Help

Touch **Help** to get information about using your nüvi.

Touch **Search** to search help topics for a keyword.

Using ecoRoute™

Touch **Tools** > **ecoRoute**.

The ecoRoute feature calculates your vehicle fuel economy, carbon footprint, and the fuel price of navigating to a destination, and offers tools for improving fuel efficiency.

The data provided by the ecoRoute features are estimates only. The data is not actually read from your vehicle. To receive more-accurate fuel reports for your specific vehicle and driving habits, calibrate the fuel economy.

The first time you access the ecoRoute features you will be asked to enter fuel and mileage information about your vehicle.

Viewing the Fuel Report

If you have entered your vehicle profile and the current fuel price, your nüvi calculates the average fuel economy for your vehicle, your carbon footprint, and the cost of the fuel consumed.



The fuel consumption data is based on estimates for speed and acceleration for an average vehicle.

Touch **Tools** > **ecoRoute** > **Fuel Report**.

TIP: To ensure that fuel data is always recorded, keep your nüvi turned on while driving.

Calibrating the Fuel Economy

Calibrate the fuel economy to receive more-accurate fuel reports for your specific vehicle and driving habits. Calibrate when you fill up your fuel tank.

1. Calculate your miles per gallon or liters per 100 kilometers.
2. Touch **Tools** > **ecoRoute** > **Fuel Report** > **Calibrate**.
3. Touch  and  to enter the result from step 1.
4. Touch **OK**.

Adjusting the Fuel Price

Enter fuel price information to calculate the fuel cost of routes and to calculate the fuel reports.

1. Touch **Tools** > **ecoRoute** > **Fuel Price**.
2. Enter the current fuel price, and touch **Done**.


Taking the Driving Challenge

The Driving Challenge tool helps you maximize your fuel economy by scoring your driving habits.

The higher your overall score for a Driving Challenge, the more fuel you could save.

Touch **Tools** > **ecoRoute** > **Driving Challenge** > **Start**.

Understanding Your Driving Challenge Score

Touch  on the Map page to view details about your current challenge. The leaf color on the driving challenge icon changes depending on your performance in the challenge.

Your overall score is the average of three scores:

Acceleration score—gain points for gradual acceleration; lose points for rapid acceleration.

Deceleration score—gain points for gradual braking; lose points for hard braking.

Speed score—gain points for driving at the best speed for conserving fuel, which is 45–60 mph for most vehicles.

Stopping the Driving Challenge

1. From the Map page, touch .
2. Touch **Stop > Yes**.

Adjusting Your Vehicle Profile

Touch **Tools > ecoRoute > Vehicle Profile**.

Fuel Type—select a fuel type.

City Fuel Efficiency—enter the average city fuel efficiency for your vehicle.

Hwy Fuel Efficiency—enter the average highway fuel efficiency for your vehicle.

TIP: For best results, calibrate your fuel economy instead of adjusting the city and highway fuel efficiency here. See [page 37](#).

Viewing the Mileage Report

Mileage reports provide the distance, the time, the average fuel economy, and the fuel cost of navigating to a destination.

A mileage report is created for every route that you drive. If you stop a route on your nüvi, a mileage report is created for the distance you traveled.

1. Touch **Tools > ecoRoute > Mileage Report**.
2. Select a report.

You can view up to 20 mileage reports on your nüvi. You can also access mileage reports in the Reports folder on your nüvi drive/volume.

Viewing Driving Tips

Your nüvi provides driving tips to help you save fuel.

Touch **Tools** > **ecoRoute** > **Tips**.

Resetting ecoRoute Data

1. Touch **Tools** > **ecoRoute**.
2. Select the category you want to reset, and touch **Reset**.

Viewing myGarmin™ messages

Garmin nüLink! services allow you to receive messages from myGarmin. See [page 22](#).

NOTE: nüLink! services are not available in all areas or countries.

1. Touch **Tools** > **myGarmin**.
2. Touch a message to view the whole message.

Viewing Flight Information

Flight status information is a nüLink! service. See [page 22](#).

NOTE: You may not be able to receive current data when you are in a remote location.

NOTE: nüLink! services are not available in all areas or countries.

1. Touch **Tools** > **Flight Status**.
2. Select a nearby airport.
3. Select an option to find a flight:
 - **Check Flight Number:** Enter a flight number, and touch **Done**.
 - **Search Departures:** Touch **By Destination City**, **By Airport Code**, or **All Departures**, and enter the appropriate data.
 - **Search Arrivals:** Touch an airline.


4. Touch a flight.
5. If your flight has multiple connections, touch **Next Leg** to check the next flight.

Viewing Weather Information

Weather information is a nüLink! service. See [page 22](#).

NOTE: You may not be able to receive current data when you are in a remote area.

NOTE: nüLink! services are not available in all areas or countries.


1. Touch **Tools > Weather**.
2. Select an option to view weather.
 - Touch  and  to view weather in other selected areas.
 - Touch **Forecast** to view a six-day forecast for the displayed location.


- Touch the screen to bring up a keyboard and search for weather information in another location (not available for the current location weather.)

TIP: You can also view the weather by touching the current temperature icon in the status bar at the top of the Main menu.

Using the Picture Viewer

Use the picture viewer to view pictures that you have stored in your nüvi or on a memory card.

1. Touch **Tools > Picture Viewer**.
Touch the arrows to scroll through the images.
2. Use the scroll bar at the bottom of the screen to change how many pictures appear on the screen.
3. Touch a picture to view a larger image of it.
 - Touch  to view information on the selected picture.


- Touch the picture and drag to view different parts of the pictures.
- Touch  to hide the menu bar.

Viewing a Slide Show

1. Touch **Tools > Picture Viewer** > . Each picture appears for a few moments.
2. Touch anywhere on the screen to stop the slide show.

Navigating to a Picture

If a picture contains location information, you can create a route to it.

1. Touch **Tools > Picture Viewer**.
2. Select a picture.
3. Touch  > **Go!**.

See [page 34](#) for more information about loading pictures on your nüvi.

Using the Unit Converter

1. Touch **Tools > Unit Converter**.
2. Touch **Conversion**, select a type of measurement, and touch **OK**.
3. Touch a unit of measure that you want to change.
4. Select a unit of measure, and touch **OK**. Repeat if necessary.
5. Touch the box next to the unit of measure to enter a value.
6. Enter a value, and touch **Done**. The unit is converted.
7. Touch **Clear** to perform another conversion.


Using the Currency Converter

Currency conversion rates are automatically updated through your nüLink! service.

NOTE: Garmin nüLink! services are not available in all areas or countries.



1. Touch **Tools** > **Currency**.
2. Select the currency you want to change from and touch **OK**.
3. Select the currency you want to change to and touch **OK**.
4. Touch the box next to a currency to enter a value and touch **Done**.
5. Touch **Clear** to perform another conversion.

Using the World Clock

1. Touch **Tools** > **World Clock**.
2. To change a listed city, touch one of the cities.
3. Enter a city name, and touch **Done**.
4. Select the correct city, if necessary.
5. Touch **World Map** to view a map. Nighttime hours are shown in the shaded area.
6. Touch  to view the clocks again.

Creating Routes

Use your nüvi to create and save routes before your next trip.

1. Touch **Where To?** (or **Tools**) > **Routes** > **New**.
2. Touch **Add New Start Point**.
3. Find a location for your starting point, and touch **Select**.
4. Touch **Add New End Point**.
5. Find a location for your ending point, and touch **Select**.
6. Touch  to add another location to your route. Touch  to remove a location.
7. Touch **Next** to calculate your route and view it on the map.
8. Touch **Save** to save the route and exit.

Editing Routes

1. Touch **Where To?** (or **Tools**) > **Routes**.
2. Select the route you want to edit.
3. Touch **Edit**.
4. Touch an option to edit the route.

Using the Calculator

Touch **Tools** > **Calculator** to activate the calculator.

Accessing My Data

Use this tool to manage and delete your saved data, such as your Favorites.

1. Touch **Tools** > **My Data**.
2. Select an option:
 - **Set Home Location**
 - **Delete Favorite(s)**
 - **Clear Trip Log**
 - **Remove Ciao™ Friends**

Viewing Offers

You can receive location-relevant advertisements and coupons through your nüLink! services.

When an offer appears on the screen, touch the offer to search for the nearest location related to that offer. If the offer includes a coupon icon, touch the coupon icon on the Go! page to receive a coupon code. Write down this code and present it when you arrive at the location.



CAUTION: Do not attempt to write down the coupon codes while driving.

To view a list of the offers you have received, touch **Tools** > **Offers**.

Disabling Offers

1. Touch **Tools** > **Settings** > **Security**.
2. Touch the button below **Position Reporting** and touch **Off**.

Customizing the nüvi

1. Touch **Tools > Settings**.



2. Touch the setting you want to change.
3. Touch the button under the setting name to change it.

Changing the System Settings

Touch **Tools > Settings > System**.

GPS Simulator—turn on the simulator to turn off the GPS mode and simulate navigation, and to save battery power.

Usage Mode—to optimize routes, specify how you will be navigating: **Automobile**, **Pedestrian**, or **Bicycle**.

Units—change units of measure to **Kilometers** or **Miles**.

Keyboard—touch **QWERTY** for a layout similar to a computer keyboard, or touch **ABCDE** for an alphabetical layout.

About—display the nüvi software version number, the unit ID number, and information on several other software features. You need this information when you update the system software or purchase additional map data (see [page 56](#)).

Restore—restore the system settings.

Changing the Navigation Settings

Touch **Tools** > **Settings** > **Navigation**.

Route Preference—select a preference for calculating your route:

- **Faster Time**—to calculate routes that are faster to drive but can be longer in distance.
- **Shorter Distance**—to calculate routes that are shorter in distance but can take more time to drive.
- **Off Road**—to calculate point-to-point routes (without roads).
- **Less Fuel**—to calculate routes that could use less fuel than other routes. The route calculation is based on road speeds and vehicle acceleration data for a given route.

Avoidances—select the road types you want to avoid on your routes.

Transit Types—select which mode of public transit you would like your nüvi to avoid when calculating routes. Transit Types is available when cityXplorer maps are loaded.


Restore—restore the original navigation settings.

NOTE: When you change usage modes, the route preference for the usage mode you are changing from will be saved.

Adjusting the Display Settings

Touch **Tools** > **Settings** > **Display**.

Color Mode—select **Day** for a light background, **Night** for a dark background, or **Auto** to automatically switch between the two.

Screen Shot—turn on Screen Shot mode. Touch  to take a screen shot. The picture bitmap file is saved in the **screenshots** folder on the nüvi drive.

Brightness—adjust the backlight brightness level. Reducing the backlight brightness increases your battery life.

Restore—restore the original display settings.

Updating the Time Settings

Touch **Tools** > **Settings** > **Time**.

Select Time Format—select a 12-hour, 24-hour, or UTC time format.

Current Time—manually set the time on your nüvi. Select **Automatic** to have the nüvi set the time based on your location.

Restore—restore the original time settings.

Setting the Languages

Touch **Tools** > **Settings** > **Language**.

Voice Language—change the language for voice prompts.

Text Language—change all on-screen text to the selected language. Changing the text language does not change the language of user-entered data or map data, such as street names.

Keyboard—select the keyboard for your language. Touch **Mode** on any keyboard to temporarily change the keyboard language.

Restore—restore the original language settings.

Changing the Map Settings

Touch **Tools** > **Settings** > **Map**.

Map Detail—adjust the amount of detail shown on the map. Showing more detail can cause the map to redraw slower.

Map View—select a map perspective.

- **Track Up**—display the map in two dimensions (2D) with your direction of travel at the top.
- **North Up**—display the map in 2D with North at the top.
- **3D**—display the map in three dimensions (3D) in Track Up.

Vehicle—touch **Change** to change the icon used to display your position on the map. Touch the icon you want to use, and then touch **OK**.

Download additional vehicle icons at www.garmin.com.

NOTE: In Pedestrian usage mode, **North Up** is the only map view used.

Trip Log—show or hide the log of your travels. To clear the trip log, touch **Tools** > **My Data** > **Clear Trip Log**.

Info—view the maps and the version of each map loaded on your nüvi. Touch a map to enable (check mark) or disable (no check mark) that map.

Map Data Layout—change the number of data fields that appear on the Map page.

Restore—restore the original map settings.

Changing Security Settings

Touch **Tools** > **Settings** > **Security**.

Garmin Lock—turn on Garmin Lock™ to lock your nüvi. Enter a 4-digit PIN, and set a security location. For more information, see [page 53](#).

Safe Mode—turn safe mode on or off. When your vehicle is moving, Safe mode disables all functions that require significant operator attention and could become a distraction while driving.

Position Reporting—turn on to enable your nüvi to receive traffic information.


Restore—restore the original security settings. Note that restoring the security settings will not clear your Garmin Lock PIN or security location.

Setting the Bluetooth Technology Options

Touch **Tools** > **Settings** > **Bluetooth**.

Phone—touch **Add** > **OK** to pair with a phone that has Bluetooth wireless technology. See [pages 25–29](#). Touch **Change** to connect with a different phone.

- **Drop**—select the phone you want to disconnect, and touch **Yes**.
- **Remove**—select the phone you want to delete from the nüvi memory, and touch **Yes**.

Bluetooth—turn the Bluetooth component on and off. The  **Bluetooth** icon appears on the Main menu if the Bluetooth component is turned on. To prevent a phone from automatically connecting, touch **Disabled**.

Friendly Name—enter a friendly name that identifies your nüvi on devices with Bluetooth technology. Touch **Done**.

Restore—restore the original Bluetooth settings. This does not clear the pairing information.

Changing the Proximity Points Settings

You must have proximity points (such as custom POIs or a safety camera database) loaded to adjust the proximity points settings. See [page 57](#). Touch **Tools** > **Settings** > **Proximity Points**.

Proximity Alerts—turn the alerts on or off when you approach custom POIs or safety cameras.

Restore—restore the proximity points settings.

Restoring All Settings

1. Touch **Tools** > **Settings**.
2. Touch **Restore**.
3. Touch **Yes**.

Appendix

Caring for Your nüvi

Your nüvi contains sensitive electronic components that can be permanently damaged if exposed to excessive shock or vibration. To minimize the risk of damage to your nüvi, avoid dropping your unit and operating it in high-shock and high-vibration environments.

Cleaning the Unit

The nüvi is constructed of high-quality materials and does not require user maintenance other than cleaning. Clean the outer casing of the unit (not the touchscreen) using a cloth dampened with a mild detergent solution, and then wipe it dry. Avoid chemical cleaners and solvents that can damage plastic components.

Cleaning the Touchscreen

Clean the touchscreen with a soft, clean, lint-free cloth. Use water, isopropyl alcohol, or eyeglass cleaner, if needed. Apply the liquid to the cloth, and then gently wipe the touchscreen.

Protecting Your nüvi

- Do not store the nüvi where prolonged exposure to extreme temperatures can occur, because it can cause permanent damage.
- Do not expose the nüvi to water. Contact with water can cause this unit to malfunction.
- Although a PDA stylus can be used to operate the touchscreen, never attempt this while operating a vehicle. Never use a hard or sharp object to operate the touchscreen because damage might result.

Avoiding Theft

- To avoid theft, remove the unit and mount from sight when not in use. Remove the residue left on the windshield by the suction cup.
- Do not keep your unit in the glove compartment.
- Register your product at <http://my.garmin.com>.
- Use the Garmin Lock feature. See below for more information.

Locking Your nüvi

Garmin Lock is a theft-deterrent system that locks your nüvi. Each time you turn on the nüvi, enter the PIN or drive to the security location.

1. Touch **Tools** > **Settings** > **Security**.
2. Touch the button below **Garmin Lock**.
3. Enter a 4-digit PIN and drive to a security location.

NOTE: If you forget your PIN and your security location, you must send your nüvi to Garmin to get it unlocked. You must also send a valid product registration or proof of purchase.

What is a Security Location?

Your security location should be a location you return to often, such as your home. If the nüvi has satellite signals and you are at the security location, you do not need to enter the PIN.

Calibrating the Screen

If the touchscreen is not responding properly, calibrate the touchscreen.

1. Turn off the nüvi.
2. Turn the nüvi back on and touch the upper-left corner for about 30 seconds until the calibration screen appears (white screen with "Press dot").

Updating the Software

1. Connect the nüvi to your computer using the mini-USB cable. The AutoPlay menu appears.
2. Double-click on **▲ Install myGarmin Agent** to open the myGarmin Agent download page.
3. Follow the on-screen instructions.

NOTE: If the AutoPlay menu does not open, or you are on a Mac computer, go to www.garmin.com/agent.

After you have installed myGarmin Agent, you will be prompted to open myDashboard when you connect your nüvi to your computer. myDashboard checks your nüvi for current software and provides additional information about your nüvi.

Clearing User Data




NOTICE: This deletes all user-entered information.

1. Hold your finger on the lower-right corner of the nüvi screen while turning on the nüvi.
2. Keep your finger pressed until a message appears.
3. Touch **Yes** to clear all user data.

All original settings are restored. Any items that you have saved are erased.

Battery Information

To maximize the lifetime of the battery, do not leave your nüvi in direct sunlight, and avoid prolonged exposure to excessive heat.

The  battery icon in the corner of the Main menu indicates the status of the nüvi battery. To increase the accuracy of the battery gauge, fully discharge the battery and then fully charge it. Do not unplug the nüvi until it is totally charged.

Removing the nüvi and Mount

To remove the nüvi from the cradle, press the tab of the cradle while tilting the nüvi forward.

To remove the cradle from the mount, turn the cradle to the right or left. Apply pressure in that direction until the cradle snaps off the mount.

To remove the suction cup mount from the windshield, flip the lever toward you. Pull the tab on the suction cup toward you.

Mounting on Your Dashboard

Use the enclosed mounting disk to mount your unit to the dashboard and comply with certain state regulations.



NOTICE: The permanent mounting adhesive is extremely difficult to remove after it is installed.

1. Clean and dry the dashboard where you are placing the disk.
2. Remove the backing from the adhesive on the bottom of the disk.
3. Place the disk on the dashboard.
4. Remove the clear plastic cover from the top of the disk.
5. Place the suction cup mount on top of the disk. Flip the lever down (toward the disk).

nüMaps Guarantee™

To receive one free map update (if available), register your nüvi at <http://my.garmin.com> within 60 days of acquiring satellites while driving with your nüvi. You are not eligible for the free map update if you register by phone or wait longer than 60 days after the first time you acquire satellites while driving with your nüvi.

nüMaps Lifetime™

For a one-time payment, you can receive up to four map updates each year for the life of your nüvi. For more information, go to www.garmin.com, and click on **Maps**.

Additional Maps


You can purchase maps of other areas for your nüvi. To see a list of maps that are compatible with your nüvi, log into your myGarmin account (www.mygarmin.com) and click the **myMaps** tab.

About GPS Satellite Signals

Your nüvi must acquire GPS (Global Positioning System) satellite signals in order to navigate. If you are indoors, near tall buildings or trees, or in a parking garage, your nüvi may not acquire satellites. Go outside to an area free from tall obstructions to use your nüvi.

When your nüvi has acquired satellite signals, the signal strength bars on the Main menu are green



When it loses satellite signals, the bars turn red or clear .

For more information about GPS, go to www.garmin.com/aboutGPS.

Extras and Optional Accessories

For more information about optional accessories, go to <http://buy.garmin.com> or www.garmin.com/extras, or contact your Garmin dealer.

Using Custom Points of Interest

Use the POI Loader to load custom points of interest (POIs) onto your nüvi. POI databases are available from various companies on the Internet. Some custom databases contain alert information for points, such as safety cameras and school zones.

Go to www.garmin.com/extras, and click POI Loader to install the POI Loader onto your computer. For more information, refer to the POI Loader Help file. Press **F1** to open the Help file.

To view your Custom POIs, touch **Where To? > Extras > Custom POIs**.

To change the proximity alert settings, touch **Tools > Settings > Proximity Points > Proximity Alerts**.

To delete the Custom POIs from your nüvi, connect your nüvi to your computer. Open the POI folder in the nüvi drive or the memory card drive. Delete the file named poi.gpi.

Using Safety Cameras

Safety camera information is available in some locations. Check <http://my.garmin.com> for availability. For these locations, the nüvi includes the locations of hundreds of safety cameras. Your nüvi alerts you when you are approaching a safety camera and can warn you if you are driving too fast. The data is updated at least weekly, so you always have access to the most up-to-date information.

You can purchase a new region or extend an existing subscription at any time. Each region that you purchase has an expiration date.

To turn safety cameras off, touch **Tools > Settings > Proximity Points**.

NOTE: Safety camera information is not available in all areas.



NOTICE: Garmin is not responsible for the accuracy of, or the consequences of using, a custom POI or safety camera database.

Safety Camera Availability

Safety camera information is not available in Switzerland. Safety camera information is disabled by default in Germany and Austria.

Use of the safety camera database may be a misdemeanor in certain European countries. Prior to using or enabling the safety camera database, please inquire about the legal situation and possible legal consequences of using this database

in the countries in which you intend to use it.

Garmin International and its affiliates accept no liability for the use of this safety camera database. Garmin International and its affiliates do not warrant or guarantee in any way as to the accuracy or exhaustiveness of the safety camera database.

Garmin Travel Guide

The Garmin Travel Guide provides detailed information about places, such as restaurants and hotels. To purchase an accessory, go to <http://buy.garmin.com> or contact your Garmin dealer.

To use the travel guide, insert the memory card into your nüvi. Touch **Where To? > Extras**. Touch the name of your travel guide to open it.

Contacting Garmin

Contact Garmin Product Support if you have questions. In the USA, go to www.garmin.com/support, or contact Garmin USA by phone at (913) 397-8200 or (800) 800-1020.

In the UK, contact Garmin (Europe) Ltd. by phone at 0808 2380000.

In Europe, go to www.garmin.com/support and click **Contact Support** for in-country support information, or contact Garmin (Europe) Ltd. by phone at +44 (0) 870.8501241.

Registering Your nüvi

Go to <http://my.garmin.com> to access the latest services for your Garmin products. From the myGarmin Web site, you can register your Garmin device, download the latest map updates, and subscribe to online services.

See [page 34](#) for information about connecting your nüvi to your computer.

Radio Frequency Exposure

To comply with FCC RF exposure compliance requirements, the device should be used in its automobile mount or as a handheld device only. The device should not be used in other configurations.

Specifications

Physical size (W × H × D): 4.9 × 3.1 × 0.75 in. (12.5 × 7.9 × 1.9 cm)

Weight: 6.2 oz. (176 g)

Display: 4.3 in. diagonal, 480 × 272 pixels; 64K colors; bright QVGA TFT landscape display; white backlight; touchscreen

Case: Not waterproof (IPX0)

Operating temperature range:
32°F–140°F (0°C–60°C)

Charging temperature range:
32°F–113°F (0°C–45°C)

Data storage: Internal memory and optional removable microSD card. Data stored indefinitely.

Computer interface: USB 2.0 full speed mass storage

Operating system: Garmin

Charge time: Up to 4 hours

Power input: Vehicle power using included vehicle power cable or AC power using an optional accessory

Usage: 5 W max.

Battery life: Up to 3 hours

Battery type: Non-user-replaceable, rechargeable lithium-ion battery

GPS receiver: High-sensitivity with HotFix™

Acquisition times*:

Warm: <1 second

Cold: <38 second

Factory Reset: <45 second

*Average acquisition times for a stationary receiver with a clear view of the sky.

Troubleshooting

Problem/Question	Solution/Answer
My nüvi never gets satellite signals.	<p>Ensure that the GPS simulator is turned off. From the Home screen, touch Settings > System > General > GPS Simulator > Off.</p> <p>Take your nüvi out of parking garages and away from tall buildings and trees. Remain stationary for several minutes.</p>
The suction cup will not stay on my windshield.	<p>Clean the suction cup and windshield with rubbing alcohol. Dry it with a clean, dry cloth. Mount the suction cup as described on page 2.</p>
My nüvi does not charge in my vehicle.	<p>Ensure that the vehicle is turned on and is supplying power to the power outlet.</p> <p>Your nüvi can only charge between 32°F and 113°F (between 0°C and 45°C). If the nüvi is placed in direct sunlight or in a hot environment, it cannot charge.</p>
My battery does not stay charged for very long.	<p>To maximize the time between charges, turn down the backlight. Touch Tools > Settings > Display > Brightness.</p>

Problem/Question	Solution/Answer
How do I clear all of my user data?	Hold your finger on the lower-right corner of the nüvi screen while it is turning on. Keep your finger pressed until the message appears. Touch Yes to clear all user data.
My battery gauge does not seem accurate.	Allow the unit to fully discharge, and fully charge it (without interrupting the charge cycle).
The touchscreen is not responding to my touches.	Calibrate the touchscreen as described on page 53 .
How do I know my nüvi is in USB mass storage mode?	When your nüvi is in USB mass storage mode, a picture of a nüvi connected to a computer is shown. Also, you should see two new removable disk drives listed in My Computer .
My computer never senses that the nüvi is connected.	<ol style="list-style-type: none"><li data-bbox="368 658 918 689">1. Unplug the USB cable from your computer.<li data-bbox="368 693 918 724">2. Turn off the nüvi.<li data-bbox="368 727 918 841">3. Plug the USB cable into a USB port on your computer and into your nüvi. The nüvi automatically turns on and goes into USB mass storage mode.

Problem/Question	Solution/Answer
I cannot see any new removable drives in my list of drives.	If you have several network drives mapped on your computer, Windows can have trouble assigning drive letters to your nüvi drives. See your operating system Help file to learn how to map or assign drive letters. Ensure that your nüvi is connected to a USB port and not to a USB hub.
How can I find restaurants near the hotel I will be staying at in the future?	Save the hotel in your Favorites. See page 11 for more information on Favorites. You can then search near the hotel for restaurants. <ol style="list-style-type: none"><li data-bbox="370 453 676 479">1. Touch Where To? > Near.<li data-bbox="370 484 728 510">2. Select A Favorite Destination.<li data-bbox="370 515 614 541">3. Select a destination.<li data-bbox="370 547 868 572">4. Touch Points of Interest > Food and Drink.<li data-bbox="370 578 831 629">5. Select a category. Your nüvi searches for locations near the hotel.<li data-bbox="370 635 603 660">6. Select a restaurant.
My phone will not connect to the nüvi.	Touch Tools > Settings > Bluetooth . Verify that the Bluetooth field is set to Enabled . Ensure your phone is turned on and is less than 33 feet (about 10 meters) away from your nüvi. See www.garmin.com/bluetooth for more help.

Index

Symbols

2-D, 3-D map view 48

A

acceleration score 38

accessories 56

additional maps 56

address

white pages 7

alarm clock 58

alerts

safety camera 57

anti-theft feature 49, 52

audio version 45

avoiding

road types 46

theft 52

B

background color 46

battery 54, 61

bicycle navigation 45

Bluetooth technology

25–29

calling from Go!

page 9

deleting a phone 49

pairing with phone

25

settings 49

brightness 47

browsing the map 14

C

calculator 44

call

answering 26

call waiting 27

hanging up 27

history 28

home 29

muting 27

caring for your nüvi 51

charging your nüvi 3, 61

Ciao! 30–34

accept invite 31

decline invite 32

hide location 33

invite by e-mail

address 31

invite by phone

number 31

join 30

remove a friend 32

status 33

view friends 32

city maps 4, 10

converting

currency 42

units 42

coordinates 14

currency converter 42

current location, save 11

customizing the nüvi

45–51

custom POIs 57

D

dashboard disk 55
deceleration score 38
deleting
 character 8
 custom POIs 57
 recent finds list 9
detail maps 48
detour 6
diacritical characters 8
display settings 46
Driving Challenge 38
driving directions 16

E

ecoRoute 36–39
 calibrate fuel
 economy 37
 Driving Challenge 38
 fuel report 37
 mileage report 39
 tips 40
 vehicle profile 36
extras 56–57

F

Favorites 11, 12
files 34–35
 deleting 35
 supported types 34
finding places 5
 by address 7
 by coordinates 14
 by name 11, 23
 by postal code 7
 near another location
 9
 recent selections 9
 saved places
 (Favorites) 12
 using photos 12–13
fuel prices 24
fuel report 37

G

Garmin Lock 49, 52
Garmin Travel Guide 58
gas prices 24
geocaching 14
Go! page options 9

go home 7

GPS

about GPS 56
off/on 45

H

Help 36
home
 phone number 29
 setting a location 7

I

incoming call 26
Internet. *See* nüLink!
 services
itinerary page 10

J

JPEG image files 34
Junction View 17

K

keyboard 8
 language mode 8, 47
 layout 45
kilometers 45

L

- language settings 47
- latitude 14
- lithium-ion battery 54,
60
- local events 24
- Local Search
 - browse categories 22
 - by name 23
- lock
 - the nüvi 52
 - the screen 5
- longitude 14

M

- map
 - adding 56
 - browsing 13
 - detail level 48
 - pedestrian 18
 - settings 48
 - viewing 48
 - zooming 14
- MapSource 34, 56
- max speed, reset 16

- measurements,
 - converting 42
- mileage report 39
- miles 45
- mounting
 - on dashboard 55
 - on windshield 61
 - removing from mount 54
- movie times 24
- mute
 - audio 5
 - phone call 27
- My Data 44
- myGarmin messages 40

N

- navigation
 - mode 45
 - settings 46
- next turn 17

- nüLink! services 22
 - Ciao! 30
 - currency converter 42
 - Flight Status 40
 - fuel prices 24
 - local events 24
 - Local Search 22, 23
 - movie times 24
 - myGarmin 40
 - weather 41
 - white pages 23
 - nüMaps Guarantee 55
 - nüvi
 - charging 3
 - cleaning 51
 - mounting 55
 - protecting 51
 - resetting 5
- O**
- off road, routing 4, 46
 - on-screen keyboard 8
 - output, audio 5

P

- pairing a mobile phone
 - 25
- pedestrian navigation
 - mode 45
 - itinerary 10
 - route options 10
- phone book 28
- photo navigation
 - loading pictures 12
- photos 12
- PIN
 - Bluetooth 26
 - Garmin Lock 52
- points of interest 11
 - custom 57
 - POI loader 34
- position icon 48
- power button 5
- proximity points
 - alerts 50
 - settings 50
- public transit
 - city maps 4, 10

Q

- QWERTY keyboard 45

R

- recalculating routes 6
- recently found locations
 - 9
- registering 52
- removing the mount 54
- resetting
 - the max speed 16
 - trip data 16
 - your nüvi 5
- routes
 - custom 43–44
 - editing 44
 - mode 45
 - off road 46
 - preferences 46
 - simulating 45
 - stopping 6

S

- safe mode 49
- safety camera database
 - 57

- satellite signals 56
- saving
 - places you find 11
 - your current location
 - 11, 14
- school zone database 57
- screen
 - brightness 47
 - screen shots 47
- search area 9
- security
 - location 53
 - settings 49
- send to GPS 13
- settings 45–50
 - restoring 50
- setting your location 14
- simulating a route 45
- software
 - updating 53
 - version 45
- specifications 60
- speed score 38
- storing the nüvi 51
- supported file types 34

system settings 45

T

text language 47

time settings 47

time zone 47

tools 36–41

touchscreen

 calibrating 53, 62

 cleaning 51

 settings 47

Track Up 48

traffic 19–20

 incidents 19

transferring files 35

trip computer 16

trip log 48

turn-by-turn directions 16

turn list 16

U

unit converter 42

unit ID 45

upcoming events 24

updating

 maps 56

 software 53

usage mode 4, 45

USB mass-storage mode

 34, 62

user data, delete 54

V

vehicle icon 48

vehicle profile 39

voice dial 29

voice language 47

voice mail 27

W

walking route 45

Where Am I? 36

Where To? 7–14

world clock 43

Z

zoom 14

For the latest free software updates (excluding map data) throughout the life of your Garmin products, visit the Garmin Web site at www.garmin.com.



© 2009–2010 Garmin Ltd. or its subsidiaries

Garmin International, Inc.
1200 East 151st Street, Olathe, Kansas 66062, USA

Garmin (Europe) Ltd.
Liberty House, Hounslow Business Park, Southampton, Hampshire, SO40 9LR UK

Garmin Corporation
No. 68, Jangshu 2nd Road, Sijhih, Taipei County, Taiwan

www.garmin.com