



zūmo[®] 665

quick start manual



Your zūmo



WARNING

 
See the *Important Safety and Product Information* guide in the product box for product warnings and other important information.



Power button:

Press and hold to turn the zūmo on/off.

Press quickly to adjust the volume and the backlight brightness.

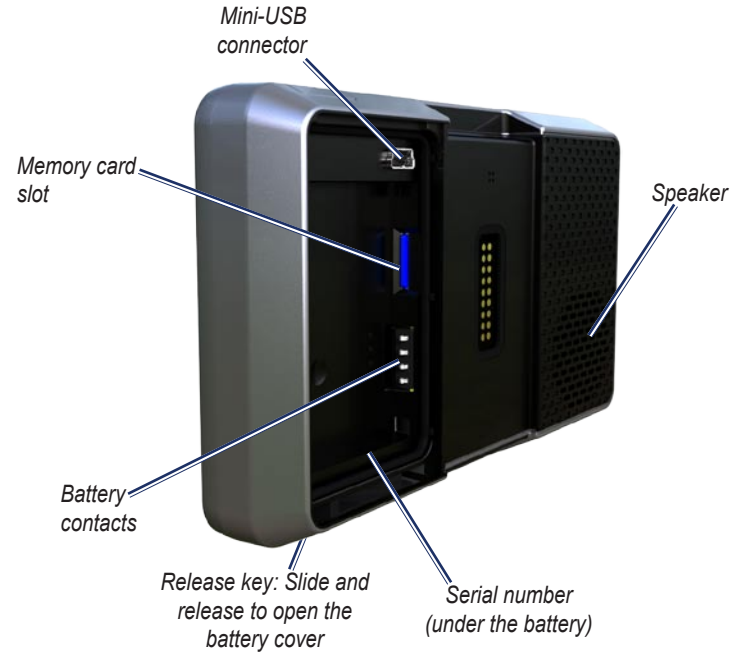

NOTE: See the *zūmo 665 Installation Instructions* in the product box for motorcycle and automobile mounting instructions.

Installing the Battery

⚠ WARNING

This product contains a lithium-ion battery. To prevent damage or personal injury, remove the unit from the vehicle when exiting or store it out of direct sunlight.

1. Locate the lithium-ion battery that came in the product box.
2. Slide the release key until the battery cover on the back of the zūmo pops up.
3. Locate the metal contacts on the end of the lithium-ion battery.
4. Insert the battery so that the metal contacts on the battery match with the metal contacts inside the battery compartment.
5. Replace battery cover.



zūmo 665 Quick Start Manual


Ways to Charge Your zūmo Battery

NOTICE

Always keep the battery installed when the zūmo is on.


- Use the automotive power cable.
- Use the USB cable.
- Use an optional AC adapter cable.
- Use an optional battery charger

Configuring Your zūmo

To turn on your zūmo, press the  Power button. Follow the on-screen instructions.

Acquiring Satellites

1. Go outdoors to an open area, out of garages, and away from tall buildings.
2. Stop your vehicle, and turn on the zūmo.

Acquiring satellite signals may take a few minutes. The  bars indicate GPS satellite strength. When one bar is green, the zūmo has acquired satellite signals. Now you can select a destination and navigate to it.

Using the Menu Page



- 1 GPS satellite strength.
- 2 Bluetooth® technology status.
- 3 Touch to select motorcycle, scooter, automobile, off road, pedestrian mode.
- 4 Battery status.
- 5 Current time. Touch to change settings.
- 6 Touch to find a destination.
- 7 Touch to view the map.
- 8 Touch to make a call when connected to a [compatible mobile phone](#).
- 9 Touch to adjust the volume.
- 10 Touch to use the tools such as settings, Where Am I?, Help, and routes.

Finding Points of Interest

1. Touch **Where To?** > **Points of Interest**.
2. Select a category and a subcategory.
3. Select a destination, and touch **Go!**.

To enter letters contained in the name, touch **Where To?** > **Points of Interest** > **Spell Name**.

To search for a location in a different area, touch **Where To?** > **Near**.

Adding a Stop

1. With a route active, touch **Menu** > **Where To?**.
2. Search for the extra stop.
3. Touch **Go!**.
4. Touch **Add as a Via Point** to add this stop before your destination.

TIP: To add more than one stop, edit the current route. Touch **Where To?** > **Custom Routes**.

 
Following Your Route

Your route is marked with a magenta line. As you travel, your zūmo guides you to your destination with voice prompts, arrows on the map, and directions at the top of the map.

If you depart from the route, the zūmo recalculates the route and provides new directions.



- 1 Touch to view the Next Turn page or the Lane Assist page (if available).

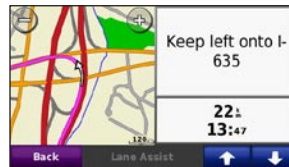


- 2 Touch to view the Turn List page.



- 3 Touch to zoom in and out.
- 4 Touch to view the Trip Computer page.



 - 5 Touch to view the Where Am I? page.

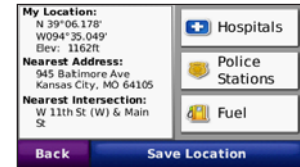

- 6 Touch to return to the Menu page.

Receiving XM® Satellite Signals

Because your zūmo came with a GXM 40 antenna, you can receive XM satellite signals. Some features, such as XM NavTraffic™, XM NavWeather™, and XM Radio, require XM satellite signals.

A subscription to XM services is required to access XM NavTraffic, XM NavWeather, and XM Radio features. For more information on XM subscriptions, go to www.garmin.com/xm.




NOTE: XM service is only available in North America and may not be available in all areas.

Subscribing to XM Radio

1. With the GXM 40 antenna connected to your zūmo, touch **Tools** > **Settings** > **XM Subscriptions** > **Subscribe**.
2. Follow the subscription instructions, and then touch **Next**.

3. Verify your XM subscription information, and then touch **Next**.
4. Touch **Power Off XM** to save your XM subscriptions.

Listening to XM Radio

1. With the GXM 40 antenna connected to your zūmo, touch **Tools** > **Media Player**.
2. Touch **Source** until the XM Radio player appears. The signal-strength bars are in the upper-right corner of the screen.
3. Select an option to listen to XM radio:
 - Touch  and  to select a station.
 - Touch **Browse** to browse available stations by category.
 - Touch **123** to enter a station number.
 - Touch  to adjust the volume of the XM radio player.
 - Touch **Save** > **OK** to save a station as a preset.

Using XM NavTraffic

NOTE: XM NavTraffic is not available in all areas. Garmin is not responsible for the accuracy of the traffic information.

With the GXM 40 antenna connected, and when you are receiving traffic information, a traffic icon appears in the upper-right corner of the Map page. The traffic icon changes color to indicate the severity of traffic conditions on your route or on the road you are currently traveling. Tap the traffic icon to show the following options:

- **Show Traffic Map**—view the traffic map.
- **Traffic Search**—view a list of traffic delays and details about the delays.

Using XM NavWeather

NOTE: XM NavWeather is not available in all areas. Garmin is not responsible for the accuracy of the weather information.

1. With the GXM 40 antenna connected, touch **Tools** > **Weather**.
2. Touch **Forecast, Radar, Road Conditions**, or **Weather Bulletins** to view up-to-date information for your current location.

NOTE: With the GXM 40 antenna connected, and when you are receiving weather information, a weather icon appears in the lower-right corner of the Map page. Tap the icon to receive up-to-date weather information for your current location.

Enabling Fuel Tracking

When connected to the motorcycle mount, your zūmo can alert you when your fuel tank is low.

1. Touch **Tools > Settings > Fuel Gauge**.
2. Under **Fuel Tracking**, select **On**. A Fuel Gauge appears under the compass on the map page.
3. Under **Distance Per Tank**, enter the total distance your motorcycle can travel on a tank of fuel.
4. Under **Low Fuel Warning**, choose when you would like to be notified that your fuel tank is low.

Using Hands-free Calling

Using Bluetooth technology, your zūmo can connect to your mobile phone to become a

hands-free device.

To pair and connect, your device and the zūmo must be within 10 meters of each other and turned on. The zūmo can be connected to a phone and a headset at the same time.

To determine whether your device with Bluetooth technology is compatible with the zūmo, go to www.garmin.com/bluetooth.

Pairing the zūmo with Your Mobile Phone

1. Touch **Tools > Settings > Bluetooth**.
2. Under **Bluetooth**, touch **Enabled**.
3. Under **Phone**, touch **Add (or Change)**.
4. Enable the Bluetooth component on your phone. Enable Find Me/Discoverable/Visible mode. These settings might be in a Bluetooth, Connections, or Hands-free menu.
5. Touch **OK** on the zūmo.
6. Select your phone, and touch **OK**.
7. Enter **1234** into your phone.


Pairing a Wireless Headset

1. Touch **Tools > Settings > Bluetooth**.
2. Under **Bluetooth**, touch **Enabled**.
3. Under **Audio**, touch **Add (or Change)**.
4. Turn on your headset, and enable Find Me/Discoverable/Visible mode, if necessary.
5. Touch **OK** on the zūmo.
6. Select your headset, and touch **OK**.
7. Enter the Bluetooth PIN/passkey for your headset, if necessary, and touch **Done**.
8. Touch **OK**.

Receiving a Call

When you receive a call, the Incoming Call window appears. Touch **Answer** to answer the call. Touch **Ignore** to ignore the call and silence the ring.

Calling a Number

1. Touch **Phone > Dial**.
2. Enter the number, and touch **Dial**.
3. To end the call, touch .

Loading Files on Your zūmo

1. Insert a memory card (optional).
2. Connect the USB cable.
3. Transfer files to the zūmo.
4. Eject and unplug the USB cable.

Listening to MP3 Files

1. Touch **Tools** > **Media Player** > **Source**.
2. Touch **Browse** > a category > **Play All**.


Locking Your zūmo

1. Touch **Tools** > **Settings** > **Security**.
2. Touch the button below **Garmin Lock**.
3. Enter a 4-digit PIN and drive to a security location.

NOTE: If you forget your PIN and your security location, you must send your zūmo and valid product registration or proof of purchase to Garmin to get your zūmo unlocked.

Resetting the zūmo

If the zūmo screen stops functioning, turn the zūmo off and on again. If this does not help,

press and hold the  **Power** key and hold it for 8 seconds. Turn the zūmo back on. The zūmo should operate normally.

Product Registration

Help us better support you by completing our online registration today. Connect to our Web site at <http://my.garmin.com>. Keep the original sales receipt, or a photocopy, in a safe place.

More Information

For more information about your zūmo, touch **Tools** > **Help**. You can download the latest version of the owner's manual from www.garmin.com. For information about accessories, go to <http://buy.garmin.com> or contact your Garmin dealer.

nūMaps Guarantee™

To receive one free map update (if available), register your zūmo at <http://my.garmin.com> within 60 days of acquiring satellites while driving with your zūmo. You are not eligible

for the free map update if you register by phone or wait longer than 60 days after the first time your zūmo acquires satellites while driving with your zūmo. For more information, go to www.garmin.com/numaps.

Contact Garmin

Contact Garmin if you have any questions while using your zūmo. In the USA, go to www.garmin.com/support, or contact Garmin USA by phone at (913) 397-8200 or (800) 800-1020.

In the UK, contact Garmin (Europe) Ltd. by phone at 0808 2380000.

In Europe, go to www.garmin.com/support and click **Contact Support** for in-country support information, or contact Garmin (Europe) Ltd. by phone at +44 (0) 870.8501241.

Garmin®, the Garmin logo, and zūmo® are trademarks of Garmin Ltd. or its subsidiaries, registered in the USA and other countries. Garmin Lock™ and nüMaps Guarantee™ are trademarks of Garmin Ltd. or its subsidiaries. These trademarks may not be used without the express permission of Garmin. The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc., and any use of such name by Garmin is under license. XM and the XM logos are registered trademarks of XM Satellite Radio Inc. XM Radio, XM NavTraffic™, and XM NavWeather™ are trademarks of XM Satellite Radio Inc. Other trademarks and trade names are those of their respective owners.

For the latest free software updates (excluding map data) throughout the life of your Garmin products, visit the Garmin Web site at www.garmin.com.



© 2010 Garmin Ltd. or its subsidiaries

Garmin International, Inc.
1200 East 151st Street, Olathe, Kansas 66062, USA

Garmin (Europe) Ltd.
Liberty House, Hounslow Business Park, Southampton, Hampshire, SO40 9LR UK

Garmin Corporation
No. 68, Jangshu 2nd Road, Sijhih, Taipei County, Taiwan

www.garmin.com