

StreetPilot® c330

quick reference guide

guide de référence rapide



Garmin International, Inc.
1200 East 151st Street,
Olathe, Kansas 66062, U.S.A.
Tel. 913/397.8200
or 800/800.1020
Fax 913/397.8282

Garmin (Europe) Ltd.
Unit 5, The Quadrangle,
Abbey Park Industrial Estate,
Romsey, SO51 9DL, U.K.
Tel. 44/0870.8501241
Fax 44/0870.8501251

Garmin Corporation
No. 68, Jangshu 2nd Road,
Shijr, Taipei County, Taiwan
Tel. 886/2.2642.9199
Fax 886/2.2642.9099

All rights reserved. Except as expressly provided herein, no part of this manual may be reproduced, copied, transmitted, disseminated, downloaded or stored in any storage medium, for any purpose without the express prior written consent of Garmin. Garmin hereby grants permission to download a single copy of this manual onto a hard drive or other electronic storage medium to be viewed and to print one copy of this manual or of any revision hereto, provided that such electronic or printed copy of this manual must contain the complete text of this copyright notice and provided further that any unauthorized commercial distribution of this manual or any revision hereto is strictly prohibited.


Information in this document is subject to change without notice. Garmin reserves the right to change or improve its products and to make changes in the content without obligation to notify any person or organization of such changes or improvements. Visit the Garmin Web site (www.garmin.com) for current updates and supplemental information concerning the use and operation of this and other Garmin products.

Garmin® and StreetPilot® are registered trademarks of Garmin Ltd. or its subsidiaries and may not be used without the express permission of Garmin.

Step 1: Mount Your c330


To ensure a tight grip, clean and dry your windshield.

1

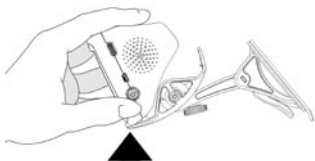

Fit the bottom of your c330 into the cradle of the suction cup mount.

2

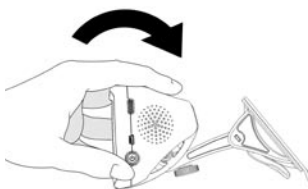


Tilt your c330 back until it snaps in place.

3




Place the suction cup on your windshield.

4

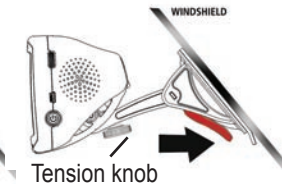

Flip the lever back, toward the windshield.

Plug the cable into a receptacle in your vehicle. If necessary, use the tension knob to loosen or tighten the tension in the mount to improve your viewing angle.

Your unit will turn on automatically if you have started your vehicle. To manually turn on your c330, press and hold the Power button  on the side of the unit.


Step 2: Configure Your c330

The first time you turn on the unit, follow the on-screen instructions to set up your c330. You only have to do this once.

EN

Step 3: Find Your Destination

1

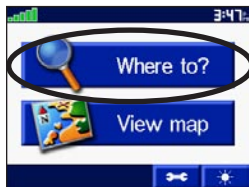

Touch **Where to?**

2



Select a category.
Touch the arrows to see more categories.

3

Holiday Inn-Mission-Ov	3.6: NW
Homestead Village	3.7: N
Park Lodge	3.7: W
Sheraton Four Points	3.7: N
Holiday Motel	3.8: NE

Back Spell


Select a destination.
Touch the arrows to see more places.

4



Touch **Go!**

5

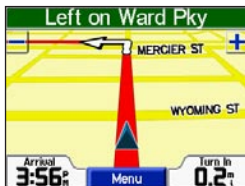

Enjoy the route!

WARNING: For use in vehicles, it is the sole responsibility of the owner/operator of a vehicle with the c330 installed to place and secure the device so it will not interfere with the vehicle operating controls and safety devices, obstruct the driver's view of driving conditions, or cause personal injury in the event of an accident.

Step 4: Follow Your Route

Follow the route to your destination using the Map page. As you travel, your c330 guides you to your destination with voice prompts, arrows on the map, and directions at the top of the Map page. If you depart from the original route, your c330 recalculates your route and then provides new route instructions.

EN

Read the driving instructions at the top of the page.



Your route is marked with a red line.



Follow the arrows as you take turns.



A checkered flag marks your destination.

Viewing the Map Page



View map

From the Menu page, touch **View map** to open the Map page. The position icon ▲ shows your current location. Touch buttons on the Map page to see additional information.

EN

Touch to zoom out.

Touch **Menu** to return to the Menu page.

Touch **Arrival** or **Speed** to open the Trip Information page.

Touch the text bar to open the Current Route page.

Touch to zoom in.

Touch **Turn In** to open the Next Turn page.

Map Page while Navigating a Route

w			30%	6.6
Overall Avg	Median Avg	Max Speed		
8.2%	34.3%	54.7%		
Total Time	Moving Time	Stopped		
18:44	03:27	15:17		
Back	Reset Trip	Reset Max		

Trip Information Page

Left on Ward Pky	
0.1	Keep left on Ward Pky
2.3	Keep right on Ward Pky
0.9	Keep left on Roanoke Pky
500	
Back	

Current Route Page

		Left on Ward Pky
		400:00:10
Back		

Next Turn Page

Saving Places You Find

1



After you have found a place you want to save, touch **Save**.

2



Touch **OK** in the pop-up window. The place is saved in **My Locations > Favorites**.


Finding Saved Places

1



From the Menu page, touch **Where to? > My Locations > Favorites**.

2

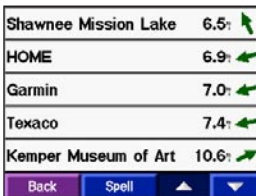

Select a place.


3



Touch .

Setting a Home Location

1

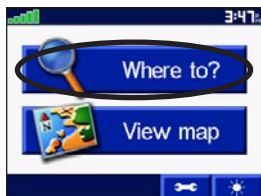


Touch **Where to?**

2




Touch **My Locations**.

3

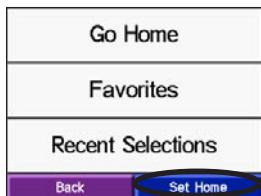

Touch **Set Home**.

4

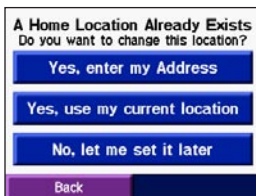

Select an option.


Going Home

After you have set your Home location, you can route to it at any time by touching **My Locations** and then **Go Home**.

Changing Your Home Location

Change your Home location by repeating the steps you took to set it.

Adjusting the Backlight Brightness

From the Menu page, touch the brightness button  to adjust the level of the backlight. Touch the minus (-) lightbulb to decrease the backlight brightness or the plus (+) lightbulb to increase the brightness. When you are finished, touch **OK**.

1




2



Adjusting the Volume

To adjust the volume, turn the Volume knob, located above the Power button.

Turning the c330 On and Off

Press and hold the Power button  on the side of the unit to turn it on and off.

More Information


For more information about your c330, refer to the *Owner's Manual* located at <http://www.garmin.com/products/sp330/>. Click on the **Manuals** link and then select **Download**.



Etape 1 : Installation de votre navigateur c330


Afin de garantir une adhérence maximale, nettoyez et séchez soigneusement votre pare-brise avant d'installer la ventouse.

1

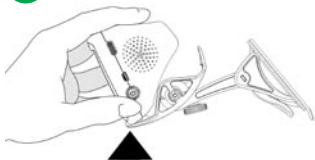


Insérez la base de votre navigateur c330 dans le logement du support à ventouse.

2

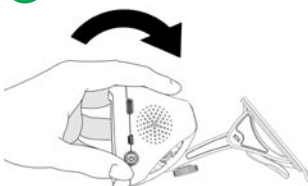


Inclinez votre navigateur c330 vers l'arrière jusqu'à ce qu'il s'enclenche.


3

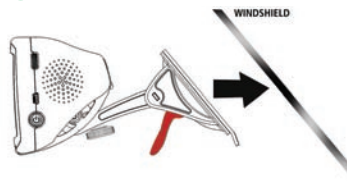

Positionnez la ventouse sur votre pare-brise.

Si votre véhicule est en marche, votre appareil se mettra en route automatiquement. Pour allumer votre navigateur c330 manuellement, appuyez sur le bouton d'Alimentation  situé sur le côté de l'appareil et maintenez-le enfoncé.

4

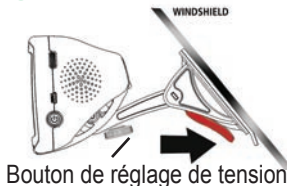

Faites basculer le levier vers l'arrière, en direction du pare-brise.

Branchez le câble sur une prise de votre véhicule. Si nécessaire, utilisez le bouton de réglage de tension pour serrer ou desserrer la tension du support afin d'améliorer votre angle de vision.

Etape 2 : Configuration de votre navigateur c330


Lorsque que vous mettez votre appareil en marche pour la première fois, suivez les informations affichées à l'écran pour procéder à l'installation de votre navigateur c330. Vous ne devrez accomplir cette étape qu'une seule fois.

Etape 3 : Recherche de votre destination

FR



Appuyez sur **Where to?**
(Destination)

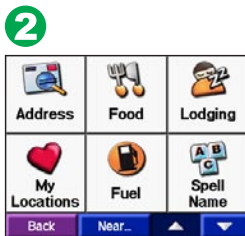

Sélectionnez une catégorie. Appuyez sur les flèches pour afficher d'autres catégories.



Sélectionnez une destination. Appuyez sur les flèches pour afficher d'autres lieux.



Appuyez sur **Go!**




Bonne route !

Avertissement: En cas d'utilisation de ce système dans un véhicule, il incombe exclusivement au propriétaire et/ou à l'opérateur de positionner et fixer le navigateur c330 de façon à ce qu'il ne perturbe pas l'utilisation des commandes de conduite et dispositifs de sécurité du véhicule, ne limite pas la visibilité du conducteur et n'entraîne pas de dégâts matériels ou de blessures en cas d'accident.

Etape 4 : Parcours de votre itinéraire

Suivez l'itinéraire menant à votre destination à l'aide de la page de la carte. Pendant le trajet, votre navigateur c330 vous guide vers votre destination en vous fournissant des instructions vocales, en insérant des flèches représentant les virages sur la carte et en affichant des indications au début de la page de la carte. Si vous vous écarterez de votre itinéraire initial, un message vocal vous informe que vous évoluez hors itinéraire ; le navigateur c330 crée ensuite un nouvel itinéraire.

Lisez les instructions de conduite affichées au début de la page.

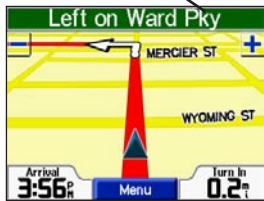

Votre itinéraire est représenté par une ligne rouge.



Suivez les flèches représentant les virages.



Un drapeau à damiers identifie votre destination.


Affichage de la page de la carte



View map


Sur la page Menu, appuyez sur **View map** (Afficher la carte) pour ouvrir la page de la carte. L'icône Position ▲ affiche votre position actuelle. Appuyez sur les boutons de la page de la carte pour obtenir des informations supplémentaires.

FR

Appuyez sur  pour effectuer un zoom arrière.

Appuyez sur **Menu** pour revenir à la page Menu.

Appuyez sur **Arrival (Arrivée)** ou **Speed (Vitesse)** pour ouvrir la page Trip Information (Informations sur le trajet).

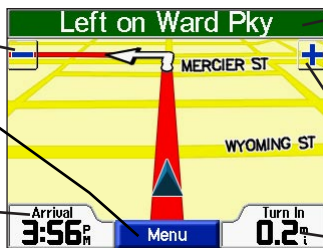

Page de la carte lors du parcours d'un itinéraire


Appuyez sur la barre de texte pour ouvrir la page Current Route (Itinéraire actuel).

Appuyez sur  pour effectuer un zoom avant.


Appuyez sur **Turn In (Prochain virage)** pour ouvrir la page Next Turn (Prochain virage).



Page Trip Information
(Informations sur le trajet)

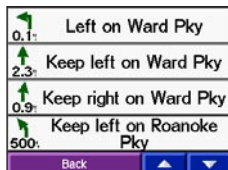

Page Current Route
(Itinéraire actuel)

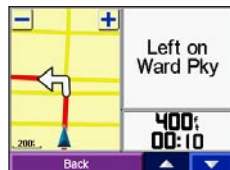

Page Next Turn
(Prochain virage)

Enregistrement de lieux recherchés

1



Lorsque vous avez trouvé un lieu que vous souhaitez enregistrer, appuyez sur **Save** (Enregistrer).

2



Appuyez sur **OK** dans la fenêtre. Le lieu est enregistré dans **My Locations > Favorites** (Emplacements favoris > Favoris).


Recherche de lieux enregistrés

1



Sur la page Menu, appuyer sur **Where To? > My Locations > Favorites** (Destination > Emplacements favoris > Favoris).

2

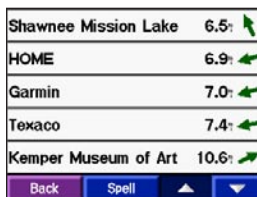

Sélectionnez un lieu.


3



Appuyez sur **Go!**.


Définition du domicile

1

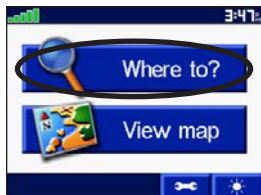

Appuyez sur **Where to?**
(Destination)

3

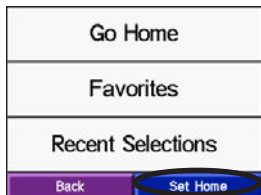

Sélectionnez **Set Home**
(Définir le domicile).


Revenir au domicile

Une fois votre domicile défini, vous pouvez établir un itinéraire vers ce domicile à tout moment en appuyant sur **My Locations (Emplacements favoris)**, puis sur **Go Home (Revenir au domicile)**.

Modification du domicile


Pour modifier votre domicile, répétez les étapes précédemment effectuées pour le définir.

2

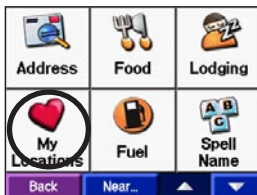


Appuyez sur **My Locations**
(Emplacements favoris).

4

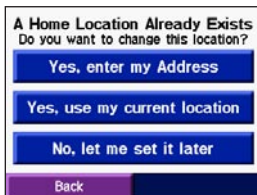

Sélectionnez une option.

Réglage de la luminosité du rétroéclairage


Sur la page Menu, appuyez sur le bouton de luminosité  pour régler le niveau du rétroéclairage. Appuyez sur l'ampoule moins (-) pour réduire la luminosité du rétroéclairage ou sur l'ampoule plus (+) pour augmenter la luminosité. Lorsque vous avez terminé, appuyez sur **OK**.



Réglage du volume

Pour régler le volume, tournez le bouton de réglage du volume situé au dessus du bouton d'Alimentation.

Mise sous tension et arrêt du navigateur c330

Appuyez sur le bouton d'Alimentation  situé sur le côté de l'appareil et maintenez-le enfoncé pour mettre votre navigateur sous tension et l'arrêter.

Informations supplémentaires

Pour plus d'informations sur votre navigateur c330, reportez-vous au *manual d'utilisation*. En dehors des États-Unis, contactez votre revendeur Garmin.



For the latest free software updates (excluding map data) throughout the life of your Garmin products, visit the Garmin Web site at www.garmin.com.



© Copyright 2005 Garmin Ltd. or its subsidiaries

Garmin International, Inc.
1200 East 151st Street, Olathe, Kansas 66062, U.S.A.

Garmin (Europe) Ltd.
Unit 5, The Quadrangle, Abbey Park Industrial Estate, Romsey, SO51 9DL, U.K.

Garmin Corporation
No. 68, Jangshu 2nd Road, Shijr, Taipei County, Taiwan

www.garmin.com

Part Number 190-00436-50 Rev. A