

GPSMAP® 400/500 series owner's manual




GARMIN®

© 2010 Garmin Ltd. or its subsidiaries

All rights reserved. Except as expressly provided herein, no part of this manual may be reproduced, copied, transmitted, disseminated, downloaded or stored in any storage medium, for any purpose without the express prior written consent of Garmin. Garmin hereby grants permission to download a single copy of this manual onto a hard drive or other electronic storage medium to be viewed and to print one copy of this manual or of any revision hereto, provided that such electronic or printed copy of this manual must contain the complete text of this copyright notice and provided further that any unauthorized commercial distribution of this manual or any revision hereto is strictly prohibited.

Information in this document is subject to change without notice. Garmin reserves the right to change or improve its products and to make changes in the content without obligation to notify any person or organization of such changes or improvements. Visit the Garmin Web site (www.garmin.com) for current updates and supplemental information concerning the use and operation of this and other Garmin products.


Garmin®, the Garmin logo, GPSMAP®, BlueChart®, g2 Vision®, and MapSource® are trademarks of Garmin Ltd. or its subsidiaries, registered in the USA and other countries. Ultrascroll™, HomePort™, Intelliducer™, myGarmin™, and GFS™ are trademarks of Garmin Ltd. or its subsidiaries. These trademarks may not be used without the express permission of Garmin. NMEA 2000® and the NMEA 2000 logo are registered trademarks of the National Maritime Electronics Association. Windows® is a registered trademark of Microsoft Corporation in the United States and other countries. DAFIF™ is a trademark of the National Geospatial-Intelligence Agency. XM® and XM WX Satellite Weather® are registered trademarks of XM Satellite Radio Inc.

Introduction

This manual includes information for the following products:

GPSMAP® 431/431s	GPSMAP 441/441s
GPSMAP 531/531s	GPSMAP 536/536s
GPSMAP 541/541s	GPSMAP 546/546s

Tips and Shortcuts

- Press **HOME** from any screen to return to the Home screen.
- Press **MENU** from any of the main screens to access advanced settings.
- Press and release the  **Power** key to adjust the display settings.

Manual Conventions

In this manual, when you are instructed to select an item, small arrows (>) appear in the text. They indicate that you should highlight a series of items on the screen using the **Rocker**, and press the **SELECT** key after each item. For example, if you see “select **Charts** > **Navigation Chart**,” you should highlight **Charts**, and press **SELECT**. Then highlight **Navigation Chart**, and press **SELECT** again.

Quick Links

- Turning the Unit On or Off: [page 3](#).
- Acquiring GPS Satellite Signals: [page 5](#).
- Inserting and Removing SD Cards: [page 6](#).
- Restoring the Original Factory Settings: [page 6](#).
- Using the Navigation Chart: [page 8](#).
- Changing the Navigation Chart Settings: [page 12](#).
- Navigating to a Destination: [page 28](#).
- Creating and Using Waypoints: [page 30](#).
- Configuring System Settings: [page 48](#).
- Using Sonar: [page 57](#).
- Alarms and Messages: [page 79](#).

Table of Contents

Introduction	i
Tips and Shortcuts	i
Manual Conventions	i
Quick Links	i
Declaration of Conformity (DoC).....	iv
Product Registration	iv
Contact Garmin.....	iv
Getting Started	1
Unit Overview.....	1
Turning the Unit On or Off.....	2
Initializing Unit Settings.....	3
Adjusting the Backlight.....	4
Using the Keypad.....	5
Acquiring GPS Satellite Signals.....	5
Using Simulator Mode.....	5
Viewing System Information	6
Restoring the Original Factory Settings	6
Inserting and Removing SD Cards	6
Understanding the Home Screen.....	7
Using Charts	8
Using the Navigation Chart.....	8
Changing the Navigation Chart Settings.....	12
Using the Split Navigation Chart.....	15
Using Perspective 3D	15

Using Mariner's Eye 3D	16
Using Fish Eye 3D	18
Using Fishing Charts.....	19
Enabling High Resolution Satellite Imagery.....	19
Viewing Aerial Photos	20
Animated Tide and Current Indicators	21
Detailed Road and POI Data	21
Using Automatic Guidance.....	22
Using the Chart/Sonar Screen.....	22
Automatic Identification System.....	22
Where To?	28
Navigating to a Destination	28
Creating and Using Waypoints.....	30
Creating and Using Routes.....	31
Using Tracks	33
Using BlueChart g2 Vision	34
Navigating with a Garmin Autopilot	35
Viewing Information	36
Viewing a Compass	36
Viewing Numbers.....	36
Viewing Trip Information	37
Viewing and Customizing Engine Gauges.....	37
Viewing and Synchronizing Fuel Gauges	40
Viewing and Customizing Wind Gauges.....	41
Viewing Tide-station Information.....	42
Viewing Current Information	43

Viewing Celestial Information.....	43	Receiving Distress Calls	64
Viewing User Data	44	Man-Overboard Distress Calls Initiated from a VHF Radio	65
Viewing Other Vessels	47	Man-Overboard Distress Calls Initiated from the Chartplotter ...	65
Configuring the Chartplotter	48	Position Tracking.....	65
Configuring System Settings.....	48	Placing an Individual Routine Call	66
Configuring Units of Measure	48	Calling an AIS Target	67
Changing the System Language.....	49	Using XM WX Weather and Audio.....	68
Configuring Navigation Preferences	49	Using XM WX Weather	68
Configuring Communications Settings.....	51	Viewing NEXRAD Precipitation Information.....	69
Setting Alarms.....	52	Viewing Forecast Information	72
Setting the Total Fuel Onboard Alarm	54	Viewing Fishing Information	73
Configuring My Boat	54	Viewing Sea Conditions	74
Configuring Other Vessels	56	Viewing Visibility Information.....	75
Using Sonar	57	Using XM Audio	76
Understanding the Full Screen	57	Appendix	77
Understanding the Flasher Screen	57	Specifications.....	77
Understanding the Split Frequency Screen	58	Alarms and Messages	79
Understanding the Split Zoom Screen	58	Capturing Screenshots	82
Understanding the Depth Log Screen.....	59	Caring for the Unit.....	82
Understanding the Temp Log Screen	59	Weather Data Warranty	83
Setting Up Sonar.....	60	Software License Agreement.....	84
Advanced Sonar Settings	61	XM Satellite Radio Service Agreement.....	84
Using Digital Selective Calling (DSC).....	63	Index	85
Using the Chartplotter with a VHF Radio	63		
Adding a DSC Contact.....	64		
Viewing the DSC List	64		

 **WARNING**

See the *Important Safety and Product Information* guide in the product box for product warnings and other important information.

 - LAMPS INSIDE THIS PRODUCT CONTAIN MERCURY AND MUST BE RECYCLED OR DISPOSED OF ACCORDING TO LOCAL, STATE, OR FEDERAL LAWS.

For more information go to:
www.garmin.com/aboutGarmin/environment/disposal.jsp.

Declaration of Conformity (DoC)

Hereby, Garmin, declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. To view the full Declaration of Conformity, go to www.garmin.com/compliance.



Product Registration

Help us better support you by completing our online registration today. Go to <http://my.garmin.com>. Keep the original sales receipt, or a photocopy, in a safe place.

Contact Garmin


Contact Garmin Product Support if you have any questions while using your unit. In the USA, go to www.garmin.com/support, or contact Garmin USA by phone at (913) 397.8200 or (800) 800.1020.


In the UK, contact Garmin (Europe) Ltd. by phone at 0808 2380000.

In Europe, go to www.garmin.com/support and click **Contact Support** for in-country support information, or contact Garmin (Europe) Ltd. by phone at +44 (0) 870.8501241.

Getting Started

Unit Overview

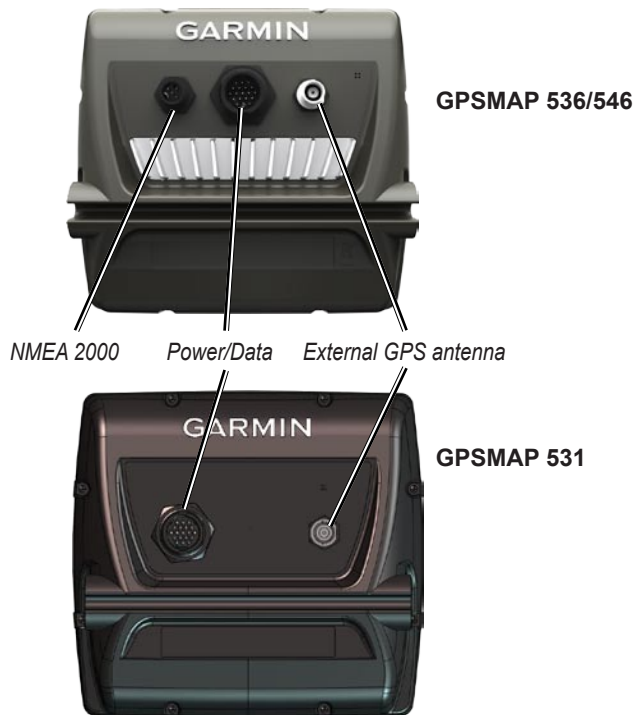

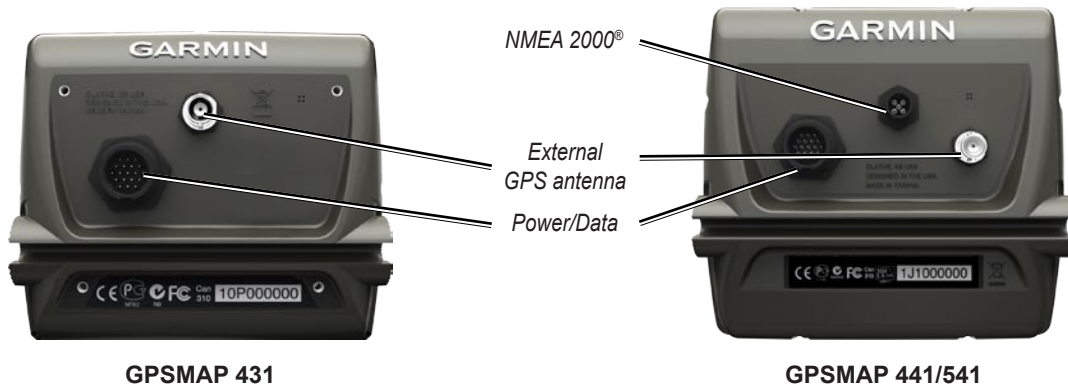

GPSMAP 431

GPSMAP 441/541

Turning the Unit On or Off

To turn on the unit, press and release the  **Power** key. When the Warning screen appears, select **I Agree** to view the Home screen.

NOTE: The first time you turn on your unit, you must configure the initial settings. See “Initializing Unit Settings” (page 3).

To turn off the unit, press and hold the  **Power** key.



Home Screen

Initializing Unit Settings

The first time you turn on your unit, configure the initial settings.

NOTE: You can change these settings later using the Configure screen ([page 6](#)).

Language—select the language to display on the screen.

Welcome—select **OK**.

Store Demonstration—select **NO**. (This option is only available the first time the unit is turned on.)

NMEA 0183 Devices—if you have NMEA 0183 devices connected to a serial port, specify which ports are connected.

AIS Receiver (not available if you select **None** for **NMEA 0183 Devices**)—Select **Yes** if one of the devices connected to a serial port is an AIS (Automatic Identification System) receiver.

Position Format—specify the coordinate system to use for location readings.

Time Format—specify whether you want the time shown in a **12-hour**, **24-hour**, or **UTC** (Universal Time Coordinated) format.

Time Zone—set the time zone you want displayed for time readings. If **Auto** is selected for the Time Zone, the DST option is not available and is automatically set to **Auto**.

System Units—specify units for on-screen measurements as **Statute**, **Metric**, or **Nautical**, or select **Custom** to individually define units of measure for depth, temperature, distance, speed, elevation, volume, and pressure.

Minimum Depth—select the minimum safe depth for your boat. Refer to your boat specifications for more information.

Shallow Water Alarm—only available if you are receiving sonar depth data. Select **Yes** or **No**.

Overhead Clearance—select the minimum overhead clearance for your boat. Refer to your boat specifications for more information.

AIS Alarm Range (not available if you select **No** for **AIS Receiver**)—select the distance within which an alarm will sound if an AIS vessel nears your boat ([page 56](#)).


AIS Alarm Time To (not available if you select **No** for **AIS Receiver**)—select the time within which an alarm will sound if an AIS vessel is on track to intersect the Safe Zone around your boat ([page 56](#)).

If a water speed wheel is detected, a message will ask if you want to calibrate it now. Select **Yes** or **No**.

Adjusting the Backlight

1. Press and release the **Power** key.
2. Press left or right on the **Rocker** to adjust the backlight.

NOTE: Press the **Power** key repeatedly to cycle between maximum backlight, minimum backlight, and your manual setting.

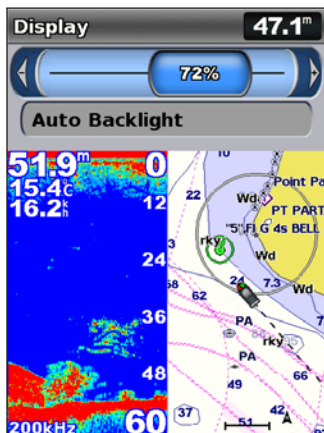


To allow the unit to automatically adjust the backlight based on ambient light, select **Auto Backlight** (automatic backlight is available only on the GPSMAP 536 and GPSMAP 546).


To switch between Day mode and Night mode:

1. Press and release the **Power** key.
2. Select **Color Mode**.
3. Press left or right on the **Rocker** to switch between modes.

To allow the unit to automatically adjust the backlight based on ambient light, select **Auto Day/Night Mode**.

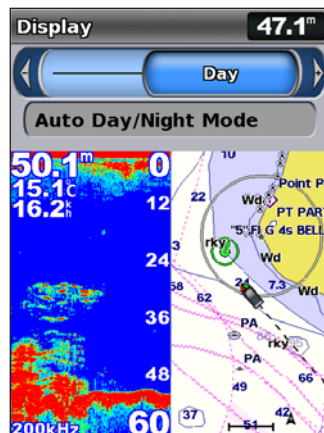

Using the Keypad

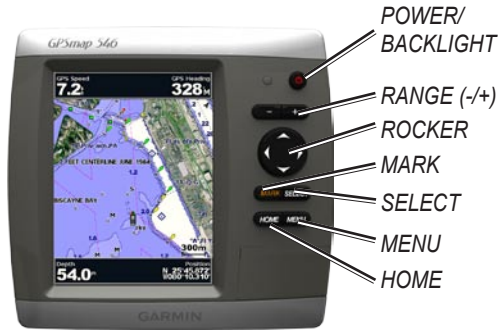

POWER/BACKLIGHT—Press and hold to turn the unit on or off. Press and release to adjust the backlight and day and night modes.

RANGE (-/+)—Press to adjust the range of the sonar. Press to zoom in or out on a chart. Press to page up or down on lists.

ROCKER—Press to adjust the range of the sonar, to zoom in or out on a chart, to page up or down on lists, to scroll the map, or to adjust the backlight level.



MARK—Press to mark a waypoint at your current location.

SELECT—Press to select highlighted items.

HOME—Press to return to the Home screen.

MENU—Press to access additional settings and configuration options. Press to return to the previous screen when indicated.

Acquiring GPS Satellite Signals

When you turn on the unit, the GPS receiver must collect satellite data and establish the current location. When the unit acquires satellite signals, the signal strength bars at the top of the Home screen are green . When the unit loses satellite signals, the green bars disappear  and the position icon displays a flashing question mark.

For more information about GPS, visit the Garmin Web site at www.garmin.com/aboutGPS.

Using Simulator Mode

Simulator mode turns the GPS receiver off for use indoors or for practice. The unit does not track satellites in simulator mode.

WARNING

Do not try to navigate using simulator mode, because the GPS receiver is turned off. Any satellite signal-strength bars shown are only simulations and do not represent the strength of actual satellite signals.

To turn on Simulator mode:

1. From the Home screen, select **Configure** > **System** > **Simulator**.
2. Select **Setup** to set speed, track control, and position.

Viewing System Information

You can view the software version, the basemap version, supplemental map information (if applicable), the unit ID number for your chartplotter, and your XM® WX Satellite Weather® Radio ID (if available). You may need this information to update the system software or to purchase additional map data information.

From the home screen, select **Configure** > **System** > **System Information**.

Restoring the Original Factory Settings

NOTE: This procedure deletes all settings information you have entered.

1. From the Home screen, select **Configure** > **System** > **System Information** > **Factory Settings**.
2. Select **Yes** to restore all factory settings, or select **No** to cancel. The unit reboots and prompts you to adjust unit settings (page 3).

Inserting and Removing SD Cards

Your unit supports Secure Digital (SD) cards. Insert optional BlueChart® g2 Vision® SD cards to view high-resolution satellite imagery and aerial reference photos of ports, harbors, marinas and other points of interest. Use SD cards to transfer data such as waypoints, routes, and tracks to another compatible Garmin unit or a computer (page 45). The SD card slot is located on the lower-right corner of the unit.

To insert the SD card, open the access door and press the SD card in until it clicks. Press the card in again and release it to eject it from the chartplotter.



NOTE: If you use an SD card to transfer waypoints from MapSource® or HomePort™, update to the most-current version MapSource or HomePort by clicking **Help > Check for Software Updates**, or check the Garmin Web site at www.garmin.com.

Understanding the Home Screen

Use the Home screen to access all other screens. Press **HOME** from any screen to return to the Home screen.

- **Charts**—selects Navigation, Fishing, Perspective 3D, Mariner’s Eye 3D, Fish Eye 3D, and Split Navigation charts.

NOTE: Mariner’s Eye 3D charts and Fish Eye 3D charts are available only if you use a BlueChart g2 Vision SD card.

- **Sonar**—set up and access sonar information ([page 57](#)).

Note: You must have an “s” series unit (such as a GPSMAP 441s) with a connected transducer to use sonar features.

- **Chart/Sonar**—set up the screen to view a chart and sonar in a split screen ([page 22](#)).

- **Where To?**—access navigation features ([page 28](#)).
- **Information**—view information including dashboard options, tides, currents, celestial data, user data, and information about other vessels ([page 36](#)).
- **Configure**—access unit and system settings ([page 48](#)).

Using Charts

Your chartplotter has a worldwide map and a built-in detailed map of US inland lakes, or BlueChart g2 cartography for the USA and Bahamas shoreline.


- **Navigation Chart**—displays all relevant navigation data available on your preloaded maps, including buoys, lights, cables, depth soundings, marinas, and tide stations, in an overhead view.
 - **Perspective 3D**—provides a view from above and behind the boat (according to your course), and provides a visual navigation aid.
 - **Split Navigation Chart**—displays two different zoom levels of the Navigation chart at the same time.
- Mariner's Eye 3D charts and Fish Eye 3D charts are available only if you use a BlueChart g2 Vision SD card.
- **Fishing Chart**—provides a view of the chart with enhanced bottom contours and without navigational data. This chart works well for offshore deep-sea fishing.
 - **Fish Eye 3D**—provides an underwater 3D view that visually represents the sea floor according to the information on the chart.

- **Mariner's Eye 3D**—provides a view from above and behind the boat as a three-dimensional navigation aid. The BlueChart g2 Vision Mariner's Eye 3D is more detailed than the preloaded data.

Using the Navigation Chart

Use the Navigation chart to plan your course, to view map information, and as a navigational aid.

To access a Navigation chart, from the Home screen, select **Charts > Navigation Chart**.

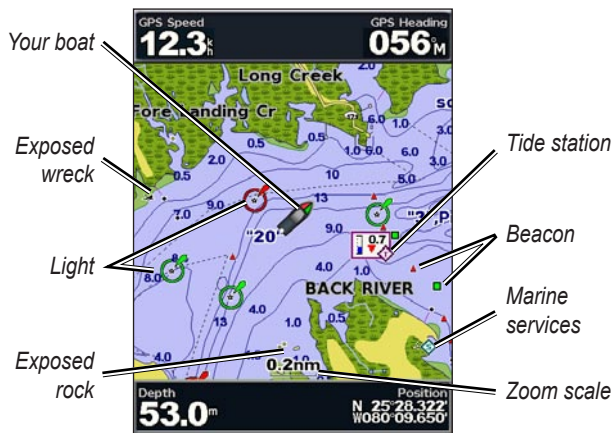

Navigation Chart with g2 Vision

Navigation Chart Menu

To access additional settings or options for the Navigation chart, press **MENU**.


Full Screen Map—view the Navigation or Fishing chart in full-screen mode, without numbers.

Waypoints & Tracks—view, add, and configure waypoints (page 30) and tracks (page 33).

Other Vessels—view information about other vessels if your chartplotter is connected to an external AIS (Automatic Identification System) or DSC (Digital Selective Calling) device (page 63).

Stop Navigation—stop navigating to your destination (only available while navigating).

Data Bars—show or hide cruising, navigation, fishing, fuel, or sailing numbers.

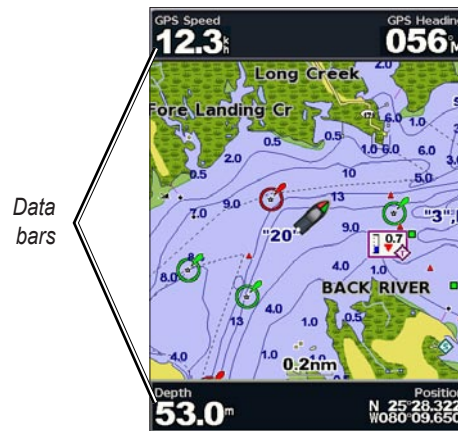

- **Cruising**—turn the GPS Speed, GPS Heading, Depth, and GPS Position data bar on or off. Select **Data Bar Setup** to configure the position of the data on the screen.
- **Navigation**—turn the Distance to Destination, Arrival, Off Course, and Bearing data bar on or off. Select **Auto** to turn on the Navigation data bar whenever you are navigating to a destination. Select **Data Bar Setup** to choose different data to show on the cruising data bar.

- **Fishing**—turn the Depth, Water Temperature, and Water Speed data bar on or off (available when using an “s” series unit with a transducer attached, or a “non-s” series unit with a Garmin Intelliducer™ attached).
- **Fuel**—(available only when your chartplotter is connected to a device capable of measuring fuel level, fuel flow, or both) turn the Fuel Rate, Remaining Fuel, Range, and Fuel Economy data bar on or off.
- **Sailing**— (available only when your chartplotter is connected to a wind sensor) turn the Water Speed, Wind Speed, Wind Angle, and Wind Velocity Made Good (VMG) data bar on or off. Select **Wind** to toggle between True and Apparent wind speed and wind angle.
- **XM Audio**—displays an XM audio bar at the bottom of the screen if XM audio is available ([page 76](#)).
- **Compass Tape**—displayed at the top of the screen to provide the current heading. An indicator that shows the bearing to the desired course appears while navigating.

Understanding How Wind VMG and Waypoint VMG Appear in the Data Bars

The chartplotter automatically switches between displaying Wind Velocity Made Good (VMG) and Waypoint VMG in the data bars.

Waypoint VMG appears under these conditions:

- The Route Leg data bar displays Waypoint VMG when you are navigating a route or an Auto Guidance line.
- The Sailing data bar displays Waypoint VMG when you are navigating a route or an Auto Guidance line and you turn off the Route Leg data bar.

Wind VMG appears under these conditions:

- The Sailing data bar displays Wind VMG when you are not navigating a route or an Auto Guidance line.
- The Sailing data bar displays Wind VMG when the Route Leg data bar is on.

Chart Setup—customize the Navigation chart settings ([page 12](#)).

Understanding Chart Data

Charts for BlueChart g2 and BlueChart g2 Vision use graphic symbols to denote map features that follow the standards for USA and international charts.

Other features common to most charts include depth contour lines (with deep water represented in white), intertidal zones, spot soundings (as depicted on the original paper chart), navigational aids and symbols, and obstructions and cable areas.

Navigating to a Point on the Chart

1. From the Home screen, select **Charts**.
2. Select **Navigation Chart**, **Fishing Chart**, or **Split Navigation Chart**.
3. Use the **Rocker** to select the point on the chart to which you want to go.
4. Press **SELECT**.
5. Select **Navigate To**.
6. Select **Go To** (or **Guide To** when using a preprogrammed BlueChart g2 Vision card for Auto Guidance).
7. Follow the colored line on the screen to the destination.


To create a route to a point on the chart, see [page 31](#).

Panning the Navigation Chart

Use the **Rocker** to move the map pointer (👉) away from your current location and to scroll to other areas on the Navigation chart. As you pan past the edge of the current map display, the screen scrolls forward to provide continuous map coverage.

As you move the map pointer, you can view the distance and bearing from your current location and the map pointer's location coordinates in the lower-right corner of the map.

To pan the map, press up, down, right, or left on the **Rocker**.

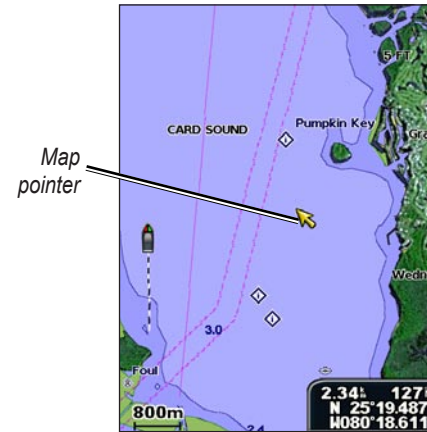

To stop panning, press **MENU**, and then select **Stop Panning**.

Zooming In and Out on the Map


The **Range** (-/+) keys control the zoom level, indicated by the scale at the bottom of the Navigation chart (800m). The bar under the number represents that distance on the map.

Accessing Additional Object Information

Use the map pointer (👉) to view information about on-screen map items, waypoints, and charts.

To access additional object information:

1. On the Navigation chart, highlight an item with the map pointer, and press **SELECT**.

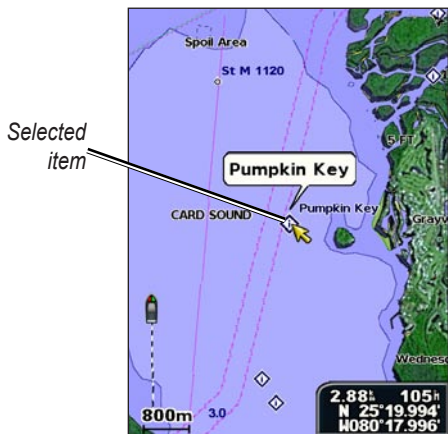

2. Select the item. If more than one item is in the area, select **Review**, and then select the item.

Viewing Tide-Station Information

Tide-station information appears on the chart with a detailed icon showing the relevant tide level. You can view an in-depth graph for a tide station to help predict the tide level at different times or on different days.

Use the map pointer (👉) to highlight a tide-station icon (📍), and press **SELECT**.

For more information about tides, see [page 42](#).

Changing the Navigation Chart Settings

To change chart settings from the home screen, select **Charts > Navigation Chart > MENU > Chart Setup**.

Photos—sets the high-resolution satellite images to **Off**, **Land Only**, or **On**. High-resolution satellite imagery is only available while using a BlueChart g2 Vision SD card.

Tides/Currents—turns tides and currents on or off ([page 42](#)). Select **Animated** to show animated tide station indicators and animated current direction indicators on the chart ([page 21](#)).


Service Points—turns marine service points on or off.

Roses—displays a compass rose around your boat, indicating compass direction. True wind direction or apparent wind direction is shown if the unit is connected to a compatible marine wind sensor.

Weather—sets up and displays various weather parameters, including precipitation (NEXRAD), cloud cover, visibility, WX buoys, and the weather legend. Sea temperature and fish species can be displayed on the Fishing chart (page 19).

The **Weather** feature is only available if the chartplotter is connected to a weather module and you have an XM subscription. See page 68 for additional information.

NOTE: If **Weather** is set to **Off**, none of the weather options will be visible on the chart.

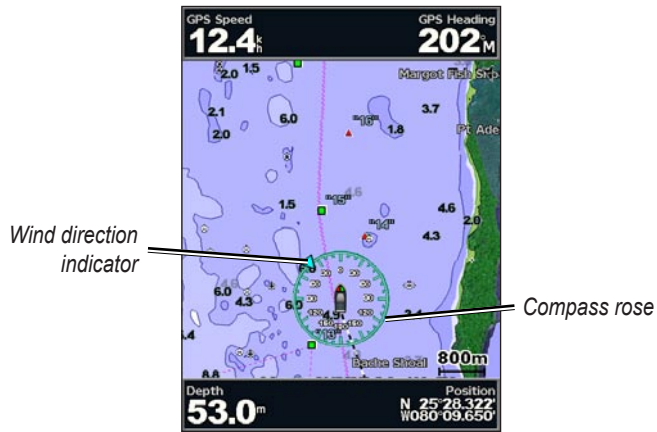


Changing the Chart Appearance

From the Home screen, select **Charts > Navigation Chart > MENU > Chart Setup > Chart Appearance**.

Orientation—changes the perspective of the map display.

- **North Up**—sets the top of the map display to a north heading.
- **Head Up**—sets the map display to the current track heading.
- **Course Up**—sets the map so the direction of navigation is always up. The heading line appears vertically if shown.

Detail—adjusts the amount of detail shown on the map at different zoom levels.

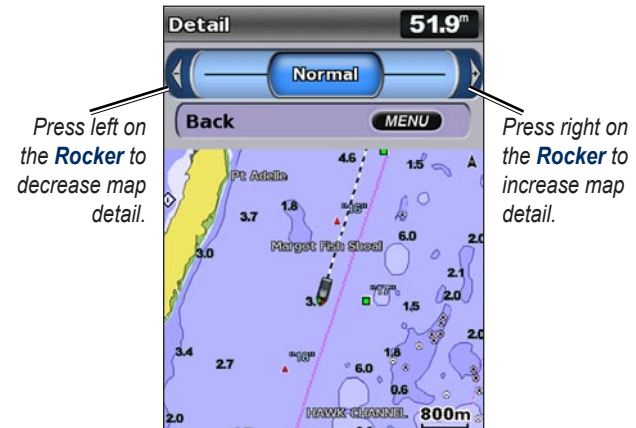

Heading Line—draws an extension line from the bow of the boat in the direction of travel.

- **Off**—turns the heading line off.
- **Distance**—sets the distance to the end of the heading line.
- **Time**—sets the amount of time until you reach the end of the heading line.

World Map—displays a basic world map or satellite imagery (when **Full World Map** is selected).

Spot Depths—turns spot soundings on or off and sets a dangerous depth.

Safety Shading (only available when you are using a BlueChart g2 or BlueChart g2 Vision card)—identifies a selected depth. Areas with depths shallower than the specified value are shaded in blue, while areas with depths greater than the specified value are shaded in white. The shading is always drawn at, or deeper than, the selected depth.

Select **Auto** to use the depth from the g2 Vision chart.

Symbols—changes symbol preferences.

- **Navaid Size**—adjusts the size of the navaid symbols shown on the map.
- **Navaid Type**—selects the navaid symbol set (NOAA or IALA).
- **Land POIs**—turns the display of land POIs (points of interest) on or off.
- **Light Sectors**—turns the sector in which a navigational light is visible on or off. Selecting **Auto** filters out light sectors, depending on the zoom level.
- **Chart Borders**—turns chart borders on when using a BlueChart g2 Vision SD card and you want to see what area the maps cover.
- **Photo Points**—turns camera icons ([page 21](#)) on or off when using a BlueChart g2 Vision SD card.
- **Vehicle Icon**—allows you to select a boat or triangle that is large, medium, or small as your boat icon on the chart.

Using the Split Navigation Chart

Use the Split Navigation chart to view two different zoom levels of the Navigation chart at the same time.



Split Navigation Chart
(with a BlueChart g2 Vision card)

The top half of the screen is zoomed in 10 times closer than the bottom half of the screen. The **Range (-/+)** keys control the zoom level.

Press **MENU** to view additional settings (page 9).

Using Perspective 3D

Perspective 3D provides a view from above and behind the boat (according to your course), and provides a visual navigation aid. This view is helpful when navigating tricky shoals, reefs, bridges, or channels, and is beneficial when trying to identify entry routes and exit routes in unfamiliar harbors or anchorages.

To access the Perspective 3D screen from the Home screen, select **Charts > Perspective 3D**.

Press the **Range (+)** key to move the view closer to your boat and lower to the water. Press the **Range (-)** key to move the view away from the boat.

To view details about nav aids such as beacons, lights, and obstructions:

1. Use the **Rocker** to point to the nav aid. When the cursor is over the nav aid, the nav aid is highlighted.
2. Press **SELECT** to view details about the nav aid.

Perspective 3D Settings

To access additional settings or options from the Perspective 3D screen, select **MENU**.

Waypoints & Tracks—view, add, and configure waypoints and tracks.

- **Tracks**—turn tracks on or off (page 33).

Using Charts

- **Waypoints**—view, sort, or filter existing waypoints, or create new ones.
- **New Waypoint**—create and edit a new waypoint.
- **Active Tracks**—manage tracks ([page 33](#)).
- **Saved Tracks**—view a list of tracks that have been saved.

Other Vessels—view information about other vessels. To view information about other vessels, your unit must be connected to an external AIS (Automatic Identification System) or DSC (Digital Selective Calling) device ([page 63](#)).

Weather Radar—turn the display of NEXRAD weather on or off. (The **Weather** feature is only available if the chartplotter is connected to a weather module and you have an XM subscription.) See [page 68](#) for additional information.

Data Bars ([page 9](#))—show or hide the numbers for cruising, navigation, fishing, fuel, sailing, or the compass tape ([page 10](#)).


Chart Appearance—customize the Perspective 3D chart.

- **Range Rings**—toggles the range rings on or off to provide distance measurement.
- **Lane Width**—adjusts the width of the course line drawn when navigating. This setting also affects routes (**Route To**), but does not affect Auto Guidance (**Guide To**).

- **Weather Radar**—turns the display of NEXRAD weather on or off. (The **Weather** feature is only available if the chartplotter is connected to a weather module and you have an XM subscription.) See [page 68](#) for additional information.

Using Mariner's Eye 3D

A BlueChart g2 Vision SD card offers Mariner's Eye 3D, which provides a detailed three-dimensional view from above and behind the boat. This view is helpful when navigating tricky shoals, reefs, bridges, or channels, and is beneficial when trying to identify entry and exit routes in unfamiliar harbors or anchorages.

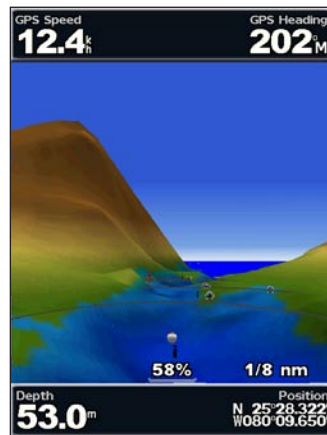

Mariner's Eye 3D



Navigation Chart

Press the **Range (+)** key to move the view closer to your boat and lower to the water. Press the **Range (-)** key to move the view away from the boat. The scale (**58%**) temporarily appears at the bottom of the screen.

To view details about nav aids such as beacons, lights, and obstructions:

1. Use the **Rocker** to point to the navaid. When the cursor is over the navaid, the navaid is highlighted.
2. Press **SELECT** to view details about the navaid.

Mariner's Eye 3D Settings

To access additional settings or options from the Mariner's Eye 3D screen, press **MENU**.

Weather Radar—turn the display of NEXRAD weather on or off. (The **Weather** feature is only available if the chartplotter is connected to a weather module and you have an XM subscription.) See [page 68](#) for additional information.


For settings and options related to Waypoints & Tracks, Other Vessels, and Data Bars, see “Navigation Chart Menu” on [page 9](#).

To customize the appearance of the Mariner's Eye 3D screen, select **MENU > Chart Appearance**.

Style—Selects how chart data is displayed over 3D terrain.

- **Classic**—uses color schemes to indicate 3D terrain.
- **Charts**—provides chart information in a 3D view.
- **Photos**—provides satellite photo imagery in addition to chart information.

Hazard Colors—Turns hazard colors on or off. The **Off** setting shows the land as seen from the water. The **On** setting indicates shallow water and land with a color scale. Blue indicates deep water, yellow is shallow water, and red is very shallow water.

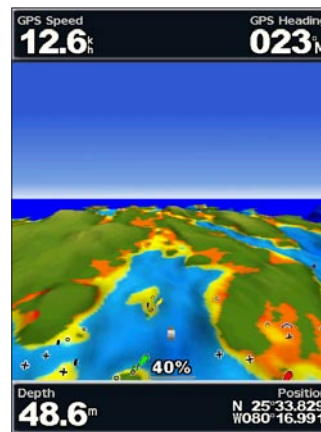

Mariner's Eye 3D (Water Hazard Colors)

Range Rings—toggles the range rings on or off to provide distance measurement.

Safe Depth—adjusts the depth at which red indicates dangerous depths.

Lane Width—adjusts the width of the course line drawn when navigating. This setting also affects routes (**Route To**), but does not affect Auto Guidance (**Guide To**).

- **Weather Radar**—turns the display of NEXRAD weather on or off. (The **Weather** feature is only available if the chartplotter is connected to a weather module and you have an XM subscription.) See [page 68](#) for additional information.

Using Fish Eye 3D

Using the depth contour lines of the BlueChart g2 Vision cartography, Fish Eye 3D provides an underwater view of the sea floor or lake bottom. Use the **Range** keys to adjust the view.

NOTE: You must have an “s” series unit (such as a GPSMAP 441s) with a connected transducer to use sonar features.


Fish Eye 3D Settings

To access additional settings or options for the Fish Eye 3D screen, press **MENU**.

View—selects a fish eye view (**Fore**, **Aft**, **Port**, or **Starboard**).

Sonar Cone (only available if sonar is present)—turns a cone that shows the area covered by your transducer on or off.

Fish Symbols (only available if sonar is present)—displays suspended targets (such as fish). Targets are indicated by red, green, and yellow spheres. Red indicates the largest targets and green indicates the smallest targets.

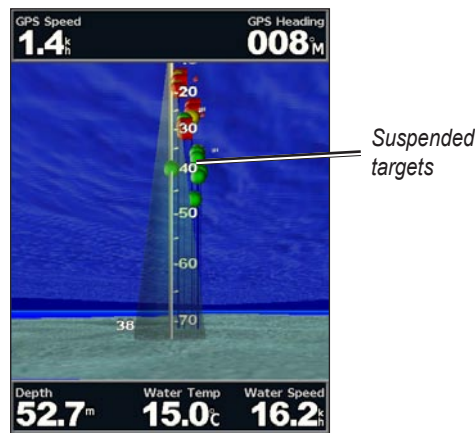

Fish Eye 3D

Tracks—turns the track log on or off.

Data Bars—shows or hides cruising, navigation, fishing, fuel, or sailing numbers ([page 9](#)).

Using Fishing Charts

Use the Fishing chart for a detailed, unobstructed view of the bottom contours on the chart.

The Fishing chart uses detailed bathymetric data, and is best for offshore deep-sea fishing.

From the Home screen, select **Charts > Fishing Chart**.



To access additional settings from the Fishing chart, press **MENU**.

Nav aids—displays navigational aids, such as beacons, lights, and obstructions.

For settings and options related to Full Screen Map, Waypoints & Tracks, Other Vessels, and Data Bars, see “Navigation Chart Menu” on [page 9](#).

To customize the appearance of the Fishing Chart screen, select **MENU > Chart Setup** ([page 12](#)).

Enabling High Resolution Satellite Imagery

You can overlay high-resolution satellite images on the land, sea, or both portions of the Navigation chart when using a preprogrammed BlueChart g2 Vision SD card.

To enable satellite imagery:

1. While viewing the Navigation chart, press **MENU**.
2. Select **Chart Setup > Photos**.
3. Select one of the following:
 - **Off**—standard chart information is shown on the map.
 - **Land Only**—standard chart information is shown on water with photos overlaying the land.
 - **On**—photos overlay both the water and the land at a specified opacity. Use the right and left arrows on the **Rocker** to adjust the opacity. The higher you set the percentage, the more the satellite photos will cover both land and water.

NOTE: When enabled, the high-resolution satellite images are only present at closer zoom levels. If you cannot see the high-resolution images in your BlueChart g2 Vision region, either zoom in further using the **Range (+)** key, or set the detail level higher ([page 13](#)).

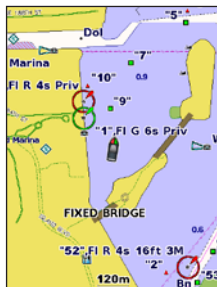


Photo Overlay Off



Land Only Photo Overlay

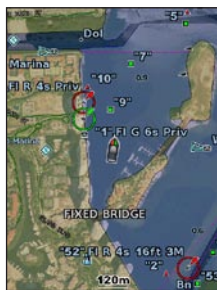


Photo Overlay at 50%

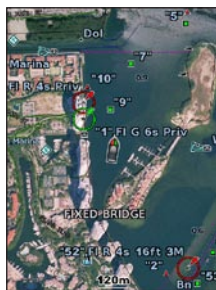


Photo Overlay at 100%

Viewing Aerial Photos

Preprogrammed BlueChart g2 Vision SD cards contain aerial photographs of many landmarks, marinas, and harbors. Use these photos to help orient yourself to your surroundings or to acquaint yourself with a marina or a harbor prior to arrival.




Aerial Photo

NOTE: Use the **Range (-/+)** keys to zoom in and out while viewing the aerial photo on the full screen.

To access aerial photos from the Navigation chart:

Use the **Rocker** to highlight a camera icon with the pointer, and select **Aerial Photo** or **Review > Aerial Photo**.

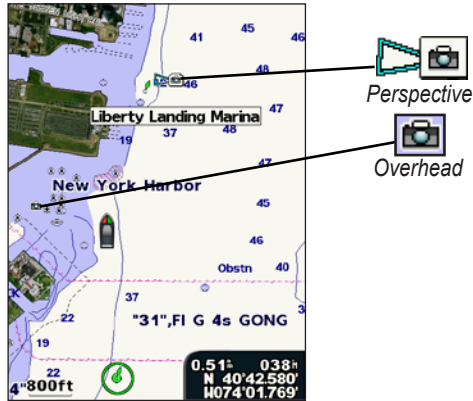

Animated Tide and Current Indicators

You can view indicators for animated tide station and current direction on the Navigation chart or the Fishing chart. To do so, information for tide station and current direction must be available in your preloaded map or BlueChart g2 Vision region. You must also select the Animated value for the Tides/Currents setting ([page 12](#)).

An indicator for a tide station appears on the chart as a vertical bar graph with an arrow. A red arrow pointing downward indicates a falling tide, and a blue arrow pointing upward indicates a rising tide. When you move the cursor over the tide station indicator, the height of the tide at the station appears above the station indicator.



**Tide Station
with Falling
Tide**

Current direction indicators appear as arrows on the chart. The direction of each arrow indicates the direction of the current at a specific location on the chart. The color of the current arrow indicates the range of speed for the current at that location. When you move the cursor over the current direction indicator, the specific current speed at the location appears above the direction indicator.

Direction Indicator	Color	Current Speed Range
	Yellow	0 to 1 knot
	Orange	1 to 2 knots
	Red	2 or more knots

Detailed Road and POI Data

BlueChart g2 Vision contains detailed road and points of interest (POI) data, which includes highly detailed coastal roads and POIs such as restaurants, lodging, local attractions and more. For

Using Charts

instructions on searching for, and navigating to, these POIs, see the “Where To?” section beginning on [page 28](#).

Using Automatic Guidance

Auto Guidance automatically creates and suggests routes based on available BlueChart g2 Vision chart information. See [page 49](#) for instructions on setting up Auto Guidance for your boat.

If Auto Guidance must calculate a route close to potentially dangerous points, those points are outlined in red, and a message appears informing you that there are potentially unsafe areas along the calculated route.

The “Where To?” section on [page 28](#) contains more information on how to use Auto Guidance.


Using the Chart/Sonar Screen

NOTE: The Chart/Sonar screen, like the Sonar screen, is only available when using a sonar-capable unit with a transducer attached.

Use the Chart/Sonar screen to view the Navigation chart, Fishing chart, Mariner’s Eye 3D, or Fish Eye 3D and sonar at the same time.

To view a split chart/sonar screen:

1. From the Home screen, select **Chart/Sonar**.
2. Select the type of chart on the split screen.

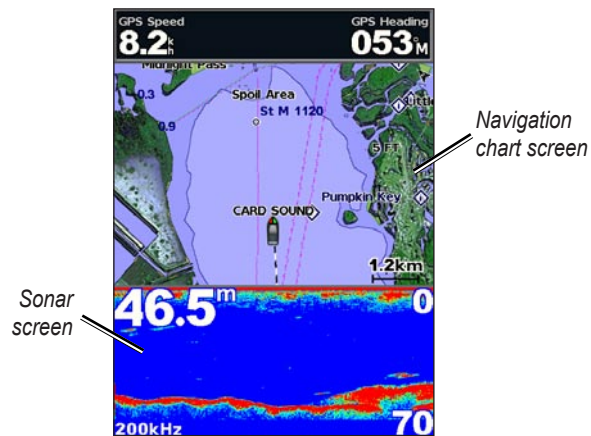

Navigation/Sonar Combination


To access additional settings or options for the chart/sonar screen, press **MENU**.

Automatic Identification System

The Automatic Identification System (AIS) enables you to identify and track other vessels.

About AIS

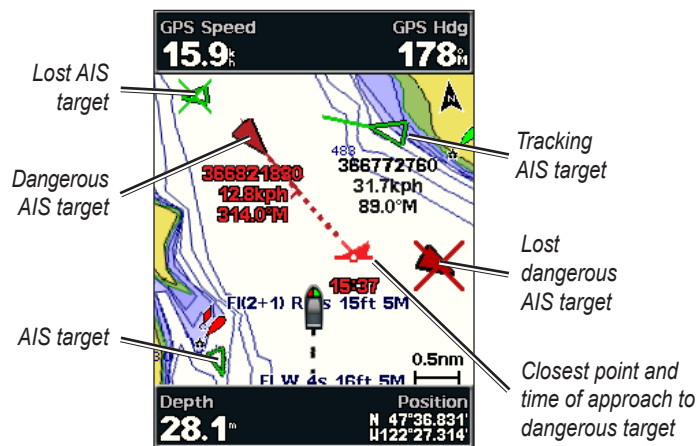

AIS alerts you to area traffic. When connected to an external AIS device, the chartplotter can show some AIS information about other vessels that are within range, that are equipped with a transponder, and that are actively transmitting AIS information. The information reported for each vessel includes the Maritime Mobile Service Identity (MMSI), the location, the GPS speed, the GPS heading, the time that has elapsed since the last position of the vessel was reported, the nearest approach, and the time to the nearest approach.



AIS Targeting on the Navigation Chart

AIS Targeting Symbols

Symbol	Description
	AIS vessel. The vessel is reporting AIS information. The direction in which the triangle is pointing indicates the direction in which the AIS vessel is moving.
	Target is selected.
	Target is activated. The target appears larger on the chart. A green line attached to the target indicates the heading of the target. The MMSI, speed, and direction of the vessel appear beneath the target, if the details setting has been set to Show (page 25). If the AIS transmission from the vessel is lost, a message banner appears.
	Target is lost. A green X indicates that the AIS transmission from the vessel is lost, and the chartplotter displays a message banner asking whether the vessel should continue to be tracked. If you discontinue vessel tracking, the lost target symbol disappears from the chart or the 3D chart view.
	Dangerous target in range. The target flashes while an alarm sounds and a message banner appears. After the alarm is acknowledged, a solid red triangle with a red line attached to it indicates the location and the heading of the target. If the safe-zone collision alarm (page 26) is set to Off , the target flashes, but the audible alarm does not sound and the alarm banner does not appear. If the AIS transmission from the vessel is lost, a message banner appears.


	The location of this symbol indicates the closest point of approach to a dangerous target, and the numbers near the symbol indicate the time to the closest point of approach to that target.
	Dangerous target is lost. A red X indicates that the AIS transmission from the vessel is lost, and the chartplotter displays a message banner asking whether the vessel should continue to be tracked. If you discontinue vessel tracking, the lost dangerous target symbol disappears from the chart or the 3D chart view.

Heading and Projected Course of Activated AIS Targets

When heading and course over ground information are provided by an activated AIS target, the heading of the target appears on a chart as a solid line attached to the AIS target symbol. A heading line does not appear on a 3D chart view.


The projected course of an activated AIS target appears as a dashed line on a chart or a 3D chart view. The length of the projected course line is based on the value of the projected heading setting (page 25). If an activated AIS target is not transmitting speed information, or if the vessel is not moving, a projected course line does not appear. Changes in the speed, course over ground, or rate of turn information transmitted by the vessel can impact the calculation of the projected course line.

When course over ground, heading, and rate of turn information are provided by an activated AIS target, the projected course of the target is calculated based on the course over ground and the rate of turn information. The direction in which the target is turning, which is also based on the rate of turn information, is indicated by the direction of the barb at the end of the heading line. The length of the barb does not change.

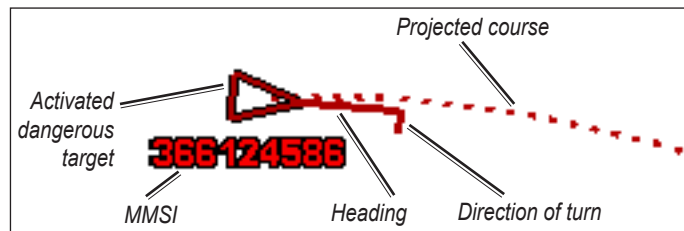

Target with Course over Ground, Heading, and Rate of Turn

When course over ground and heading information are provided by an activated AIS target, but rate of turn information is not provided, the projected course of the target is calculated based on the course over ground information.

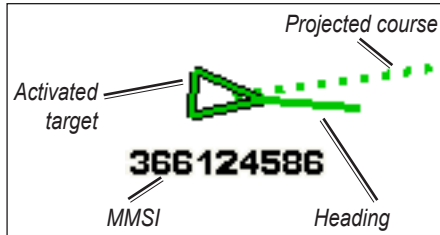

Target with Course over Ground and Heading

Showing AIS Vessels on a Chart or on a 3D Chart View

AIS requires the use of an external AIS device and active transponder signals from other vessels.

You can configure how other vessels appear on a chart or on a 3D chart view. The display range configured for one chart or one 3D chart view are applied only to that chart or to that 3D chart view. The details, projected heading, and trails settings configured for one chart or one 3D chart view are applied to all charts and to all 3D chart views.

NOTE: Mariner's Eye 3D charts are available only if you use a BlueChart g2 Vision SD card.

1. From the Home screen, select **Charts**.

2. Select **Navigation Chart, Fishing Chart, Perspective 3D**, or **Mariner's Eye 3D**.
3. Select **MENU > Other Vessels > Display Setup**.
 - **Display Range**—allows you to select the distance from your location in which AIS vessels appear. Select a distance or select **Show All**.
 - **Details**—shows or hides details about AIS-activated vessels.
 - **Proj. Heading**—allows you to enter the projected heading time for AIS-activated vessels.
 - **Trails**—shows the tracks of AIS vessels. Select the length of the track that appears using a trail, or turn the trail off.

Activating a Target for an AIS Vessel

NOTE: Mariner's Eye 3D charts are available only if you use a BlueChart g2 Vision SD card.

1. From the Home screen, select **Charts**.
2. Select **Navigation Chart, Fishing Chart, Perspective 3D**, or **Mariner's Eye 3D**.
3. Use the **Rocker** to select an AIS vessel. Press **SELECT**.
4. Select **AIS Vessel > Activate Target**.

Viewing Information about a Targeted AIS Vessel

You can view the AIS signal status, MMSI, GPS speed, GPS heading, and other information that is reported about a targeted AIS vessel.

1. From the Home screen, select **Charts**.
2. Select **Navigation Chart, Fishing Chart, Perspective 3D**, or **Mariner's Eye 3D**.
3. Use the **Rocker** to select an AIS vessel. Press **SELECT**.
4. Select **AIS Vessel**.

Deactivating a Target for an AIS Vessel

NOTE: Mariner's Eye 3D charts are available only if you use a BlueChart g2 Vision SD card.

1. From the Home screen, select **Charts**.
2. Select **Navigation Chart, Fishing Chart, Perspective 3D**, or **Mariner's Eye 3D**.
3. Use the **Rocker** to select an AIS vessel. Press **SELECT**.
4. Select **AIS Vessel > Deactivate**.

Setting the Safe-zone Collision Alarm

The safe-zone collision alarm can be used with AIS. The safe zone is used for collision avoidance, and can be customized. All safe-zone collision alarm settings are applied to all charts and to all 3D chart views.

1. From the Home screen, select **Charts**.
2. Select **Navigation Chart, Fishing Chart, Perspective 3D**, or **Mariner's Eye 3D**.

3. Select **MENU > Other Vessels > AIS Alarm > On**.

A message banner appears and an alarm sounds when an AIS-activated vessel enters the safe-zone ring around your boat. The object is also labeled as dangerous on the screen. The **Off** setting disables the message banner and the audible alarm, but the object is still labeled as dangerous on the screen.

4. Select **Range** to set the measured radius of the safe-zone ring to a specified distance from 500 ft. to 2.0 nm (or from 150 m to 3.0 km, or from 500 ft. to 2.0 mi.).
5. Select a distance.
6. Select **Time To** to sound an alarm if AIS determines that a target will intersect the safe zone within the defined time interval (ranging from 1 to 24 minutes).
7. Select a time.

Viewing a List of AIS Targets

NOTE: Mariner's Eye 3D charts and Fish Eye 3D charts are available only if you use a BlueChart g2 Vision SD card.

The AIS target list shows information about all of the boats your unit is monitoring. The AIS list shows the MMSIs or (if the boat is broadcasting it) names of the AIS boats and is sorted by range. The boat nearest to your boat appears at the top of the list.

1. From the Home screen, select Charts.
2. Select **Navigation Chart**, **Fishing Chart**, **Perspective 3D**, or **Mariner's Eye 3D**.
3. Select **MENU** > **Other Vessels** > **AIS List**.

Making a Call to an AIS Target

See “Calling an AIS Target” ([page 67](#)).

Where To?

Use the **Where To?** option on the Home screen to search for, and navigate to, waypoints, routes, tracks, and services such as nearby fuel, repairs, and ramps.

NOTE: You must create waypoints and routes before you can navigate to them.

You can navigate to a destination using one of three methods: **Go To**, **Route To**, or **Guide To**.

- **Go To**—takes you directly to the destination.
- **Route To**—creates a route from your location to a destination, allowing you to add turns to the route.
- **Guide To**—uses BlueChart g2 Vision chart data to suggest the best path to your destination (Auto Guidance). You must be using a BlueChart g2 Vision SD card for this option to appear.

CAUTION

The Auto Guidance feature of the BlueChart g2 Vision data card is based on electronic chart information. That data does not assure obstacle and bottom clearance. Carefully compare the course to all visual sightings and avoid any land, shallow water, or other obstacles that may be in your path.

When using Go To, a direct course and a corrected course may pass over land or shallow water. Use visual sightings and steer to avoid land, shallow water, and other dangerous objects.

Navigating to a Destination

You can search for, and navigate to, waypoints, routes, tracks, and services such as nearby fuel, repairs, and ramps.

To begin navigating:

1. From the Home screen, select **Where To?**.
2. Select the category to which you want to navigate.



3. Select a destination.



NOTE: Press the right or left arrow on the **Rocker** to view additional information or to display the location on a chart.

4. Select **Navigate To**.

5. Select **Go To** or **Route To**.

OR

Select **Guide To** when using a preprogrammed BlueChart g2 Vision card to use Auto Guidance.

6. Follow the colored line on the screen to the destination.



To stop navigating:

Press **MENU**, and select **Stop Navigating**.

To search for a destination by name:

1. From the Home screen, select **Where To?** > **Search by Name**.
2. Use the **Rocker** to select characters and spell at least a portion of the name of your destination.
3. Press **SELECT** to view the 50 nearest destinations that contain your search criteria.
4. Select the location > **Navigate To** > **Go To** or **Route To** (or **Guide To** when using a preprogrammed BlueChart g2 Vision card).

Creating and Using Waypoints

You can store up to 3,000 waypoints with a user-defined name, symbol, depth, water temperature, location, and comment for each waypoint.

1. From the Home screen, select **Charts > Navigation Chart > MENU > Waypoints & Tracks > New Waypoint.**

OR

From the Home screen, select **Information > User Data > Waypoints > Options > New Waypoint.**

2. Create a waypoint using one of the following:
 - **Enter Coordinates**—enter the grid coordinates of the new waypoint.
 - **Use Chart**—use the Rocker to move the pointer to the location where you want create the waypoint. Press **SELECT**.
 - **Use Current Position**—Create a waypoint at your current location.

To mark your current location as a waypoint:


From any screen, press the **MARK** key.

- **Edit Waypoint**—designate a specific name, symbol, water depth, or water temperature.
- **Delete**—deletes the waypoint.

- **Man Overboard**—designates the current location as a Man Overboard location.
- **Right or Left Arrow**—switches between waypoint information and the Navigation chart.

NOTE: Selecting **MARK** creates a waypoint only at your present location.

To edit an existing waypoint:

1. From the Navigation chart, use the map pointer () to highlight the waypoint on the Navigation chart.

OR

From the Home screen, select **Information > User Data > Waypoints.**


2. Select the waypoint you want to edit.
3. Select **Edit Waypoint.**
4. Select the waypoint attribute you want to change (**Name, Symbol, Depth, Water Temp, Comment, or Position**).

To move the waypoint on the Navigation chart:


1. Select the waypoint on the Navigation chart.
2. Select **Review**. (The **Review** button is only shown when more than one waypoint is in the vicinity.)
3. Select the button for the waypoint you want to edit.
4. Select **Move**.

5. Press **SELECT** to save the new location, or press **MENU** to cancel the move.

To view waypoint information on the Navigation chart:

1. From the Navigation chart, use the map pointer () to highlight the waypoint on the Navigation chart and press **SELECT**.
2. Select an option.
 - Select **Review** or the name of the waypoint to view details of objects in the vicinity of the cursor. (The **Review** button is only shown when more than one waypoint is in the vicinity.)
 - Select **Navigate To** to navigate to the selected location.
 - Select **Create Waypoint** to mark a waypoint at the cursor location.
 - Select **Information** to view tide ([page 42](#)), current ([page 43](#)), celestial ([page 43](#)), chart notes, or local services information near the cursor.


To measure the distance and bearing of an object from your current location:

1. From the Navigation chart, use the map pointer () to highlight the object on the Navigation chart and press **SELECT** > **Measure Distance**. The measurement information appears in the lower-right corner of the screen. Use the **Rocker** to move the pointer and measure the distance to other locations. Select **MENU** > **Stop Measuring** to remove the measuring line.

To view and sort or filter a list of all waypoints:

From the Home screen, select **Information** > **User Data** > **Waypoints** > **Options**. You can then sort the list by name, by symbol, or by distance from your current location. You can also filter the list by name or symbol.


To delete a waypoint or an MOB:

1. From the Navigation chart, use the map pointer () to highlight the waypoint or the MOB on the Navigation chart.
OR
From the Home screen, select **Information** > **User Data** > **Waypoints**.
2. Select the waypoint or the MOB you want to delete.
3. Select **Review** > **Delete** (The **Review** button is only shown when you have selected a waypoint on the Navigation chart and more than one waypoint is in the vicinity.)

Creating and Using Routes


You can create and store up to 100 routes, with up to 250 waypoints each.

To create a route from your present location:

1. From the Navigation chart, use the map pointer () to select your destination.
2. Select **Navigate To** > **Route To**.

Where To?

- Use the map pointer (🖱️) to select the location at which you want to make the last turn toward your destination.
- Press **SELECT**. Repeat this step to add additional turns.

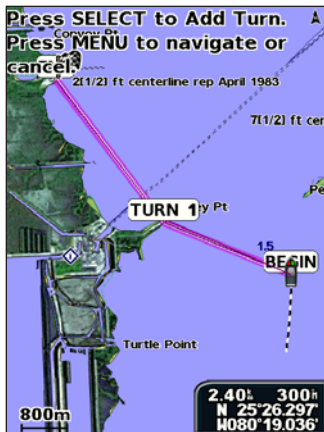

- Press **MENU** to cancel, to undo the last turn, or to begin navigating the route.

To save a route you are currently navigating:

- From the Home screen, select **Information > User Data > Routes**.
- Select **Unsaved Route > Save/Edit > Save Route**.
- Enter the route name.

To create a route in another location:

- From the Home screen, select **Information > User Data > Routes > New Route**.
- Select **Use Chart** or **Use Waypoint List**.
- If you select **Use Chart**, use the map pointer (🖱️) to select the initial location at which you want to start the new route. If you select **Use Waypoint List**, select the first waypoint on the route.
- Choose the location of the first turn and press **SELECT**. Repeat until the route is complete.
- Select **MENU** to save the route.
- Select the route to edit the route, delete the route, or navigate to the route.

To create a route using Auto Guidance (when using a preprogrammed BlueChart g2 Vision card):

- From the Navigation chart, select your destination.
- Select **Navigate To > Guide To**. Your route is calculated.

NOTE: You can change the Auto Guidance path to a route by selecting the end of the path and selecting **Navigate To > Route To**. The Auto Guidance path stays on the screen, allowing you to trace it while creating a route.

To edit a route:

- From the Home screen, select **Information > User Data > Routes**.
- Select the route to edit.

3. Select **Edit Route**. You can edit the route name or use the chart or turn list to edit the route turns.

To delete a route:

1. From the Home screen, select **Information > User Data > Routes**.
2. Select the route to delete.
3. Select **Delete > OK**.

To bypass a waypoint on a route:


1. Create a route as previously described.
2. Select the waypoint that follows the waypoint you are bypassing.
3. Select **Navigate To > Go To** (or **Route To**).

Using Tracks

A track is a recording of your path. The track currently being recorded is the active track. An active track can be saved.

To turn on the track log:

From any chart except the Fish Eye 3D, select **MENU > Waypoints & Tracks > Tracks > On**. A trailing line on the chart indicates your track.

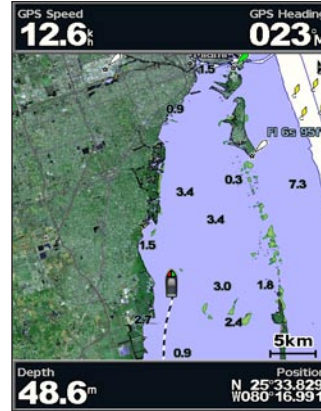

To save the active track:

1. From any chart except the Fish Eye 3D, select **MENU > Waypoints & Tracks > Active Tracks > Save Active Track**.
2. Select either the time the current track began (or **Midnight**, if shown) or **Entire Log**.
3. To name the track, change the color of the track, or save it as a route, select **Edit Track**.

To clear the active track:

From any chart except the Fish Eye 3D, select **MENU > Waypoints & Tracks > Active Tracks > Clear Active Track**. The track memory is cleared and the current track continues to be recorded.

To retrace the active track:

1. From the Navigation or Perspective 3D chart, select **MENU > Waypoints & Tracks > Active Tracks > Follow Active Track**.
2. Select either the time the current track began or **Entire Log**.
3. Follow the colored line on the screen.

To edit or delete a saved track:

1. From any chart except the Fish Eye 3D, select **MENU > Waypoints & Tracks > Saved Tracks**.
2. Select the track you want to edit or delete.
3. Select **Edit Track** to change the name or color of the track, or select **Delete** to delete the track.

To set active Track Options:

From any chart except the Fish Eye 3D, select **MENU > Waypoints & Tracks > Active Track > Active Track Options**.

Record Mode—select **Off**, **Fill**, or **Wrap**.

- **Off**—does not record a track log.
- **Fill**—records a track log until the track memory is full.
- **Wrap**—continuously records the track log, replacing the oldest track data with new data.

Record Interval—defines the frequency at which the track plot is recorded. Recording more-frequent plots is more accurate but fills the track log faster.

- **Interval**—sets whether the interval is determined by distance, time, or resolution. (Select **Change** to set the value.)
- **Distance**—records the track based on a distance between points.
- **Time**—records the track based on a time interval.
- **Resolution**—records the track plot based on a variance from your course. This setting is recommended for the most-efficient use of memory. The distance value (**Change**) is the maximum error allowed from the true course before recording a track point.
- **Change**—sets the value of the interval.

Track Color—sets the color of the track plot.

Using BlueChart g2 Vision

NOTICE

BlueChart g2 Vision data cards are not waterproof. When you are not using the card, keep it in the original packaging for safekeeping and store it away from exposure to sun and rain to prevent damage to the card.

BlueChart g2 Vision data cards are susceptible to damage from static electricity. In low-humidity environments, you should ground yourself on a large metal object before handling the card to prevent damage to the card.

Optional BlueChart g2 Vision preprogrammed SD cards allow you to get the most out of your unit. In addition to detailed marine charting, BlueChart g2 Vision has the following features:

- **Mariner's Eye 3D**—provides a view from above and behind the boat for a three-dimensional navigation aid (page 16). The BlueChart g2 Vision Mariner's Eye 3D is more detailed than the preloaded data.
- **Fish Eye 3D**—provides an underwater 3D view that visually represents the sea floor according to the information on the chart.
- **High Resolution Satellite Imagery**—provides high-resolution satellite images for a realistic view of the land and water on the Navigation chart.
- **Aerial Photos**—provides a view of marinas and other navigationally significant aerial photos to help you visualize your surroundings.
- **Detailed Roads and POI data**—provides a view of roads, restaurants, and other points of interest (POIs) along the shore.
- **Current Data**—provides a view of current-station information

(page 43).

- **Auto Guidance**—uses the chart data and specified boat safe depth to determine the best course to your destination (page 49).

NOTE: You cannot transfer BlueChart g2 Vision data from the SD card to your computer for backup. You can transfer BlueChart g2 Vision data from the SD card to your computer for viewing purposes if HomePort is installed on your PC. You can only use the SD card on BlueChart g2 Vision-compatible Garmin GPS units and when using HomePort.

Navigating with a Garmin Autopilot

When you start any type of navigation (**Go To, Route To, Guide To, or Follow Track**), if you are connected to a compatible Garmin autopilot, you are prompted to engage the autopilot.

NOTE: Autopilot can be used only with NMEA 2000 compatible chartplotters (GPSMAP 441/441s, GPSMAP 536/536s, GPSMAP 541/541s, and GPSMAP 546/546s).

Viewing Information

Use the Information screen to access information about dashboard gauges, tides, currents, user data, and other vessels.

Viewing a Compass


From the Home screen, select **Information** > **Dashboard** > **Compass**.



Viewing Numbers


You can view and customize numerical data including depth, GPS information, and navigation information. You can customize the number of fields shown and the type of information shown in each field. You can view up to six fields of numerical information.

To view the Numbers screen from the Home screen, select **Information** > **Dashboard** > **Numbers**.

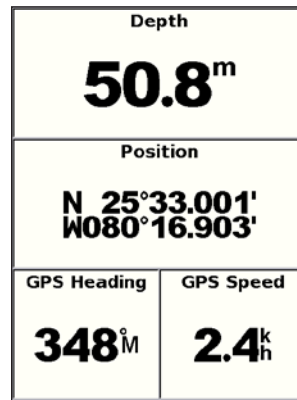

To customize the Numbers screen:

1. From the Home screen, select **Information > Dashboard > Numbers**.
2. Press **MENU** and select **Configure**.
3. Select the number of fields to show (**3, 4, 5, or 6**).
4. Select information to show in each field. Select a field to view additional information that can be shown or select **Change Page** and press the **Range (-/+)** keys to view additional fields.

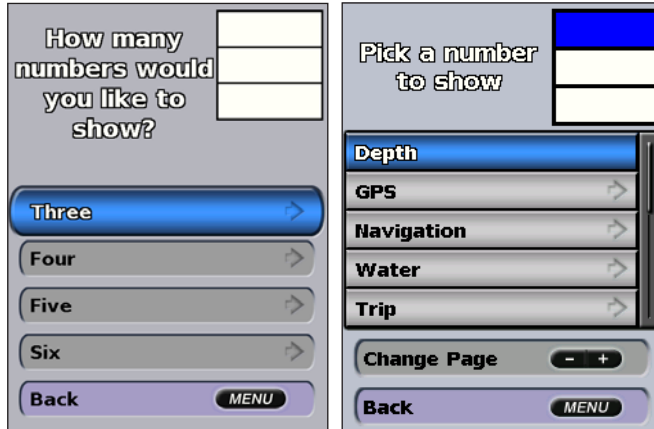**Viewing Trip Information**

From the Home screen, select **Information > Dashboard > Trip**.


Trip Odometer 244^m	Stopped Time 01:48
Moving Average 3.7^k_h	Moving Time 03:59
Total Average 0.1^k	Total Time 01:52
Maximum Speed 26.5^k	Odometer 244^m
Trip Fuel Used 0.0^L	

To reset the trip information, maximum speed, odometer, or all values, press **MENU** while viewing the trip information.

Viewing and Customizing Engine Gauges**Viewing Engine Gauges**

You must be connected to a NMEA 2000 network capable of sensing engine data to view engine gauges. See the *GPSMAP 400/500 Series Installation Instructions* for details.

From the Home screen, select **Information** > **Dashboard** > **Engine**.

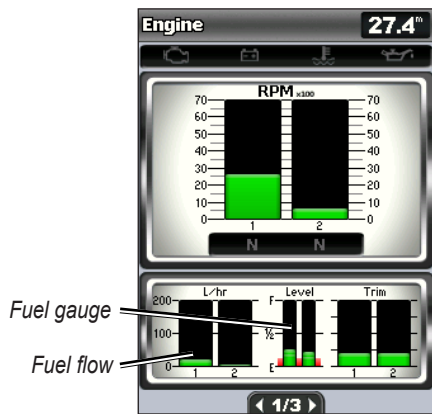

Cycling Through Engine Gauge Screens

- From the Home screen, select **Information** > **Dashboard** > **Engine**.
- Select the left and right arrows on the **Rocker** to move from one gauge screen to the next.

Customizing Engine Gauge Limits

To establish the upper and lower limits of a gauge and the range of desired standard operation, you can configure up to four values for the engine gauge. When a value exceeds the range of standard operation, the gauge face or bar becomes red.

Setting	Description
Scale minimum	This value is less than the rated minimum, and it represents the lower limit of the gauge. This setting is not available on all gauges.
Scale maximum	This value is greater than the rated maximum, and it represents the upper limit of the gauge. This setting is not available on all gauges.
Rated minimum	Represents the minimum value of the standard operating range.
Rated maximum	Represents the maximum value of the standard operating range.

- From the Home screen, select **Information** > **Dashboard** > **Engine** > **MENU** > **Gauge Setup** > **Set Gauge Limits**.
- Select a gauge.
- Select **Gauge Limits** > **Custom**.
- Select the gauge limit you want to set (**Scale Min**, **Scale Max**, **Rated Min**, or **Rated Max**).

NOTE: Some of these options may not be available for all gauges.

5. Select the gauge limit.
6. Repeat steps 4 and 5 to set additional gauge limits.

Activating Status Alarms for Engine Gauges

If you have activated gauge status alarms, when the engine sends a warning status message over the NMEA 2000 network, a gauge status alarm message appears. The gauge face or bar may become red depending on the alarm type.

From the Home screen, select **Information > Dashboard > Engine > MENU > Gauge Setup > Status Alarms > On.**

To Customize Engine Gauge Status Alarms:

1. From the Home screen, select **Information > Dashboard > Engine > MENU > Gauge Setup > Status Alarms > Custom.**
2. Select one or more engine gauge alarms that you want to turn on or off.
3. Select **Back.**

Selecting the Number of Engines Shown in Gauges

The engine gauges can show information for up to four engines.

1. From the Home screen, select **Information > Dashboard > Engine > MENU > Gauge Setup > Engine Selection > Num. Engines.**
2. Select the number of engines.

3. Select **Back.**

To select the engines for which information appears in the gauges, select **Edit Engines** and complete steps 2 through 5 of “Selecting the Engines Shown in Gauges” (following section).

Selecting the Engines Shown in Gauges

You must manually select the number of engines shown in the engine gauges (see above) before you can select the engines for which information appears in the gauges.

1. From the Home screen, select **Information > Dashboard > Engine > MENU > Gauge Setup > Engine Selection > Edit Engines.**
2. Select **First Engine.**
3. Select the number of the engine for which you want to view information in the first gauge or bar.
For example, if you select “3,” the first engine bar shows information for the engine identified as “Engine3” on the NMEA 2000 network.
4. Repeat step 3 for the second, third, and fourth engine bar, as needed.
5. Select **Back.**

Configuring Engine Gauges

The amount of fuel on board can be represented by either the total fuel level (numeric) or by individual tank level (graphic).

From the Home screen, select **Information** > **Dashboard** > **Engine** > **MENU** > **Gauge Setup** > **Fuel Display**.


- **Use Total Fuel Level**—select to display a numeric value for the total fuel level.
- **Use Fuel Tank Levels > Num. Tanks**—select to display a graphical representation of all the specified tanks.

Viewing and Synchronizing Fuel Gauges

Viewing Fuel Gauges

To view engine information, your chartplotter must be connected to a device capable of measuring fuel level, fuel flow, or both.

From the Home screen, select **Information** > **Dashboard** > **Engine**.

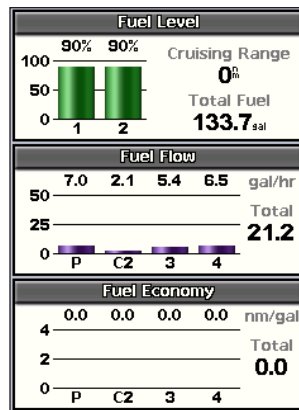


Synchronizing Fuel Gauge Readings with Fuel Levels

From the Home screen, select **Information** > **Dashboard** > **Fuel** (or **Engine**) > **MENU**.

- **Fill Up All Tanks**—select when your tanks are full. The fuel level is reset to maximum capacity. Adjust if necessary.
- **Add Fuel To Boat**—select when you have added less than a full tank. Enter the amount of fuel added. Select **Done**. An estimate of the fuel added appears. Adjust if necessary.
- **Set Total Fuel Onboard**—select to specify the total fuel in your tanks. Select **Done**.

Viewing and Customizing Wind Gauges

From the Home screen, select **Information** > **Dashboard** > **Wind**.

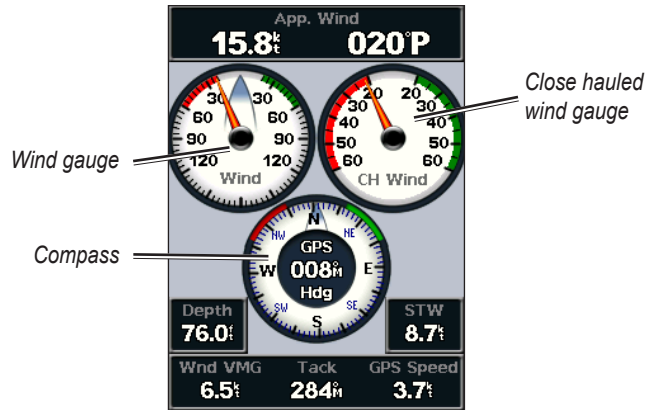

Selecting True, Apparent, or Ground Wind for the Wind Gauges

The chartplotter must be connected to the peripheral devices listed below to capture the data shown on the wind speed graph.

Wind Speed	Description	Required Sensors
Apparent Wind	Shows wind speed data based on the flow of air experienced while on a boat in motion.	A wind sensor.
True Wind	Shows wind speed data based on the flow of air experienced while on a stationary boat.	A wind sensor and a water speed sensor; or a wind sensor and a GPS antenna.
Ground Wind	Shows wind speed data based on the flow of air experienced while on shore.	A wind sensor, a water-speed sensor, a heading sensor, and a GPS antenna; or a wind sensor and a GPS antenna; or a wind sensor, a water-speed sensor, and a heading sensor.

1. From the Home screen, select **Information** > **Dashboard** > **Wind** > **MENU** > **Wind Type**.
2. Select **Apparent Wind**, **True Wind** or **Ground Wind**.

Configuring the Heading Source

You can specify the source of the heading displayed on the wind gauge. Magnetic heading is the heading data received from a heading (or magnetic) sensor, and GPS heading data is calculated by your chartplotter GPS.

From the Home screen, select **Information > Dashboard > Wind > MENU > Heading Source**.

Selecting the Range of the Close Hauled Wind Gauge


You can specify the range of the close hauled wind gauge for both the upwind scale and the downwind scale.

From the Home screen, select **Information > Dashboard > Wind > MENU**.

- Select **Change Upwind Scale**. Set the maximum and minimum angle values that appear when the upwind close hauled wind gauge appears.
- Select **Change Downwind Scale**. Set the maximum and minimum angle values that appear when the downwind close hauled wind gauge appears.

Viewing Tide-station Information

1. Select **Information > Tides & Currents > Tides**.
2. Select a tide station. Tide-station information is shown.

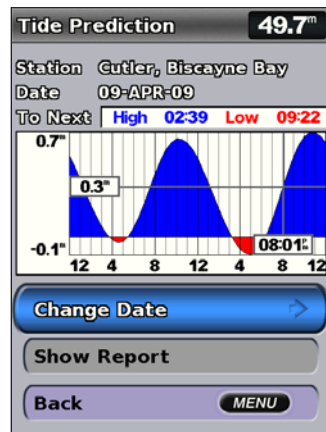


- Select **Change Date > Manual** to view tide information for a different date. Select the left and right arrows on the **Rockers** to move the time line.
- Select **Show Report** to view the Tide Prediction Report for the selected station.

Viewing Current Information

Use the Current Prediction screen to view information for currents.

1. Select **Information > Tides & Currents > Currents**.
2. Select a current station. Current-station information is shown.

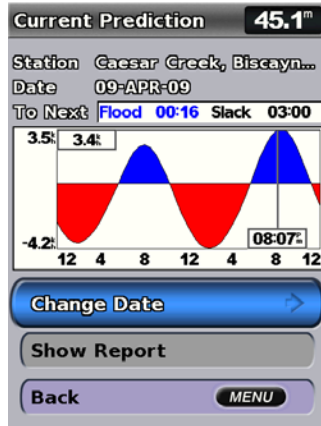

Select **Change Date > Manual** to view current-station information for a different date.


Select **Show Report** to view the Current Prediction Report for the selected station.

NOTE: You can select both tide-station and current-station information directly from the Navigation chart.

Viewing Celestial Information

The Celestial screen shows information about sunrise, sunset, moonrise, moonset, the moon phase, and the approximate sky view location of the sun and moon. By default, the chartplotter shows celestial information for the present date and time.

From the Home screen, select **Information > Celestial**.

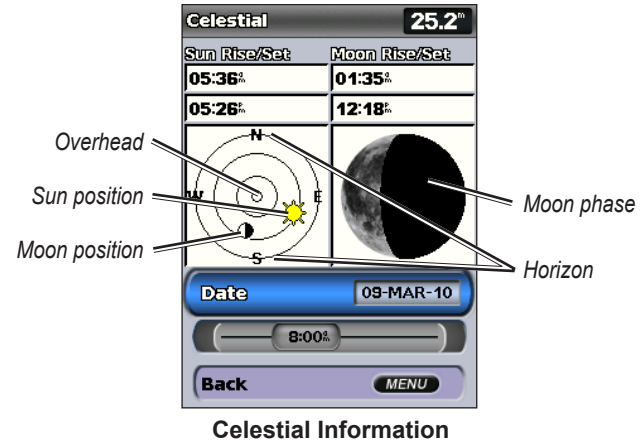

Celestial Information

Viewing Celestial Information for a Different Date

You can select a date and time for which to view celestial information, and you can view the moon phase for the selected date and time.

1. From the Home screen, select **Information** > **Celestial** > **Date**.
2. Change the date to view celestial information for a different date.

Viewing User Data

To view user data, from the Home screen, select **Information** > **User Data**.

Waypoints—view a list of all saved waypoints (page 15).

Routes—view a list of saved routes (page 31).

Tracks—view a list of saved tracks (page 33).

Data Transfer—transfer waypoints, routes, and tracks to and from an SD card or network.

Clear User Data—erase all user waypoints, routes, and tracks.

To copy or merge MapSource data to your chartplotter:

1. Insert an SD card into your chartplotter to allow it to place a file on the SD card. This file provides information to MapSource to format the data. This only needs to be done the first time you copy or merge MapSource data to your chartplotter from a specific SD card.

2. Check your MapSource version on the computer by clicking **Help** > **About MapSource**. If the version is older than 6.12.2, update to the most-current version by clicking **Help** > **Check for Software Updates**, or check the Garmin Web site at www.garmin.com.
3. Insert the SD card into an SD card reader that is attached to the computer.
4. From within MapSource, click **Transfer** > **Send to Device**.
5. From the Send to Device window, select the drive for the SD card reader and the types of data you want to copy to your chartplotter.
6. Click **Send**.
7. Insert the SD card into the SD card slot on the front of the unit.
8. From the Home screen on your chartplotter, select **Information** > **User Data** > **Data Transfer**.
9. Complete one of the following:
 - Select **Card** > **Merge From Card** to transfer data from the SD card to the chartplotter and combine it with existing user data.
 - Select **Card** > **Replace From Card** to overwrite the data on your chartplotter.
10. Select the file name from the list. The data is transferred from the SD card to the chartplotter.

To copy or merge HomePort data to your chartplotter:

1. Insert an SD card into an SD card reader that is attached to the computer.
2. From within HomePort, click the folders or items you want to transfer.
3. Click **File > Export**.
 - Click **Export [Folder Name]** to export all items in the selected folder.
 - Click **Export Selection** to export only the selected items.
4. Browse to the location on the SD card where you want to save the file, select a file format, and type a file name.
5. Insert the SD card into the SD card slot on the front of the unit.
6. From the Home screen on your chartplotter, select **Information > User Data > Data Transfer**.
7. Complete one of the following:
 - Select **Card > Merge From Card** to transfer data from the SD card to the chartplotter and combine it with existing user data.
 - Select **Card > Replace From Card** to overwrite the data on your chartplotter.
8. Select the file name from the list. The data is transferred from the SD card to the chartplotter.

To transfer data (waypoints, routes, tracks) to an SD card:

1. Insert an SD card into the SD card slot on the front of the unit.
2. From the Home screen, select **Information > User Data > Data Transfer > Save To Card**.

NOTE: If your unit is NMEA 2000 compatible, select **Card** instead of **Save To Card**.
3. Complete one of the following:
 - Select the file name from the list.
 - Select **Add New File** to create a new file. Enter the file name using the **Rocker**, and select **Done**.
4. Select **Yes** to save waypoints, routes, and tracks to the SD card. The file name is saved with an .ADM extension. To use the card in MapSource, name the file <userdata.adm>.

To transfer data (waypoints, routes, tracks) from an SD card:

1. Insert an SD card into the SD card slot on the front of the unit.
2. From the Home screen, select **Information > User Data > Data Transfer**.

NOTE: If your unit is NMEA 2000 compatible, select **Card** instead of **Data Transfer**.

3. Complete one of the following:
 - Select **Merge From Card** to transfer data from the SD card to the chartplotter and combine it with existing user data.
 - Select **Replace From Card** to overwrite items on your chartplotter.
4. Select the file name from the list. The data is transferred from the SD card to the chartplotter.

To copy the built-in maps to an SD card:

1. Insert an SD card (at least 4 GB) into the SD card slot on the front of the unit.
2. From the Home screen, select **Information > User Data > Data Transfer > Copy Built-In Map** to copy the maps loaded onto your chartplotter to the SD card.

To transfer data to or from a NMEA 2000 network:

1. Connect the unit to a NMEA 2000 network. (Refer to the *GPSMAP 400/500 Installation Instructions*.)

Only the following units are NMEA 2000 compatible:

GPSMAP 441/441s	GPSMAP 536/536s
GPSMAP 541/541s	GPSMAP 546/546s

2. From the Home screen, select **Information > User Data > Data Transfer > Network**.

3. Complete one of the following:
 - Select **Clone User Data** to transfer waypoints, routes, and tracks to other chartplotters connected to the network. Existing data is overwritten on those chartplotters.
 - Select **Merge User Data** to transfer data between all the chartplotters connected to the network. Unique data is combined with existing data on every chartplotter.

To back up data to a computer:

1. Insert an SD card into the SD card slot on the front of the unit.
2. From the Home screen, select **Information > User Data > Data Transfer > Card**.

NOTE: If your unit is not NMEA 2000 compatible, select **Save To Card** instead of **Card**.
3. Complete one of the following:
 - Select the file name from the list.
 - Select **Add New File** to create a new file. Enter the file name using the **Rocker**, and press **SELECT**.
4. Remove the SD card from the unit, and insert it into an SD card reader attached to a computer.
5. From Windows® Explorer, open the Garmin\UserData folder on the SD card.
6. Copy the appropriate .ADM file on the card, and paste it to any location on the computer.

To restore backup data to your chartplotter:

1. Copy the appropriate .ADM file from the computer to an SD card in the Garmin\UserData folder.
2. Insert the SD card into your chartplotter.
3. From the Home screen on your chartplotter, select **Information** > **User Data** > **Data Transfer** > **Replace From Card**.

To delete all waypoints, routes, and tracks:

1. From the Home screen on your chartplotter, select **Information** > **User Data** > **Clear User Data**.
2. Select **Waypoints**, **Routes**, **Saved Tracks**, or **All**.
3. Select **OK** to delete the data.

Viewing Other Vessels

To view information about other boats from the Home screen, select **Information** > **Other Vessels**.

NOTE: To view information about other boats, your unit must be connected to an external AIS (Automatic Identification System) or DSC (Digital Selective Calling) device. See [page 63](#) for more information.

AIS List—view information about all of the boats your unit is monitoring. See [page 23](#).

DSC List—view the 100 most recent calls. The DSC List shows the most recent call from a boat. If a second call is received from the same boat, it replaces the first call in the list.

Select **Options** to sort calls by name, type, MMSI, distance from your boat, or the time the call was received.

Select **Options** > **Delete All** to delete all the calls from the list.

To add a DSC contact:

1. Select **Add Contact**.
2. Use the **Rocker** to enter the MMSI number of the vessel.
3. Use the **Rocker** to enter the name of the vessel.

Configuring the Chartplotter

Use the Configure screen to configure unit settings.

Configuring System Settings

To change general system settings from the Home screen, select **Configure > System**.

Simulator—turn Simulator mode (page 5) on or off. Select **Setup** to set simulator options, such as simulated position, speed, and direction.

Beeper/Display—select **Beeper** to set when the unit makes audible sounds. Select **Display > Backlight** to brighten or darken the backlight. Select **Display > Color Mode** to switch between Day mode and Night mode (page 4).

Auto Power—turn Auto Power **On** or **Off**. When **On** is selected, the chartplotter will automatically turn on whenever power is applied, unless the chartplotter is turned off with the Power Key before power is lost.

GPS—view GPS satellites.

- **Skyview**—view the GPS satellite constellation
- **WAAS/EGNOS**—toggle WAAS (in North America) or EGNOS (in Europe) on or off. WAAS/EGNOS can provide more-accurate

GPS position information. However, when using WAAS or EGNOS, the device takes longer to acquire satellites.

- **Speed Filter**—select **On**, **Off**, or **Auto**. The speed filter averages the speed of your boat over a short period of time for smoother speed values.

System Information—view system information and reset factory settings. The **Save to Card** button is provided as a troubleshooting tool. A Garmin Product Support representative may ask you to use this feature to retrieve data about your chartplotter.

Event Log—displays a list of system events. Select an event to view additional information.

Configuring Units of Measure

To change units of measure from the Home screen, select **Configure > Preferences > Units**.

System Units—a global setting that defines individual units of measure at the same time: **Statute (mh, ft, °F)**, **Metric (kh, m, °C)**, **Nautical (kt, ft, °F)**, or **Custom**. Select **Custom** to individually define units of measure for depth, temperature, distance, speed, elevation, volume, and pressure.

NOTE: You must be receiving NMEA sonar depth data or have a built-in sonar with a temperature-capable transducer to view depth and water temperature information.

Heading—sets the reference used in calculating heading information.

- **Auto Magnetic**—automatically sets the magnetic declination for your location.
- **True**—sets true north as the heading reference.
- **Grid**—sets grid north as the heading reference (000°).
- **User Magnetic**—allows you to set the magnetic variation value.

Position Format—change the coordinate style in which a given location reading appears. The position format should match the map or chart that you are using.

Map Datum—change the coordinate system in which the map is structured. Do not change the map datum unless you are using a map or chart that specifies a different map datum.

Time—set the time options.

- **Time Format**—select **12-hour**, **24-hour**, or **UTC** time format.
- **Time Zone**—set the time zone you want displayed for time readings. If **Auto** is selected for the Time Zone, the DST option is not available and is automatically set to **Auto**.
- **DST (Daylight Saving Time)**—select **Off**, **On**, or **Auto**. The auto setting automatically turns daylight saving time on or off, depending on the time of year.

- **Baro. Ref. Time**—specify the reference time (from 30 minutes to 24 hours) used to calculate the barometric pressure trend. The trend is displayed on the wind gauge when ground wind is selected (page 41) or on the Cruising data bar (page 9).

Changing the System Language

To change the system language, from the Home screen, select **Configure > Preferences > Language**. Select the language.

Configuring Navigation Preferences

To change navigation preferences, from the Home screen, select **Configure > Preferences > Navigation**.

Route Labels—for saved routes, this determines whether route turns are indicated by number (Turn 1, Turn 2, and so on) or by waypoint name, or whether the description of turns is hidden.

Turn Transition—set how much time or how far before a turn in a route that you transition to the next leg.

Speed Sources—specify the sensor used for wind numbers and fuel economy. Select **Wind** or **Fuel Economy** to toggle between water (from a water-speed sensor) and GPS (from the calculated GPS speed).

Auto Guidance—set the Auto Guidance parameters:

- **Safe Depth**—set the minimum depth (chart depth datum) to allow when calculating an Auto Guidance path. A safe depth of less than one meter is not allowed when using Auto Guidance.
- **Safe Height**—set the minimum height (chart height datum) of a bridge that your boat can safely travel under.
- **Shoreline Distance**—set the safe distance for your boat from the shore: **Nearest**, **Near**, **Normal**, **Far**, or **Farthest**.

Shoreline Distance Auto Guidance Setting

The Shoreline Distance setting indicates how close to the shore you want the auto-guidance line to be placed. The auto-guidance line may move if you change this setting while navigating.

The available values for the Shoreline Distance setting (**Nearest**, **Near**, **Normal**, **Far**, or **Farthest**) are relative, not absolute. To ensure that the auto-guidance line is placed an appropriate distance from shore, you can assess the placement of the auto-guidance line using one or more familiar destinations that require navigation through a narrow waterway.

To set the distance from shore:

1. Dock your boat or drop anchor.
2. From the Home screen, select **Configure > Preferences > Navigation > Auto Guidance > Shoreline Dist. > Normal**.
3. From Home screen, select **Where To? > Waypoints**.

4. Select a waypoint for a destination that you have navigated to previously.
5. Select **Navigate To > Guide To**.
6. Review the placement of the Auto Guidance line. Determine whether the line safely avoids known obstacles, and whether the turns enable efficient travel.
 - If the placement of the Auto Guidance line is satisfactory, select **MENU > Navigation Options > Stop Navigation**. Proceed to step 9.
 - If the Auto Guidance line is too close to known obstacles, from the Home screen, select **Configure > Preferences > Navigation > Auto Guidance > Shoreline Distance > Far**.
 - If the turns in the Auto Guidance line are too wide, from the Home screen, select **Configure > Preferences > Navigation > Auto Guidance > Shoreline Distance > Near**.
7. If you selected **Near** or **Far** in step 6, review the placement of the Auto Guidance line. Determine whether the line safely avoids known obstacles, and whether the turns enable efficient travel.
 - If the placement of the Auto Guidance line is satisfactory, select **MENU > Navigation Options > Stop Navigation**. Proceed to step 9.
 - If the Auto Guidance line is too close to known obstacles, from the Home screen, select **Configure > Preferences > Navigation > Auto Guidance > Shoreline Distance > Farthest**.

- If the turns in the Auto Guidance line are too wide, from the Home screen, select **Configure > Preferences > Navigation > Auto Guidance > Shoreline Distance > Nearest**.
8. If you selected **Nearest** or **Farthest**, review the placement of the Auto Guidance line. Determine whether the line safely avoids known obstacles, and whether the turns enable efficient travel.
 9. Repeat steps 1-8 at least once more, using a different destination each time, until you are familiar with the functionality of the Shoreline Distance setting.

Configuring Communications Settings

To change the communications settings from the Home screen, select **Configure > Communications**.

Serial Port 1—configures the input/output format for serial port 1 to use when connecting your chartplotter to external NMEA devices, a computer, or other Garmin devices.

- **Garmin Data Transfer**—supports the input or output of Garmin-proprietary data for communicating with Garmin software.
- **NMEA Standard**—supports the input or output of standard NMEA 0183 data, DSC, and sonar NMEA input support for the DPT, MTW, and VHW sentences.
-

- **NMEA High Speed**—supports the input or output of standard 0183 data for most AIS receivers.

Serial Port 2—configures the input/output format for serial port 2 to use when connecting your chartplotter to external NMEA devices, a computer, or other Garmin devices.

NMEA 0183 Setup—enable or disable NMEA 0183 output sentences for sounder, route, system, and Garmin NMEA settings.

To enable or disable NMEA 0183 output sentences:

1. From the Home screen, select **Configure > Communications > NMEA 0183 Setup**.
2. Select a setting (**Sounder, Route, System, or Garmin**).
3. Select the NMEA 0183 output sentence to toggle the output on or off.
 - **Posn. Precision**—adjust the number of digits (**Two Digits, Three Digits, or Four Digits**) to the right of the decimal point for transmission of NMEA output.
 - **Waypoint IDs**—determine how the unit identifies waypoint identifiers (**Names or Numbers**).
 - **Defaults**—resets all NMEA 0183 sentences to the default setting.

NMEA 2000 Setup

NOTE: The GPSMAP 431/431s and GPSMAP 531/531s are not NMEA 2000 compatible.

- **Device List**—lists the NMEA 2000 devices on your network. If a NMEA 2000 device has configuration options or settings, select the device for a list of options.
- **Label Devices**—allows you to name your engines and tanks so that you can better identify their location on the boat.

To label engines as numbers:

From the Home screen, select **Configure > Communications > NMEA 2000 Setup > Label Devices > Change Engine Labels > Use Numbers**.

To label engines as names:

1. From the Home screen, select **Configure > Communications > NMEA 2000 Setup > Label Devices > Change Engine Labels > Label Type > Choose Names**.
2. Select the engine you want to name.
3. Select the location of the engine: **Port (P)**, **Center (C)**, **Starboard (S)**, **Fore (F)**, or **Aft (A)**.
4. Select the label you want to use for the engine.

To label tanks as numbers:

1. From the Home screen, select **Configure > Communications > NMEA 2000 Setup > Label Devices > Change Tank Labels**.
2. Select the type of tank you want to label.
3. Select **Use Numbers**.

To label tanks as names:

1. From the Home screen, select **Configure > Communications > NMEA 2000 Setup > Label Devices > Change Tank Labels**.
2. Select the type of tank you want to label.
3. Select **Choose Names**.
4. Select a tank.
5. Select the location of the tank: **Port (P)**, **Center (C)**, **Starboard (S)**, **Fore (F)**, or **Aft (A)**.
6. Select the label you want to use for the tank.

Setting Alarms

You can set the unit to sound an audible alarm when certain conditions are met. By default, all alarms are turned off.

To set an alarm:

1. From the Home screen, select **Configure > Alarms**.
2. Select an alarm category.
3. Select an alarm.
4. Select **On** to turn on the alarm.
5. Specify alarm information.

Setting Navigation Alarms

To set a navigation alarm from the Home screen, select **Configure > Alarms > Navigation**.

Arrival—set an alarm to sound when you are within a specified distance or time from a turn or destination waypoint.

- **Type**—select whether you want arrival alarms to sound only when nearing destinations or when nearing either turns or destinations. Select **Off** to disable arrival alarms.
- **Activation**—select whether the arrival alarm triggers on time to arrival or distance to arrival.
- **Change Time/Change Distance**—if you have Activation set to Time, select **Change Time** to set the number of minutes before arrival that the alarm should sound. If you have Activation set to Distance, select **Change Distance** to set the distance before arrival that the alarm should sound. Use the **Rocker** to change the time or distance.

Anchor Drag—set an alarm to sound when you exceed a specified drift distance.

Off Course—set an alarm to sound when you are off course by a specified distance.

Setting System Alarms

To set a system alarm from the Home screen, select **Configure > Alarms > System**.

Clock—set an alarm using the system (GPS) clock. The unit must be on for the clock alarm to work.

Battery—set an alarm to sound when the battery reaches a specified low voltage.

GPS Accuracy—set an alarm to sound when the GPS location accuracy falls outside the specified value.

Setting Sonar Alarms

To set a sonar alarm from the Home screen, select **Configure > Alarms > Sonar**.

NOTE: You must be receiving NMEA sonar depth data or have a built-in sonar with a temperature-capable transducer to view depth and water temperature information..

Shallow Water—set an alarm to sound when the depth is less than the specified value.

Deep Water—set an alarm to sound when the depth is greater than the specified value.

Water Temp—set an alarm to sound when the transducer reports a temperature that is 2°F (1.1°C) above or below the specified temperature.

Fish—set an alarm to sound when the unit detects a suspended target of the specified symbols.



—sounds an alarm for all fish sizes.



—sounds an alarm for medium and large fish only.



—sounds an alarm for large fish only.

Setting Weather Alarms

NOTE: You must have a subscription to XM WX Weather and a connected Garmin XM WX weather receiver to view weather information ([page 68](#)).

1. From the Home screen, select **Configure > Alarms > Weather**.
2. Turn the following alarms on or off: marine, tornado, severe storm, flood, or flash flood.

Setting the Total Fuel Onboard Alarm

You can configure your chartplotter to sound an alarm when the total amount of remaining onboard fuel reaches the specified level.

NOTE: To receive fuel-level information, your unit must be connected to an external fuel sensor, such as the Garmin GFS 10.

To enable the Total Fuel Onboard alarm and set the fuel alarm level:

1. From the Home screen, select **Configure > Alarms > Fuel > Total Onboard > On** (or **Off**).
2. If you select **On**, use the **Rocker** to indicate the fuel level at which the alarm should sound.

Configuring My Boat

To configure settings for your boat, from the Home screen, select **Configure > My Boat**.

Keel Offset—compensates for the surface reading for the depth of a keel, making it possible to measure depth from the bottom of the keel instead of from the transducer location. Enter a positive number to offset for a keel. You can enter a negative number to compensate for a large vessel that may draw several feet of water.

To adjust the Keel Offset:

1. If the transducer is installed at the water line, measure the distance from the transducer location to the keel of the boat. Enter this value in step 3 as a positive number.
If the transducer is installed at the bottom of the keel, measure the distance from the transducer to the water line. Enter this value in step 3 as a negative number.
2. From the Home screen, select **Configure > My Boat > Keel Offset**.


3. Enter the distance measured in step 1. Ensure that you enter a positive or a negative number based on the location of the transducer.
4. Select **Done** to accept the number.

Transducer at Surface

A (+) positive number shows depth at the bottom of the keel.

Transducer at the Bottom of the Keel

A (-) negative number shows depth at the surface.

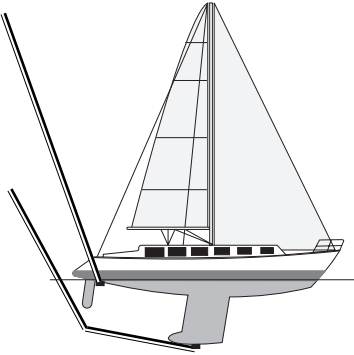

Temp Offset—set the temperature offset for the temperature sensor of your transducer.

Setting the Water Temperature Offset

You must have a NMEA 0183 water-temperature sensor, a Garmin Intelliducer, or a temperature-capable transducer to measure water temperature.

The temperature offset compensates for the temperature reading from a temperature sensor.

1. Measure the water temperature using the temperature sensor or temperature-capable transducer that is connected to the chartplotter.
2. Measure the water temperature using a different temperature sensor or a thermometer that is known to be accurate.
3. Subtract the water temperature measured in step 1 from the water temperature measured in step 2.

This is the temperature offset. Enter this value in step 5 as a positive number if the sensor connected to the chartplotter measures the water temperature as being colder than it actually is. Enter this value in step 5 as a negative number if the sensor connected to the chartplotter measures the water temperature as being warmer than it actually is.

4. From the Home screen, select **Configure > My Boat > Temp Offset**.
5. Enter the temperature offset calculated in step 3.
6. Select **Done**.

Calibrate Water Speed—use this menu to calibrate a speed-sensing device. Follow the on-screen directions for calibration. If you do not have a speed-sensing device, this menu does not appear.

NOTE: If the boat is not moving fast enough or the speed sensor is not registering a speed, a “Speed Too Low” message appears.

Select **OK**, and safely increase the speed of the boat. If the message appears again, stop the boat and make sure the speed-sensor wheel is not stuck. If the wheel turns freely, check the cable connections. If you continue to get the message, contact Garmin Product Support.

Fuel Capacity—enter the combined fuel capacity of all the engines on your boat.

Configuring Other Vessels

To configure settings for boats other than your own, from the Home screen, select **Configure > Other Vessels**.

NOTE: To configure AIS or DSC information for other boats, your unit must be connected to an external AIS or DSC device.

AIS—turn AIS (Automatic Identification System) on or off. AIS alerts you to area traffic by providing boat IDs, position, course, and speed for boats that are within range and equipped with a transponder. For more information concerning the use of AIS, see [page 23](#).

DSC—turn DSC (Digital Selective Calling) on or off.

AIS Alarm—create a safe zone around your boat for collision avoidance. The zone can be customized.

To customize safe-zone settings:

From the Home screen, select **Configure > Other Vessels > AIS Alarm**.

- **Range**—change the measured radius of the safe-zone ring to a specified distance from 500 ft. to 2.0 nm (or from 150 m to 3.0 km, or from 500 ft. to 2.0 mi).
- **Time to (Safe Zone)**—sounds an alarm if AIS or MARPA determines that a target will intersect the safe zone within the defined time interval (from 1 to 24 minutes).
- **AIS Alarm**—when **On** is selected, a message is displayed (“AIS: Dangerous Target”) when a vessel enters the safe zone. When **Off** is selected, the message will not be displayed.

Using Sonar


When connected to a transducer, the following chartplotters can be used as fishfinders:

GPSMAP 431s GPSMAP 441s GPSMAP 531s
 GPSMAP 536s GPSMAP 541s GPSMAP 546s

Understanding the Full Screen

Select the Full Screen option to view a full-screen graph of the transducer's sonar readings.


From the Home screen, select **Sonar > Full Screen**.

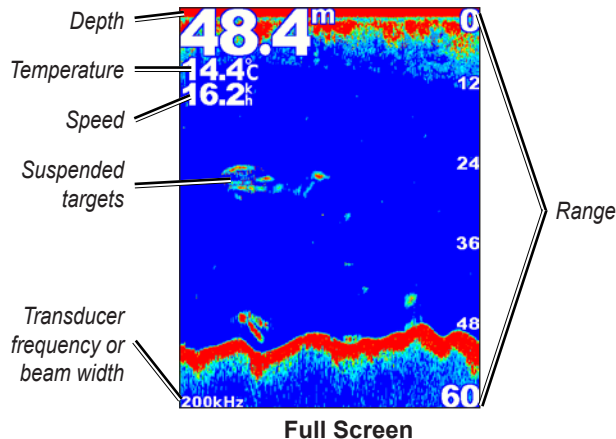

Understanding the Flasher Screen

(GPSMAP 431s/531s/536s only) Use the Flasher screen to display sonar information on a circular depth scale. The scale indicates what is beneath your boat. It is organized as a ring that starts at the top and progresses clockwise. Sonar information flashes on the ring when it is received at the depth indicated. The colors indicate different strengths of the sonar return. (When using the white default color scheme, red indicates the strongest return, blue indicates the weakest return, and white indicates no return.)


From the Home screen, select **Sonar > Flasher**.

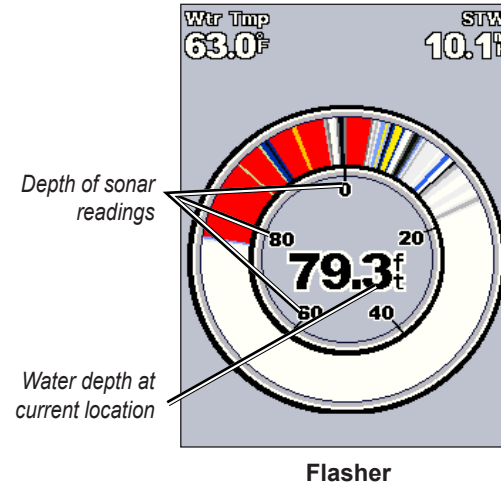

Understanding the Split Frequency Screen

Use the Split Frequency screen (dual-frequency transducer only) to view both the 50 kHz and the 200 kHz frequencies on the same screen. A 50 kHz frequency graph appears on the left. A 200 kHz frequency graph appears on the right.


From the Home screen, select **Sonar > Split Frequency**.

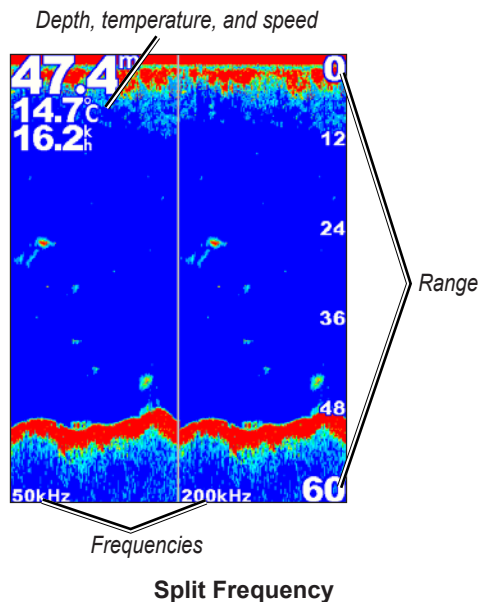

Understanding the Split Zoom Screen

Use the Split Zoom screen to view the full sonar data from the graph and a zoomed in portion on the same screen.

From the Home screen, select **Sonar > Split Zoom**.

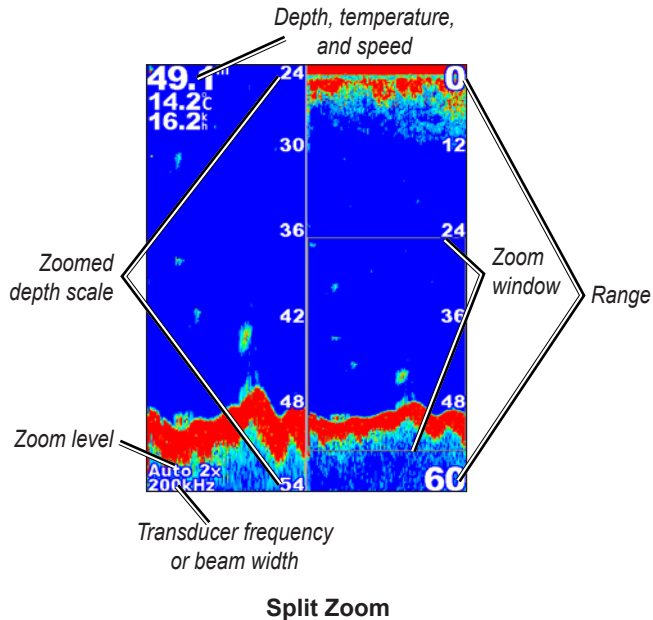


Understanding the Depth Log Screen

The Depth Log screen keeps a graphic log of depth readings over time. The present depth is shown in the top-left corner.

From the Home screen, select **Sonar > Depth Log**.

Press **MENU** to set the duration and the scale for the log.

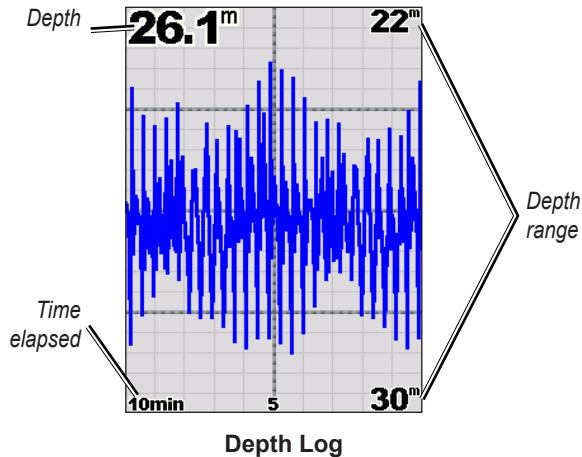


The depth appears along the right side, and the time elapsed appears along the bottom. The graph scrolls to the left as information is received.

Understanding the Temp Log Screen

If you are using a temperature-capable transducer, the Temp Log screen keeps a graphic log of temperature readings over time. The current temperature and the depth are shown in the top-left corner.

From the Home screen, select **Sonar > Temp Log**.

Press **MENU** to set the duration and the scale for the log.

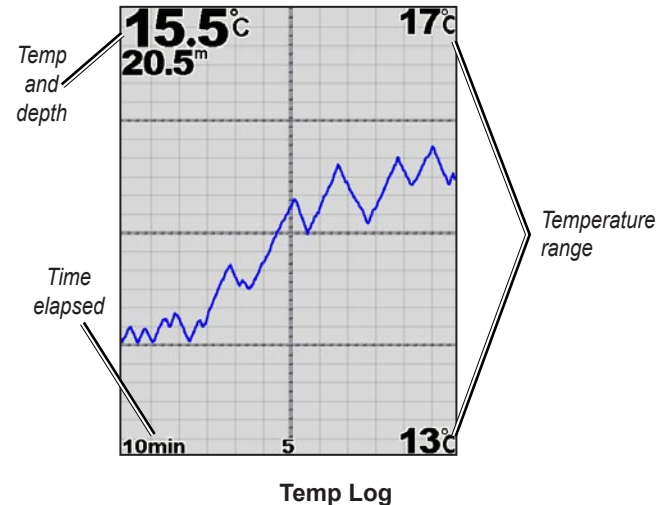

Temp Log

The temperature appears along the right side, and the time elapsed appears along the bottom. The graph scrolls to the left as information is received.

Setting Up Sonar

Use the Sonar Setup screen to define and adjust settings universal to all sonar screens.

From the Home screen, select **Sonar > Sonar Setup**.

Scroll Speed—adjust the rate at which the sonar scrolls from right to left (**Ultrasroll™**, **Fast**, **Medium**, or **Slow**). If using a speed-capable transducer, select **Auto** to have the scroll speed automatically adjust to the water speed of your boat.

Surface Noise—show or hide the sonar returns near the surface of the water. Hide surface noise to help reduce clutter.

Depth Line—quickly reference a specific depth (**Show** or **Hide**). To set the depth of the reference line, select **Show**, and then press up or down on the **Rocker**.

A-Scope—display a vertical flasher along the right side of the screen.

Data Bars—show or hide depth, water temperature, water speed (if your transducer is capable), battery voltage, cruising, navigation, and the compass tape ([page 10](#)).

NOTE: To display water temperature or water speed, the connected transducer must be capable of measuring water temperature, water speed, or both. Select **Auto** to display the values.

Appearance—customize the display of fish symbols, whiteline, and the sonar color scheme.

- **Fish Symbols**—set how the sonar interprets suspended targets.



The unit does not interpret the sonar return data (default setting).



Suspended targets appear as symbols. Background sonar information appears, making the distinction between fish and structure easier.



Suspended targets appear as symbols with background information shown. The target depth of each symbol is also displayed.



Suspended targets appear as symbols. No background information appears.



Suspended targets appear as symbols with no background information shown. The target depth of each symbol is displayed.

- **Whiteline**—highlights the strongest signal from the bottom to help identify its hardness or softness.
 - **Off** (default)—turns off whiteline.
 - **High**—the most sensitive setting. Almost all strong returns are highlighted in white.
 - **Medium**—many strong returns are highlighted in white.
 - **Low**—the least sensitive setting. Only the strongest returns are highlighted in white.

Color Scheme—select **White** or **Blue**. This affects the background on all sonar screens, but does not change the Temp Log screen or the Depth Log screen.

Advanced Sonar Settings

To adjust advanced sonar settings, press **MENU** while viewing a sonar screen.

Pause Sonar—stops the scrolling of the sonar screen.

To mark a waypoint at a selected depth:

1. While viewing a sonar screen, press **MENU** > **Pause Sonar**.
2. Use the **Rocker** to position the pointer over the fish or structure you want to mark.
3. Press **SELECT**.

From the paused screen, press **MENU** > **Resume Sonar** to continue scrolling.

Range—adjust the range of the depth scale on the right side of the screen (**Auto**, or to adjust manually, **Manual Range**).

Gain—controls the sensitivity of the sonar receiver (**Auto**, or to adjust manually, **Manual**). To see more detail, increase the gain. If the screen is cluttered, decrease the gain.

Frequency—when using a dual frequency transducer, select how the frequencies appear on-screen (**200kHz**, **50kHz**, **Dual**, or **Auto**).

Zoom—zoom in to a section of the full screen. The zoom is off, or set to **No Zoom** by default. Four options are available:

- **No Zoom**—turns zooming off.
- **Auto 2x Zoom**—automatically tracks along the bottom at twice the magnification.
- **Auto 4x Zoom**—automatically tracks along the bottom at four times the magnification.
- **Manual Zoom**—set the depth range of the magnified area manually. Select **Depth** and then use the **Rocker** > **Select** to set the depth range of the magnified area. Select **Level** and then use the **Rocker** > **Select** to increase or decrease the magnification of the magnified area.
- **Bottom Lock**—locks the zoom window to the bottom.

- **Split Zoom**—displays the Split Zoom screen ([page 58](#)).

Noise Reject (available only when **Gain** is set to **Manual**)—reduces on-screen visual clutter (usually from electrical sources) on the screen. Select the top slider bar to manually adjust the value of noise rejection. Manually adjusting the amount of noise that is rejected helps fine-tune the sonar to show the most detail with the least noise.

When **Frequency** is set to **Dual** (and **Gain** is set to **Manual**), you can individually adjust noise rejection for each frequency.

Using Digital Selective Calling (DSC)

Using the Chartplotter with a VHF Radio

The following table indicates the features that are available when you connect your chartplotter to a VHF radio over a NMEA 0183 network or a NMEA 2000 network.

Feature	NMEA 0183 VHF Radio	NMEA 2000 VHF Radio	Garmin NMEA 0183 VHF Radio	Garmin NMEA 2000 VHF Radio
The chartplotter can transfer your GPS position to your radio. If your radio is capable, GPS position information is transmitted with DSC calls.	X	X	X	X
The chartplotter can receive DSC distress and position information from the radio.	X	X	X	X
The chartplotter can track the positions of vessels sending position reports.	X	X	X	X
Quickly set up and send individual routine call details to your Garmin VHF radio.				X
When you initiate a man-overboard distress call from your radio, the chartplotter displays the man-overboard screen and prompts you to navigate to the man-overboard point.				X
When you initiate a man-overboard distress call from your chartplotter, the radio displays the Distress Call page to initiate a man-overboard distress call.				X

To turn DSC on or off:

1. Select **Configure** > **Other Vessels**.
2. Select **DSC** to toggle it on or off.

Adding a DSC Contact

You can make calls to a DSC contact from the chartplotter. See [page 66](#) for information on making an individual routine call.

1. While viewing a chart, press **MENU** > **Other Vessels** > **DSC** > **DSC List** > **Add Contact**.
2. Use the **Rocker** to enter the Maritime Mobile Service Identity (MMSI) number of the vessel, and press **SELECT**.
3. Use the on-screen keyboard to enter the name of the vessel, and select **Done**.


Viewing the DSC List

The DSC list is a log of the most-recent DSC calls and other DSC contacts you have entered. The DSC list can contain up to 100 entries. The DSC list shows the most-recent call from a boat. If a second call is received from the same boat, it replaces the first call in the call list.

From a chart screen, press **MENU** > **Other Vessels** > **DSC** > **DSC List**.

Receiving Distress Calls

If your Garmin chartplotter and VHF radio are connected via NMEA 0183 or NMEA 2000, your chartplotter alerts you when your VHF radio receives a DSC distress call. If position information was sent with the distress call, that information is also available and recorded with the call.

The  symbol designates a distress call in the DSC List and marks the position of a vessel on the Navigation chart at the time the DSC distress call was sent.

When you receive a DSC distress call:

1. Select **Review** to view details about the call.
2. Complete one of the following:
 - Select **Call with Radio** to set up an individual routine call with the radio to call the vessel in distress ([page 66](#)). This option is only available if you are using a Garmin NMEA 2000 compatible VHF radio.
 - Select **Edit** to edit the vessel name and add a comment. If your radio is tracking the position of the vessel, select **Trail** to show or hide the trail line for the vessel, and select **Trail Line** to change the line color. Select **Clear Report** to delete the call report. Select **Create Waypoint** to set a waypoint at the position sent with the distress call.

Man-Overboard Distress Calls Initiated from a VHF Radio

When your Garmin chartplotter is connected to a Garmin NMEA 2000 compatible radio and you initiate a man-overboard DSC distress call from your radio, your Garmin chartplotter displays the man-overboard screen and prompts you to navigate to the man-overboard point. If you have a Garmin autopilot system connected to the network, your chartplotter prompts you to start a Williamson turn to the man-overboard point.

If you cancel the man-overboard distress call on the radio, the man overboard screen no longer appears.

Man-Overboard Distress Calls Initiated from the Chartplotter

When your Garmin chartplotter is connected to a Garmin NMEA 2000 compatible radio and you activate navigation to a man-overboard location, the radio displays the Distress Call page to initiate a man-overboard distress call. On the radio, press and hold the DISTRESS key for at least three seconds to send the distress call.

For information on placing distress calls from your Garmin radio, see your Garmin VHF Radio Owner's Manual. For information on activating navigation to a man-overboard location, see [page 30](#).

Position Tracking

When you connect your Garmin chartplotter to a VHF radio using NMEA 0183, you can track vessels that send position reports. This feature is also available with NMEA 2000, provided that the vessel sends the correct PGN data (PGN 129808; DSC Call Information).


Every position report call received is logged in the DSC list ([page 47](#)).

To view a list of position reports:

1. From the Home screen, select **Information** > **Other Vessels** > **DSC List**.
2. Select from the following options:
 - Select **Call with Radio** to set up an individual routine call with the radio to call the vessel that sent the position report. This option is only available if you are using a Garmin NMEA 2000 compatible VHF radio.
 - Select **Edit** to edit the vessel name and the vessel symbol, and add a comment. If your radio is tracking the position of the vessel, select **Trail** to show or hide the trail line for the vessel, and select **Trail Line** to change the line color. Select **Clear Report** to delete the call report. Select **Create Waypoint** to set a waypoint at the position sent with the distress call.

- Select **Clear Report** to delete the call report.
- Select **Navigate To** to Go To or Route To the location sent with the position report (page 11).

Configuring Vessel Trails on the Navigation Chart

If you have your chartplotter configured to show trails, the Navigation chart displays a black dot for each reported position, a black line indicating the path of the vessel, and a  Blue Flag symbol indicating the last reported position.

To set the duration of displayed trail points:

1. From a chart screen, press **MENU > Other Vessels > DSC > DSC Trails**.
2. Select the number of hours to show tracked vessels on the Navigation chart. For example, if you select **4 Hours**, all trail points (less than four hours old) for tracked vessels are displayed.

To turn trail lines off for tracked vessels:

1. From a chart screen, press **MENU > Other Vessels > DSC > DSC Trails**.
2. Select **Off** to turn trails off for every vessel.

To show or hide the trail line for a specific vessel that is sending position reports:

1. From the Home screen, select **Information > Other Vessels > DSC List**.
2. Select the vessel from the list > **Edit**.
3. Select **Trail**.

To change the symbol and color of the trail line for a vessel:

1. From the Home screen, select **Information > Other Vessels > DSC List**.
2. Select the vessel from the list > **Edit**.
3. Select an option:
 - Select **Symbol** to edit the symbol.
 - Select **Trail Line** to edit the line color.

Placing an Individual Routine Call

When you connect your Garmin chartplotter to a Garmin VHF NMEA 2000 compatible radio, you can use the chartplotter interface to set up an individual routine call. When setting up an individual routine call from your chartplotter, you can select one of the following channels on which you want to communicate. The radio transmits this request with your call.

The selection of a DSC channel is limited to those channels that are available in all frequency bands: 6, 8, 9, 10, 13, 15, 16, 17, 67, 68, 69, 71, 72, 73, or 77.

NOTE: The default channel is 72. However, select **Channel** to select a different channel from the list. If you select a different channel, the chartplotter uses that channel for subsequent calls until you call using a different channel.


To make an individual routine call:

1. While viewing a chart, press **MENU > Other Vessels > DSC > DSC List**.
2. Select the station to call from the list.
3. Select **Review > Call with Radio**.
4. Select **Send** to send the information about the call to the radio.
5. On your Garmin VHF radio, select **Call**.

Calling an AIS Target

When you connect your Garmin chartplotter to a Garmin VHF NMEA 2000 compatible radio, you can use the chartplotter interface to set up an individual routine call to an AIS target. For more information on selecting a channel other than the default channel (Channel 72), see [page 66](#).

To make an individual routine call to an AIS target:

1. While viewing a chart, use the **Rocker** to select an AIS target .
2. Select **AIS Vessel > Call with Radio**.
3. Select **Send** to send the information about the call to the radio.
4. On your Garmin VHF radio, select **Call**.

Using XM WX Weather and Audio

In order to use XM weather and audio, you must have a compatible Garmin XM WX receiver, such as a GXM 51, and an activated XM subscription. Visit <http://www8.garmin.com/xm/> for more information. To connect the XM antenna and receiver and for subscription instructions, refer to the manual for your XM equipment.

If you do not have a receiver and a subscription to XM WX Satellite Weather, the weather features described in this section work only when the chartplotter is in Simulator mode. Simulator mode does not provide live weather data.

Using XM WX Weather


The Garmin XM receiver and antenna receives XM WX weather data and shows it on your chartplotter's Navigation chart and other screens throughout the chartplotter. The weather data for each feature comes from reputable weather data centers such as the National Weather Service and the Hydrometeorological Prediction Center. (See the XM WX Satellite Weather Web site at <http://xmwxweather.com> for more information.)

NOTE: Any weather feature can change in appearance or interpretation if the source that provides the information changes.

XM WX weather data is broadcast at set rates. For example, NEXRAD (NEXt Generation Weather RADar) data is broadcast at five minute intervals. When the Garmin receiver is turned on or when a new feature is selected, the receiver has to receive new data before it can be shown. You might experience a delay before weather data or a new feature appears on the map.

To view weather information on a Navigation chart, a Fishing Chart, or a Split Navigation chart:

From the Navigation chart, Fishing chart, or Split Navigation chart, press **MENU > Chart Setup > Weather > On**. Select weather parameters (NEXRAD, cloud cover, visibility, WX buoys, and the weather legend) to turn them on or off.

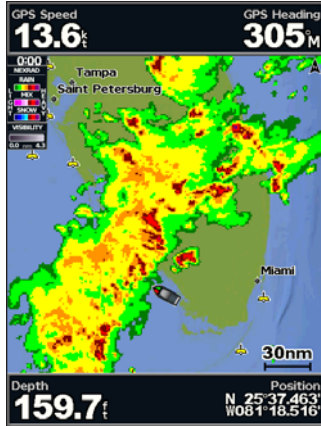

If Weather is set to **Off**, none of the weather parameters will be visible on the chart.

To view weather information on a **Perspective 3D** chart or a **Mariner's Eye 3D** chart:

Press **MENU** > **Weather Radar** > **On**.


Viewing NEXRAD Precipitation Information

From the Home screen, select **Information** > **Weather** > **Precipitation**.

Precipitation shows NEXRAD radar, storm cells, lighting strikes, and hurricane warnings. NEXRAD shows very light rain and

snow up to strong thunderstorms in varying shades and colors. The time stamp in the upper-left corner of the screen indicates the elapsed time since the National Weather Service last updated the information. You can view NEXRAD information as an image of the latest update, or as an animated loop of the latest updates. NEXRAD is shown independently or with a variety of other weather information.

From the Home screen, select **Information** > **Weather** > **Precipitation**.

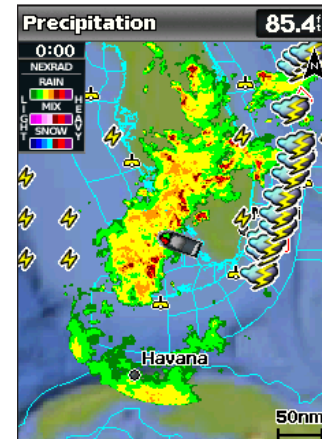


To view weather options, press **MENU**.

- **Change Weather**—displays other weather options. Select **Weather Subscription** to view your subscription information.
- **Cloud Cover**—shows or hides the display of cloud cover.
- **NEXRAD Loop**—displays NEXRAD information as an animated loop of the latest updates.
- **Waypoints**—shows or hides waypoints. Select **Navigation Only** to display only waypoints that are along the route being navigated.

Understanding Storm Cell Information

The storm cells show storms as well as the projected path of the storm in the immediate future.

The direction of the red cone indicates the projected path of the storm cell. The red bars that appear in the cone indicate where the storm will most likely be in the future. Each bar represents 15 minutes.

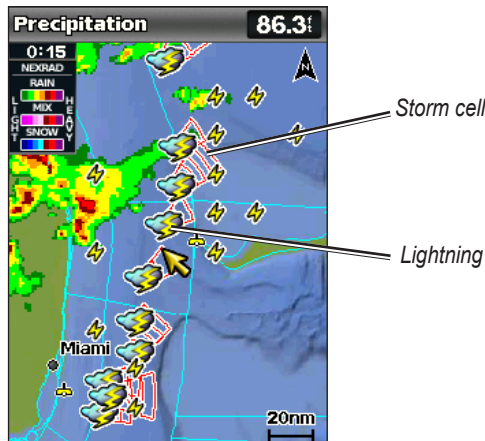


Understanding Lightning Information

Lightning strikes are represented by lightning bolt icons. Lightning appears on the map if strikes were detected within the last seven minutes. The ground-based lightning detection network only detects cloud-to-ground lightning.


Understanding Hurricane Information

The Hurricanes feature shows the current position of a hurricane, tropical storm, or tropical depression, as well as its projected path (indicated by a red line). The darkened dots on the red line display the projected locations received from the National Hurricane Center. The center provides four forecasts at 12-hour intervals (12 Hrs, 24 Hrs, 36 Hrs, and 48 Hrs), as well as the current conditions (Now).

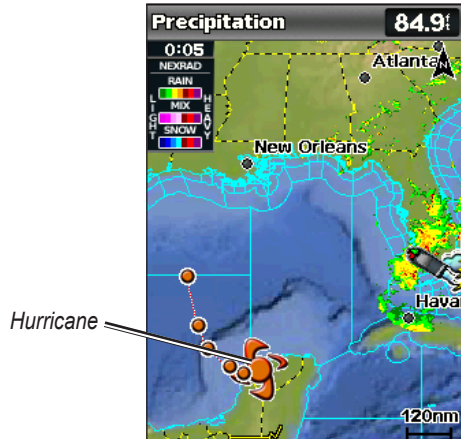


Understanding Marine Warnings

When a Marine Warning is issued, the area for the warning is highlighted in red. To view information about the warning, select the warning area. The light blue lines on the chart indicate marine weather warning zones.

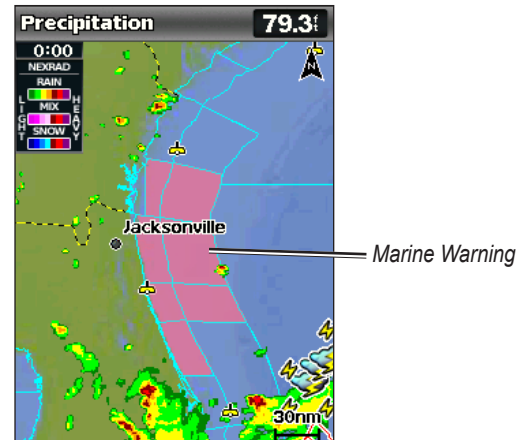

Understanding County Warnings

When the National Weather Service issues a weather warning for a county, the county is highlighted with the color corresponding to the warning. To view information about the warning, select the county.

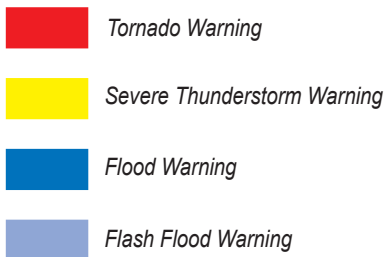

Viewing Forecast Information

Forecasts show the weather conditions including fronts and precipitation.

From the Home screen, select **Information** > **Weather** > **Forecast**.

To view the forecast for another time period:


1. From the Home screen, select **Information** > **Weather** > **Forecast**.
2. Press right on the **Rocker** to select **Next**. The forecasted weather for the next 12 hours is shown.
3. Select **Next** again to view forecasts for the next 24, 36, and 48 hours.

To view forecast information for another location:

Use the **Rocker** to pan the screen until the screen displays the location you want.

Understanding Fronts

The Fronts show lines indicating the leading edge of an air mass. This feature also shows pressure centers.

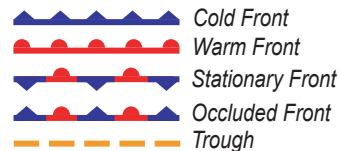


Indicates a low-pressure center. A low-pressure center is an area where the measured pressure is lowest relative to the surrounding area. Moving away from a low-pressure center in any horizontal direction results in increased pressure. Winds flow counterclockwise around low-pressure centers in North America.



Indicates a high-pressure center. A high-pressure center is an area where the measured pressure is highest relative to the surrounding area. Moving away from a high-pressure center in any horizontal direction results in decreased pressure. Winds flow clockwise around high-pressure centers in North America.

Understanding City Forecasts

City forecasts appear as standard weather symbols. The forecast is viewed in 12-hour increments for the next 48 hours.

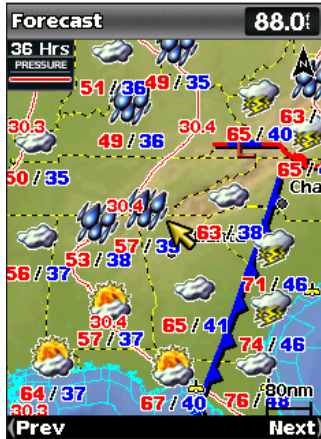

Understanding Surface Pressure

This feature shows pressure isobars and pressure centers. The isobars connect points of equal pressure. Pressure readings can help determine weather and wind conditions in an area. High-pressure areas are generally associated with fair weather. Low-pressure areas are generally associated with clouds and the chance of precipitation. Isobars packed closely together show a strong pressure gradient. Strong pressure gradients are associated with areas of stronger winds.

Pressure units are shown in Millibars (mb), Inches of Mercury (in), and Hectopascals (hPa).


Viewing Fishing Information

The Fishing view contains current water temperature, surface pressure conditions, and fishing forecasts.

From the Home screen, select **Information > Weather > Fishing**.

Understanding Water Temperature Data

The Water Temperature feature indicates the water's surface temperature, as indicated by the legend on the left of the screen. The temperature breaks are indicated by isotherm lines.

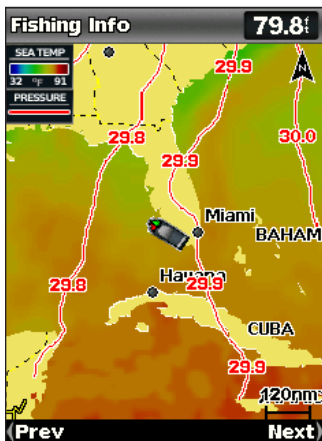

Viewing Fish Forecasting

This feature shows areas that contain optimal weather conditions for specific species of fish.

1. From the Home screen, select **Information > Weather > Fishing > MENU > Fish Species.**


2. Select a species of fish. Shaded areas indicate optimal fishing areas.

Viewing Sea Conditions

Sea Conditions provide surface conditions including winds, wave height, wave period, and wave direction. To view sea conditions, from the Home screen, select **Information > Weather > Sea Conditions.**

Understanding Surface Winds

Wind barbs indicate from which direction the wind is coming. The wind barb is a circle with a tail. Wind speed is indicated by the different combination of flags that are attached to the tail.

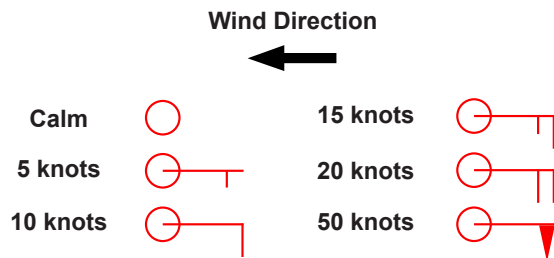

Understanding Wave Height

The Wave Height feature shows wave heights. The wave heights for an area are shown in color intensities.

Understanding Wave Period

The Wave Period feature provides the time (in seconds) between successive waves.

Understanding Wave Direction

The Wave Direction feature shows the direction in which a wave is moving, as indicated by the direction of the red arrow.



Viewing Visibility Information

Visibility is the forecast maximum horizontal distance that can be seen at the surface, as indicated by the legend on the left of the screen. Contour lines on the Visibility feature show the forecasted change in surface visibility.

From the Home screen, select **Information** > **Weather** > **Visibility**.



To view the forecasted visibility for another time period:


1. Press right on the **Rocker** to select **Next**. The forecasted visibility for the next 12 hours is shown.
2. Select **Next** again to view forecasts for the next 24 and 36 hours.

Using XM Audio

When a Garmin XM receiver is connected to the audio input of your boat, you can listen to XM audio channels.

To display the XM audio interface while navigating:

From the any chart except a split screen chart, press **MENU** > **Data Bars** > **XM Audio** > **On**.

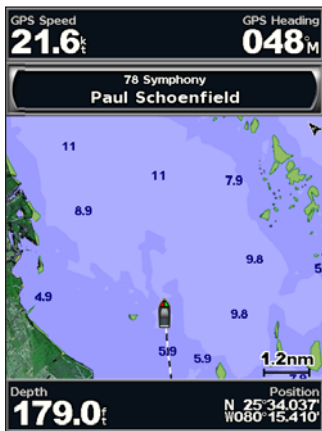

To select an XM audio channel:

1. From the Home screen, select **Configure** > **XM Audio**.
2. Use the **Rocker** to highlight a channel and preview the song playing on the channel.
3. Press **SELECT** to change to the highlighted channel.

To use the XM audio guide:

From the Home screen, select **Configure** > **XM Audio** > **MENU**.

Save Preset—saves the current XM channel in the Presets list. Press **Delete Preset** to remove the current channel from the list. Presets is displayed as a category in the category list.

Category—selects the category of channels that are displayed in the XM audio guide.

Channel Entry—allows you to select an XM channel.

Level—adjusts the volume.

Appendix

Specifications

Physical Specifications

Size : **400 Series:** W × H × D: 5.7 in. × 5.0 in. × 3.0 in.
(14.5 cm × 12.7 cm × 7.6 cm)

500 Series: W × H × D: 5.9 in. × 6.4 in. × 2.9 in.
(15.0 cm × 16.3 cm × 7.4 cm)

Weight: **400 Series:** 1.30 lb. (560 g)
500 Series: 1.75 lb. (800 g)

Display: GPSMAP 431/441: 4.0 in. diagonal (10.6 cm), QVGA display with adjustable brightness, 320 × 240 pixels.
GPSMAP 531/541: 5.0 in. diagonal (12.7 cm), QVGA display with adjustable brightness, 320 × 234 pixels.
GPSMAP 536/546: 5.0 in. diagonal (12.7 cm), full VGA display with adjustable brightness, 640 × 480 pixels, capable of 4,096 colors.

Case: Fully gasketed, high-impact plastic alloy, waterproof to IEC 529 IPX7 standards.

Temperatur Range: From 5°F to 131°F (from -15°C to 55°C)

Compass-Safe Distances:

Model Number	Compass-Safe Distance
GPSMAP 536/546	20 in. (50 cm)
GPSMAP 431/441	26 in. (65) cm
GPSMAP 531/541	30 in. (75 cm)

Performance

Receiver:

High-sensitivity, 14 parallel channel, WAAS-capable receiver.

GPSMAP 431/431s GPSMAP 441/441s
GPSMAP 531/531s GPSMAP 541/541s

High-sensitivity, 12 parallel channel, WAAS-capable receiver.

GPSMAP 536/536s GPSMAP 546/546s

Update Rate: once per second

Acquisition Times: (Average acquisition times for a stationary

receiver with a clear view of the sky)

GPSMAP 431/431s GPSMAP 441/441s

GPSMAP 531/531s GPSMAP 541/541s

Warm:* Approximately 1 second

Cold:** Approximately 38 seconds

GPSMAP 536/536s GPSMAP 546/546s

Warm:* Approximately 15 seconds

Cold:** Approximately 38 seconds

***Warm:** your unit is at or near the last location where you recently acquired satellites.

****Cold:** your unit has moved by more than about 500 mi. (800 km) since it was turned off, or it has been turned off for more than 2 weeks.

GPS Accuracy:

Position: <49 ft. (15 m), 95% typical

Velocity: 0.164 ft./sec 0.05 m/sec steady state

WAAS Accuracy:

Position: <10 ft. (3 m), 95% typical

Velocity: 0.05 m/sec steady state

Dynamics: 6 g

Power

Power Source: 10–32 Vdc

Usage: 15 W max at 13.8 Vdc

Fuse: AGC/3AG - 3.0 A

Sonar

Power: 1 kW Transducer (1 kW transducers are supported by the GPSMAP 536s and 546s units only), 1,000 W (RMS),

8,000 W (peak to peak);

Dual Frequency, 500 W (RMS), 4,000 W (peak to peak);

Dual Beam, 400 W (RMS), 3,200 W (peak to peak)

Frequency: 50/200 kHz (dual frequency and 1 kW), 80/200 kHz (dual beam)

Depth: 2,500 ft. (762 m) (1 kW), 1,500 ft. (457 m) (dual frequency), 900 ft (274 m) (dual beam). Depth capacity is dependent on water salinity, bottom type, and other water conditions.

Alarms and Messages

The unit uses an on-screen message system to alert you to unit operating characteristics. When a message appears, press **MENU** to acknowledge the message.

Accuracy Alarm—the GPS accuracy has fallen outside of the user-set value.

AIS: Dangerous Target—shows the MMSI (Maritime Mobile Service Identity) of the dangerous target.

Alarm Clock—the alarm clock has sounded.

Anchor Drag Alarm—you have drifted out of the specified distance range.

Antenna Input is Shorted—a part of the antenna wiring is crimped, broken, or contacting the chassis.

Arrival At [Waypoint Name]—you arrived at the destination waypoint. You can **Stop Navigation** when this message appears.

Battery Alarm—battery voltage has fallen below the value entered in the Battery Alarm setup.

Battery Voltage Is Too High—too much input voltage—the unit shuts off in 10 seconds. Decrease the input voltage to the maximum voltage allowed (or less) for your chartplotter.

Boat Is Not Moving Fast Enough to Calibrate—the boat is not moving fast enough for the speed wheel to provide a valid speed.

Can't Read User Card—error reading card; remove and reinsert. Contact your dealer or Garmin Product Support if the problem persists.

Can't Read Voltages That High, Limited To Top Of Range—the voltage value in the Battery Alarm setup is higher than the unit can read.

Can't Read Voltages That Low, Limited To Bottom Of Range—voltage value in the Battery Alarm setup is lower than the voltage where the unit automatically turns off.

Can't Unlock Maps—data on the data card is not unlocked for the unit. Contact your dealer or Garmin Product Support.

Can't Write User Card, Card May Be Full—error reading card; remove and reinsert. Contact your dealer or Garmin Product Support if the problem persists.

Can't Write User Card, Card Is Read-Only—the SD card in your unit contains data copy protection.

Card Needed—Your unit needs to have an SD card inserted into the SD card slot in order to perform the function you requested.

DSC Position Report Received From—shows the MMSI or name associated with an MMSI.

Database Error—internal problem with the unit. Contact your dealer or Garmin Product Support to have the unit serviced.

Deep Water Alarm—the Deep Water Alarm depth has been reached.

Directory Item With This MMSI Already Exists—the MMSI number is already in the DSC directory. Use a different number.

Directory Memory is Full, Can't Create Entry—the DSC directory has reached the maximum of 100 contacts. Delete unneeded contacts to add new ones.

Distress Call—a DSC distress call has been received. Take appropriate action.

Entering (Leaving) target water temperature—the target water temperature is 2°F (1.1°C) above or below the temperature specified by the Water Temperature Alarm. These messages appear when you enter or leave that zone.

Entering Safe Region—the boat is approaching a safe region as defined by your configuration settings.

Entering Unsafe Region—the boat is approaching an unsafe region as defined by your configuration settings.

Fish Alarm—a beep sounds (if enabled) when a fish is detected. This alarm does not show a message banner.

Invalid MMSI—enter a valid MMSI.

Lost Satellite Reception—the unit has lost satellite signals. Check antenna connections or try moving to a location with a clear view of the sky.

NMEA Depth Is Below Transducer—you must enter an appropriate Keel Offset for the transducer ([page 54](#)).

No Waypoints/Routes/Tracks/User Waypoints Found—attempted to transfer user data from an SD card that does not contain the specified type of data. Make sure there is data to transfer on the SD card.

Off Course Alarm—you are off course the distance set in the “Off Course” alarm.

Route Already Exists—you entered a route name that already exists in memory. Modify the route name or delete the previous route name.

Route is Full—you attempted to add more than 250 points to a route. Reduce the number of points or create a second route.

Route Truncated—an uploaded route from another device has more than 250 waypoints and was truncated to fit.

Route Waypoint Memory Full—no additional route waypoints can be saved.

Shallow Water Alarm—the Shallow Water Alarm depth has been reached.

Sonar Service Incompatible—the external sonar device you are connected to needs a software update.

Sonar Timeout—there is an internal problem with the unit. Contact your dealer or Garmin Product Support to have the unit serviced.

Sonar Service Lost—the external sonar device you were connected to has either been disconnected or the unit has lost communication with the sonar device for some other reason.

Track Already Exists [Track Name]—you entered a saved track name that already exists in memory. Modify the track name or delete the existing track.

Track Log Full—the track log is full and track recording has been turned off. To record more track points, you need to clear the track log and turn track recording on. This only appears when the track recording mode is set to **Fill**.

Track Memory is Full, Can't Create Track—the track log memory is full. No additional track log data can be stored without deleting old data to create memory space.

Track Truncated—a complete uploaded track does not fit into memory. The oldest track log points were deleted to make space for the most recent data.

Transducer Disconnected, Sonar Turned Off—there is not a transducer attached, there is a bad cable or transducer, or the transducer cable was disconnected. If the transducer cable is removed while the unit is on, reconnect and cycle power.

Transfer Complete—the unit has finished uploading or downloading information to the connected device.

User Card Not Found, Please Insert Card—attempted to transfer user data without an SD card containing user data being present in the SD card slot.

Warning: Auto-guidance route starting and ending position moved due to safe depth settings—the auto-guidance route was calculated but the starting and ending positions were moved because of safe depth settings.

Water Speed Sensor Is Not Working—the speed sensor is not detected. Check the connections.

Water Temperature Alarm—sonar has reported a temperature above, below, inside, or outside the specified values.

Waypoint Already Exists—you entered a waypoint name that already exists in memory. Modify the waypoint name or delete the existing waypoint.

Waypoint Memory Full—you have saved the maximum number of waypoints. Delete unwanted waypoints.

Capturing Screenshots

You can capture a screenshot of any screen displayed on your unit as a bitmap (.bmp) file and then transfer it to your computer.

To capture screenshots:

1. Insert an SD card into the SD card slot on the front of the unit.
2. Select **Configure > System > Beeper/Display**.
3. Select **Screen Capture** to turn screenshot captures **On**.
4. When you are on a screen you want to capture, press and hold the **HOME** button for at least six seconds.
5. Select **OK** when the Screenshot Taken window is displayed.

To copy the screenshots to your computer:

1. Remove the SD card from the chartplotter and insert it into an SD card reader that is attached to a computer.
2. From Windows Explorer, open the Garmin\scrn folder on the SD card.
3. Copy the appropriate .bmp file on the card and paste it to any location on the computer.

Caring for the Unit

The case is constructed of high-quality materials and does not require user maintenance, except cleaning.


Cleaning the Case

Clean the unit's outer casing (except for the screen) using a cloth dampened with a mild detergent solution and then wipe dry. Avoid chemical cleaners and solvents that may damage plastic components.

Cleaning the Screen

The lens on the screen is coated with a special anti-reflective coating that is sensitive to skin oils, waxes, and abrasive cleaners. Cleaners containing ammonia, alcohol, abrasives, or anti-grease detergents will harm the anti-reflective coating. It is important to clean the lens using an eyeglass lens cleaner (that is specified as safe for anti-reflective coatings) and a clean, lint-free cloth.

Honda Engine ECO Symbol

The  symbol appears when boats with NMEA 2000 compatible Honda engines are running in a fuel-efficient mode and engine RPM is displayed.

Consult your Honda engine manual to determine if the engine is NMEA 2000 compatible.

NMEA 2000

The following GPSMAP 400 and GPSMAP 500 series chartplotters are NMEA 2000 certified and can receive data from a NMEA 2000 network installed on the boat.



GPSMAP 441/441s GPSMAP 536/536s
GPSMAP 541/541s GPSMAP 546/546s

To connect one of these chartplotter to an existing NMEA 2000 network and to see a list of supported NMEA 2000 PGN numbers, see the *GPSMAP 400/500 Series Installation Instructions*.

Weather Data Warranty

THE WEATHER DATA SOFTWARE PRODUCT IS PROVIDED “AS IS.” ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OR OF NON-INFRINGEMENT ARE HEREBY EXCLUDED.

USER SAFETY

If you use XM Services it is your responsibility to exercise prudent discretion and observe all safety measures required by law and your own common sense. You assume the entire risk related to your use of the Services. XM and Garmin assume no responsibility for accidents resulting from or associated with use of the Services. Your Radio Service includes traffic and weather information, and you acknowledge that such information is not for “safety for life”, but is merely supplemental and advisory in nature, and therefore cannot be relied upon as safety-critical in connection with any aircraft, sea craft or automobile usage. This information is

provided “as is” and XM and Garmin disclaim any and all warranties, express and implied, with respect thereto or the transmission or reception thereof. XM and Garmin further do not warrant the accuracy, reliability, completeness or timeliness of the traffic and weather information disclosed on the Radio Service. In no event will XM and Garmin, their data suppliers, service providers, marketing/distribution, software or Internet partners or hardware manufacturers be liable to you or to any third party for any direct, indirect, incidental, consequential, special, exemplary or punitive damages or lost profits resulting from use of or interruptions in the transmission or reception of the Services.

LIMITS ON OUR RESPONSIBILITY

a) DISCLAIMERS.

EXCEPT AS EXPRESSLY PROVIDED HEREIN, WE MAKE NO WARRANTY OR REPRESENTATION, EITHER EXPRESS OR IMPLIED, REGARDING THE RADIO SERVICE. YOUR USE OF THE SERVICE IS AT YOUR SOLE RISK. THE CONTENT AND FUNCTIONALITY OF THE SERVICE IS PROVIDED “AS IS” WITHOUT ANY WARRANTY OF ANY KIND, EXPRESS OR IMPLIED. ALL SUCH WARRANTIES OR REPRESENTATIONS (INCLUDING, WITHOUT LIMITATION, THE IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, TITLE AND NON-INFRINGEMENT) ARE HEREBY DISCLAIMED.

b) LIMITATIONS OF LIABILITY.

WE ARE NOT RESPONSIBLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES OR LOSSES RELATING TO THE USE OF THE RADIO SERVICE, WHETHER BASED ON NEGLIGENCE OR OTHERWISE. OUR TOTAL LIABILITY TO YOU AND ANY OTHER PERSONS RECEIVING OUR SERVICES, REGARDLESS OF THE CAUSE, WILL IN NO EVENT EXCEED THE AMOUNTS THAT YOU HAVE PAID TO US FOR THE SERVICE THAT YOU RECEIVED DURING THE SIX (6) MONTH PERIOD IMMEDIATELY PRIOR TO THE SPECIFIC EVENT THAT GAVE RISE TO

THE APPLICABLE DAMAGE OR LOSS. THIS ALLOCATION OF RISK IS REFLECTED IN OUR PRICES. YOU MAY HAVE GREATER RIGHTS THAN DESCRIBED ABOVE UNDER YOUR STATE'S LAWS.

This product was developed using DAFIF™, a product of the National Geospatial-Intelligence Agency.

This product has not been endorsed or otherwise approved by the National Geospatial-Intelligence Agency, or the United States Department of Defense (10 U.S.C. 425).

a. Under 10 U.S.C. 456, no civil action may be brought against the United States on the basis of the content of a navigational aid prepared or disseminated by either the former Defense Mapping Agency (DMA), National Imagery and Mapping Agency (NIMA), or the National Geospatial-Intelligence Agency (NGA).

b. The DAFIF™ product is provided “as is,” and no warranty, express or implied, including, but not limited to the implied warranties of merchantability and fitness for particular purpose or arising by statute or otherwise in law or from a course of dealing or usage in trade, is made by NGA as to the accuracy and functioning of the product.

c. Neither NGA nor its personnel will be liable for any claims, losses, or damages arising from or connected with the use of this product. The user agrees to hold harmless the United States National Geospatial-Intelligence Agency. The user's sole and exclusive remedy is to stop using the DAFIF product. This product was developed using DAFIF, a product of the National Geospatial-Intelligence Agency.

Software License Agreement

BY USING THE GPSMAP 400/500 SERIES CHARTPLOTTER, YOU AGREE TO BE BOUND BY THE TERMS AND CONDITIONS OF THE FOLLOWING SOFTWARE LICENSE AGREEMENT. PLEASE READ THIS AGREEMENT CAREFULLY.

Garmin Ltd. and its subsidiaries (“Garmin”) grant you a limited license to use the software embedded in this device (the “Software”) in binary executable form in the normal operation of the product. Title, ownership rights, and intellectual property rights in and to the Software remain in Garmin and/or its third-party providers.

You acknowledge that the Software is the property of Garmin and/or its third-party providers and is protected under the United States of America copyright laws and international copyright treaties. You further acknowledge that the structure, organization, and code of the Software, for which source code is not provided, are valuable trade secrets of Garmin and/or its third-party providers and that the Software in source code form remains a valuable trade secret of Garmin and/or its third-party providers. You agree not to decompile, disassemble, modify, reverse assemble, reverse engineer, or reduce to human readable form the Software or any part thereof or create any derivative works based on the Software. You agree not to export or re-export the Software to any country in violation of the export control laws of the United States of America or the export control laws of any other applicable country.

XM Satellite Radio Service Agreement

XM Satellite Radio Inc.

Hardware and required monthly subscription sold separately. Subscription fee is consumer only. Other fees and taxes, including a one-time activation fee may apply. All programming fees and weather data subject to change. XM WX weather data displays and individual product availability vary by hardware equipment. Reception of the XM signal may vary depending on location. Subscriptions subject to Customer Agreement included with the XM Welcome Kit and available at xmradio.com. XM Radio U.S. Satellite Services available only to those at least 18 years of age in the 48 contiguous United States. XM WX is a trademark of XM Satellite Radio Inc.

Index

A

- A-scope 60
- Active Tracks 16
- aerial photos 20
- AIS 23, 47, 56, 67
 - alarm 56
 - symbols 23
 - threats 27
- alarms 52, 79–82
 - anchor drag 53
 - arrival 53
 - battery 53
 - clock 53
 - collision 26
 - deep water 53
 - fish 54
 - fuel 54
 - GPS accuracy 53
 - navigation 53
 - off course 53
 - shallow water 53
 - sonar 53
 - water temp 54
 - weather 54
- Animated 12
- apparent wind 41
- Appearance 60

- Auto Magnetic 49
- automatic guidance 22, 49
- autopilot 35

B

- backing up data 46
- backlight, adjusting 4
- Baro. Ref. Time 49
- barometric pressure trend 49
- Beeper/Display 48
- BlueChart g2 Vision
 - using 34–38
- bottom lock 61
- buttons 5

C

- Calibrate Water Speed 55
- celestial information 43
- Chart/Sonar screen
 - using 22
- Chart Borders 14
- chart data 10
- charts
 - detail 13
 - fish eye 3D 18
 - fishing 19
 - mariner's eye 3D 16
 - navigation 8
 - settings 12
- cleaning the unit 82

- Clear User Data 44
- close hauled wind gauge 42
- collision alarm 26
- colors, hazard 17
- Color Scheme 61
- Communications 51
- Compass 36
 - compass rose 12
- contact information, Garmin iv
- coordinates, grid
 - creating waypoints using 30
- course up 13
- Cruising 9
- current stations 43
- customizing chart settings 12

D

- dashboard 36
- Data Bars
 - fish eye 3D chart 18
 - Navigation chart 9
 - perspective 3D chart 16
 - sonar 60
- data transfer 44
- Defaults
 - NMEA 0183 sentences 51
- delete a waypoint 31
- depth line 60
- depth log 59
- depth waypoint 61

- Detail, chart 13
- Details, AIS 25
- Device List 52
- Display 48, 77
- Display Range 25
- distance, measuring 31
- Distress Calls 64
- DSC 56, 63
 - contact 64
 - list 64

E

- edit a route 32
- edit existing waypoint 30
- EGNOS 48
- engine gauges
 - customizing limits 38
 - selecting the number of engines 39
 - status alarms 39
 - viewing 37
- Enter Coordinates 30

F

- factory settings, restoring 6
- fish eye 3D 18
 - settings 18
- fishing chart 19
 - AIS 27
 - MARPA 27
- fishing information 73

Index

- Fish Symbols 18, 60
- flasher 57
- forecast information 72
- frequency 61
- Fuel Capacity 56
- fuel gauges
 - synchronizing 40
 - viewing 40
- full screen, sonar 57
- Full Screen Map 9
- fuse 78
- G**
- gain 61
- Garmin Data Transfer 51
- go to 28
- GPS 5, 48, 78
- GPS heading 42
- Grid (North) 49
- grid coordinates
 - creating waypoints using 30
- ground wind 41
- guide to 28
- H**
- Hazard Colors 17
- heading 42, 49
- Heading Line 14
- heading source 42
- Head Up 13
- high-pressure center 72
- HOME key 5
- hurricane information 71
- I**
- ID number 6
- K**
- keel offset 54
- keypad 5
- L**
- Label Devices 52
- Lane Width 16, 18
- Language 49
- lightning information 70
- Light Sectors 14
- low-pressure center 72
- M**
- magnetic heading 42
- man overboard 30, 65
- Manual Zoom 61
- map datum 49
- MapSource data 44
- Mariner's Eye 3D
 - AIS 27
 - MARPA 27
- mariner's eye 3D
 - colors 17
- mark current location 30
- MARPA key 5
- MARPA
 - threats 27
- measuring distance 31
- MENU key 5
- messages 79
- move a waypoint 30
- My Boat 54
- N**
- Navaid Type 14
- Navigate To 11, 29, 31, 32, 66
- Navigation Alarms 53
- navigation chart
 - AIS 27
 - MARPA 27
- navigation charts 8
- navigation preferences 49
- New Waypoint 16
- NEXRAD 69
- NMEA 0183 Setup 51
- NMEA 2000 Setup 51
- NMEA High Speed 51
- NMEA Standard 51
- Noise Reject 62
- north
 - grid 49
 - magnetic 49
 - true 49
- north up 13
- No Zoom 61
- numbers
 - customizing 37
 - overlay numbers 10
 - viewing 36
- O**
- object information
 - accessing 12
- odometer 37
- Other Vessels 16, 56
- P**
- Pause Sonar 61
- Perspective 3D 15
 - AIS 27
 - MARPA 27
- Photo Points 14
- photos 12
- physical specifications 77
- Points of Interest (POI) 14, 21, 35
- Position Format 49
- position tracking 65
- Posn. Precision 51
- Power/Backlight key 5
- power source 78
- product registration iv
- Proj. Heading 25
- Q**
- quick links i

- R**
- radio 63
 - Range
 - AIS Alarm 56
 - sonar 61
 - Range keys 5
 - Range Rings 16, 18
 - registering your product iv
 - restoring factory settings 6
 - Rocker key 5
 - Roses 12
 - routes
 - creating 31
 - deleting 33
 - editing 32
 - labels 49
 - viewing 44
 - route to 28
- S**
- safe-zone settings 56
 - Safe Depth 18, 50
 - Safe Height 50
 - Safety Shading 14
 - safe zone collision alarm 26
 - satellite imagery
 - enabling 19
 - Saved Tracks 16
 - Save To Card 45, 46, 48
 - screenshots 82
 - scroll speed 60
 - SD cards
 - inserting 6
 - removing 6
 - sea conditions 74
 - SELECT key 5
 - Serial Port setup 51
 - Service Points 12
 - settings
 - alarms 52
 - chart 12
 - collision alarm 26
 - communications 51
 - fish eye 3D 18
 - initializing 3
 - language 49
 - navigation preferences 49
 - system 48
 - units of measure 48
 - Shoreline Distance 50
 - simulator 48
 - mode 5
 - Skyview 48
 - software license agreement 84
 - software version 48
 - sonar
 - advanced settings 61
 - cone 18
 - full screen 57
 - scroll speed 60
 - setting up 60–61
 - setup 60
 - specifications 78
 - split frequency 58
 - split zoom 58
 - temperature log 59
 - specifications 77
 - Speed Filter 48
 - Speed Sources 49
 - Split Frequency 58
 - Split Zoom 58
 - spot depths 14
 - Stop Navigation 9
 - storm cells 70
 - Surface Noise 60
 - surface pressure 73
 - symbols 14
 - System Alarms 53
 - System Information 48
 - viewing 6
 - system settings 48
- T**
- temperature range 77
 - Temp Log 59
 - Temp Offset 55
 - Tides/Currents 12
 - Animated 12
 - tide stations 42
 - viewing information 12
 - Time (options) 49
 - Time to 56
 - tracks 18, 33
 - Trails 25
 - transducer
 - dual frequency 61
 - transferring data 44, 45
 - Trip Odometer 37
 - True (north) 49
 - true wind 41
 - turn the unit off 2
 - Turn Transition 49
- U**
- unit ID number 6
 - units of measure 48
 - user data
 - backing up 45
 - clearing 44
 - transferring 45
 - viewing 44

V

- Vehicle Icon 14
- version (software) 48
- VHF radio 63
- viewing
 - currents 43
 - other boats 47
 - tide stations 42
 - user data 44
- visibility information 75

W

- WAAS 48
- warnings
 - county 71
- water temperature 74, 80
 - offset 55
- wave direction 75
- wave period 75
- Waypoint IDs 51
- waypoints 16
 - creating 30
 - deleting 30, 31
 - depth 61
 - edit existing 16, 30
 - mark current location 30
 - moving 30
 - viewing 44
- weather 68

- Weather Radar 16, 17

- Where To 28
- Whiteline 61
- wind barbs 74
- wind gauges
 - viewing 41
- World Map 14
- wind gauges
 - customizing 41

X

- XM Audio 76
- XM weather 68

Z

- zoom 61
 - 2x 61
 - 4x 61
 - bottom lock 61
 - manual 61
 - split 62

**For the latest free software updates (excluding map data) throughout the life of your
Garmin products, visit the Garmin Web site at www.garmin.com.**



© 2010 Garmin Ltd. or its subsidiaries

Garmin International, Inc.
1200 East 151st Street, Olathe, Kansas 66062, USA

Garmin (Europe) Ltd.
Liberty House, Hounsdown Business Park, Southampton, Hampshire, SO40 9LR UK

Garmin Corporation
No. 68, Jangshu 2nd Road, Sijhih, Taipei County, Taiwan

www.garmin.com